 


BATTERY INSTALLATION:

LIGHT FIXTURE

1. Remove the light from the mounting bracket by twisting the light unit counter-clockwise.
2. The battery compartment is located on the back of the light unit. Unscrew the locking pin counter-clockwise until the battery door opens and the lid can be removed.
3. Insert 4 x AA batteries into the battery compartment as indicated in Fig. 7 to the right.
4. Replace the battery compartment door and screw clockwise until tight.
5. Replace light unit to mounting plate by aligning the mounting tab slots with the mounting tabs and turn clockwise to lock into position.


FIG. 7 LIGHT FIXTURE
BATTERY COMPARTMENT

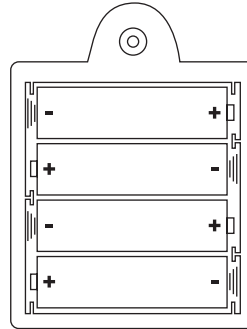

WALL SWITCH

1. Remove the wall switch from the wall by sliding the unit up.
2. Battery door is located on the back top position of the switch.
3. Push up on the battery door and insert 2 x CR2032 batteries into the battery compartment positioning them as indicated in Fig 8. to the right.
4. Replace the battery door and slide down to lock into place.
5. Replace the switch to the wall by aligning the keyhole slots to the screws and slide down.

 FIG. 8 WALL SWITCH
BATTERY COMPARTMENT

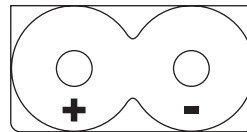

NOTE: ALL BATTERIES USED MUST BE OF THE SAME TYPE. DO NOT MIX OLD AND NEW BATTERIES.

CAUTIONS:

1. INSERT THE BATTERIES INTO THE BATTERY COMPARTMENT ACCORDING TO THE CORRECT POLARITY SYMBOL (+/-).
2. TO AVOID EXPLOSION OR LEAKAGE, DO NOT DISPOSE OF THE PRODUCT AND/OR BATTERIES IN FIRE.
3. THE SUPPLY TERMINALS ARE NOT TO BE SHORT CIRCUITED.
4. WHEN THE ITEM IS NOT IN USE FOR A LONG PERIOD OF TIME, REMOVE THE BATTERIES AND STORE IN A COOL DRY PLACE TO AVOID LEAKAGE.
5. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM ITEM.
6. THE WIRELESS LED MULTI PURPOSE LIGHT IS WATER RESISTANT AND CAN WITHSTAND INDIRECT CONTACT WITH WATER AS WELL AS HUMIDITY. HOWEVER, IT SHOULD NEVER BE COMPLETELY IMMERSSED IN WATER.

FCC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Caution to Users: Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Questions?
1-877-383-6399
(8:30am - 5:30pm E.S.T.)

©2010 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
SUNBEAM® is a registered trademark of Sunbeam Products, Inc. used under license. Manufactured for L'Image Home Products Inc., Montreal, Canada H3B 3X9.

Sunbeam®

WIRELESS LED MULTI PURPOSE LIGHT WITH REMOTE WALL SWITCH




USER MANUAL AND INSTALLATION INSTRUCTIONS

SPECIFICATIONS:

- 1 LED multi purpose light
- 1 remote wall switch
3. Mounting screws
- 2 Velcro sticky pads
5. Batteries: 2 x CR2032 batteries and 4 x AA batteries (Included)

 
FIG. 1 FRONT OF LIGHT FIXTURE

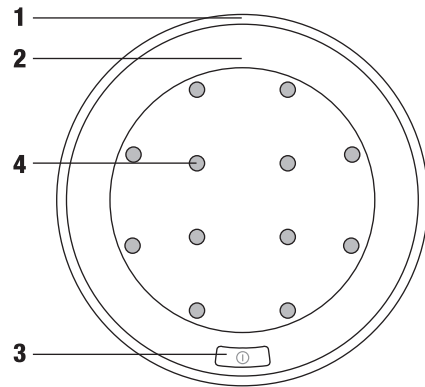

LIGHT UNIT FEATURES:

1. Mounting plate
2. Internal radio frequency receiver
3. Integrated backup on/off button
4. 12 Super bright LEDs
 - 2 light intensity settings
 - i. High – 12 LED
 - ii. Low – 8 LED
5. Water Resistant Construction

 
FIG. 2 FRONT OF WALL SWITCH

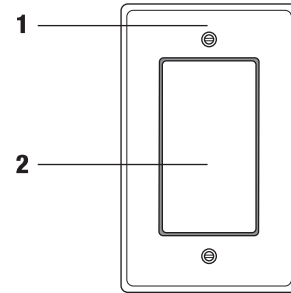

WALL SWITCH FEATURES:


1. Radio frequency transmitter
2. On/Off dimmer operation:
 - i. Press once for full brightness
 - ii. Again for reduced brightness
 - iii. Third time to turn the light off

 FIG. 3 BACK OF LIGHT FIXTURE

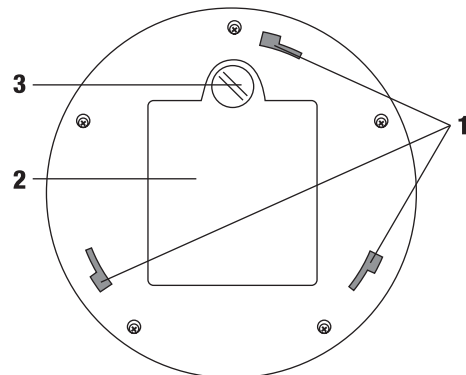

1. Mounting tab slots
2. Battery compartment
3. Battery compartment locking screw

 FIG. 4 BACK OF WALL SWITCH

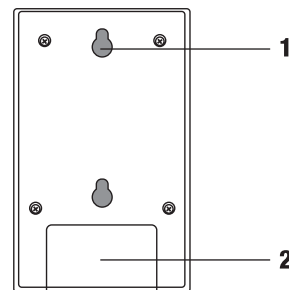

1. Keyhole slots
2. Battery compartment

LIGHT FIXTURE INSTALLATION:

1. When facing the front of the light fixture, twist the light fixture counter-clockwise to remove from the mounting plate.
2. Mark the location where the screws will be positioned on the ceiling where you want to mount the light fixture
3. Using the mounting plate in Fig. 5 below as a guide drill four pilot holes in the marked areas on the ceiling.
4. Place the 4 anchors (included) into the pre-drilled holes and align the mounting plate with the holes. Then tighten the 4 screws slightly until secure.
5. Align the light fixture mounting tab slots with the mounting plate tabs, insert tabs into slots and turn the light fixture clockwise to the locking position (a click will be heard).

FIG. 5a MOUNTING PLATE FRONT VIEW


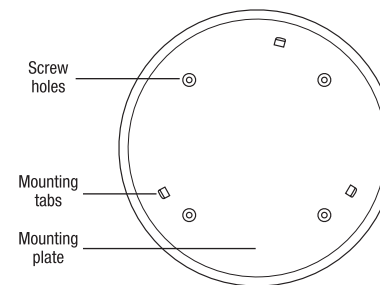 


FIG. 5b MOUNTING PLATE SIDE VIEW

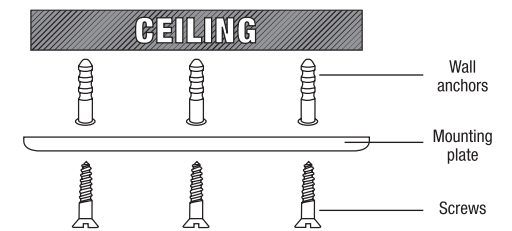 

SWITCH INSTALLATION:

1. Drill two pilot holes in the location where you want to mount the wall switch.
2. Using the mounting instruction guideline below (Fig. 6), place anchors (included) in pre-drilled holes.
3. Tighten the screws (included) slightly until secure, but do not tighten all the way.
4. With the battery compartment located at the bottom on the back of the switch, align and slide the keyhole slots on the back of the wall switch over the screw heads.
5. Slide the unit down, the switch should lock into position. If the switch is not tight against the wall, remove the switch and tighten screws slightly until switch fits securely to the wall.

FIG. 6 SWITCH SIDE VIEW

