


# Battery charger with FLO TV™

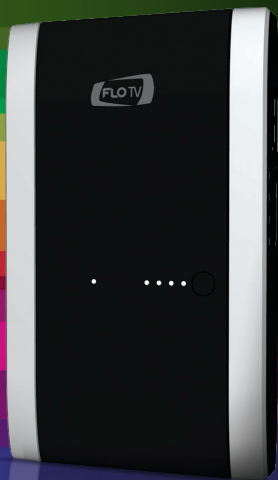

Charging Guide

## Welcome

Thank you for purchasing the battery charger with FLO TV™.

Now you can watch your favorite shows on your iPhone® or iPod touch®. You'll also receive extra battery life with the rechargeable 1350 mAh battery.

### Features

1. Slide the switch on the side and watch live mobile TV on your iPhone or iPod touch — get live sports, breaking news, kids' entertainment, and hundreds of your favorite shows on the go.
2. The battery charger with FLO TV™ fully charges your iPhone or iPod touch — so you get more than 5 hours of viewing time.
3. Internal antenna means no wires or rabbit ears.
4. The rechargeable lithium polymer battery has a long service life (over 500 full cycles) — with built-in short circuit, overcharge, and temperature protection.
5. Check how much battery is left with a glance at the integrated 4-light LED status indicator.

## Compatibility

A subscription to the FLO TV™ service is required to watch live mobile TV on your iPhone or iPod touch.

To subscribe or for coverage availability information, visit [www.flotv.com](http://www.flotv.com).

To complete a subscription, you will need your Device ID and Authorization Code (located on the Subscription Information Card), credit/debit card, and a valid e-mail address.

This device is intended for use only with the iPhone 3GS and up, and iPod touch 3rd generation and up.

## Live Mobile TV

Please carefully read through the Quick Start Guide before going any further.

If you've already registered and downloaded the app, slide the switch on the side to "FLO TV," select the "FLO" Wi-Fi network, and launch the app.

## Features

Connect the battery charger with FLO TV™ to a power source using the included micro USB cable. It can be plugged into your computer — where it will both charge and sync your iPhone or iPod touch to your computer the same as if it were directly connected (switch on side must be in "OFF" position) — or it can be connected to any iPhone or iPod touch compatible wall-plug style power source that has a USB out, including the standard iPhone or iPod touch USB adaptor. While it's charging, the LEDs will indicate the charge level. As the battery charger with FLO TV™ reaches a complete charge, more LEDs will become solid, until all four are solid at full charge.

## Charging Your iPhone or iPod touch

To extend the battery life of your device, simply make sure it is connected to the battery charger with FLO TV™, and slide the switch to the charging setting (in the center, indicated by a lightning bolt icon). When the iPhone or iPod touch recognizes the battery charger with FLO TV™, a battery will appear on the screen and you will hear a chirp from the iPhone or iPod touch (it will vibrate instead if silenced). Your iPhone or iPod touch is now charging and using the power from the battery charger with FLO TV™.

For optimal battery usage time from your iPhone or iPod touch, do not use the battery charger with FLO TV™ until the iPhone or iPod touch battery approaches the end of its life — near 10 or 20%. Slide the switch to charge, and watch as it powers the iPhone or iPod touch back up, providing that extra boost you need to make it through the day.

**Note: If you were watching the FLO TV™ service prior to using the battery, you will not receive as much power as you would if the device was fully charged.**

If you'd rather save your battery charger with FLO TV™ and use the iPhone or iPod touch's own internal battery, simply slide the switch on the side to stand-by mode (indicated by the word "OFF"). If you still have charge left, slide it back on later and charging will begin immediately.

**Note: Your battery charger with FLO TV™ comes charged and ready-to-go. After initial use, normal charging will take only two to three hours for maximum power.**

To keep your battery charger with FLO TV™ operating to its fullest potential, make sure to do the following:

1. Keep the battery charger with FLO TV™ dry and away from any moisture or corrosive materials.
2. Do not wash the battery charger with FLO TV™ with harsh chemicals, soaps, or detergents. Just wipe with a soft cloth. Use compressed air to remove any accumulated dust or debris near the connectors.
3. Recharge your battery charger with FLO TV™ once every three months when not in use, and remember to charge it for one hour before putting it away for an extended period.

## Customer Service

Web: [www.flotv.com](http://www.flotv.com)

Telephone: 1-877-553-5688

### FAQ

#### **What is the best method for charging my battery charger with FLO TV™?**

Connect the battery charger with FLO TV™ to a power source using the included micro USB cable. The USB cable can be plugged into your computer or any iPhone or iPod touch compatible wall-plug style charger with a USB output.

#### **How many charge cycles do you get from the battery?**

The battery charger with FLO TV™ is rechargeable for over 500 full cycles. Partial cycles don't count as full, so you could, for example, charge 10% of the way 10 times before it counts as a complete cycle.

#### **What are the benefits of switching the battery charger with FLO TV™ to standby mode (OFF)?**

Using the stand-by switch will give you even more total battery life — your iPhone or iPod touch will consume more battery if the battery charger with FLO TV™ is in charging mode constantly.

### Warning

- Read all instructions and warnings prior to using this product.
- Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not mStation ("Manufacturer") are responsible.
- Do not store battery in high temperature environment, including intense sunlight heat. Do not place battery in fire or other excessively hot environments.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this battery. If there is any damage to the battery such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and contact manufacturer or dispose of it in an appropriate manner at a local battery recycling center.
- Do not disassemble this battery or attempt to repair or modify it in any manner.
- Do not expose this battery to moisture or submerge it in liquid. Keep battery dry at all times.
- Do not attempt to charge battery using any method, apparatus or connection other than the device's USB connector. For questions or instructions for the various ways to charge the battery charger with FLO TV™ refer to this manual's "Charging your iPhone or iPod touch" sections.

- Do not attempt to replace any part of this battery.
- If this battery is intended by Purchaser to be used by a minor, and Purchaser is not a minor, Purchaser agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is sole responsibility of Purchaser, who agrees to indemnify Manufacturer for any unintended use/misuse by a minor.
- All batteries have gone through a thorough quality assurance inspection. If Purchaser finds that the battery is excessively hot, is emitting odor, is deformed, damaged, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use and contact Manufacturer.
- For extended storage, first charge the battery for one hour.
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to a local battery-recycling center.

## Legal

This battery charger is meant for use only in conjunction with the appropriate mobile entertainment devices. Please consult the device packaging to determine whether this battery charger is compatible with Purchaser's particular mobile entertainment device. Manufacturer is not responsible for any damages to any mobile entertainment device incurred through the use of this product.

Manufacturer shall not in any way be liable to Purchaser or to any third party for any damages Purchaser or any third party may suffer as a result of use, intended or unintended, or misuse of this battery charger in conjunction with any device or accessory other than the appropriate mobile entertainment device for which this battery charger is designed. Manufacturer will not be responsible for any damages Purchaser or any third party may suffer as a result of misuse of this battery charger as outlined above. If Purchaser is responsible for battery use with an unintended mobile entertainment device and damages result from such use, Purchaser agrees to indemnify Manufacturer for any resulting injuries to any third party(ies). iPhone and iPod touch are registered trademarks of Apple, Inc. All rights reserved.

**Visit [flotv.com](http://flotv.com) to review the FLO TV Incorporated Customer Contact and Privacy Statement.**

For additional help and FAQs visit [flotv.com/help](http://flotv.com/help) or call 1-877-553-5688

©2010 FLO TV Incorporated, a Qualcomm company.  
All rights reserved. FLO and FLO TV are trademarks of  
Qualcomm Incorporated. All other trademarks are the  
property of their respective owners.

**Service not available everywhere.**

All programming subject to change. All sports programming  
subject to blackout restrictions. "Live mobile television" means  
the FLO TV service transmits channels in real time; no  
downloading, sideloading or buffering.

80-K0907-1, rev A

