


FREEDOMTM PAR^{III} TRI-6

Quick Reference Guide

FCC ID:XAO-FREEDOM

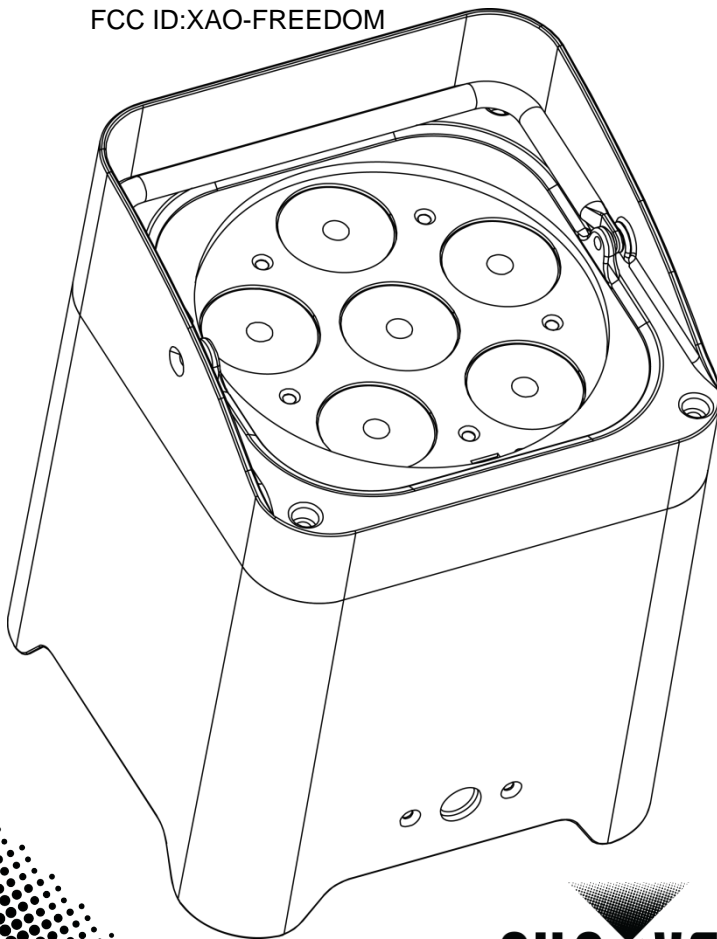

CHAUVET[®] 3
It's
Green Thinking.

About This Guide

The Freedom™ Par Tri-6 Quick Reference Guide (QRG) has basic product information such as mounting, menu options, and DMX values. Download the User Manual from www.chauvetlighting.com for more details.

Disclaimer

The information and specifications contained in this QRG are subject to change without notice.

Safety Notes

These Safety Notes include important information about installation, use, and maintenance.



- This product is not intended for permanent installation.
- Only connect this product to a grounded and protected circuit.
- Always disconnect from power before cleaning or replacing the fuse.
- Do not look at the light source when the product is on.
- Make sure the power cord is not crimped or damaged.
- Never disconnect this product from power by pulling on the cord.
- When mounting this product overhead, use a safety cable.
- Do not allow flammable materials close to the unit while operating.
- Do not touch this product when it is operating because it may be hot.



- The voltage of the outlet to which you are connecting this product must be within the range stated on the decal or rear panel of the product.
- This product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose this product to rain or moisture.
- Always mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the unit's housing are blocked.
- Never connect this product to a dimmer or rheostat.
- Replace the fuse with another of the same type and rating.
- Only use the handle to carry this product.
- The maximum ambient temperature is 104 °F (40 °C). Do not operate this product at higher temperatures.
- In the event of a serious operating problem, stop using immediately.
- Do not open this product. It contains no user-serviceable parts.

Contact

Outside the U.S., United Kingdom, Ireland, or Mexico, contact your distributor to request support or return a product. Visit www.chauvetlighting.com for contact information.

What is Included


- Freedom™ Par Tri-6
- Power Cord
- Warranty Card
- Quick Reference Guide

To Begin

Unpack your Freedom™ Par Tri-6 and make sure you have received all parts in good condition. If the box or contents appear damaged, notify the carrier immediately, not CHAUVET®.

Description

The Freedom™ Par Tri-6 is a wireless, battery-operated, tri-color LED Par with a built-in D-Fi™ transceiver. It works with the FlareCON™ app and IRC-6 for wireless triggering and control. You can wirelessly master/slave this fixture with other Freedom™ fixtures for a coordinated light show. Shine light where it is needed using the built-in adjustable kickstand. Extend the battery's lifespan with built-in discharge protection. Safely store and transport your fixtures from gig to gig in the CHS-FR4 carry bag available from CHAUVET®. The Freedom™ Par Tri-6's compact and lightweight design easily fits inside sticks of TRUSST®.

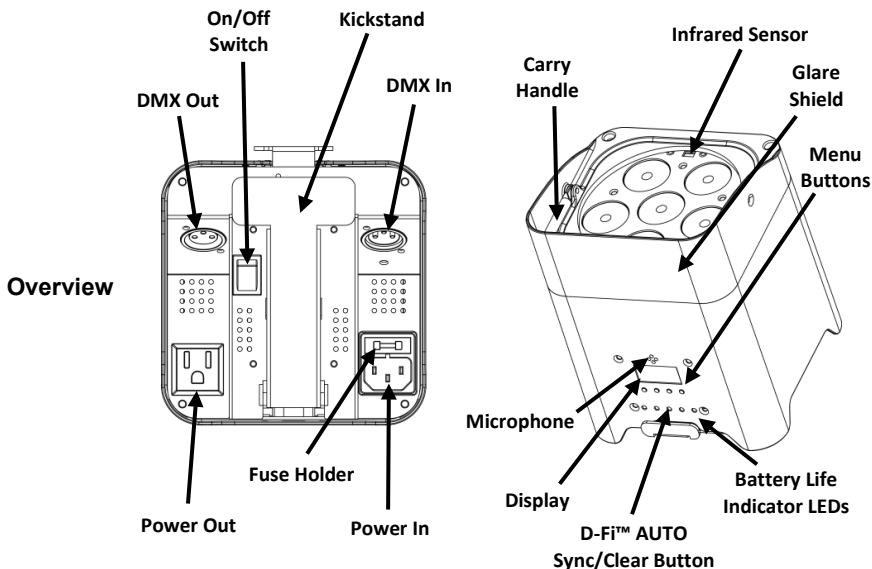

AC Power

This product has an auto-ranging power supply that can work with an input voltage range of 100~240 VAC, 50/60 Hz.

Power Linking

For the maximum number of Freedom™ Par Tri-6 products that you can power link at each voltage, see the User Manual or the sticker on the product.

Fuse Replacement

1. Disconnect the product from power.
2. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
3. Pry the safety cap out of the housing.
4. Remove the blown fuse from the clip on the front of the safety cap and replace with a fuse of the exact same type and rating.
5. Re-insert the fuse holder and reconnect power.

Charging the Battery


The Freedom™ Par Tri-6 comes with a rechargeable lithium battery for cable-free operation. To charge the battery, simply plug in the power cord at any time before, during, or after operation. To charge the battery before or after operation with all the LEDs off, leave the power switch in the **Off** position.



For optional battery life, charge the Freedom™ Par Tri-6 battery 24 hours prior to initial use.

Battery Life Indicator

The battery life indicator shows the remaining amount of internal battery life when the the menu buttons are inactive.

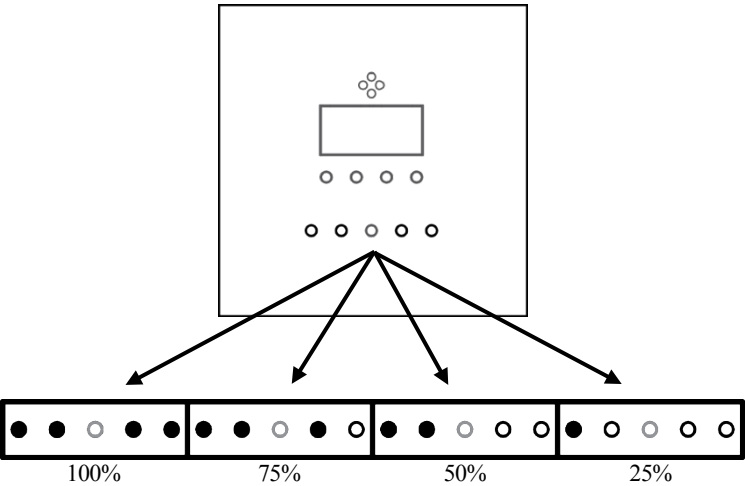


Battery Run Time

Maximum Run Time (all colors on)	Maximum Run Time (single color on)	Recharge Time
Up to 8 hours	Up to 20 hours	6 hours

IRC-6 (Infrared Remote Control)

The Freedom™ Par Tri-6 is compatible with the IRC-6 from CHAUVET®. For more information on the IRC or to download instructions, go to www.chauvetlighting.com.

Mounting Before mounting this product, read the Safety Notes.

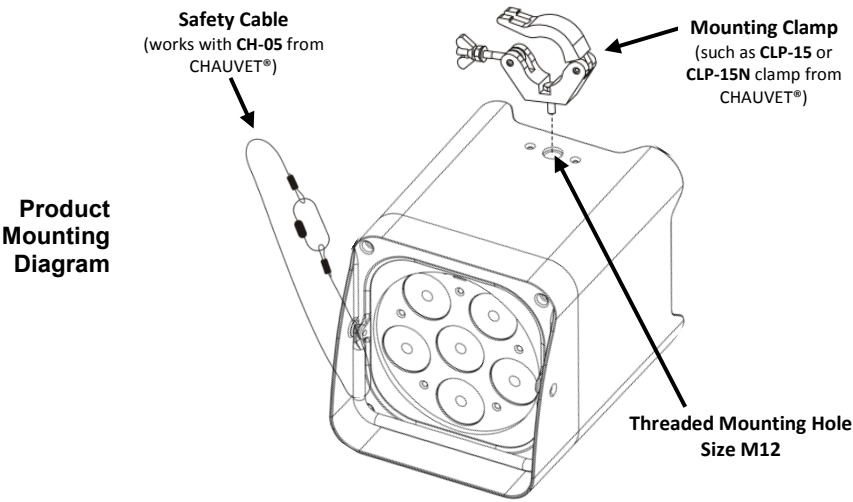

DMX Linking The Freedom™ Par Tri-6 can work with a DMX controller when linked by DMX serial connections or wirelessly via D-Fi™. Instructions for connecting and configuring this product for DMX operation are in the User Manual. If you are not familiar with DMX, download the DMX Primer from www.chauvetlighting.com.

Starting Address To ensure full access to all channels in each DMX mode, the highest recommended DMX address is **504**.

Master/Slave Connection The Freedom™ Par Tri-6 uses the DMX data connection for its Master/Slave mode. Instructions for connecting and configuring this product for Master/Slave operation are in the User Manual.

Control Panel Description	Button	Function
	<MENU>	Exits from the current menu or function
	<UP>	Navigates upwards through the menu list and increases the numeric value when in a function
	<DOWN>	Navigates downwards through the menu list and decreases the numeric value when in a function
	<ENTER>	Enables the currently displayed menu or sets the currently selected value into the selected function

Menu Options

Main Function	Programming Levels		Description	
DMX Personalities and Starting Address	3-CH	d 1–d512	Selects the DMX personality and starting address	
	4-CH			
	5-CH			
	9-CH			
Static Colors	C--	C 1–C 7	Selects static color	
Auto Programs	P--	P 1–P 4	Selects auto program	
Program Speed	S--	S 1–S100	Selects auto program speed (slow to fast)	
Sound-Active Mode	Snd		Selects Sound-Active mode	
Sound Sensitivity	SenS	u 0–u100	Selects sound sensitivity	
Custom Color Mixing	U--	r 0–r255	Red (0–100%)	
		g 0–g255	Green (0–100%)	
		b 0–b255	Blue (0–100%)	
Dimmer	dIM	OFF	Selects the dimming curve dIM1 (slow) to dIM3 (fast), or OFF	
		dIM1		
		dIM2		
		dIM3		
Infrared	SET	ON	Turns infrared on or off	
		OFF		
2.4 G	S-tr	drAS	drAU	Automatically select receive frequency (for DMX use)
		drCH	dr 1–dr16	Manually select receive frequency (for DMX use)
		dtAS	dtAU	Automatically select transmit frequency (for DMX use)
		dtCH	dt 1–dt16	Manually select transmit frequency (for DMX use)

DMX Values

9-CH

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Blue	000 ⇔ 255	0–100%
5	Manual Color + Color Temperature	000 ⇔ 010	No function
		011 ⇔ 030	R: 100% G: 0–100% B: 0
		031 ⇔ 050	R: 100%–0 G: 100% B: 0
		051 ⇔ 070	R: 0 G: 100% B: 0–100%
		071 ⇔ 090	R: 0 G: 100%–0 B: 100%
		091 ⇔ 110	R: 0–100% G: 0 B: 100%
		111 ⇔ 130	R: 100% G: 0 B: 100%–0
		131 ⇔ 150	R: 100% G: 0–100% B: 0–100%
		151 ⇔ 170	R: 100%–0 G: 100%–0 B: 100%
		171 ⇔ 200	R: 100% G: 100% B: 100%
		201 ⇔ 205	Color temperature 1
		206 ⇔ 210	Color temperature 2
		211 ⇔ 215	Color temperature 3
		216 ⇔ 220	Color temperature 4
		221 ⇔ 225	Color temperature 5
		226 ⇔ 230	Color temperature 6
		231 ⇔ 235	Color temperature 7
		236 ⇔ 240	Color temperature 8
		241 ⇔ 245	Color temperature 9
		246 ⇔ 250	Color temperature 10
		251 ⇔ 255	Color temperature 11
6	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Slow to fast
7	Auto Programs	000 ⇔ 010	No function
		011 ⇔ 060	Auto program 1
		061 ⇔ 120	Auto program 2
		121 ⇔ 180	Auto program 3
		181 ⇔ 240	Auto program 4
8	Auto Speed	241 ⇔ 255	Sound-Active mode
9	Dim Mode	000 ⇔ 255	Auto program speed (slow to fast)
		000 ⇔ 051	Dimmer mode manually set in Menu Options
		052 ⇔ 101	Dimmer mode off
		102 ⇔ 152	Dimmer mode 1 (fast speed)
		153 ⇔ 203	Dimmer mode 2 (medium speed)
9	Dim Mode	204 ⇔ 255	Dimmer mode 3 (slow speed)

DMX Values (cont.)

5-CH	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ⇄ 255	0–100%
	2	Red	000 ⇄ 255	0–100%
	3	Green	000 ⇄ 255	0–100%
	4	Blue	000 ⇄ 255	0–100%
	5	Strobe	000 ⇄ 010	No function
			011 ⇄ 255	Slow to fast

4-CH	Channel	Function	Value	CH. 2	CH. 3	CH. 4
	1	Blackout	000 ⇄ 008		Flash Speed 000 ⇄ 249	
		Red	009 ⇄ 028			
		Green	029 ⇄ 048			
		Blue	049 ⇄ 068			
		Green + Blue	069 ⇄ 088			
		Red + Blue	089 ⇄ 108			
		Red + Green	109 ⇄ 128			
		Red + Green + Blue	129 ⇄ 143			
		Color Chase 1 (R + G)	144 ⇄ 152	Run Speed Automatic 000 ⇄ 127	Sound-Active 250 ⇄ 255	
		Color Chase 2 (G + B)	153 ⇄ 161			
		Color Chase 3 (R+G+B)	162 ⇄ 170			
		Color Chase 4 (R+G+B+GB)	171 ⇄ 179			
		Color Chase 5 (R+G+B+GB+RB)	180 ⇄ 188			
		Color Chase 6 (R+G+B+GB+RB+RG)	189 ⇄ 197			
		Color Chase 7 (R+G+B+GB+RB+RG+RGB)	198 ⇄ 206			
		RGB Mode	207 ⇄ 215	Red (0–100%)	Green (0–100%)	Blue (0–100%)
		Color Snap	216 ⇄ 224	Fade Speed 000 ⇄ 255		
		Color Fade	225 ⇄ 233	Fade Speed 000 ⇄ 255		
		Auto Run (Sound-Active Only)	234 ⇄ 255	Run Speed Automatic 000 ⇄ 127 Sound-Active 128 ⇄ 255		

3-CH	Channel	Function	Value	Percent/Setting
	1	Red	000 ⇄ 255	0–100%
	2	Green	000 ⇄ 255	0–100%
	3	Blue	000 ⇄ 255	0–100%

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna of the product, under normal use condition is at least 0.2m away from the body of the user.