

User Manual

Claims

We reserve our right to make changes and improvements to any of the products described in this manual without prior notice. Under no circumstances shall we be responsible for any loss of data, income, or any special, incidental, consequential or indirect damages howsoever caused.

The content of this manual is provided "as is". To the fullest extent permissible by law, we make no representations or warranties of any kind, either express or implied, for, but not limited to, the accuracy, merchantability, and fitness of this manual for a particular purpose.

Contents

For Your Safety	6
Brief Introduction.....	8
Your phone's label.....	8
Phone image	8
Key definition	9
Touch screen.....	10
Silent mode.....	12
Screen sleep	12
Screen lock.....	13
Shortcuts.....	14
Wireless off.....	15
Making phone calls	15
Power on/off	16
USB storage	16
Home screen.....	17
Home screen.....	17
Extended home screen	18
Create Home screen shortcuts and widgets	18
Remove items from the Home screen.....	18
Move objects on the Home screen	19
Create and delete folders on the Home screen.....	19
Customize Home screen wallpaper.....	19
Notification and connection status icons.....	20
Getting Started.....	24
Installing the battery	24
Installing the SIM card.....	25
Installing a memory card.....	26
Charging the battery	27
Battery tips.....	28
Use and maintenance	28

System settings	30
Wireless controls	30
Call settings	31
Sound & display	32
Security & location	34
Applications	35
SD card & phone storage.....	36
Date & time	37
Local & text.....	37
About phone.....	38
Bluetooth	39
Turn on Bluetooth services	39
Discoverability	39
Name your Bluetooth device.....	39
Pair & connect with Bluetooth devices	40
Rescan for Bluetooth devices	41
Contacts.....	42
Your contact list	42
Search for a contact.....	42
Add a contact.....	43
Assign favorites	43
Edit contact details	44
Delete contact	44
Communicate with a contact	44
Display a contact group	46
Contacts settings.....	46
Email and Messaging	48
Email	48
SMS and MMS messaging.....	51
Browser	58
About the Browser.....	58

Zoom and navigation in Web pages.....	58
The Browse screen	59
Open pages in separate windows	59
Manage bookmarks.....	61
Set your home page	63
Links in Web pages	63
Browser history.....	64
Download Web files and applications	65
View your downloads	65
Browser settings	65
Dialer & Voice Dialer	69
About the dialers.....	69
Make a call by dialing	69
Answer an incoming call.....	72
In-call options	72
Multiple calls	73
Call log	76
Call settings	78
Google Calendar	80
Calendar views.....	80
Create an event.....	82
The View event screen	84
Event reminders.....	84
Edit an event	86
Go to today	86
Calendar settings.....	86
Camera, Camcorder & Gallery.....	88
Before you begin.....	88
Camera.....	88
Camcorder	90
Settings of Camera and Camcorder.....	90

Gallery.....	91
Music & Video player	96
Music.....	96
Video player	100
Tools & game.....	102
Alarm Clock.....	102
Calculator	104
File browser.....	105
Spare parts.....	106
FM radio.....	107
Snake on a phone.....	108
SIM Toolkit.....	108
Battery Information	110
Accessories.....	111
Safety of the battery.....	111
Rapid travel charger	111
Data cable	111

For Your Safety



SWITCH ON SAFELY Do not use in prohibited areas or when it may cause any interference or danger.



SWITCH OFF IN HOSPITALS Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF WHEN REFUELING Do not use the phone at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF IN AIRCRAFT Follow any restrictions. Switch off the phone during the flight as wireless devices can cause interference in aircraft.



ROAD SAFETY Obey all local laws. Please use the hands-free kit while driving.



ACCESSORIES AND BATTERIES Use only approved accessories and batteries. Do not attempt to connect incompatible products.



BACKUP IMPORTANT INFORMATION Remember to make backup copies or keep a written record of all important information.



CONNECTING TO OTHER DEVICES When connecting to any other device, read its user manual for detailed safety instructions. Do not try to connect incompatible products.



MAINTENANCE Only authorized and qualified personnel may repair this product.



WATER RESISTANCE Your phone is not water-resistant. Keep it dry.



INTERFERENCE All wireless devices may be susceptible to interference, which could affect its performance.

Damage to the security seal will invalidate the warranty.

Warning: Improper use will invalidate the warranty.

Brief Introduction

Your phone's label

The barcode label includes important information about services and customer support. Please keep it properly.

Phone image

Note: All the illustrations, simulated screen and related images in the manual are for reference only. They may be slight different from your handset. Please refer to your handset for actually.



1 _ Front camera lens	7 _ Home key	13 _ Loudspeaker
2 _ Volume up key	8 _ Receiver	14 _ Back camera lens
3 _ Volume down key	9 _ Menu key	15 _ Stylus
4 _ Touch screen	10 _ Back key	16 _ Camera key
5 _ Navigation keys	11 _ Power & End key	17 _ USB port
6 _ Call key	12 _ Microphone	

Key definition

A few simple keys make it easy to operate.

Home key

- Press to return to the home screen from anywhere on your phone.
- Press & hold to bring up the recent applications window.
- When there is an incoming call, press to answer the call.
- In the home screen, press to do one of the following, depending on the context:
 - Open the log of recent calls of SIM2.
 - Call contact (when a contact/contact number is highlighted) by SIM2.
 - Add another call (while in a call).
 - Call number (when a phone number is highlighted, e.g., in Browser) by SIM2.

Back key: Press to go back to the previous menu, or to dismiss a dialog box or menu.

Menu key

- Press to open a list of actions you can take on the current screen.
- Press to wake up the screen, and press again to unlock the screen.

Navigation keys: Press to navigate selectable items on the screen.

Volume keys: Press to adjust the volume.

Camera key

- When on the Home screen, press & hold to go to the capture screen.
- When in the Camera application, press half-way down to focus, then complete the press to take a picture.

Call key

- Press to do one of the following, depending on the context:
 - Open the log of recent calls of SIM1.
 - Call contact (when a contact/contact number is highlighted) by SIM1.
 - Add another call (while in a call).
 - Call number (when a phone number is highlighted, e.g., in Browser) by SIM1.
- Press & hold to open the voice dialer.
- When there is an incoming call, press to answer the call.

Power & End key

- When on a call, press to hang up.
- When not on a call, press to lock the screen and put the phone to sleep.
- When not on a call, press & hold to open the phone context menu, from which you can power off or put your phone in silent mode.
- When the phone is off, press and hold to power it on.

Touch screen*Selection*

To select an item or button on the screen, touch the item directly with your fingertip. You will know when an item on the screen is selected when its color changes.

Context menus

To open the context menu for an item on the screen, touch & hold the item on the screen with your fingertip. You must hold for one full second before the context menu will appear.

Scroll

To scroll up or down in a list or page on the screen, you can either:

- Press the **Up navigation key/Down navigation key**; or
- Slide your finger up/down on the screen. With repeated short, quick brushing gestures, you can accelerate the scroll. Touch the screen to stop the scrolling.

Crop pictures


When creating wallpaper or an icon from a picture, you can control how the picture is cropped. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it with the picture.

Drag items


In some contexts you can drag items on the screen with your fingertip. Moving the cropper frame within a picture is one example.

Zoom in or out

Zoom in on a picture when viewed full-screen, web page, or map:

1. Touch the screen to open the zoom-in and zoom-out controls .
2. Touch the **+** control to zoom in. With each touch you zoom in closer.


Zoom out on a picture when viewed full-screen, web page, or map:

3. Touch the screen to open the zoom-in and zoom-out controls .

4. Touch the **-** control to zoom in. With each touch you zoom in closer.

Scale & scroll

To navigation quickly to a section of a large web page, use the "scale & scroll" interface:

1. Touch the screen to reveal the zoom controls and the "scale & scroll" icon  at the bottom right of the screen. Touch the icon. The magnifying window opens and the web page reduces to fit the width of the screen.
2. Move the magnifying window around the screen with your fingertip.
3. When you find the area of the page you want to view more closely, release your finger and the view expands to fit the screen.

Screen orientation

Your screen's orientation always switches automatically when the phone orientation changes.

Press the **Menu key** in the home screen, then select [Settings>Sound & display>Orientation](#).

Unselect the check box to let your screen keep the portrait orientation.

[Silent mode](#)

To silence your phone quickly, press and hold the **Power & End key** to open the option menu, and select [Silent mode](#).

Other ways to silence your phone:

1. Press and hold the **Volume down key** to zero volume.
2. Return to the home screen, then press the **Menu key** to select [Settings>Sound & display](#). Select [Silent mode](#) check box.

[Screen sleep](#)

After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your

phone uses less battery power. You can control this behavior:

Set screen timeout period

1. Return to the home screen, then press the **Menu key** to select [Settings>Sound & display](#).
2. Select [Screen timeout](#), then select a time or never timeout from the menu.

Prevent sleep while charging

1. Return to the home screen, then press the **Menu key** to select [Settings>Applications](#).
2. Select [Development](#), then select the [Stay awake](#) check box.

Lock screen & put phone to sleep (immediately)

 
Except when on a phone call, from any screen, press the **Power & End key**.

Screen lock

While not on a call, to lock your control buttons and screen from accidental touch activation, press the **Power & End key**. To unlock your screen, press the **Menu key**.

You can increase the security of your phone by setting a screen unlock pattern. Once set, in order to unlock your screen, you'll have to draw the correct unlock pattern. You can set your screen unlock pattern as follows:

1. Return to the home screen, then press the **Menu key** and select [Settings](#).
2. Select [Security & location](#), then scroll down to the Screen unlock pattern section.
3. Select the [Require pattern](#) check box.
4. Set or change your unlock pattern by selecting either [Set unlock pattern](#) or [Change unlock pattern](#), as applicable.
5. Follow the prompts to define your pattern. **Note:** You must slide your finger along the screen to create the pattern, not select individual dots. Connect at least four dots.

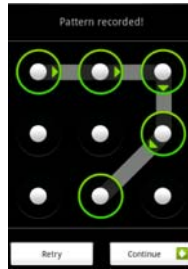

6. When you unlock your screen, if you want your pattern to be hidden as you draw it, clear the [Use visible pattern](#) check box.

Shortcuts

Use these control buttons from anywhere on your phone:

Lock screen and put phone to sleep

Press the **Power & End key**.

Open dialer

Press the **Call key**, and select [Dialer](#) tab; or press the **Home key** in the home screen, and select dialer tab

 
Open voice dialer

Press and hold the **Call key**.

Open the recent applications window


From any screen, press and hold the **Home key** to open the recent applications window. The

window displays (up to) the last six applications you used since last restarting your phone. Select an application to open it.

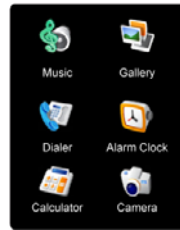

Wireless off

When you need to turn off all your phone radios, switch to "airplane" mode:

1. Return to the home screen, then press the **Menu key** and select **Settings**.
2. Select **Wireless controls**, then select the **Airplane mode** check box. When selected the airplane mode icon  displays in the status bar and all wireless connections are disabled.
3. To enable wireless connections again, return to this settings screen and clear the **Airplane mode** check box.

Tip: To silence your phone quickly, press and hold the **Power & End key** to open the option menu, and select **Airplane mode**.

Making phone calls

To dial a number, press the **Call key** to dial the number with SIM1, or press the **Home key** to dial the number with SIM2. To call using the voice dialer, press & hold the **Call key**. To answer an

incoming call, press the **Call key** or the **Home key**. To end a call, press the **Power & End key**.

While in a call, press the **Menu key** to reveal the in-call options.

Show dialpad: Displays the on-screen dial pad.

Add call: Put current call on hold and displays the on-screen dial pad so you can dial another number.

Speaker: Turns on the speakerphone.

Mute: Mutes your side of the conversation.


Hold: Puts call-in-progress on hold.

Power on/off

To power off your phone, press and hold the **Power & End key**. On release, the phone options menu opens. Select **Power off**.

To power on again, press and hold the **Power & End key**. (**Tip:** The phone will vibrate after you press and hold the **Power & End key**, and please be patient to wait for the phone to power on.)

USB storage

1. Connect your phone to your computer via USB, and your phone will prompt "USB connected", then the status bar will display a USB icon .
2. Touch the status bar and slide your fingertip down the screen. Touch **USB connected**, and select **Mount** if you want to copy files between your computer and your phone's memory card.
3. To turn off the USB storage, touch the status bar and slide your fingertip down the screen, then select **USB connected>Turn off**.

Tip: While you mount the USB storage, you can not view pictures or play any media stored on the memory card from your phone.

Home screen

Home screen

The Home screen is your starting point for using all the applications on your phone. You can customize your Home screen to display applications, shortcuts and widgets as you like.



Tip: To hear a sound when an item is selected, select the [Audible touch tone](#) check box in [Settings>Sound & display](#).

Extended home screen


The home screen actually extends beyond the screen width. Slide your fingertip left and right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize Home with applications, shortcuts, and widgets.

Create Home screen shortcuts and widgets

1. Start from the Home screen, then touch & hold the screen with your fingertip. The [Add to Home screen](#) menu opens.
2. Select a [Shortcut](#) to applications or some of your saved information (such as a music playlist, a Web bookmark, or folder), a [Widget](#) (a clock, picture frame, or Google search bar), a [Live folder](#) (all contacts, contacts with phone numbers, or starred contacts), or [Wallpaper](#) for your Home screen.
3. The application, shortcut, folder, or widget appears on the screen. If you selected Wallpaper, you'll be asked to select a picture.

Tip: To create an application shortcut quickly, touch the application tab to reveal all the application icons, then touch & hold an application icon. Its shortcut is added to the Home screen.

Remove items from the Home screen

To remove a shortcut or widget from your Home screen, touch & hold the item. The application tab turns into a Trash button. Drag the item to the Trash button  and release. You'll know when your item is in the Trash because the item and the tab will turn red:



Move objects on the Home screen


1. To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.



2. Without lifting your finger (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

Create and delete folders on the Home screen

You can add folders to hold application icons or shortcuts:

1. From the Home screen, press the **Menu key** and select **Add**, or touch & hold the screen to open the **Add to Home screen** menu.
2. Select **Folders>New folder**. A new folder appears on the screen.
3. Touch & hold any of the application icons or shortcuts to enter move mode (the icon will magnify), then drag the item on top of the new folder.
4. Touch the folder once to open it; touch the folder's title bar to close it.
5. To rename a folder, first open the folder. Then touch & hold the folder title bar to open the **Rename folder** dialog box. Type your new folder name, then select **OK**.
6. To delete a folder, touch & hold the folder to enter move mode. Drag the folder to the Trash button  and release.

Customize Home screen wallpaper

Wallpaper your Home screen with pictures you have stored on your memory card, or select a

picture from the Wallpaper gallery that comes preinstalled on your phone:

1. From the Home screen, press the **Menu key** and select [Wallpaper](#). Alternatively, you can touch & hold the Home screen to open the [Add to Home screen](#) menu.
2. Select [Wallpapers](#), then select either [Pictures](#) or [Wallpaper gallery](#).
3. If you select Wallpaper gallery, then scroll through the gallery. Touch a thumbnail to highlight it and view a larger version. When you've decided on a wallpaper, make sure it's highlighted, then select [Set wallpaper](#).
4. If you select [Pictures](#), your picture album opens. Note that if this is the first time you have viewed the pictures stored on your memory card from your phone, it may take a while for the pictures to load.
Navigate to find the picture you want to use, then select it.
The cropper appears. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.
When you're happy with the cropped area, select [Save](#) or press the **Back key**.

Tip: You can also set a picture as wallpaper in camera capture mode. Press the **Menu key** to select Gallery to view the pictures you captured. Touch and hold a thumbnail to open the context menu, and select [Set as>Wallpaper](#). Crop the picture, and select [Save](#) to confirm.

Notification and connection status icons

Along the top of your phone screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, alarm, or something else you should notice. On the right side of the status bar, you'll see connection status icons.



























New email message









New SMS or MMS



Problem with SMS or MMS delivery

-  New instant message
-  New voicemail
-  Upcoming event
-  Alarm is set
-  Song is playing
-  Data is syncing
-  SD card full!
-  More (undisplayed) notifications
-  Call in progress
-  Missed call
-  Call on hold
-  Call forwarding is on
-  Speakerphone is on
-  Ringer is off (Silent mode)
-  Ringer on vibrate only
-  Phone on mute
-  Uploading/downloading
-  Content downloaded
-  Sign-in/sync error
-  GSM signal, roaming, no signal
-  GPRS service connected, data flowing
-  Edge service connected, data flowing
-  Wi-Fi service connected, network available
-  Battery charge indicators: full, half-full, low, very low!

-  Battery is charging
-  Wireless services are off (Airplane mode)
-  Bluetooth® is on, Bluetooth device connected
-  No SIM card in phone
-  No memory card in phone
-  USB connected

Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.


- **Ongoing notifications** report activities such as call forwarding ON, current call status, song playing.
- **Notifications** report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting [Clear notifications](#) at the top of the notifications window.

Touch the item to open the message, reminder, or other notification. To close the notifications window, slide your finger up the screen. You can also open the notifications window by pressing the **Menu key** and selecting [Notifications](#).

Wireless operator

To view the network your phone is currently using, slide to open the notifications window. The name of the wireless operator's network appears at the top of the list in bold.

Call voicemail

If you have a new voicemail message, you will see this icon  in the status bar. To call your voicemail number:

 
1. Open the notifications window to reveal the [New voicemail](#) notification.

2. Select the notification.
3. Your voicemail number is dialed.


Getting Started

Installing the battery


1. Press the downside of the back cover, slide it down, and remove the cover.

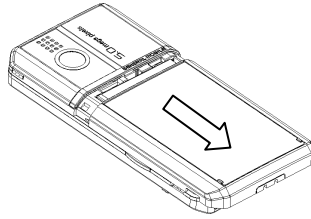

 2. Position the battery with the contacts aligned to the metal contacts of the phone. Insert the battery into the battery slot.

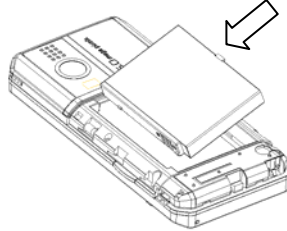

 
3. Place the back cover on the phone and slide it up to lock it.

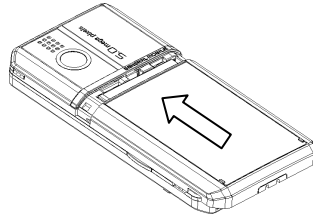


Installing the SIM card

Warning: Do not bend, scratch your SIM card; avoid exposing your SIM card to static electricity or dirt.

 1. Position the SIM card with the metal contacts face-up into the metal holder.

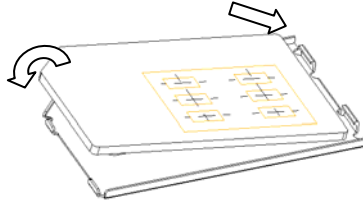


 2. With the metal holders back upward, and push them into the SIM card slots.

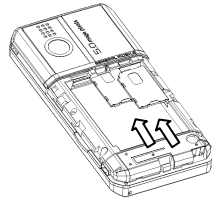

Installing a memory card

 Insert the memory card into the card slot with the metal face downwards.

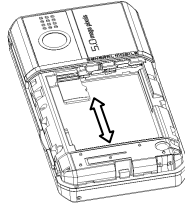


Charging the battery


Warning: To avoid damaging the phone, please do not remove the battery when the phone is charging.

To ensure the best performance of your phone's battery, please charge the battery fully before using it for the first time (Approx. 12 hours), using the method described below. Please note: some batteries require several full charge/discharge cycles to reach their best performance.

 1. Make sure the battery has been installed properly before charging.
2. Plug the travel charger into the USB connector, and then plug the other end of the travel charger into the electrical outlet.

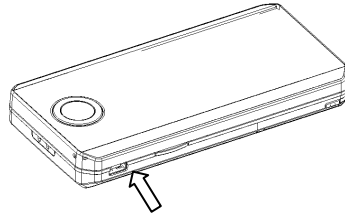

Tips:

- ◆ If your phone is off, there will be a blue light at the upper right corner of the phone's front side when being charged. When the phone is fully charged, the blue light will disappear. It may take 4-5 hours to fully charge.
- ◆ If your phone is on, there will be a charging indicator  on the status bar while charging.
- ◆ When your phone is on, try to avoid making or answering calls while charging.

- ◆ The phone also can be charged from your PC when it is connected with the USB cable, but it will take a longer time to charge if you mount USB storage.
- ◆ If your battery energy is too low, your phone may be unable to be switched on. Please charge your phone for a few minutes before you switch it on.

Battery tips

- Use only the batteries, data cable and chargers approved by the original manufacturer. Do not use a non-approved data cable or chargers, as it may damage the battery.
- Do not short-circuit the battery. Please store the battery inside the battery box to prevent accidental short-circuiting of the battery contacts.
- Do not place or charge the battery in very hot or very cold locations as extreme temperatures can adversely affect the battery.
- Please keep the charger and handset out of the reach of young children.
- Please ensure that the metal contacts of the battery are kept clean and free of dirt.
- The battery can be charged and discharged hundreds of times, but it will be eventually worn out. Please replace the battery when the battery capacity falls to approximately 50% of its original storage capacity.

Use and maintenance

The following suggestions will help you use and maintain your mobile.

- Please keep dry. Rainwater, humidity, and any kinds of liquid or moisture might contain minerals which could corrode the circuit.
- Moving parts may be damaged if you put or use the phone in a dirty or dusty place.
- Please do not use or store the phone in a high temperature environment, as this may result in damage to the electronic or plastic parts.

- Please do not use or store the phone in a very low temperature environment.
- Please do not use any chemicals, detergent, or caustic detergents to clean the mobile. If you want to clean it, please wipe it gently using a soft cloth made damp with some soapy water.
- Please do not paint the phone. Paint might clog the moving parts and prevent proper operation.
- Only use the headset provided, or an approved spare.
- If the mobile has gotten wet, please switch it off immediately and remove the battery. Leave it to dry thoroughly before using it again.
- To get the maximum talk and standby times from your battery, please turn down the volume and reduce the backlight and contrast.
- Please keep all metal objects away from the charger port located at the top of the phone to avoid damaging the electronic circuits.

System settings

Control phone-wide settings from the Home settings screen: Press the **Home key**, then press the **Menu key** to select [Settings](#). You can also select the [Settings](#) icon from the Home screen.

Wireless controls

Wi-Fi on/off

Select this check box if you prefer to use Wi-Fi for your data connection.

Wi-Fi settings screen

Open the Wi-Fi settings screen to:

1. View and scan for available networks - Press the **Menu key** and select [Scan](#).
2. Connect to a network - Select it from the network list. Provide your username or password if required.

Bluetooth on/off

Use this check box to turn Bluetooth services on or off.

Bluetooth settings

With Bluetooth services on, you can open the Bluetooth settings screen to:


1. Rename your device.
2. Select to be discoverable, or not discoverable.
3. Pair or unpair with one of the Bluetooth devices in range - You will be asked to type a PIN before pairing. Refer to the manufacturer's documentation for the PIN code.
4. Rescan for devices – Press the **Menu key** and select [Scan for devices](#).

5. FTP Server – when selected, you can send or receive files by Bluetooth.

Mobile network settings

1. Data network - Select the SIM card you like from SIM1 and SIM2. The phone will automatically use the one selected when needs the GRPS flow.
2. Select data roaming capability.
3. Select to connect only to 2G (slower) networks to save battery power.
4. Select a wireless operator network - Scan for all available networks, or select a network automatically.
5. Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by your wireless operator!

Airplane mode on/off

When airplane mode is selected, all wireless connectivity is off. This icon  will display in the status bar when airplane mode is selected.

[Call settings](#)

Your phone is a dual-SIM phone, so you can do the call settings for two SIM card separately.

Note: When you open Call settings, your current settings are fetched, which can take a few moments.

Fixed Dialing Numbers

This feature allows you to restrict outgoing calls to a fixed set of numbers.

To enable this feature you must know the SIM PIN2 code for your phone.

You can get this number from your wireless operator if this feature is supported.

Voicemail

Select to set a voicemail number that isn't being read from the SIM card.

Call forwarding

Select how you want busy, unanswered, and unreachable calls to be handled. There is also an option to [Always forward](#). Read more in "Call settings" on page 87.

Additional settings

From this setting you can set your Caller ID preference and turn on/off call waiting. Read more in "Call settings" on page 87.

Operator selection

Select a wireless operator network - Scan for all available networks, or select a network automatically.

[Sound & display](#)

Sound settings

Silent mode

Select to silence your phone.

Ringer volume

Select to open the volume control, then slide your finger along the volume bar to set incoming call volume and notification volume.

Media volume

Select to open the volume control, then slide your finger along the volume bar to set the volume for playing back music, videos, FM or voice recordings.

Phone ringtone

Select to decide on a ringtone to use for incoming calls.

Note: You can override this setting for individual contacts in the Edit contact details screens.

Phone vibrate

Select to have your phone vibrate for incoming calls.

Notification ringtone

Select to decide on a ringtone to use when you receive a notification (e.g., new message, upcoming event).

Note: You can override this setting for new Calendar event notifications and new text, and multimedia message notifications. Go to the applications' settings screens to select specific ringtones.

Audible touch tones

Select to have a tone sound when you use the onscreen Dialer.

Audible selection

Select to have a sound play when you select an item on the screen.

SD card notification

Select to have a tone sound if your phone does not detect the memory card when the phone powers on.

*Display settings***Orientation**

Select to switch orientation automatically when the phone orientation changes (except the home screen)

Animation

Select to show animation when opening/closing windows.

Brightness

Select to open the brightness control, then slide your finger along the brightness bar to set the level. In sunlight, increase the level.

Screen timeout

Select to decide how long your phone must be inactive before the screen turns off. Select [Never timeout](#) if you wish, but battery life will decrease.

Touch calibration

Select to calibrate the touch screen if the phone makes no exact reaction while you tap the screen.

Security & location

My Location

Select a source for determining your location:

- **Wireless networks, or**
- **GPS satellites**

Typically GPS will be more accurate (to street level) but it consumes more battery power.

Note: GPS is active only when in Maps or another application requiring your location. The first time you select [Set unlock pattern](#), you will step through a quick tutorial.

Screen unlock pattern

Create a pattern you will be asked to draw before your screen will unlock. You can select to make the pattern visible or invisible as you draw it.

SIM card lock settings

Lock your SIM card for extra security. You can also change your SIM card PIN from this screen.

If you don't know your SIM PIN, you can obtain it from your wireless operator.

Visible passwords

Select to have your password display as you type it.

Applications

Unknown sources

Select this check box if you want the ability to download applications from the Web. With this check box not selected, you will only be able to download applications from Android Market. To ensure your personal data and phone remain secure, it is recommended you not select this check box.

Manage applications

View all the applications stored on your phone and how much space they occupy. If you've downloaded an application from Android Market, you can uninstall it from this screen.

Select a specific application to:

1. Clear your user data (if you have any associated with a particular application).
2. Disassociate the application with any actions. For example, you may have selected to use YouTube to open any Browser links to videos. If you'd like to use another application to open video links, simply select the [Clear defaults](#) button. The next time you try to perform that action, you'll be shown a dialog box so you can select an application. To make it the default, make sure you select the [Use by default for this action](#) check box on this dialog box before you select the application.
3. Uninstall - If you've downloaded an application from Android Market, you will be able to uninstall it from this screen by selecting [Uninstall](#).

Development

If you are an application developer, you may be interested in these settings:

USB debugging

If you want be able to communicate with your phone directly via USB, select the [USB debugging](#) check box.

Stay awake

To prevent your phone from sleeping while charging (via power adapter or USB), select the [Stay awake](#) check box.

Allow mock location

To allow mock location, select the Allow mock location, select the [Allow mock location](#) check box.

[SD card & phone storage](#)

View and manage the data storage on your phone

SD card

Monitor and manage the use of your memory card from this screen:

1. View the total space of your memory card.
2. View how much space you are using on your memory card.
3. Unmount your memory card from your phone.

Note: When you mount the USB storage, you cannot view pictures or play any media stored on the card from your phone.

4. Format your memory card

Internal phone storage

Available space: Report how much internal storage is free.

Factory data reset: You can also select to reset your phone to factory settings. This will erase all your data and downloaded applications.

Date & time

Set time, time zone, and date - Use [Automatic](#) unless you need to override the network values.

Time format - Select from 12- or 24-hour formats.

Date format - Select from a variety of formats.

Local & text

Local setting

Select language and region.

Text settings

Android keyboard settings

Vibrate on keypress - When selected, your phone will vibrate while you touch the characters.

Sound on keypress - When selected, your phone will make a sound while you touch the characters.

Auto-capitalization - When selected, automatically capitalizes the first letter in a text field, or the first letter after a period (.), question mark (?), or exclamation point (!).

Quick fixes - This feature is not a spell-checker, but automatically corrects commonly-mistyped words when selected.

Show suggestion - When selected, automatically display suggested words while typing.

Auto-complete - When selected, automatically inserts a period (.) when you type two spaces in succession.

User dictionary

You add or delete words in the user dictionary. When you type words, your phone will predict the word you have ever saving in the user dictionary.


About phone

1. View your phone [Status](#). This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, whether you are roaming or not, any Wi-Fi addresses you're connected to, and more.
2. Select [Legal information](#) for copyright and licensing information, as well as the Google Terms of Service for the Google applications on your phone.
3. View the model number and version information for your phone.

Bluetooth

You can use Bluetooth to send and receive calls using a headset or hands-free car kit.

Turn on Bluetooth services

1. Press the **Menu key** to select [Settings](#) in the home screen
2. Select [Wireless controls](#), then select the [Bluetooth](#) check box to turn on Bluetooth services.
3. When it on, the Bluetooth icon  appears in the status bar.

Discoverability

By default, your phone is not "discoverable". This means other Bluetooth devices will not see your phone in their scans for Bluetooth devices. If you make your phone discoverable, it will be visible to other Bluetooth devices.

To make your phone discoverable:

1. Make sure you have turned Bluetooth on, as described in "Turn on Bluetooth services".
2. Press the **Menu key** to select [Settings](#)>[Wireless controls](#)> [Bluetooth settings](#) in the home screen.
3. Select the [Discoverable](#) check box to make your phone visible to other Bluetooth devices. You must stay on the Bluetooth settings screen to remain discoverable.
4. Select [Discoverable](#) check box again to make your phone undisableable.

Name your Bluetooth device

1. Make sure you have turned Bluetooth on, as described in "Turn on Bluetooth services".
2. Press the **Menu key** to select [Settings](#)> [Wireless controls](#)> [Bluetooth settings](#)>[Device name](#) in the home screen.

3. Type the name for your device in the dialog box, then select [OK](#).
4. Your new device name appears on the Bluetooth settings screen.

Pair & connect with Bluetooth devices

Before your phone can communicate with a Bluetooth headset or hands-free car kit, the devices must "pair", then "connect":

1. Make sure you have turned Bluetooth on, as described in "Turn on Bluetooth services".
2. Press the **Menu key** to select [Settings](#) > [Wireless controls](#) > [Bluetooth settings](#) in the home screen.
3. Your phone starts scanning for Bluetooth devices within range. As they are found, the devices appear in the list of Bluetooth devices.
4. To pair with a device in the list, select it.
5. Type the device's PIN, then select [OK](#). (Read the manufacturer's documentation if you don't know the PIN.)
6. Once paired, select the device name to connect. You can also touch & hold the name to open the context menu, then select [Connect](#).
7. Pairing and connection status appear under the device name.
8. Once the other Bluetooth device shows "connected" status, you can start using it to make and receive phone calls.
9. To disconnect or unpair with a device, touch & hold the device to open the context menu. Select [Disconnect](#) or [Unpair](#), as appropriate. If you select [Unpair](#) when connected, you will be disconnected as well.

Notes:

- The phone supports only the headset and hands-free Bluetooth profiles, so if you try to connect to a device that is not a headset or hands-free car kit, then you will receive an

“unable to connect” message.

- If you pair with a second headset while connected to the first, the first headset will remain connected. To switch connection to the second headset you must manually select that headset again after pairing.

Rescan for Bluetooth devices

If you want to update the list of Bluetooth devices, press the **Menu key** to select [Scan for devices](#).

Contacts

Your contact list

To view the contacts on your phone, select [Contacts](#) in the home screen. You can also press the **Call key** to select the [Contacts](#) tab.

Contacts belonging to a specific group (you can choose which group) are listed in the Contacts tab.

Only those contacts you star as "favorites" are listed in the [Favorites](#) tab. (Read "Contacts settings" to learn how to change which contact group displays in [Contacts](#).)

From the [Contacts](#) tab, you can:

Take action on a contact

Touch & hold the contact's name to open the option menu. From the menu you can select to view the Contact details screen, call the contact's number, send a text or multimedia message, add or remove a star, edit the contact details, or delete the contact.

Go to Contact details screen

Select the contact's name to open the Contact details screen, where all the information you've saved for this contact is displayed.

To edit a contact's details, press the **Menu key** to select [Edit contact](#).

Tip: Only the contacts stored in your phone can be displayed. You can import the contacts from your SIM card. In the Contacts main menu, press the **Menu key** to select [Import SIM1 contacts](#) or [Import SIM2 contacts](#).

Search for a contact

1. Browse through your contacts by sliding your fingertip up and down on the screen. A rapid

brush movement in either direction accelerates the scrolling. Touch the screen to stop the scrolling.

2. Or press the **Menu key** to select **Search** in the Contacts main menu, type the keywords in the text box, then tap the magnifier beside the text box to start searching.

Add a contact

1. Press the **Menu key** to select **New contact** in the Contacts main menu.
2. Add all the information you want to store for this contact in the appropriate fields. You must add some information to save a contact.
To add more fields, select **+**.
3. Assuming you have a memory card inserted with pictures on it, you can assign a Caller ID icon to your contact by selecting the caller ID icon beside the name text box. The Pictures application opens. Navigate to a picture and select it, size the cropper with your fingertips. When finished, select **Save**. The picture is associated with your contact.
4. To associate this contact with a ringtone for incoming calls, select the **Ringtone**. Select a ringtone, then select **OK**. When you select a ringtone, it plays briefly.
5. If you want all calls from this contact to go directly to voicemail, select the **Incoming calls** check box.
6. To save your contact, press the **Back key**, or press the **Menu key** to select **Done**.

Assign favorites

Use **Favorites** as a way to display only those contacts you contact most frequently. To add a contact to **Favorites**:

1. From Contacts, touch & hold the contact you want to add to Favorites. The context menu opens.

2. Select [Add to favorites](#).
3. Now your contact will be listed in [Favorites](#) and display with a colored star. Their details screen will also display the colored star.

Edit contact details

You can always make changes to the information you've stored for a contact:

1. From Contacts, touch & hold the contact whose information you want to edit. The context menu opens.
2. Select [Edit contact](#). The Edit contact screen appears.
3. Make your edits, then select [Save](#). To cancel, select [Revert](#).

Delete contact

1. From contacts, touch & hold the contact. To context menu opens. Select [Delete contact](#) to delete the selected contact.
2. Or in contact detail menu, press the **Menu key** to select [Delete contact](#).

Communicate with a contact

From Contacts you can quickly call or text a contact's default number, as displayed below their name on the screen. However, to view all the information you've stored for a contact, and to initiate other types of communication with that contact, open the Contact details screen. To open a contact's details screen, simply select their name from Contacts.

Call a contact

From the contact list

1. Highlight the contact you want to call.
2. Press the **Call key** to dial that contact's primary number (first in the list on their details

screen) by SIM1, or press the Home key to dial by SIM2.

3. To dial a different number for the contact, select the contact's name, and then select the number on their details screen.

From the contact details

1. In the Call mobile section, select the number you want to dial.
2. The number is dialed.

Send a text or multimedia message to a contact

To send a text or multimedia message to a contact, you must have a mobile number stored for them in contact details.

From the contact list

1. Touch & hold the contact's name to open the context menu.
2. Select [Send SMS/MMS](#). A Compose screen opens for your new message.
3. Complete your message and select [Sim1 Send](#) or [Sim2 Send](#).

From the Contact details screen

1. In the Text mobile section, select a phone number.
2. A Compose screen opens for your new message.
3. Complete your message and select [Sim1 Send](#) or [Sim2 Send](#).

Send email to a contact

To send an email message to a contact, you must have an email address stored for them in their contact details.

1. Select the contact you want to email. Their Contact details screen opens.
2. In the email section, select the email address. If you are fetching POP3 or IMAP email accounts to your phone, then select the account you wish to use to send. A Compose screen opens for your new message.

3. Complete your message and select [Send](#).

Map a contact's address

To map a contact's address, you must have a postal or physical address stored for them in their contact details.

1. From your contact list, select the contact whose address you want to map.
2. On the contact's details page, in the [Map address](#) section, select the address.
3. The Maps application opens and locates the address. Press the **Menu key** to see your options.

[Display a contact group](#)

To select which contact group to display in Contacts, press the **Menu key** and select [Display group](#). You can select from the following:

All contacts Displays every contact you've created or that has been added automatically.

Contacts with phone numbers Displays only contacts with phone numbers, regardless of whether you've created them on the phone or Web.

My Contacts Displays a group created automatically based on those contacts you communicate with most frequently.

Starred in Android Displays the contacts with a colored star in [Favorites](#).

[Contacts settings](#)

To set Contacts preferences, from [Contacts](#) or [Favorites](#), press the **Menu key** to open the option menu:

SIM contacts importer

If you have stored names and phone numbers on your SIM card, you can add these to the Contacts stored on your phone by selecting this settings option [Import SIM1 contact](#), or [Import](#)

[SIM2 contact](#). Once the list of names and numbers appears you can:

1. Import all names/numbers in the list – Press the **Menu key** and select [Import all](#).
2. Import only certain names/numbers in the list - Select the name/number you want to import, then repeat for others as you wish. (As soon as you select the name/number, it is imported.)

Email and Messaging

Email

POP3 and IMAP email accounts

Add an email account

You can fetch messages from up to five POP3 or IMAP accounts. Follow these steps:

1. Press the **Home key**, then select the [Email](#) application.
2. The Set up new account screen appears.
3. Type your account email address and password.
4. If you want, select the [Send email from this account by default](#) check box. This setting only applies if you have more than one POP3 or IMAP account set up.
5. Select [Next](#).

If you have a popular email account, the application will set everything up for you! Before you go to your Inbox, you can name the account (if you don't, your email address will be used). You are also asked to type your name as you want it to display on outgoing messages. You must complete this field before you can select [Next](#) and go to your Inbox. For less popular accounts, follow the prompts to type the email server, protocol, and other account information yourself. After your account settings have been verified, select [Next](#) to go to your Inbox.

6. To add more accounts (up to five), from your Accounts screen, press the **Menu key** and select [Add account](#).

Use your POP3 and IMAP email account

Once you've set up an account, you can do the following:

Refresh Inbox

From the Inbox, press the **Menu key** and then select [Refresh](#) to update your Inbox with any previously-unfetched email.

Read email

You can display or collapse the messages in your Inbox by selecting [Inbox](#). Unread messages display with a colored band. (Each account you add will use a different color.)



To open an email for reading, select it.

Forward, Reply, Reply all, Delete, Mark as unread

You can forward, reply, reply all, delete or mark as unread to an email message from either the Inbox or the read view:

1. From the read view, press the **Menu key** and select the action you want to take.
2. From the Inbox, touch & hold the message to open its context menu. Select the action you want to take.

Compose new

From the Inbox or your accounts screen:

1. Press the **Menu key** and select [Compose](#).
2. Add recipients by typing a name or address in the **To** field. Matching contacts will appear. Select the recipient or continue typing the address. Add as many as you wish.
3. Type a subject and message.

4. Select [Send](#), [Save as draft](#), or [Discard](#). Pressing the **Back key** will also save as draft unless you have not typed anything.

Empty Trash

Once you've moved a message to the Trash, a Trash folder will display below your Inbox. To empty messages in the Trash you must delete each message individually:

1. Expand the Trash folder to display the messages.
2. Touch & hold the message you want to delete to open the context menu.
3. Select [Delete](#).

Note: The message is only deleted from your phone, not from the account server.

Remove an email account

You can always remove a POP3 or IMAP email account from your phone by doing the following:

1. Go to your Inbox.
2. Press the **Menu key** and select [Accounts](#). Your Accounts screen opens.
3. Touch & hold the account you want to remove to open the context menu.
4. Select [Remove account](#).
5. You will be asked to confirm before the account is removed.

Edit account settings

To open your Account settings screen, do the following:

1. From your account Inbox, press the **Menu key** and select [Account settings](#).
2. The Account settings screen appears. You can do the following from this screen:

Account name Select to change the name of your account as it appears on your Accounts screen.

Your name Select to change your name as it appears in outgoing email.

Email check frequency Select this pop-up menu to set how frequently your email account

is checked for new messages. Note that whenever you open a folder, email is refreshed, regardless of this setting.

Default account If you have more than one POP3 or IMAP email account set up on your phone and want to use this account by default when selecting Compose from the Accounts screen, select this check box.

Email notifications If you want an icon to appear in the status bar when a new message arrives, select this check box.

Select ringtone Select to decide on a ringtone to use for incoming email.

Vibrate Select to have your phone vibrate when email arrives.

Incoming settings Select Incoming settings if you need to edit the username/password, server, port, or option to delete email from server.

Outgoing settings Select Outgoing settings if you need to edit the SMTP server, port, security type, option to require sign-in, or username/password.

Add another account To add another account (you can add up to five), select Add another account.

3. To save your settings, press the **Back key**.

SMS and MMS messaging

Press the **Home key** to open the SMS & MMS Messaging application.

About text and multimedia messages

SMS messages are also known as "text" messages and can each be around 160 characters. If you continue to type after the limit is reached, your message will be delivered as one, but count as more than one message. These are called "concatenated" messages.

MMS messages are also known as "multimedia" or "picture" messages and can contain text, picture, audio, and video files.

When you compose a message, the phone will automatically convert a text message into a multimedia message as soon as you add a subject or an attachment, or if you address the message using an email address rather than a phone number.

The message list

Text and multimedia messages are grouped with the replies you receive into conversations or "message threads" or just "threads". Message threads are listed in order of when you received them (newest at the top). To open a thread for reading, select it. Read more below. Unread messages appear with a green band on the left.

The Read view

Select a message in the list to open it for reading.

Note: Messages you send are also listed in the Read view.

Reading multimedia messages

If you have selected to auto-retrieve your multimedia messages, then both the message header and body will download. To view your message, select the "play" button.

If you are downloading only the headers, then you must first select the Download button to retrieve the message body. If you are concerned about the size of your data downloads, you can check the message size before you download.

Once the message has downloaded, select the "play" button to view the message.

From a message read view, you can do the following:

Reply to a message

1. Simply start typing your message in the text box at the bottom of the screen to reply to a message.
2. You can always press the **Menu key** and select to add a subject or an attachment to convert it to a multimedia message.

3. Select [Sim1 Send](#) or [Sim2 Send](#) when ready.

Links in messages

If a message contains a link to a Web page, it will be selectable. To view the Web page in the Browser, simply select it.

Delete messages

Your messages will be saved until you explicitly delete them.

1. Delete one message in a thread: With the message thread open in Read view, touch & hold the individual message you want to delete to open the context menu. Select [Delete message](#).
2. Delete all messages in a thread: With the message thread open in Read view, press the **Menu key** and select [Delete thread](#). You can also delete an entire thread from the message list by pressing & holding the thread to open the context menu, then selecting [Delete](#).
3. Delete all message threads: From the message list, press the **Menu key** and select [Delete threads](#).

Delivery problems

If a message you sent appears with this icon  on the right, there was a delivery problem.

Touch & hold the message to open the context menu. You can edit, retry sending, or delete the message.


To see all your undelivered messages (assuming there is at least one), from the message list, press the **Menu key** and select [Undelivered messages](#).

View message details

To view details about a particular message, in the Read view, touch & hold the message to open the context menu. Select [View message details](#).

View message delivery or read reports

If a message contains a delivery or read report (you would have requested it in Settings), you'll

see this icon  to the right of the message.

Touch & hold the message to open the context menu. Select [View report](#). Status icons are shown and mean the following:


- Delivery problem
- Message delivered
- Message is being delivered

Read more about delivery and read reports in "Text and multimedia message settings" on page 60.

Compose text and multimedia messages

1. Press the **Menu key** and select [Compose](#). The Compose screen opens.
2. Add recipients by typing a name, phone number, or email address in the [To](#) field. Matching contacts will appear. Select the recipient or continue typing. Add as many recipients as you wish. If you send the message to an email address, the message will automatically convert from a text to a multimedia message.
3. To add a subject, press the **Menu key** and select [Add subject](#). If you add a subject, the message will convert to a multimedia message.
4. To add an attachment, press the **Menu key** and select [Attach](#). Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files. You can select to take a new picture if you want, or record an audio file. Any recordings you make will be stored automatically in the Music application in a playlist named "My recordings".
To remove an attachment, select the attachment's [Remove](#) button.
5. Type your message. As you type, you'll be able to track how many characters/messages you're creating. Remember that text messages have a limit around 160 characters. Once

you go over that limit, a new message is actually created but automatically joined into one when received.

6. Select [Sim1 Send](#) or [Sim 2 Send](#) when ready. You can also save a draft.
7. As your message sends, progress displays in the title bar. If you see this icon  to the right of the message, it means your message is still being delivered.

Save message as draft

1. While composing, press the **Back key**.
2. Your message automatically saves as a draft.
3. To resume composing, in the message list, touch & hold the message and select [Edit](#).

Text and multimedia message settings

To set text and multimedia message preferences, from the message list, press the **Menu key** and select [Settings](#). You can set the following from this screen:

Notification settings

New message notifications You can receive a notification each time you receive a new message:

1. From a message list, press the **Menu key** and select [Settings](#).
2. Select the [Notifications](#) check box to receive a notification in the status bar when a new message arrives.
3. If you want your phone to ring when a new message arrives, select that check box as well. [Select ringtone](#) to open the ringtone menu and select a ringtone specific to new text and multimedia message notifications. Note that when you check a ringtone, it plays briefly.
4. If you want your phone to vibrate when you receive a new message, select the [Vibrate](#) check box.

Text message settings

[Delivery reports](#): To receive a report on the delivery status of your message, select this check

box. Status can be:

- Successful delivery
- Temporary delivery failure; an attempt to deliver will be made again
- Unsuccessful delivery; no attempt to re-deliver will be made

Manage SIM card messages: Text messages can also be stored on your SIM card. The exact number depends on your card, but it is usually around 25-50. To view messages on your SIM card, delete them, and copy them to your phone memory, select this setting.

Multimedia message settings

Delivery reports: To receive a report on the delivery status of your message, select this check box. Status can be:

- Successful delivery
- Temporary delivery failure; an attempt to deliver will be made again
- Unsuccessful delivery, where no attempt to re-deliver will be made

Read reports: To receive a report on whether each recipient has read or deleted the message without reading it, select this check box.

Auto-retrieve: To retrieve all your MMS messages automatically (the header plus the message will download to your phone), select this check box. If you clear this check box, then only the message headers will be retrieved and display in your message list. You can retrieve the full message by selecting the **Download** button that displays in the header. Once the message has downloaded, select the "play" button to expand the message.

Roaming auto-retrieve: If you are concerned about data traffic and just want the message headers to download while roaming, clear the **Roaming auto-retrieve** check box. Otherwise, you can select this check box to have your messages download even while roaming.

Notification settings

Notifications: To display message notifications in status bar.

Select ringtone: To select ringtone for the message arrival.

Vibrate: Select the check box, and your phone will vibrate when notified.

Browser

About the Browser


To open the Browser, select the [Browser](#) application in the home screen.

The Browser always opens to the last Web page you were viewing. The first time you enter the Browser after powering on, your home page will display. You can change your home page by pressing the **Menu key** and selecting [More](#) > [Settings](#) > [Set home page](#).


Zoom and navigation in Web pages

While viewing a Web page, take advantage of the following zoom and navigation techniques:


Zoom in

1. Touch the screen to open the zoom-in and zoom-out controls .
2. Touch the **+** control to zoom in. With each touch you zoom in closer.

Zoom out

1. Touch the screen to open the zoom-in and zoom-out controls .
2. Touch the **-** control to zoom out. With each touch you zoom out further.

Navigate

1. Press the **Navigation keys** to shift your page view.
2. Slide your fingertip in any direction to shift your page view.
3. Touch the screen to reveal the zoom controls and the "scale & scroll" icon  at the bottom right of the screen. Touch the icon. The entire Web page will display in the screen and the magnifying window will open. Drag the window to the portion of the Web page you want view, then release.

The Browse screen

From the Browse screen you can do the following:

Go to a Web page

1. You can press the **Menu key** and select [Go](#) to open the Go to window opens. Possible matches appear in the drop-down menu. Select a match or continue typing the URL.
2. Select [Go](#) beside the URL to go to the page.

Add a bookmark

Bookmark the Web page you are currently viewing:

1. Press the **Menu key** and select [Bookmarks](#).
2. From the Bookmarks screen, select [Add bookmark](#).
3. Confirm the URL and name, then select [OK](#).

Bookmark a highlighted link on a Web page: Press & hold the link to open the context menu, and select [Bookmark link](#).

To view all your bookmarks, press the **Menu key** and select [Bookmarks](#).

Refresh a Web page

To refresh the contents of the current page, press the **Menu key** and select [Refresh](#).

Open pages in separate windows

You can keep more than one Web page open by using multiple windows to display the pages.

You can open up to eight windows.

Open a new window

1. From a Web page, press the **Menu key** and select [Windows](#). The Current windows screen

opens, showing the Web page you started from, plus a "new window".

2. Select [New window](#).
3. Your home page opens in a new window.
4. To return to one of the other windows, press the **Menu key** and select [Windows](#). Select the page you want to view.

View the page in a window

Select a window to view it full-screen. Alternatively, you can use the context menu:

1. From a Web page, press the **Menu key** and select [Windows](#). The Current windows screen appears.
2. Touch & hold the window you want to view. The context menu opens.
3. Select [View](#).

Close a window

Touch the "X" in the lower-right corner of the window you want to close. Alternatively, you can use the context menu:

1. From a Web page, press the **Menu key** and select [Windows](#).
2. Touch & hold the window you want to close. The context menu opens.
3. Select [Close](#).

Bookmark the page displayed in a window

1. From a Web page, press the **Menu key** and select [Windows](#). The Current windows screen appears.
2. Touch & hold the window whose page you want to bookmark. The context menu opens.
3. Select [Bookmark](#).
4. Confirm the URL and name, then select [OK](#).

View page info

1. From a Web page, press the **Menu key** and select [Windows](#). The Current windows screen appears.
2. Touch & hold the window whose page you want. The context menu opens.
3. Select [Page info](#).
4. When you're finished reading the information, select [OK](#).

Go to Bookmarks screen

From the Current windows screen, press the **Menu key** and select [Bookmarks](#) to go to your list of bookmarks.

View Browser history

From the Current windows screen, press the **Menu key** and select [History](#) to go to your Recently-visited pages screen.

[Manage bookmarks](#)

You can store as many bookmarks as you want on your phone.

Bookmark any page

1. Press the **Menu key** and select [Bookmarks](#). The Bookmarks screen opens.
2. Select [New bookmark](#).
3. Type a name and location (URL) in the dialog box.
4. Select [OK](#).

Send bookmarked page's URL

1. Press the **Menu key** and select [Bookmarks](#). The Bookmarks screen opens.

2. Touch & hold the bookmark you want to send. The context menu opens.
3. Select [Share link](#).
4. Send the link with [Email](#) or [Messaging](#), and then a Compose screen opens with the URL as the message.
5. Address your message and finish composing.
6. Select [Sim1 Send](#) or [Sim2 Send](#).

View bookmarked page

1. Press the **Menu key** and select [Bookmarks](#). The Bookmarks screen opens.
2. Touch & hold the bookmark you want to open. The context menu opens.
3. Select [Open](#) or [Open in new window](#).

Edit bookmark

1. Press the **Menu key** and select [Bookmarks](#). The Bookmarks screen opens.
2. Touch & hold the bookmark you want to edit. The context menu opens.
3. Select [Edit bookmark](#). The edit bookmark dialog box opens.
4. Type your change and select [OK](#).

Delete a bookmark

1. Press the **Menu key** and select [Bookmarks](#). The Bookmarks screen opens.
2. Touch & hold the bookmark you want to send. The context menu opens.
3. Select [Delete bookmark](#). You will be asked to confirm.

Bookmark current page

1. Go to a Web page you want to bookmark.
2. Press the **Menu key** and select [Bookmarks](#). The Bookmarks screen opens.
3. Press the **Menu key** and select [Bookmark last-viewed page](#). The Bookmark link dialog box

opens. Confirm or edit the information, then select **OK**.

Set your home page

You set your home page from the Settings screen:

1. Press the **Menu key** and select **More>Settings**. The Settings screen opens.
2. In the **Page content settings** section, select **Set home page** to open the dialog box.
3. Type the URL of the page you want to set as home, then select **OK**.

Links in Web pages

Navigate the links on a page using the **Navigation keys**. Links are outlined in yellow when highlighted.



To go to a link, touch the link with your fingertip.

Tip: When links are too small to touch directly on the screen, press & hold the link to open the link's context menu.

URLs

Touch & hold a link to open the context menu and:

- Open link in the current window
- Open link in new window

- Bookmark the link
- Save the link
- Share link via email or message
- Copy the link to the clipboard

Phone numbers

Select a linked phone number to:

- Call the number - The Dialer opens, ready for you to send the call.
- Add the number to your Contact list - Opens the New contact screen for you to complete and save.

Email addresses

Select a linked email address to:

- Send email - Opens an email Compose screen with the email address added for you to complete and send.
- Copy email address to clipboard.

Streaming audio

Select a link to a streaming audio file to play the file using the Music application.

Browser history

The [Recently-visited pages](#) (history) screen lists the recent sites you've visited on the Web.

From the Browser screen, press the **Menu key** and select [More > History](#) to view your Web site history.

Select a Web site from the Recently-visited pages list to go to the site.

Download Web files and applications

Before you download any files or applications using the Browser, note the following:

- Before you can download Web applications, you must explicitly “allow” downloading from the Settings screen in Home screen:
 1. Press the **Home key**, then press the **Menu key** and select [Settings](#).
 2. Select [Applications](#), then on the Application settings screen, select the [Unknown sources](#) check box.
- All items downloaded from the Web are stored on your memory card, so be sure you have a card installed in your phone before you download from the Browser. (Read more in “SD card slot” on page 11.)
- The Browser will only allow you to download items that are supported by an application installed on the phone.

Warning: Applications downloaded from the Web can be from unknown sources. To protect your phone and personal data, only download applications from sources you trust, such as Android Market.

View your downloads

To see which files or applications you’ve downloaded:

1. From the Browse screen, press the **Menu key** and select [More>Downloads](#).
2. The Download history screen appears with the list of downloads. If you have no downloads, nothing will be shown on this screen.

Browser settings

From the Browser screen, press the **Menu key** and select [More>Settings](#) to set Browser preferences.

Page content settings

Text size

Select to open the [Set text size](#) menu. Default setting is Normal, but you can increase the size to [Large](#) or [Huge](#), or decrease to [Small](#) or [Tiny](#). Note that this text size setting only affects pages you view through the Browser.

Text encoding

Select a text encoding for your web browser.

Block pop-up windows

Select this check box if you want pop-up windows to be blocked.

Load images

Select this check box if you want images on Web pages to load. For faster page loading, clear this check box.

Auto-fit pages

Select to size pages to the screen automatically.

Enable JavaScript

Select to enable JavaScript on pages. Disabling JavaScript may cause some Web pages to not work properly.

Open in background

Select if you want links to new pages to open in a new window in the background.

Set home page

Your currently-set home page is shown on the Settings screen. To change your home, select [Set home page](#), type the URL for your home page, then select [OK](#).

Privacy settings

Select one of the privacy settings to clear the following:

- Browser cache
- Browser page-visited history
- stored cookie data
- saved form data

Accept cookies

Select this check box if you want the Browser to save cookies. Some Web sites might not work properly with cookies disabled.

Remember form data

Select this check box if you want the Browser to remember text you have typed in forms, so that you can select the same text later rather than retyping it.

*Security settings***Remember passwords**

Select this check box to save usernames and passwords to various Web sites.

Clear passwords

Select [Clear passwords](#) to clear all your saved passwords.

Show security warnings

Select this check box if you want a warning to be displayed when you are going to an insecure Web site.

*Advanced settings***Enable Gears open source browser**

Select to enable the Gears Browser plug-in. Gears extends the Browser with APIs to create a richer platform for Web applications.

Gears settings

View permissions granted to Web sites to use Gears.

Reset to default

Select if you want to reset all Browser settings to factory default values, except for your home page.

Dialer & Voice Dialer

About the dialers

You can use your phone to make phone calls by using either the Dialer or the Voice Dialer:

1. To dial a number using the on-screen dial pad, press the **Call key**, or press the **Home key** and select the [Dialer](#).
2. To dial by speaking either a number or contact name, press & hold the **Call key**, or select the [Voice Dialer](#) in the home screen

Bluetooth devices

You can place and receive calls using a hands-free Bluetooth headset or hands-free car kit.

Before you can use your Bluetooth device, follow these steps:



1. Turn Bluetooth "on".
2. Get your headset or hands-free car device ready for pairing by following the manufacturer's instructions. (Read more in "Bluetooth")
3. Pair and connect your phone to the Bluetooth headset or car kit.
4. You are ready to use your headset or car kit to place and receive calls.

Make a call by dialing

1. From anywhere on your phone, press the **Call key** to open the [Call log](#), or press the **Home key** in the Home screen. Select the [Dialer](#) tab to open the Dialer.



2. You have several choices for placing a call:

Dialer tab Touch the on-screen dial pad to enter a number. Select  to delete numbers you've entered. Touch & hold  to delete all the numbers in the field.

Call log tab Select an entry listed in the log to call the number.

Contacts tab Contacts with phone numbers are listed. Select a contact, then select the phone number to dial the call.

Favorites tab Favorite contacts with phone numbers are listed. Select a favorite, then select the phone number to dial the call.
3. Press the **Call key** to dial the number by SIM1, or press the **Home key** to dial the number by SIM2.

 
Make a call by speaking

You can make a phone call by opening the Voice Dialer and speaking:

1. Press & hold the **Call key**, or press the **Home key** and select the [Voice Dialer](#).
2. Wait until you hear a tone and the Voice Dialer reports on the screen that it is "[listening](#)".



3. You can tell the Voice Dialer any of the following:
 - "Dial number", where number can be 3 digits (e.g., 911), 7 digits (e.g., 555-0123), or 10 digits (e.g., 205-555-0123). If you're speaking a phone number, then always say "Dial" before the number.
 - "Call name", where name is a contact stored on your phone in Contacts. If you're speaking a name, then always say "Call" before the name.
 - "Call voicemail" to dial your voicemail number.
 - "Redial" to dial the last outgoing call.
4. Regardless of what you tell the Voice Dialer, you will be asked to confirm your choice from a menu. If you spoke a name with more than one match in Contacts, or if you've stored more than one number for the contact, you'll be asked to select the number.

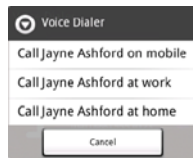

You can always cancel the call at this point by selecting [Cancel](#) on the dialog box.

 
5. Once you select or confirm your choice, your call is placed.

Answer an incoming call


To answer a call, simply press the **Call key** or **Home key**, and the Call-in-progress screen appears. Press the **Power & End key** to reject the incoming call.

In-call options

While on a call, press the **Menu key** to reveal the in-call options: Speaker, Mute, and Hold. Note that if Bluetooth services are on and you are connected to a hands-free device, the menu indicator will show Bluetooth on.

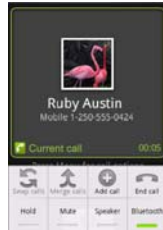


Speaker


To use the speaker, press the **Menu key** and select **Speaker** so it shows a green bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon  when the speaker is on.

Mute


To mute your side of the conversation, press the **Menu key** and select **Mute** so it shows a green

bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon  when Mute is on.

Hold

To put an active call on hold, press the **Menu key** and select **Hold** so it shows a green bar. To resume the call, or take the call off hold, select it again so the bar is unfilled. If you take a call while already on a call, the first call will be placed on hold automatically. The status bar will display this icon  when a call is on hold.

Show dial pad

If you need to enter numbers while on a call (such as to select in-call menu options) slide the dialer tab up: 

 
Multiple calls

Incoming call during call in progress

1. If you are on a call ("call in progress") when another call comes in ("incoming call"), you have a few choices:

Answer incoming, hold call in progress

The incoming call will display in the foreground.

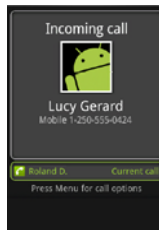

Press the **Call key** or **Home key** to answer the incoming call and place the call in progress on hold. You can also press the **Menu key** and select [Hold current call & answer](#).

To switch calls at any time, press the **Menu key** and select [Swap calls](#).

Reject incoming

If you don't want to interrupt your call in progress, then press the **Power & End key**.

Answer incoming, end call in progress

To end the call in progress and answer the incoming, press the **Menu key** and select [End current call & answer](#).

2. If you are on a call with a second call on hold when another call comes in, you can:
Press the **Call key** or **Home key** to end the call in progress and answer the incoming call (the call on hold remains on hold).
Press the **Power & End key** to reject the incoming call and continue the call in progress (call on hold remains on hold).

End all calls

 
If you have one call in progress and one caller on hold, to end both calls, press & hold the **Power**

& End key.


Conference calling

While on a call, you can conference up to six callers, counting yourself. Note that you can also have an additional caller on hold during a conference call, regardless of how many participants are on the conference.

1. Dial the first conference participant as instructed in "Make a call by dialing".
2. Press the **Menu key** and select [Add call](#). The call in progress is put on hold. Dial the number.
3. When your new caller is on the line, press the **Menu key** and select [Merge calls](#).

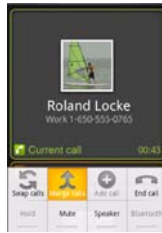

 
4. The conference begins. To add more participants, repeat steps 2 and 3, up to a total of six.
5. If you want to drop any of the callers from the conference, press the **Menu key** and select [Manage conference call](#). The list of conference participants appears.

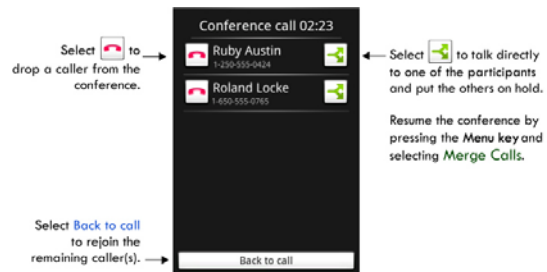

6. To end the conference call and disconnect all callers, press the **Power & End key**.

Call log

 The call log is one of the tabs on the Dialer. To open the call log, press the **Call key**. The Call log displays by default.

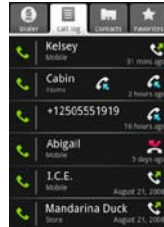

The call log lists all incoming  and outgoing  calls, including missed  calls.

- To call any of the numbers in the list, simply select the name or number.
- To clear the entire call log, press the **Menu key** and select [Clear call log](#).
- To clear one call log entry, touch & hold the entry, then select [Remove from call log](#).

Select an entry to start dialing the number. Touch & hold an entry to open the context menu and take these actions:

Call number

Select to dial this number.

View contact (if stored in Contacts)

Select to open their Contact details screen.

Edit number before call

Select to open the dialer with this number pre-populated and ready for edit.

Send SMS message

Select to open an SMS/MMS message Compose screen, with the message already addressed to this caller.

Add to contacts (if not stored in Contacts)

Select to add the phone number to your Contacts list. You can select to add a new contact, or add the number to an existing contact.

Remove from call log

Select to remove only this entry from the call log.

Call settings

Your phone is a dual-SIM phone, so you can do the call settings for two SIM card separately.

1. Press the **Home key**, then press the **Menu key** and select [Settings>Call settings](#).
2. Wait a few moments while your current call settings are fetched from the service.
3. The following settings are available:

Fixed Dial Number (FDN) list

Select this setting to manage your FDN list of numbers. When you enable FDN, you can only call numbers are stored on your SIM card. To add numbers to your SIM card:

1. Enable FDN. You must type your PIN2 to enable FDN. (The PIN2 is provided by your wireless operator.)
2. Select [FDN list](#). If you have no numbers on your SIM card, then press the **Menu key** and select [Add contact](#).
3. Type the name and phone number in the fields, then select [Save](#). You will be asked to type your PIN2 again.
4. The FDN list now contains this name and number.
5. To add another contact or edit/delete an existing contact in the list, press the **Menu key** and select the appropriate menu item.

You can always change your PIN2 by selecting [Change PIN2](#), but you must know your existing PIN2 before you can change it.

Voicemail

Select this setting to set or change your voicemail number. Note that this number is usually set by your wireless operator and is stored on your SIM card.

Call forwarding

Set the following:

- Always forward calls - Select to specify a forwarding number and to enable this feature. When this feature is enabled, the following three features are disabled.
- Forward when busy - Select to enable this feature. When enabled, incoming calls are forwarded to voicemail when you are on a call.
- Forward when unanswered - Select to enable this feature. When enabled, incoming calls are forwarded to voicemail when unanswered.
- Forward when unreachable - Select to enable this feature. When enabled, calls are forwarded to voicemail if an incoming call cannot connect.

Additional call settings

- Caller ID - Select to open a menu of options: use the Network default setting, Hide number, or Show number. When your number shows, your phone number and Caller ID picture will display to people you call, assuming the call recipient's device supports this feature.
- Call waiting - Select this check box to display incoming calls when you are on a call. Clear the check box to ignore incoming calls when you are already on a call. Note that the routing of the ignored call is determined by your Call forwarding setting.

Operator selection

Select a wireless operator network - Scan for all available networks, or select a network automatically.

Google Calendar

To open Google Calendar™ calendaring service, select the Calendar application in the home screen. The Calendar on your phone stays in sync with your Google Calendar events on the Web.

Calendar views

You can view multiple calendars on your phone, so each calendar event is coded with a color.



Note: To create new calendars, you must go to Google Calendar on the Web.

You can view your calendar in a variety of ways. Press the **Menu key** to select from [Month](#), [Agenda](#), [Week](#), or [Day](#).

Month view


Days are shown in a month grid. Busy time slots are shown as vertical bars in the corresponding part of the day. An all-day event is shown as a small vertical bar at the top of the slot (it does not fill the entire slot).

- **View event details** - Select a day to view all the events in that day. This will take you to either the Agenda or Day view, depending on which you last visited. Select the event to view its details.
- **Edit an event** - First select a day to go to either the Day or Agenda view. From there, select the event to view its details. Press the **Menu key** and select [Edit event](#) to open the event for editing.
- **Navigate months** - Slide your fingertip up/down, or press the **Up/Down navigation key** through the days and past the beginning/end of the month to move to the previous/next month.

- **Create new event** - Touch & hold a day to open the context menu. Select [New event](#). You can also press the **Menu key** and select [New event](#).
- **Jump to current day** - Press the **Menu key** and select [Today](#).

Agenda view

Events in the current month are shown vertically in a list, one event after the other. Days with no events are not displayed.

- **Repeating events** - Marked with  icon following the time or date.
- **View event details** - Select the event to view its details.
- **Edit an event** - First, select the event to view its details. Press the **Menu key** and select [Edit event](#) to open the event for editing.
- **Navigate within the current month** – Press the **Up/Down navigation key** or slide your fingertip up/down.
- **Jump to current agenda** - Press the **Menu key** and select [Today](#).

Week view

Days are shown vertically within the Week view. Time slots are defined horizontally in rows. Events are shown as blocks.

- **View event details** - Highlight an event to open a small popup window in the lower part of the screen that provides more event information. This window will stay open for three seconds. (Note that highlighted events are outlined in orange.) To view the full event details, touch the pop-up window while it's open, or select the event itself. You can also touch & hold the event to open the context menu, then select [View event](#).
- **Edit an event** - Touch and hold the event to open the context menu, then select [Edit event](#).
- **Navigate within the current week** - Press the **Up/Down navigation key** or slide your fingertip up/down.

- **Navigate to a past or future week** – Press the **Left/Right navigation key** or slide your fingertip left/right.
- **Jump to current day** - Press the **Menu key** and select [Today](#). The current time is highlighted.

Day view

Days are divided into hour time slots. Events are shown tiled and span the time they last. All-day events are displayed at the top of the day list.

- **View event details** - Highlight an event to open a small popup window in the lower part of the screen that provides more event information. This window will stay open for three seconds. (Note that highlighted events are outlined in orange.) To view the full event details, touch the pop-up window while the pop-up window is open, or select the event itself. You can also touch & hold the event to open the context menu, then select [View event](#).
- **Edit an event** - Touch and hold the event to open the context menu, then select [Edit event..](#)
- **Navigate within the current day** - Press the **Up/Down navigation key** or slide your fingertip up/down.
- **Navigate to a past or future day** - Press the **Left/Right navigation key** or slide your fingertip left/right.
- **Jump to current day** - Press the **Menu key** and select [Today](#). The current time is highlighted.
- **Create new event** - Touch an empty time slot to open the new Event details screen.

[Create an event](#)

From any of the views, press the **Menu key** and select [New event](#) to open the new Event details screen.

1. Type the information in the fields.

Event details

What
Event name

From
Thu, Aug 21, 2008 5:00 pm

To
Thu, Aug 21, 2008 6:00 pm

Where
(Scroll down to see all fields *)
Event location

Description
Event description

Calendar
Default

Repetition
One-time event

Reminders
Default

Press the **Menu key** and select **Show extra options** to set Presence and Privacy:

Presence
Busy

Privacy
Default

Hint: You can type directly in the date fields if you don't want to step through using the + and - buttons.

Annotations:

- Name that appears in Day view.
- Select date & time from the pop-up menus.
- Description can be as long as you like.
- Select a calendar if you display more than one.
- Set a default reminder time in Calendar Settings.
- Reminders are not required. Select - to remove; select + to add.
- Set online presence: available or busy.
- Select calendar privacy from Default (as defined when calendar was created), Private, or Public.

2. When finished, select **Save** or **Discard changes**. Press the **Back key** also saves the events.

The View event screen

In the Day and Week views, when you highlight an event, a pop-up window with more details opens (the window stays open for three seconds). To see even more details, open the View event screen by touching the pop-up window.

From the Agenda view, simply select an event to open the View event screen. From the Month view, first select the day of the event to go to either the Agenda or and Day view, then select the event (Agenda view) or pop-up window (Day view).

From the View event screen, you can do the following:

View details All the information you've entered about the event is displayed on the View event screen.


Reset reminder Select the [Reminders](#) pop-up menu to select a new reminder time.

Add reminder Either select the **+** to the right of a reminder, or press the **Menu key** and select [Add reminder](#) to create another reminder for the event. This will not replace existing reminders. You can have up to five reminders per event.

Delete reminder Either select the **-** to the right of a reminder, or press the **Menu key** and select [Delete event](#) to remove the event from your calendar. If this is a repeating event, you will be asked if you want to delete this & future events, or all events.

 
Edit event Press the **Menu key** and select [Edit event](#) to open the event for editing. If this is a repeating event, you will be asked if you want to change just this & future events, or all events.

Event reminders


If you have set at least one reminder for an event (you can set up to five), the upcoming event icon  will appear in the left side of the status bar to remind you. To view, dismiss, or snooze the reminder, do the following:

1. Touch the status bar and slide your finger down the screen to open the notifications list. The upcoming event name is displayed. If you have only one reminder, the place is also

displayed.

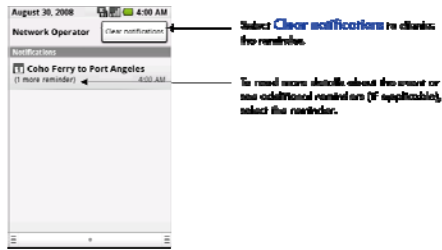

 2. To read more details about the event, select the reminder. If you have other reminders pending, they will be listed on this screen as well. You can snooze or dismiss the reminder(s), or press the **Back** key to keep the reminder(s) pending in the notifications bar. The snooze time is five minutes.

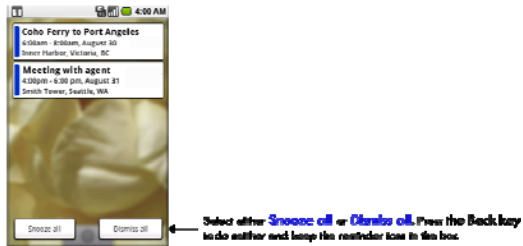

Edit an event

To edit an event, you must have the View event screen open.

1. Press the **Menu key** and select [Edit event](#). Note: If your event repeats, you will be asked to choose which events you want changed (all events in the series, or the current event plus future events).
2. Once you have finished your edits, select [Save](#).
3. To delete the event, from the View event screen, press the **Menu key** and select [Delete event](#).

Go to today

From any view, to jump to the screen that shows “today”, press the **Menu key** and select [Today](#).

If you are in the Day or Week view, the current time will be highlighted.

Calendar settings

Calendar view settings

Hide declined events

Select this check box if you want all the events you decline to be hidden from all calendar views.

Reminder settings

Alerts & notifications

Select to set the type of event reminder you want:

Alert - A dialog box will appear to remind you of the event.

Status bar notification - An icon appears on the left side of the status bar.

Off - You will receive no reminder.

Ringtone

Select ringtone to open the ringtone menu and select a ringtone specific to new event

notifications. Note that when you check a ringtone, it plays briefly.

Vibrate

Select this check box to have your phone vibrate when you are reminded of an event.

Default reminder

Select to open the default reminder menu. The time you select will appear by default in the Reminder section when you create a new event.

Camera, Camcorder & Gallery

Before you begin

All the pictures you can capture or view and all the videos you can record or play on your phone are stored on a memory card, which must be installed in your phone. Before you can use the Camera or Camcorder, or view pictures/videos in [Gallery](#), make sure you have a card installed.

Load pictures and videos onto your memory card

Read the instructions below to add pictures or videos to your memory card.


1. Mount your memory card to your computer by doing the following:
Remove the memory card and insert it into a card reader attached to your computer.
2. On your computer, find the mounted USB drive and open it.
3. Copy image or video files into this folder.
4. When finished, close the USB drive window and unmount or eject the drive as required by your computer's operating system.

Camera

Take a picture

Captured pictures are saved to the "dcim" folder on your memory card.

1. To open the Camera, select [Camera](#) in the home screen or press & hold the **Camera key** as a shortcut.
2. The Camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Press half-way down on the **Camera key** to focus (a green circle will appear in the upper-right of the screen once focused), then press the key fully to capture. Continue

to hold the camera steady for a second after you hear the shutter sound. Or touch  in the screen to take a picture.





 
Tip: In capture mode, press the **Menu key** to select [Switch to video](#), the screen switch to video recording mode.

View your pictures

To view the pictures you've captured, go to the [Gallery](#) application, or in capture mode, press the **Menu key** to select [Galley](#).

Setup options

In capture mode

1. Select [Menu](#) to set the exposure index, white balance, color style, ISO and flicker control.
2. Touch  to select the picture size.
3. Touch  to select the time for self-timer.
4. Touch  to select the focus mode.
5. Touch  to select the capture mode.
6. Touch  to select the flashlight.
7. Select [DISP](#) to open a setting window.

Display setting

Select [Plain](#) to show a whole screen which contains useful buttons and the free memory of the memory card.

Select [Simple](#) to show a simple screen which just contains useful buttons.

Select [Movie](#) to show a movie screen which hide all the buttons and information on the screen.

Show last picture


Select [ON](#) or [OFF](#) to open or close a small screen which fills in the last picture you captured.

8. Select [Home](#) to open a context menu:
 - Select [REC video](#) to switch to video record mode.
 - Select [Primary Camera](#) to go to the picture capture mode.
 - Select [Picture Preview](#) to view the picture you captured.
 - Select [Video Preview](#) to view the video you recorded.
 - Select [Settings](#) to go to the settings screen.

Camcorder

Record a video

Recorded videos are saved to the "dcim" folder on your memory card.

1. To open the Camcorder, select [Camcorder](#) in the home screen.
2. The Camcorder opens in record mode. Press the **Camera key** or touch  in the screen to record a video.

Tip: In record mode, press the **Menu key** to select [Switch to camera](#), the screen switch to picture capturing mode.

Play your videos

To view the videos you've captured, go to the [Gallery](#) application, or in record mode, press the Menu key to select [Gallery](#)

The newest video you recorded will display as a small window on the screen, touch the small window, and select [Play](#) to play the video.

Settings of Camera and Camcorder

In capture mode, press the **Menu key** to select [Settings](#),

Store location in pictures

Select this check box if you want to save the longitude and latitude in the picture's metadata so you know where the photo was taken. Some applications, such as Picasa Web albums, can then display the picture on a map.

Select video quality

Select the video quality from [Low \(for MMS message\)](#) and [High \(for SD card\)](#).

Select Camera Time

Decide whether to put the time into the picture or not, and select the date format.

[Gallery](#)

View pictures and videos in Gallery

To view the pictures you've captured, the video you've recorded, as well as any you've stored on your memory card, go to the [Gallery](#) application.


1. To open [Gallery](#), select the [Gallery](#) in the home screen.
2. Depending on how many pictures and videos you've stored, they may take a few minutes to load.
3. If you've stored your pictures and videos in folders on your memory card, then the folders will display as separate "albums". The top album always contains all the pictures in all the albums, and the second one always contains all the videos in all the albums.
Select an album to view the pictures and videos.
4. To open a picture in full-screen view, touch the picture. Once in full-screen, select the arrows to scroll through the pictures within that album.

Zoom and navigate


When viewing a picture in full-screen view, you can zoom in and out, and navigate around the

picture when it doesn't fit within the screen:

Zoom in

1. Touch the screen to open the zoom-in and zoom-out controls .
2. Touch the + control to zoom in. With each touch you zoom in closer.

Zoom out

1. Touch the screen to open the zoom-in and zoom-out controls .
2. Touch the – control to zoom out. With each touch you zoom out further.

Navigate in zoomed-in view

Slide your fingertip in any direction to shift your view.

Scroll through pictures in full-screen view

Touch the screen to reveal the left and right arrows, then touch an arrow to go to the previous or next picture.

Picture options

You can do the following while in [Gallery](#).

Note: In all the instructions below, you can touch & hold a picture to open the context menu to access all actions, rather than open the picture in full-screen view.

View full-screen

Select a picture to open it in full-screen view.

Play slideshow

1. In full-screen view, press the **Menu key** and select [Slideshow](#).
2. Your slideshow begins.
3. To stop the slideshow you can do one of the following:
 - Press the **Back key** - Takes you to thumbnail view.
 - Touch the screen - Shows picture in full-screen view.

4. To begin the slideshow again, press the **Menu key** and select [Slideshow](#). If you stopped the slideshow, it will resume where you left off.

Share a picture

1. In full-screen view, press the **Menu key** and select [Share](#).
2. Select to share your picture via email, Messaging (MMS).
3. The relevant compose screen opens.
4. Complete your message and send it.

Rotate picture

1. In full-screen view, press the **Menu key** and select [Rotate](#).
2. Select from [Rotate left](#) (counter-clockwise) or [Rotate right](#) (clockwise).
3. Your picture rotates and is saved automatically.

Delete picture

1. In full-screen view, press the **Menu key** and select [Delete](#).
2. The picture will be removed from the memory card after you confirm.

Crop picture

1. In full-screen view, press the **Menu key** and select [Crop](#).
2. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.
3. When you are happy with the cropped area, select [Save](#). Select [Discard](#) to cancel the crop.
4. The cropped picture is saved to [Gallery](#) as a copy. Your original is not touched.

Set as wallpaper or contact icon

1. In full-screen view, press the **Menu key** and select [More > Set as](#).
2. From the menu that opens select [Wallpaper](#). Or select [Contact icon](#) to open the contact list, and then select the contact you want to associate with the picture.
3. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out

to size. Touch & drag the center of the cropper to move it within the picture.

4. When you're happy with the cropped area, select [Save](#).

View picture details

1. In full-screen view, press the **Menu key** and select [More > Details](#).
2. The picture details window opens. You can see the title, resolution, file size, and date of the picture.

Settings

In the Gallery main screen, press the **Menu key** and select [Settings](#).

Display size

The individual pictures and videos display in a grid in thumbnail format.

You can select the picture or video display sizes from [Large](#) or [Small](#).

Sort order

You can select to sort pictures and videos with the newest one first or newest one last.

Confirm deletions

Select this check box if you want a confirmation dialog box to appear after you select to delete a picture or video.

Slideshow interval

Select how long each slide plays: two, three, or four seconds.

Slideshow transition

Select the transition you want to use between each slide during the slideshow: [Fade in & out](#), [Slide left-right](#), [Slide up-down](#), and [Random selection](#) (uses all transitions in random order).

Repeat slideshow

Select this check box to repeat the slideshow until you explicitly stop it.

Shuffle slides

Select this check box to shuffle your pictures in the slideshow.

Music & Video player

Music

Your library of music

Press the Home key and select the [Music](#) to open your music library.

Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Artists category, you will see a list of artists in A-Z order. If you select an artist, the list opens to display that artist's albums. Select an album, and the album's song list displays.

Supported music formats

Your phone will play the following music file formats:

- MP3
- MIDI
- AAC
- AAC+
- AMR

Load music onto your memory card

All the music you can listen to on your phone is stored on a memory card. Read the instructions below to add music to your memory card.

1. Mount your memory card to your computer by doing one of the following:
 - Remove the memory card and insert it into a card reader attached to your computer
2. On your computer, find the mounted USB drive and open it.
3. Although your phone will find all music files on your memory card, it's advisable to keep the

number of files or folders at the root level to a minimum. So, if you wish, create a folder at the top-level called "music" (or whatever you want) to store your files.

4. Open this folder and copy music files into it. If you want, create folders within "music" to organize your music further.
5. If you want to use certain music files as phone notification, or alarm ringtones, then create the following folders:
 - ringtones - Music files copied to the "ringtones" folder will display in the phone (incoming call) ringtone menu.
 - notifications - Music files copied to the "notifications" folder will display in the notifications ringtone menu.
 - alarms - Music files copied to the "alarms" folder will display in the Alarm ringtone menu.

Note: If you do not want a ringtone to appear in your music Library but you do want it to be available as a ringtone, then create the "ringtones", "notifications", or "alarms" folder outside your "music" folder.

When finished copying, close the USB drive window and unmount or eject the drive as required by your computer's operating system.

Play back music

At any level in your Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select **Play** to begin play and go to the Playback screen.

You can do the following using the Playback screen:



Shuffle songs

Shuffle plays songs in random order. Touch to toggle shuffle on and off. When the con is grey, shuffle is off.


Go to any point in song

Slide fingertip in progress bar to desired point in a song.


Pause/resume play

Touch  to pause;  to resume play.


Fast forward

Touch & hold .


Go to next song

Touch once .


Rewind

Touch & hold .

Go to beginning of song

Touch once .

Go to previous song

Touch twice .

View current playlist

Touch .

Party shuffle

To start "party shuffle" (all the songs in your library are added to a playlist in random order), press the **Menu key** and select [Party shuffle](#). To exit party shuffle, press the **Menu key** and select [Party shuffle off](#).

If a song is playing while you are on the Library screen, you can switch to the Playback screen quickly by selecting the lower song bar.

Playlists

You can create as many playlists as you wish. Note that the "Recently added" playlist is a system playlist and cannot be deleted or renamed. Also, if you make any voice recordings as part of a

MMS message, they will be stored automatically in a playlist called "My recordings".

Create a playlist on your phone

1. From the Library, select a category.
2. From the list that appears, navigate to the artist, album, or song that you want on a playlist.
3. Touch & hold the artist, album, or song to open the context menu.
4. Select [Add to playlist](#).
5. In the Add to playlist menu that opens, select [New](#) to create a new playlist, or one of the existing playlists.
6. The song(s) are added.

Manage your playlists

1. Go to the Library screen and select [Playlists](#).
2. All your playlists appear. You can do the following from this screen:

Play songs in list

Select the playlist.

Delete playlist

Touch & hold the playlist to open the context menu.

Select [Delete](#).

Rename playlist

Touch & hold the playlist to open the context menu.

Select [Rename](#).

Open the keyboard (if not already open) and type the new name.

Select [Save](#).

Create ringtones from songs

You can set any of your songs as a phone ringtone:

1. From the Library, navigate to a song you want to use as a phone ringtone.
2. Touch & hold the song in the list to open the context menu.
3. Select [Use as phone ringtone](#). The ringtone is set as your default incoming call ringtone.

Delete music from memory card

All the music you play on your phone is stored on the inserted memory card. From your phone, you can delete music stored on the card:

1. From the Library screen, select either the [Artists](#), [Albums](#), or [Songs](#) category.
2. Go to the screen that shows the artist, album, or song that you want to delete.
3. Touch & hold the item to open the context menu.
4. Select [Delete](#). You will be asked to confirm that you want to delete the item from your memory card.

[Video player](#)

Select [Video player](#) in the home screen to open the Video player application. The video list appears.

Watch videos


To play a video, touch it with your fingertip.

While you are watching a video, touch the screen to reveal the transport controls.


Pause/resume play

Touch to pause ;  to resume play.

Fast forward

Touch .


Rewind

Touch .


Progress bar

Slide your fingertip along the progress bar to go to a particular point in the video.

Go to next video

Touch once 

Go to previous video

Touch twice 

Adjust volume

Press the Volume keys to adjust the volume.

Search for videos

To find a video by typing a keyword, press the **Menu key** and select [Search](#). The search window appears. Type your keyword, then tap the magnifier to start to search.

 
Tools & game

Alarm Clock

To open alarm clock, select the [Alarm Clock](#) in home screen. The Alarm clock offers as many alarms as you want.

Set an alarm

Three alarms are set up for you, ready to customize. All three alarms are turned off by default.

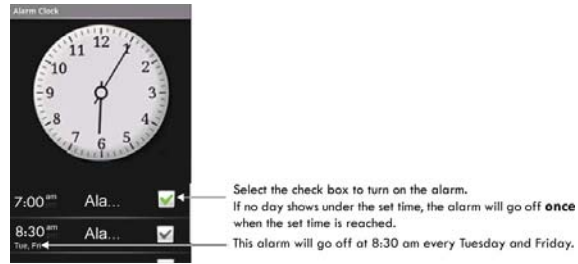

To begin, select one of the default alarms to open Alarm settings. Set the following options:

Alarm

Select the check box to turn alarm on (checked) or off (cleared). This is the same check box that appears on the main Alarm Clock screen.

Time

The time the alarm will go off is shown. To change this time, select [Time](#) to open the time selector. Tap the [+](#) or [-](#) buttons and the [AM/PM](#) button to set the time you want, then select [Set](#).

Tip: Touch & hold the **+** or **–** buttons to move through the numbers quickly.

Ringtone

The current ringtone selection is shown. Select **Ringtone** to pick another ringtone that will play when the alarm rings. (When you select a ringtone, it plays briefly.)

Vibrate

Select this check box to have your phone vibrate when it goes off.

Repeat

The current repeat selection is shown. To change the setting, select **Repeat** and make a selection from the menu. To have your alarm will only go off once at the set time, don't select any of the options. A one-time alarm is shown on the Alarm Clock screen without any days under the set time.

Label

To name an alarm, select **Label**, then touch the textbox to change the label, then select **OK** to save it.

Delete alarm

To delete the alarm, press the **Menu key** and select **Delete alarm**.

Once your alarm goes off, you will receive an alert with the options to **Snooze** (for 10 minutes) or **Dismiss**.

Add more alarms

To add more than three alarms, from the main Alarm Clock screen, press the **Menu key** and select **Add alarm**.

Change clock display

You can change the appearance of the clock displayed on the main Alarm Clock screen:

1. Go to the main Alarm Clock screen.

2. Touch the clock with your fingertip to open the Clock selection screen.
3. Slide your fingertip horizontally along the bottom clock face row and touch the face you want to display.
4. To hide the clock, press the **Menu key** and select [Hide clock](#).

Change date & time display

You can change the format of the time displayed in your alarms from the global Settings screen:

1. Go to the home screen, then press the **Menu key** and select [Settings](#). Scroll down and select [Date & time](#). The Date & time settings screen appears.
2. Use the network-provided values by selecting the [Automatic](#) check box.
3. Select the 24 hour format check box if you wish to use that rather than 12 hour format.
4. Select the [Select date format](#) option to open the menu of various date formats.

Alarm in silent mode

Go to the main Alarm Clock screen, then press the **Menu key** and select [Settings](#). Select the check box to make the alarm clock play alarm even when the phone is in silent.

 
[Calculator](#)

To open Calculator, select the [Calculator](#) application in the home screen.

The Calculator offers two panels: basic and advanced. Switch back and forth between panels by pressing the **Menu key** and selecting [Advanced panel](#) or [Basic panel](#), as you wish.

Calculator panels

Two calculator panels are available: basic and advanced. Use the Basic panel to enter numbers and perform basic addition, subtraction, multiplication, and division. Use the Advanced panel to insert advanced operators or delimiters, such as sine, cosine, tangent, square root, parentheses, etc.

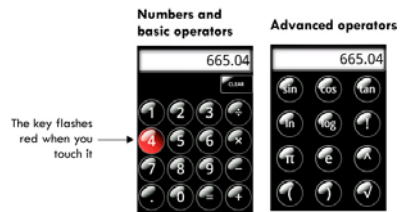

Switch back and forth between calculator panels by pressing the **Menu key** and selecting [Advanced panel](#) or [Basic panel](#), as you wish. As soon as you select an advanced operator, the panel switches back to Basic, where your operator appears.

- When you touch a key on the screen, the key flashes red to let you know the selection was made. Make sure you see the red flash before entering your next number or completing the operation.
- To delete numbers, one at a time, touch [CLEAR](#) on the screen.

Operation history

- To scroll through your operations, press the **Up navigation key** or **Down navigation key**.
- To clear your operation history, press the **Menu key** and select [Clear history](#).

[File browser](#)

Select [File browser](#) in the home screen to view the files in your phone or memory card.

Note: The files in your phone can not be operated.

In the file browser main screen, touch and hold the [sdcard](#) to open the context menu, select [File Operation](#), and you can copy, cut, rename the file, or delete the content in the file.

Touch [sdcard](#) to open the file. Touch and hold the screen to open the context menu, select [File](#)

[Operation](#)>[New file](#) to create a new file.

Touch and hold a file to open the context menu, select [File Operation](#), and you can copy, cut, paste, rename the file, delete the content in the file, or create a new file.

Spare parts

Select [Spare parts](#) in the home screen

Device info

Battery history: To view the summary of how battery has been used.

Battery information: To view the current battery status information.

Usage statistics: To view the summary of application usage.

General info

Window animations: To select the speed of animations in individual windows.

Translation animation: To select the speed of animations moving between screens.

Fancy input animation: Unselect the check box to use normal animations for input method; select the check box to use fancier animations for input method.

Fancy rotation animation: Unselect the check box to use normal animations for screen rotation; select the check box to use fancier animations for screen rotation.

Font size: To select the overall size of fonts.

End button behavior: To select action for the **Power & End key**. Select [Nothing](#), and your phone will have no reaction when you press the **Power & End key**. Select [Go to home](#), you will go to the home screen by pressing the **Power & End key**. Select [Go to sleep](#), and your phone will be locked and go to sleep when you press the **Power & End key**. Select [Home, then sleep](#), and your phone will be locked and go to the home screen when you press the **Power & End key**.

Haptic feedback: Select the check box to use haptic feedback with user interaction.

Application

Show compass in Maps: Select the check box to display the compass in Maps.

FM radio

Tip: The FM radio uses the headset wires as an aerial, so the radio will not work unless the headset is connected.

To open FM radio, select the **Fm radio** application in the home screen.



Background play mode



1. In FM radio, press the **Menu key** to select **Play in Background**, or press the **Home key** to return to the home screen and play the FM radio in background mode.
2. If you want to turn off the FM radio, open the Fm radio application first, then press the **Menu key** to select Exit to turn off the radio.

Turn on/off the speaker

In FM radio, press the **Menu key** to select **Open loudspeaker** to listen to the radio with speaker; select **Close loudspeaker** to listen to the radio with headset.

To listen to the radio

In FM radio, touch  and , or press the **Up/Down navigation keys** to switch among the channels you saved in the channel list.

In FM radio, touch  and , or press the **Left/Right navigation keys** to search channel back and forth.

Search channel

In FM radio, press the **Menu key** to select **Seek channel**, enter the frequency of the radio channel, and select **OK** to search.

Adjust the volume

In FM radio, press the Volume keys to adjust the volume.

Settings

Channel settings

Auto save channel – Select to auto save channel when current channel is valid.

Save channel – Select to save the current channel.

Show channel list – Select to view the channels you saved.

Display settings

Show RDS information – select to show the RDS information if the current channel in the FM radio main screen.

Track settings

Use single track – Select to listen to the radio in mono.

Use single track – Select [Right](#) or [Left](#) to listen to the radio by right or left track.

[Snake on a phone](#)

To play the Snake phone game, select the [Snake on a phone](#) in the home screen.

Press the **Navigation keys** to guide the snake.

The more you eat, the more you score, but also the longer you get and faster you go. Don't eat the walls, they taste bad!

[SIM Toolkit](#)

Your SIM card may provide value-add services.

1. Select [SIM Toolkit](#) in the home screen.
2. Select an item of service or function to enter its menu.

Tip: For more information, please contact the network operator.

Battery Information

Type	Capacity
Li-ion	1200mAh

- The battery life depends on many factors, including the SIM card, network conditions, settings , usage and enviroenment.
- Making calls, turning on the backlight and multimedia player will consume more battery power.
- The standby time is shorter when the network is not available than in the standard status.
- For power saving, the backlight turns off automatically if your phone stands idle for an assigned time.
- The performance of battery varies with the charging status, temperature, local radio wave and backlight status.

Accessories

Safety of the battery

1. Please use the battery provided by the original manufacturer. Use of any other battery will invalidate the warranty and the manufacturer of the phone will take no responsibility in repairing the phone damaged by the use of unapproved fittings.
2. Please keep any metal things (e.g. Keys in your pocket) away from the contact point of your battery to avoid short circuits.
3. Do not bend or open the battery by force
4. Please keep the battery away from water or fire.
5. The battery can not be charged in very hot or very cold locations as extreme temperatures can adversely affect the battery.

 
Rapid travel charger

The rapid travel charger can help you to quickly charge the battery. Plug the charger to an AC wall socket and plug the other end into the charger port of the phone. Please make sure the battery is correctly inserted on the phone before charging. Please do not remove the battery while charging.

Data cable

Only use the data cable approved by the phone manufacturer. The use of any other types would invalidate any approval or warrant applying to the phone and could be dangerous.

For the following equipment: GSM/EDGE Dual Sim Mobile Phone



is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The equipment was passed. The test was performed according to the following European standards:

ETSI EN 301 489-7 V1.3.1: 2005
EN 50371: 2002
ETSI EN 301 511 V9.0.2 (2003-03)
ETSI EN 300 328V1.7.1:2006
EN 301 489-1 V1.6.1
EN62209-1:2006 ,EN50360:2001
ETSI EN 301 489-17V1.2.1: 2002
EN 60950-1: 2006
EN 62311:2008

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 1.5cm between the radiator & your body.