



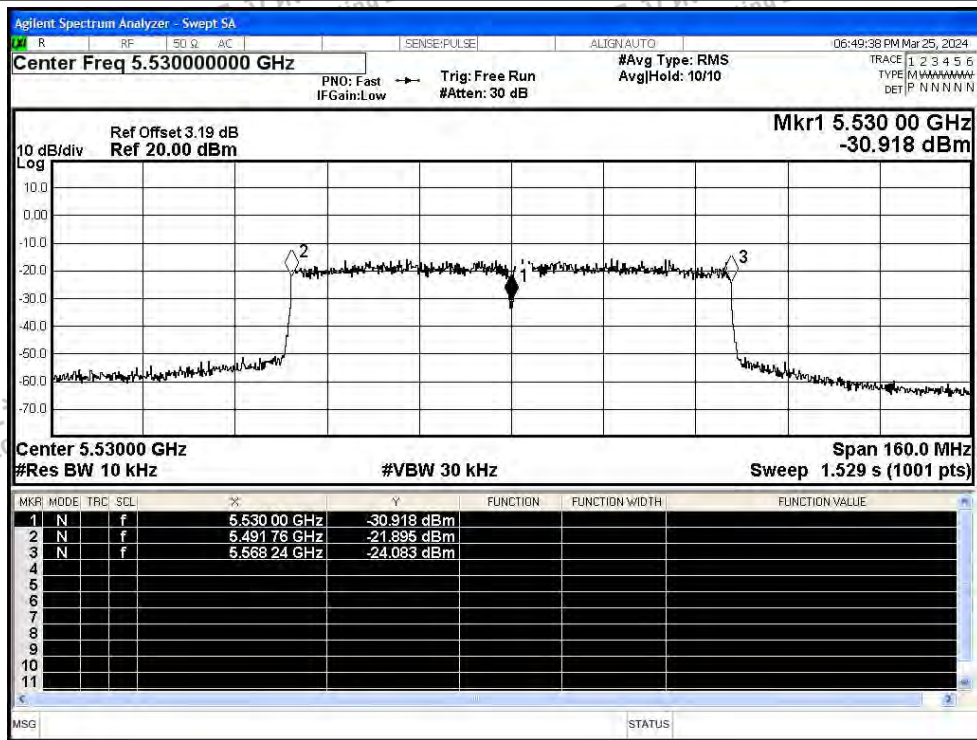

Freq. Stability NVNT ac80 5530MHz Ant2

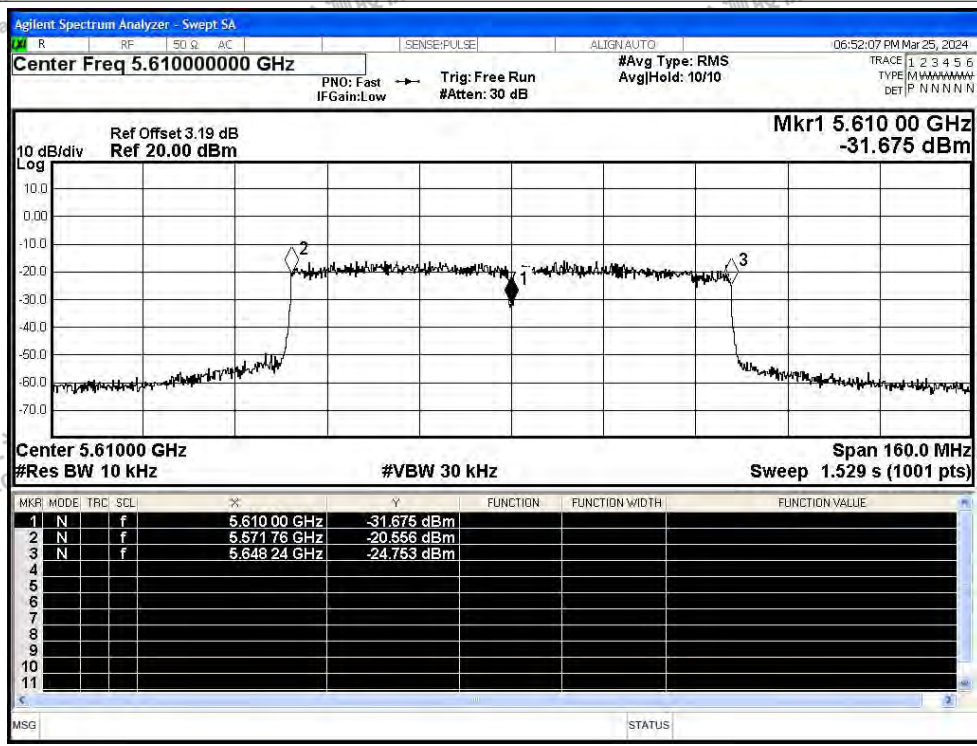

Freq. Stability NVNT ac80 5610MHz Ant2





### F.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant1	87.08	0.6	0.92
NVNT	a	5580	Ant1	95.29	0.21	0.92
NVNT	a	5700	Ant1	87.71	0.57	0.92
NVNT	n20	5500	Ant1	78.67	1.04	1.08
NVNT	n20	5580	Ant1	85.9	0.66	1.08
NVNT	n20	5700	Ant1	85.19	0.7	1.08
NVNT	n40	5510	Ant1	79.95	0.97	1.12
NVNT	n40	5550	Ant1	75.19	1.24	1.12
NVNT	n40	5670	Ant1	79.95	0.97	1.12
NVNT	ac20	5500	Ant1	85.95	0.66	1.07
NVNT	ac20	5580	Ant1	85.34	0.69	1.07
NVNT	ac20	5700	Ant1	85.34	0.69	1.07
NVNT	ac40	5510	Ant1	79.45	1	1.11
NVNT	ac40	5550	Ant1	80.73	0.93	1.11
NVNT	ac40	5670	Ant1	74.71	1.27	1.11
NVNT	ac80	5530	Ant1	62.64	2.03	2.29
NVNT	ac80	5610	Ant1	65.17	1.86	2.29




Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5500MHz Ant1

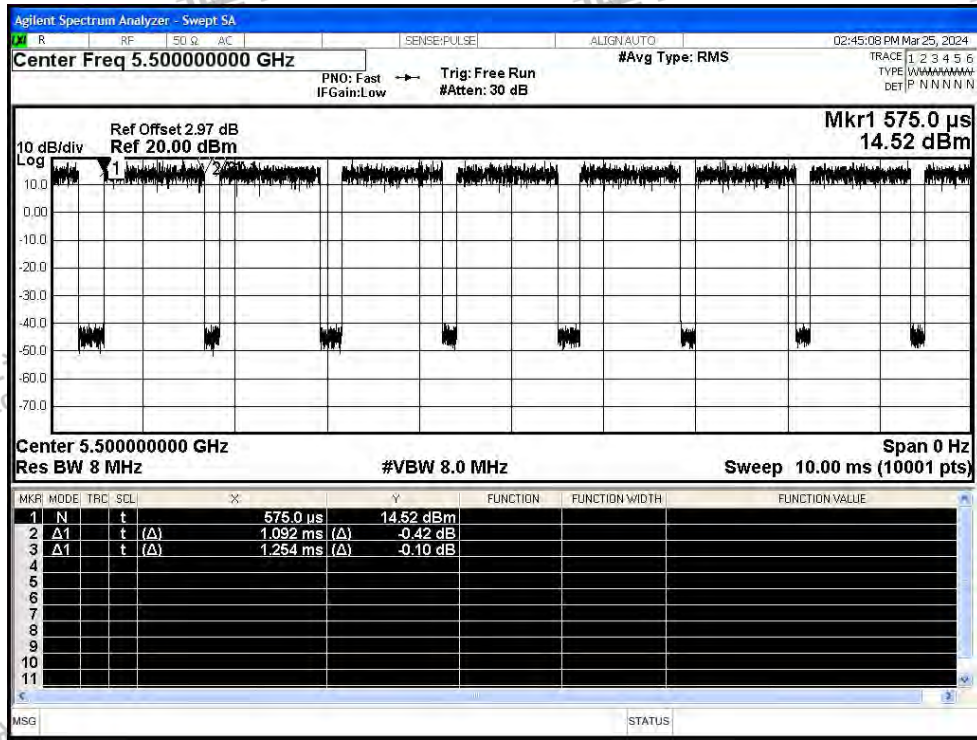


Duty Cycle NVNT a 5580MHz Ant1

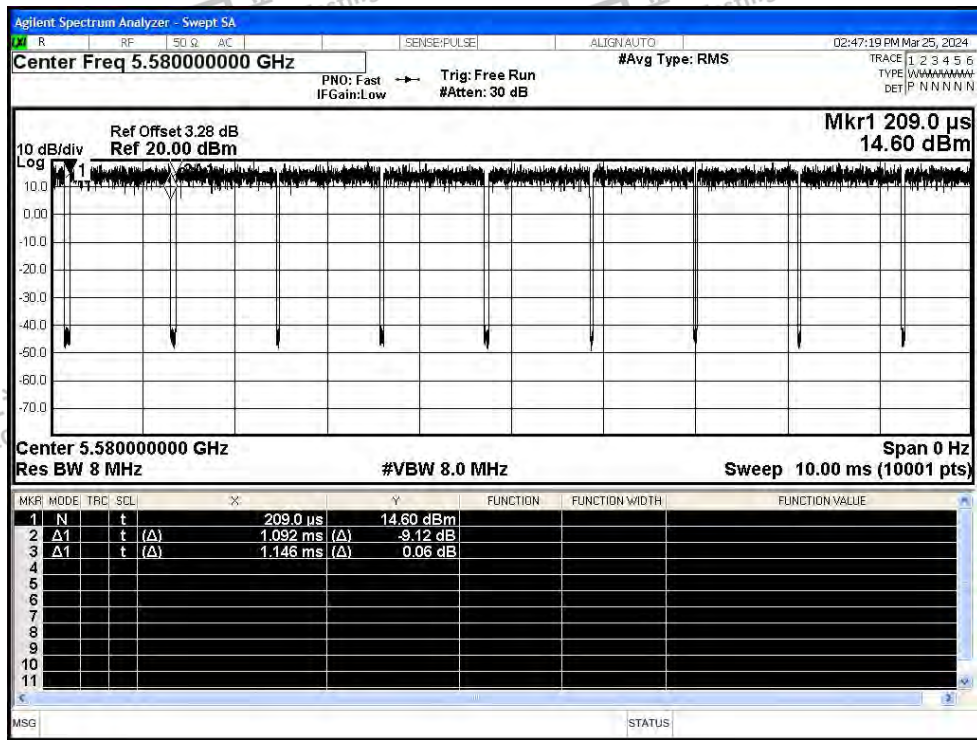




Duty Cycle NVNT a 5700MHz Ant1

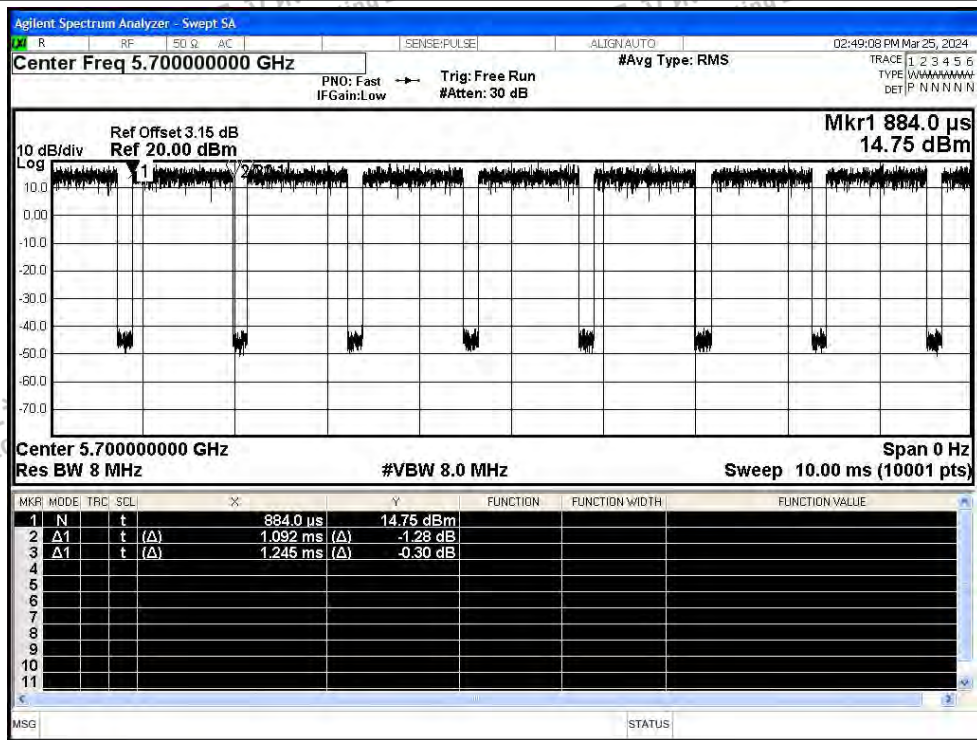


Duty Cycle NVNT n20 5500MHz Ant1

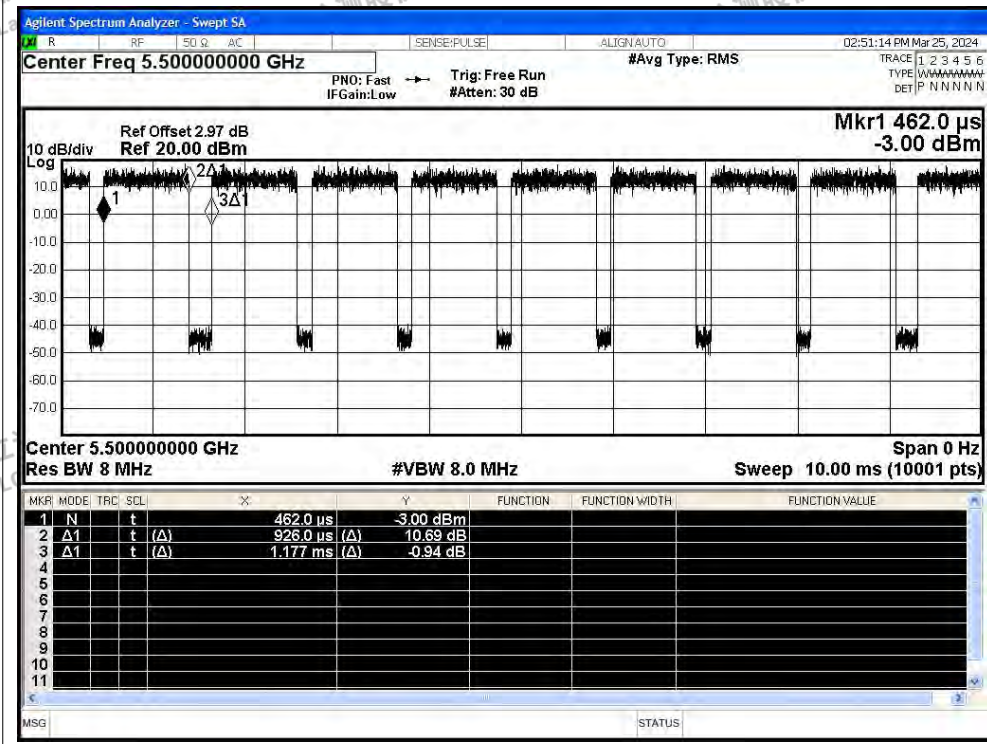




Duty Cycle NVNT n20 5580MHz Ant1

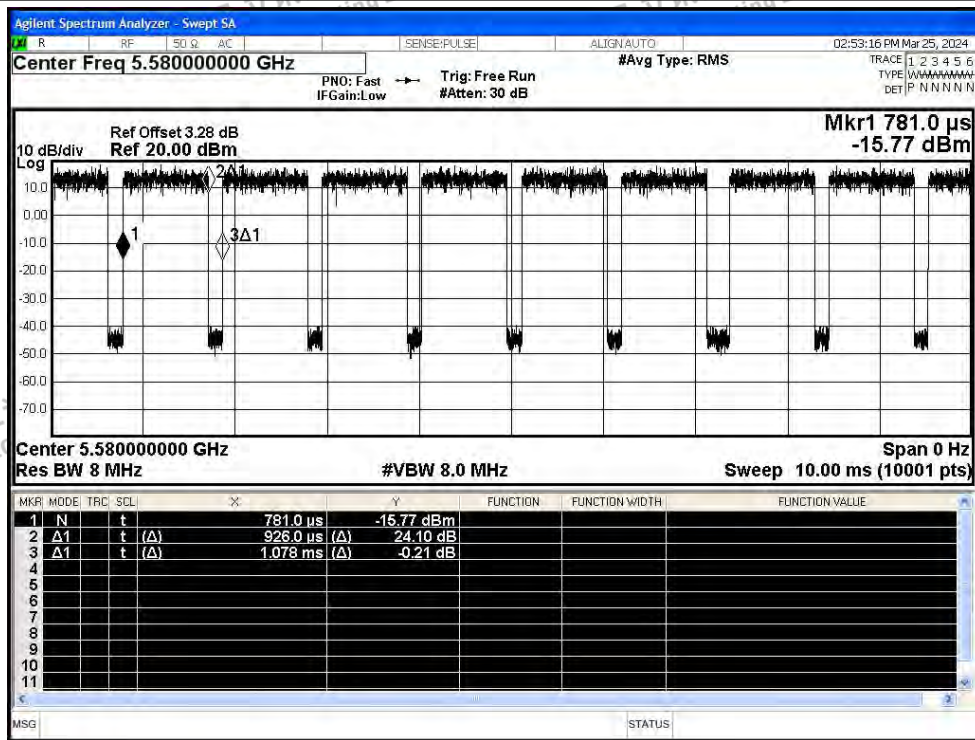


Duty Cycle NVNT n20 5700MHz Ant1

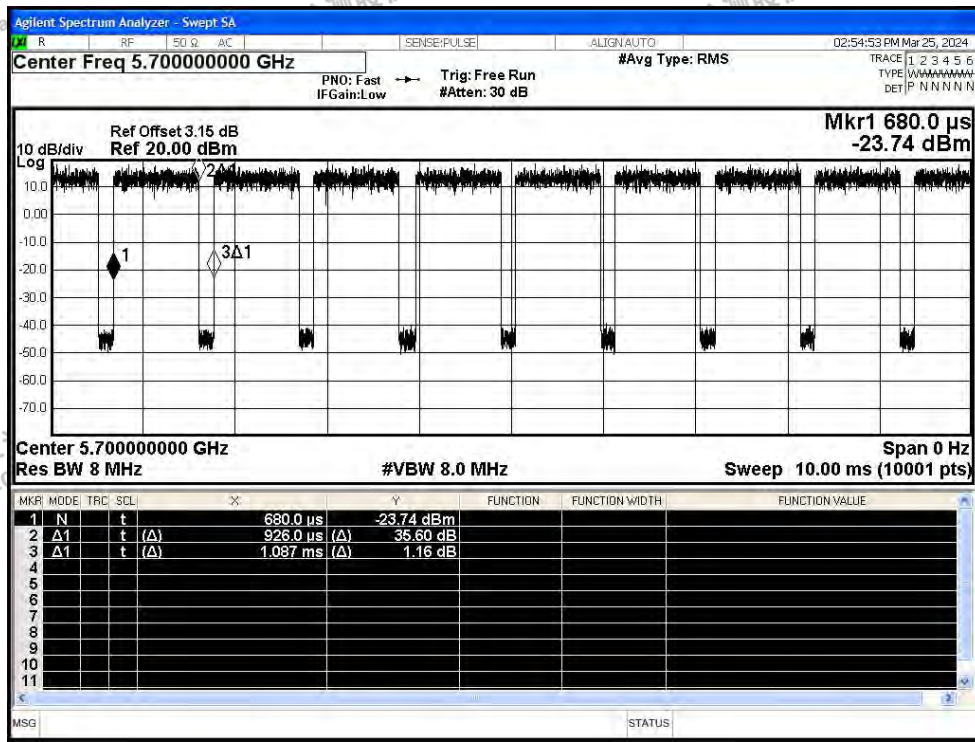




Duty Cycle NVNT n40 5510MHz Ant1

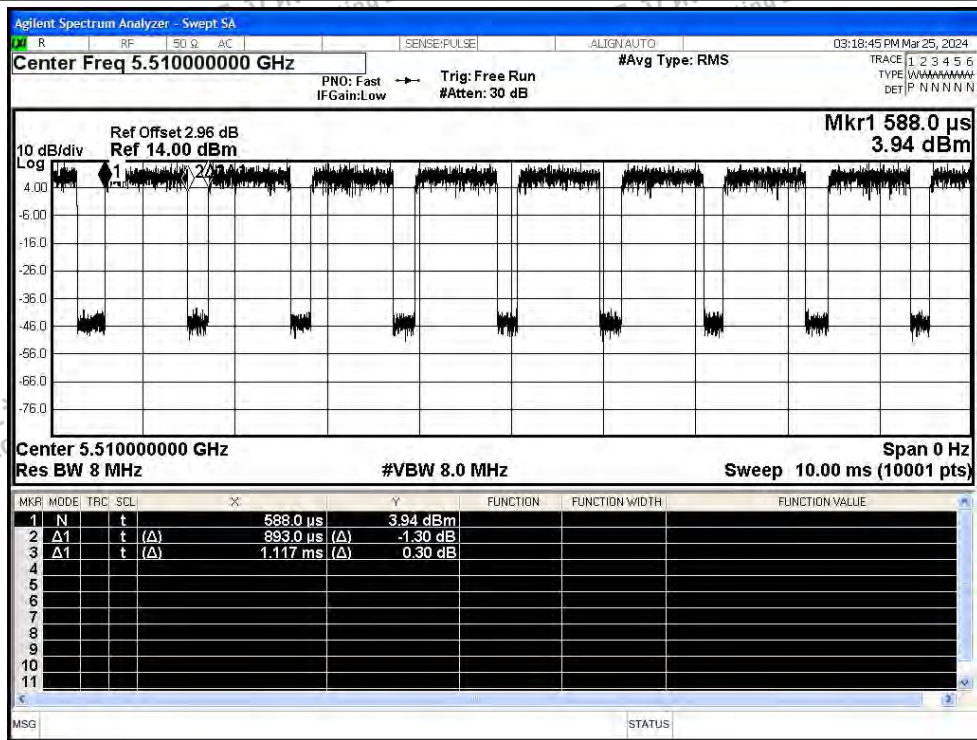


Duty Cycle NVNT n40 5550MHz Ant1

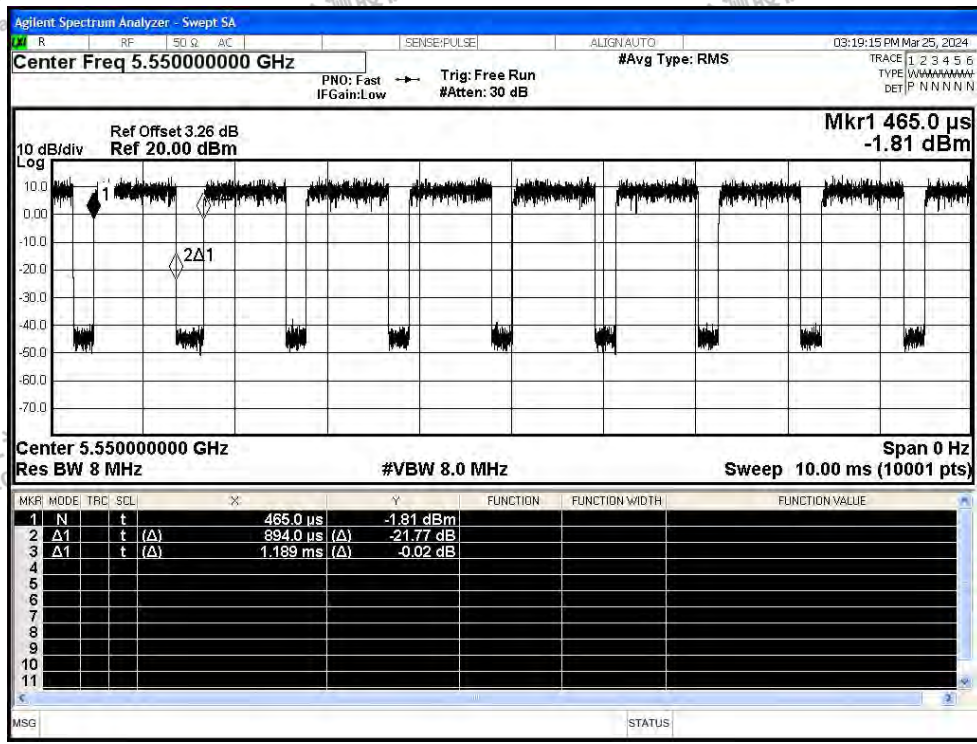




Duty Cycle NVNT n40 5670MHz Ant1

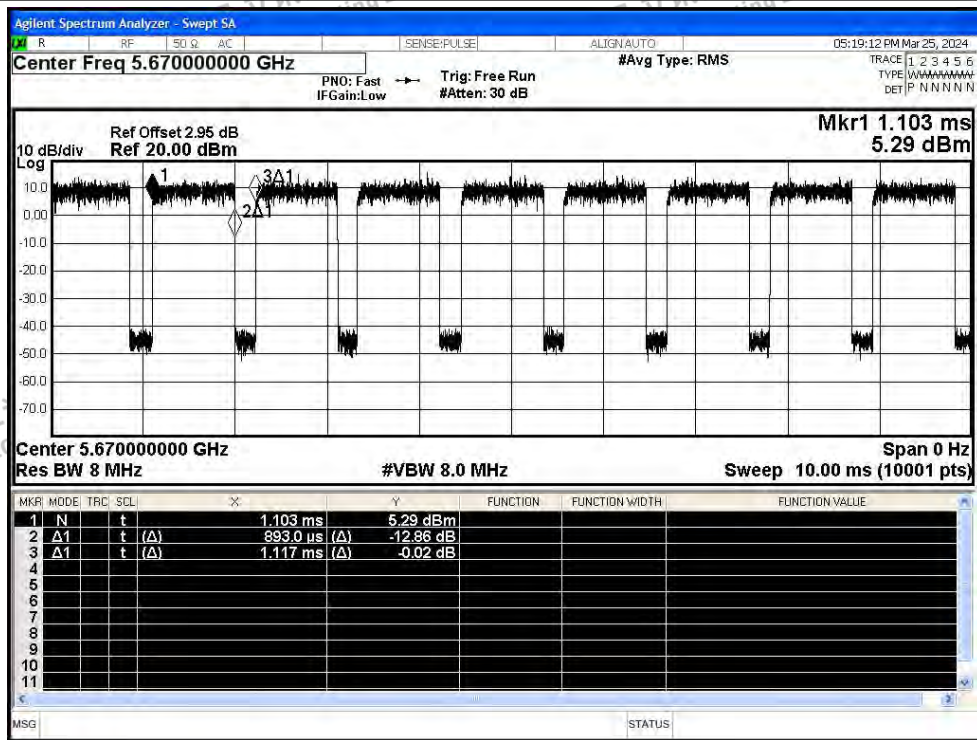


Duty Cycle NVNT ac20 5500MHz Ant1

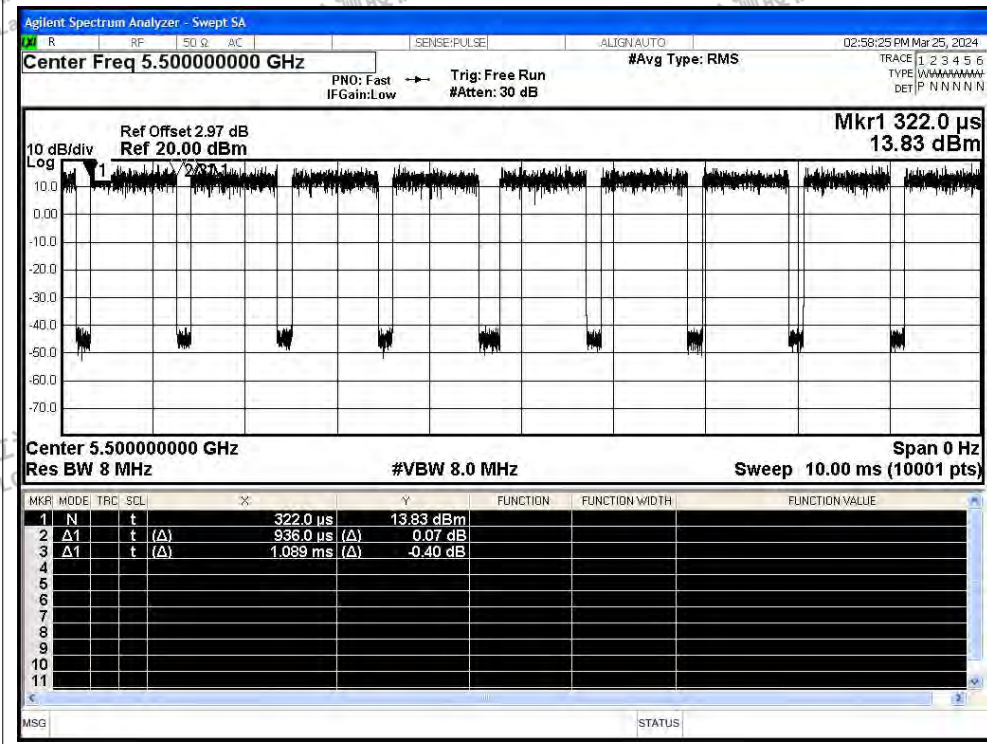




Duty Cycle NVNT ac20 5580MHz Ant1

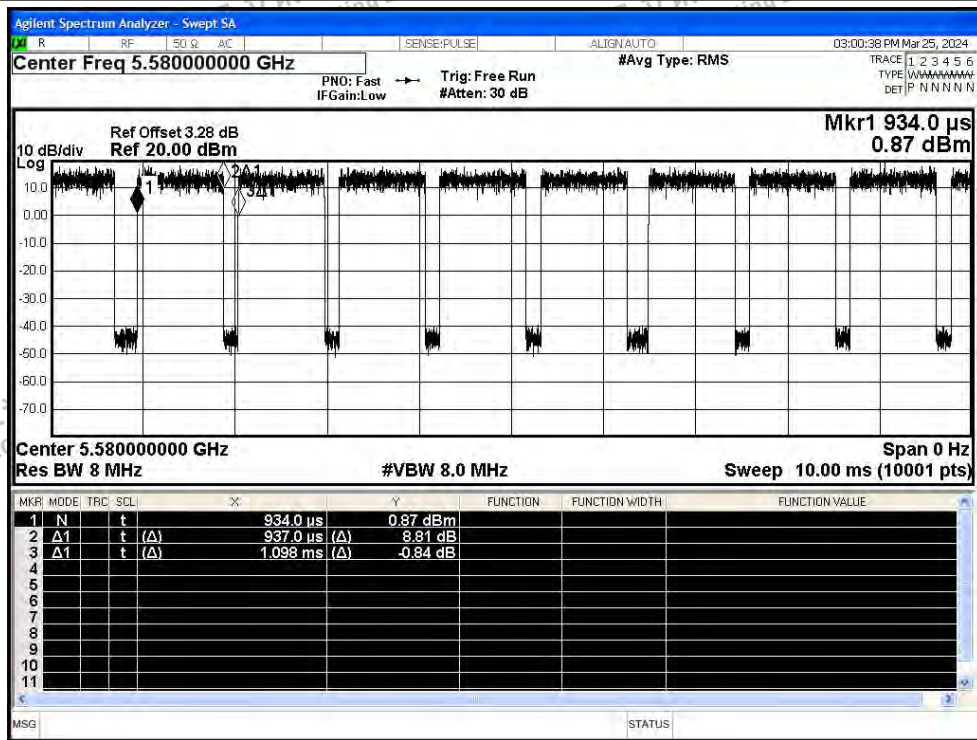


Duty Cycle NVNT ac20 5700MHz Ant1

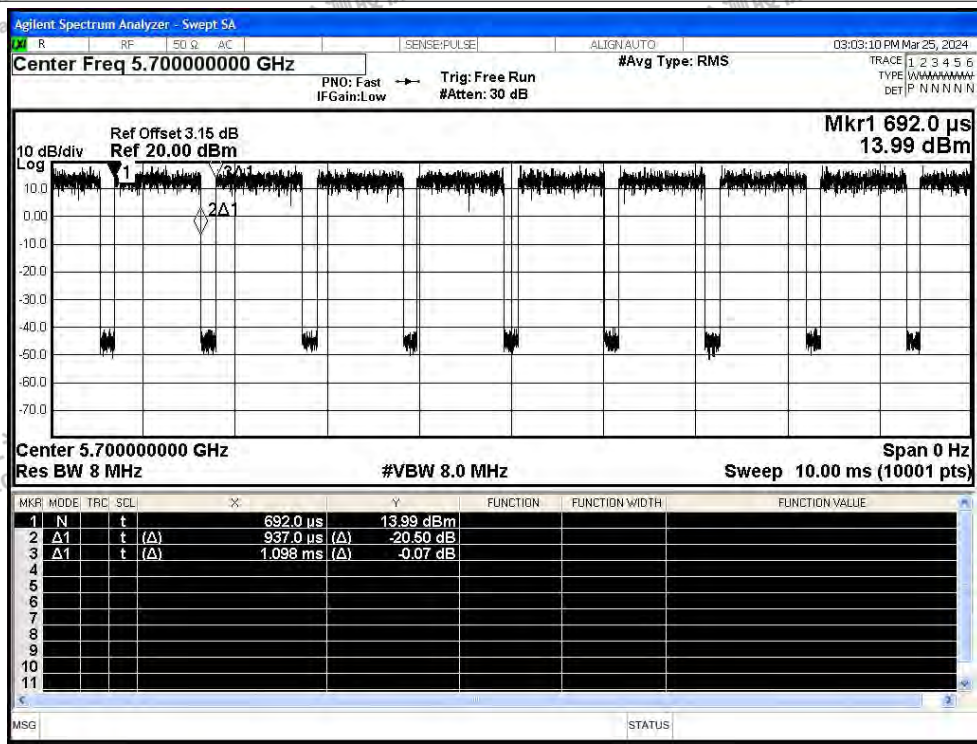






Duty Cycle NVNT ac40 5510MHz Ant1

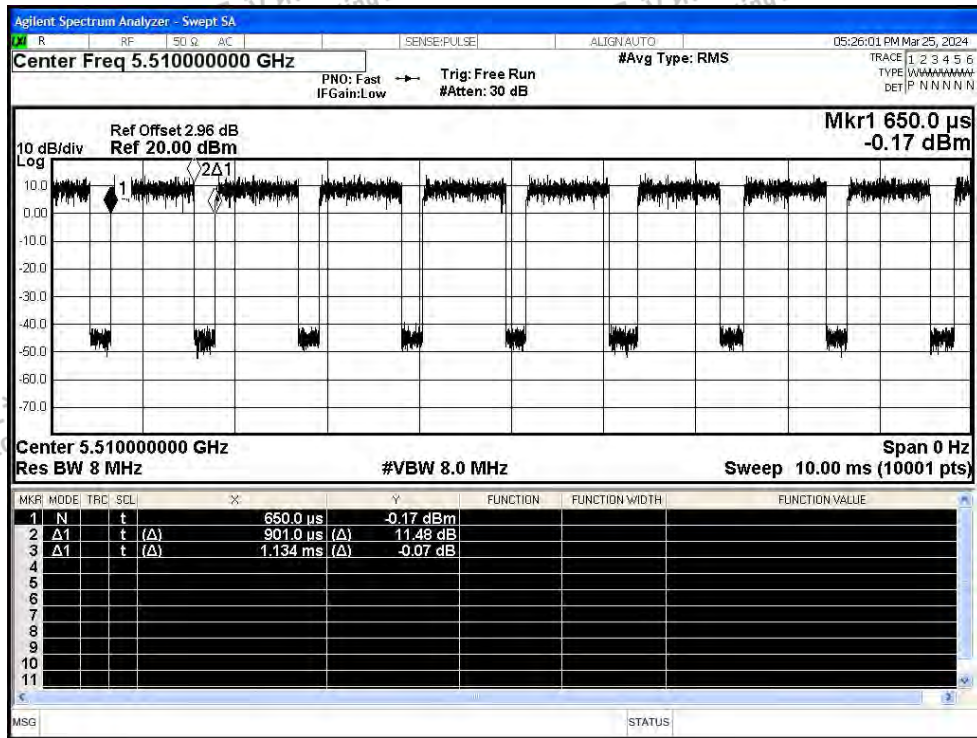


Duty Cycle NVNT ac40 5550MHz Ant1

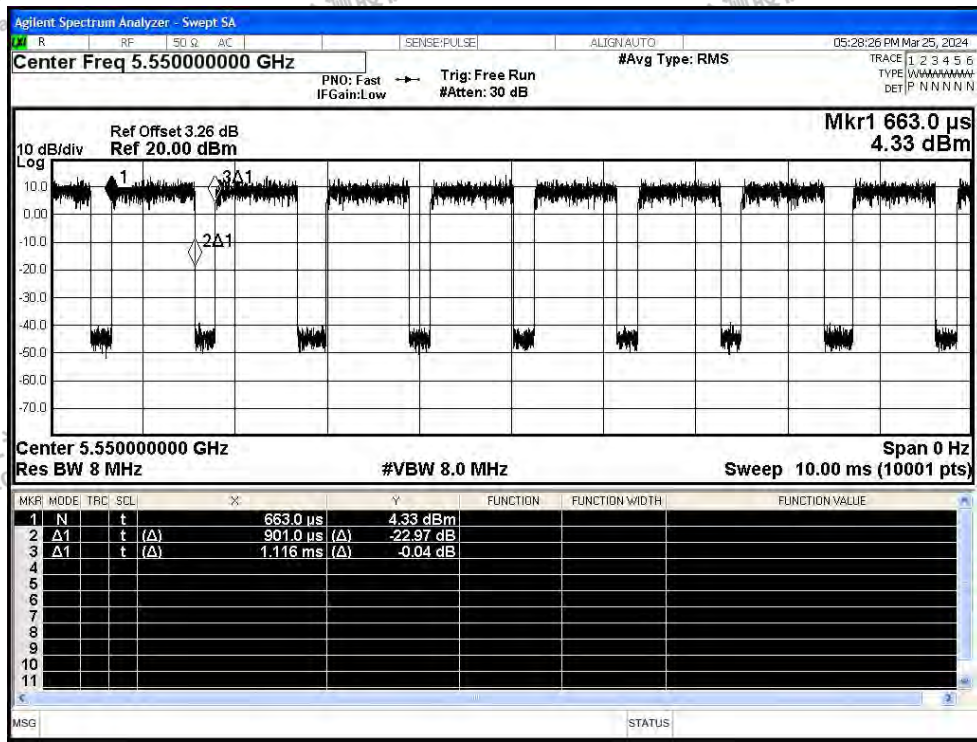




Duty Cycle NVNT ac40 5670MHz Ant1

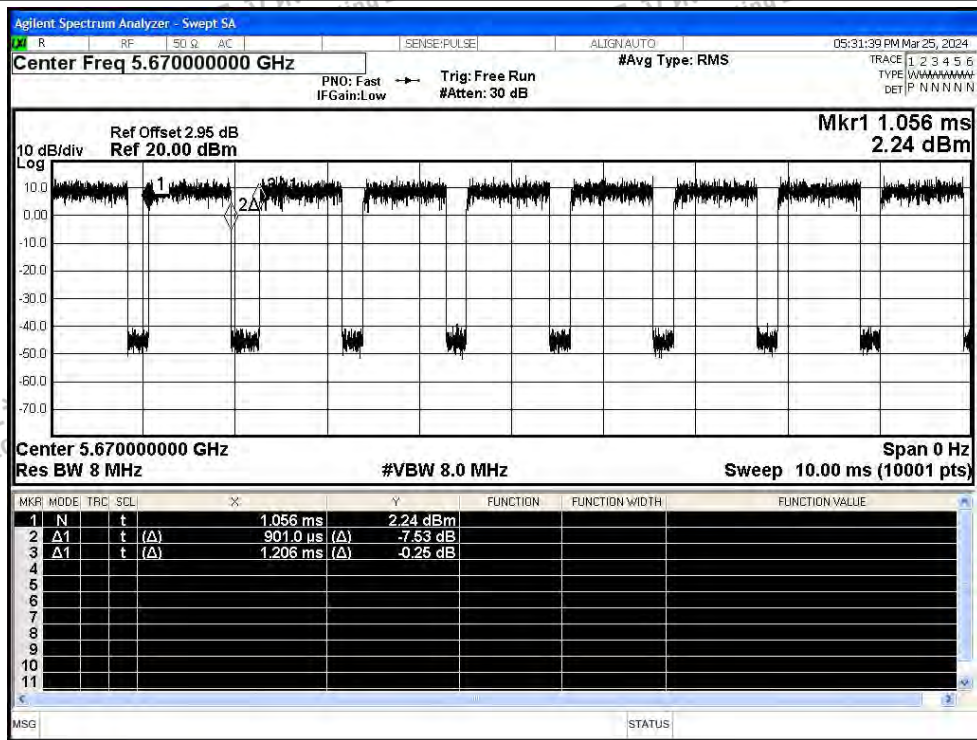


Duty Cycle NVNT ac80 5530MHz Ant1

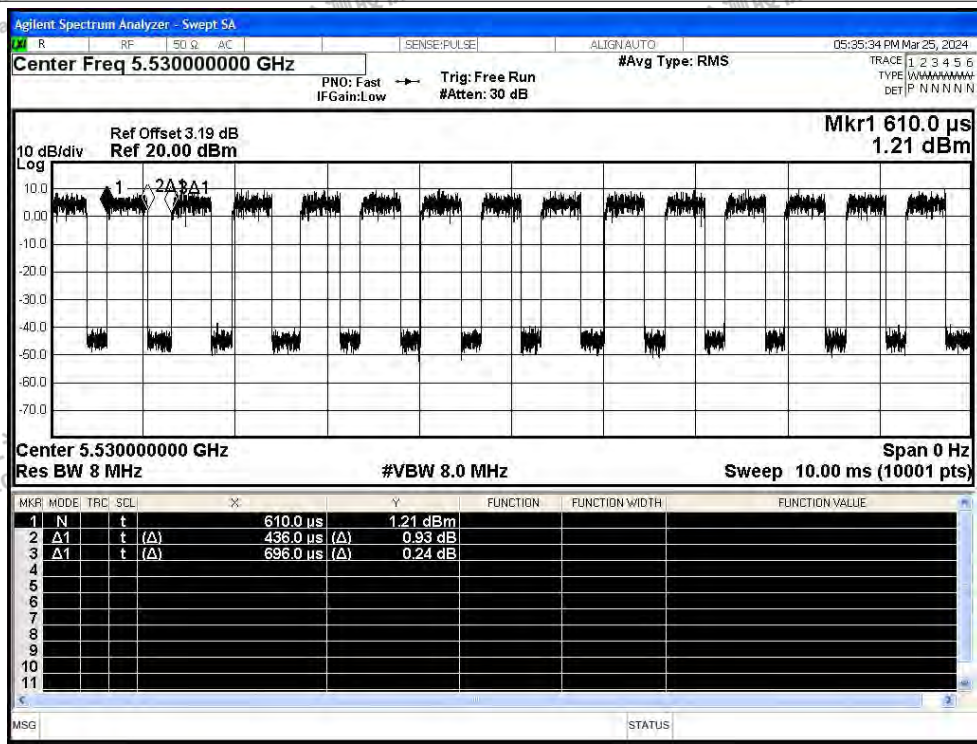



Duty Cycle NVNT ac80 5610MHz Ant1

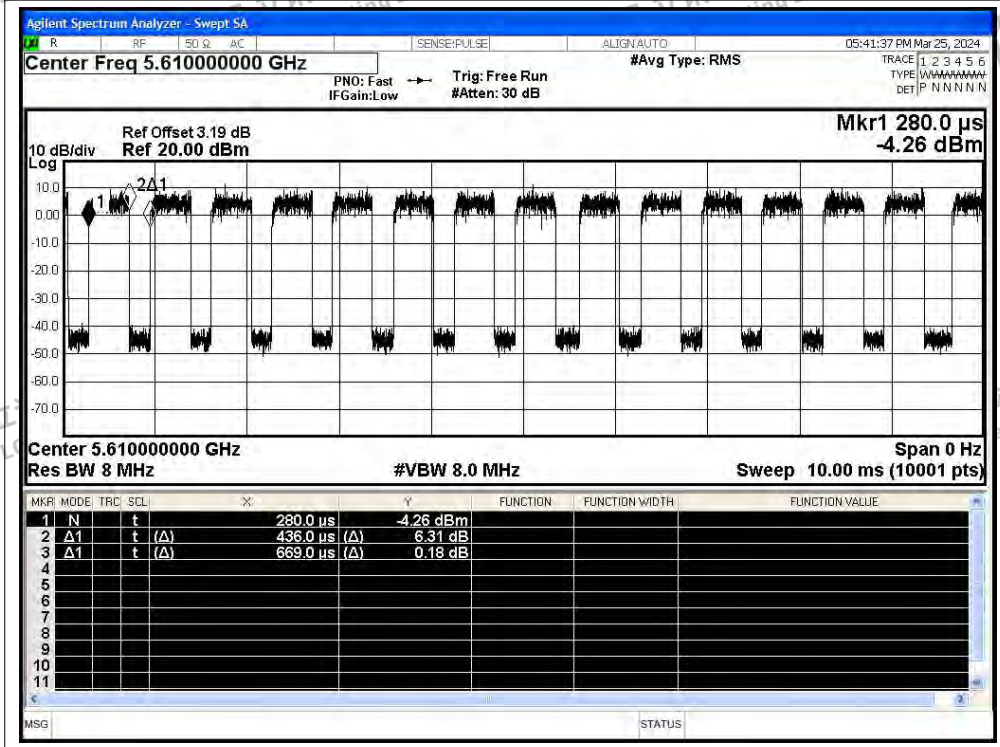




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant2	87.79	0.57	0.91
NVNT	a	5580	Ant2	84.73	0.72	0.91
NVNT	a	5700	Ant2	86.54	0.63	0.91
NVNT	n20	5500	Ant2	96.36	0.16	1.08
NVNT	n20	5580	Ant2	96.36	0.16	1.08
NVNT	n20	5700	Ant2	85.19	0.7	1.08
NVNT	n40	5510	Ant2	94.4	0.25	1.12
NVNT	n40	5550	Ant2	79.95	0.97	1.12
NVNT	n40	5670	Ant2	80.04	0.97	1.12
NVNT	ac20	5500	Ant2	85.25	0.69	1.07
NVNT	ac20	5580	Ant2	85.34	0.69	1.07
NVNT	ac20	5700	Ant2	86.04	0.65	1.07
NVNT	ac40	5510	Ant2	80.09	0.96	1.11
NVNT	ac40	5550	Ant2	79.45	1	1.11
NVNT	ac40	5670	Ant2	81.57	0.88	1
NVNT	ac80	5530	Ant2	68.18	1.66	2.08
NVNT	ac80	5610	Ant2	61.15	2.14	2.08






Test Graphs

Duty Cycle NVNT a 5500MHz Ant2

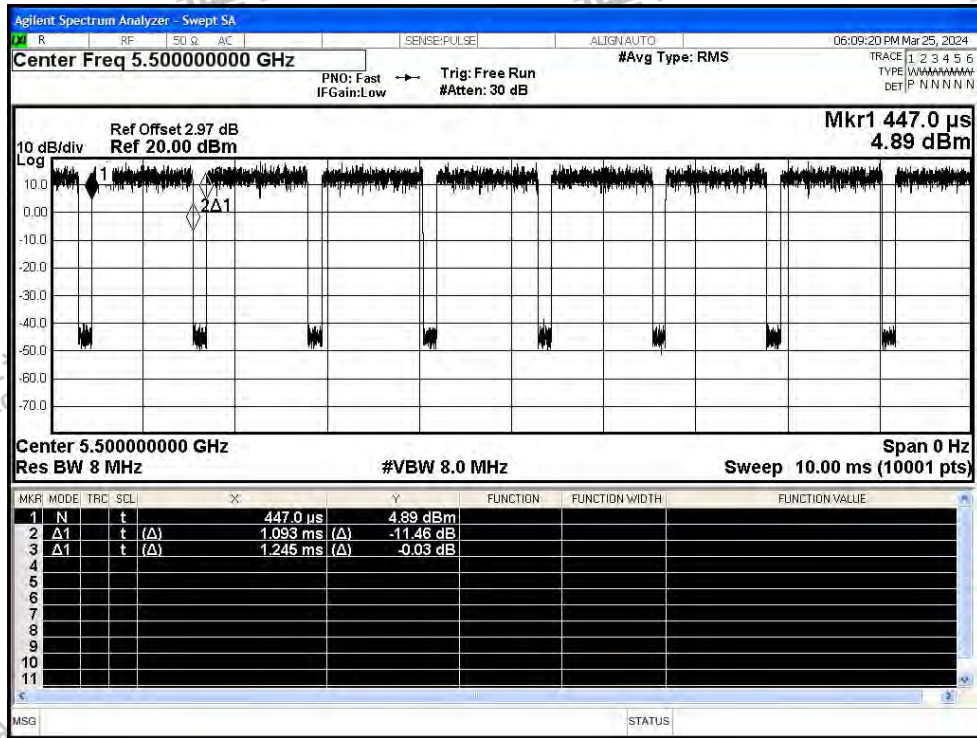


Duty Cycle NVNT a 5580MHz Ant2

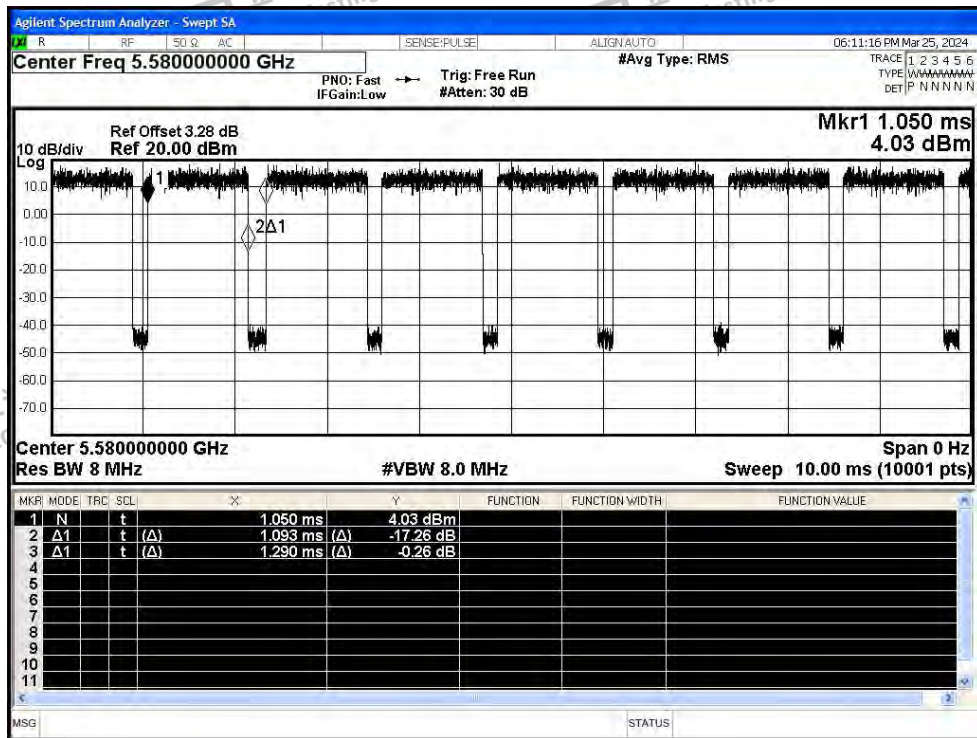




Duty Cycle NVNT a 5700MHz Ant2

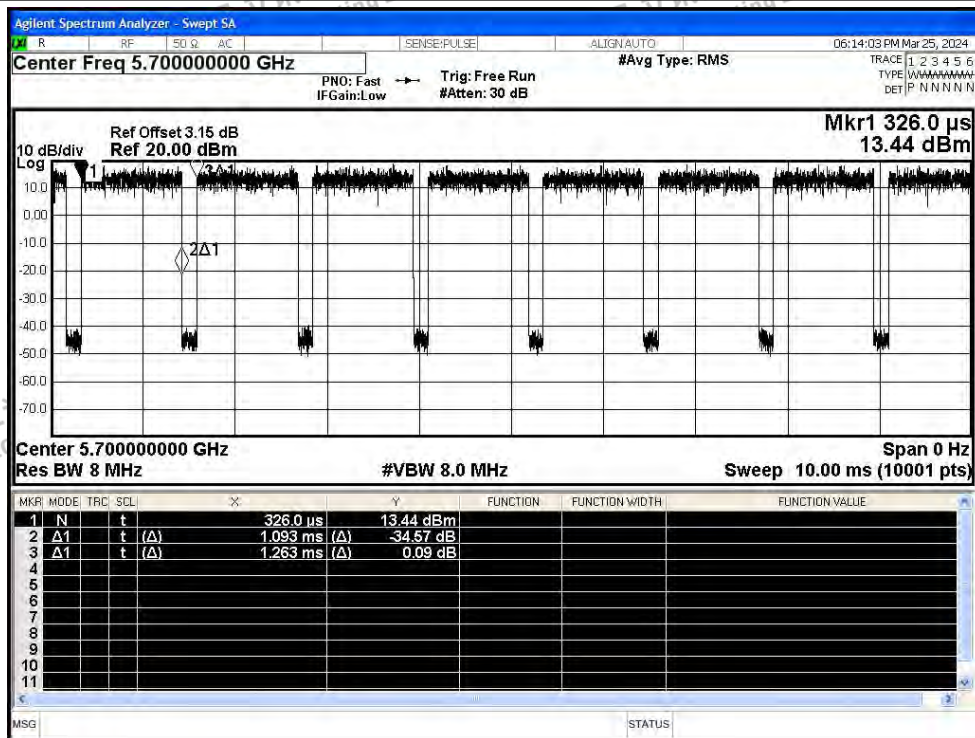


Duty Cycle NVNT n20 5500MHz Ant2

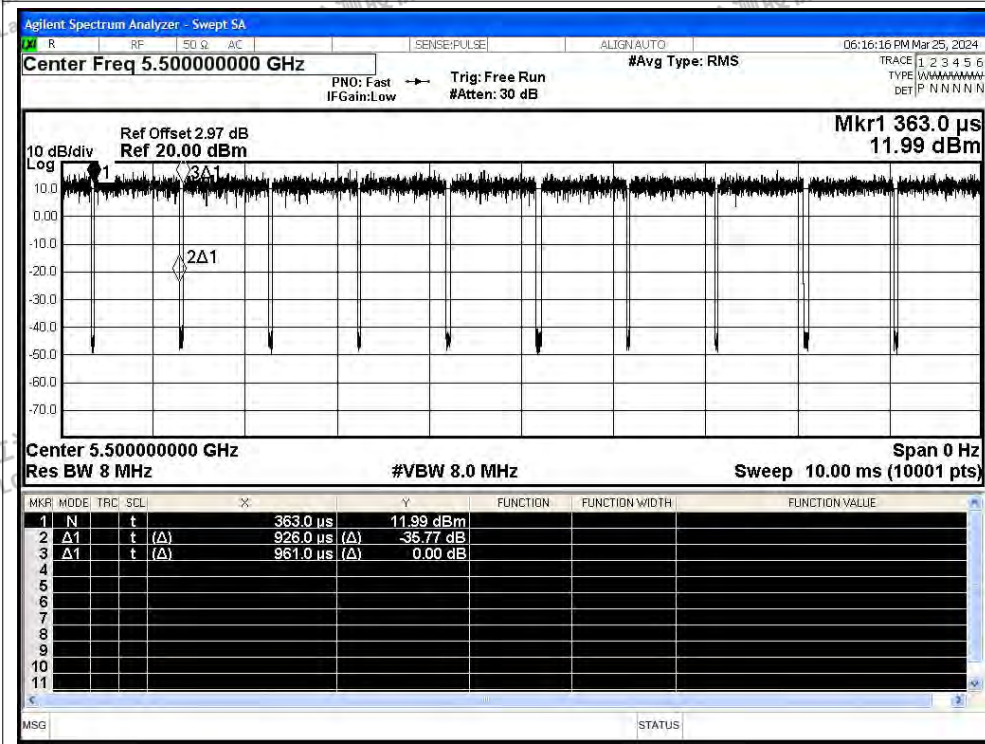




Duty Cycle NVNT n20 5580MHz Ant2

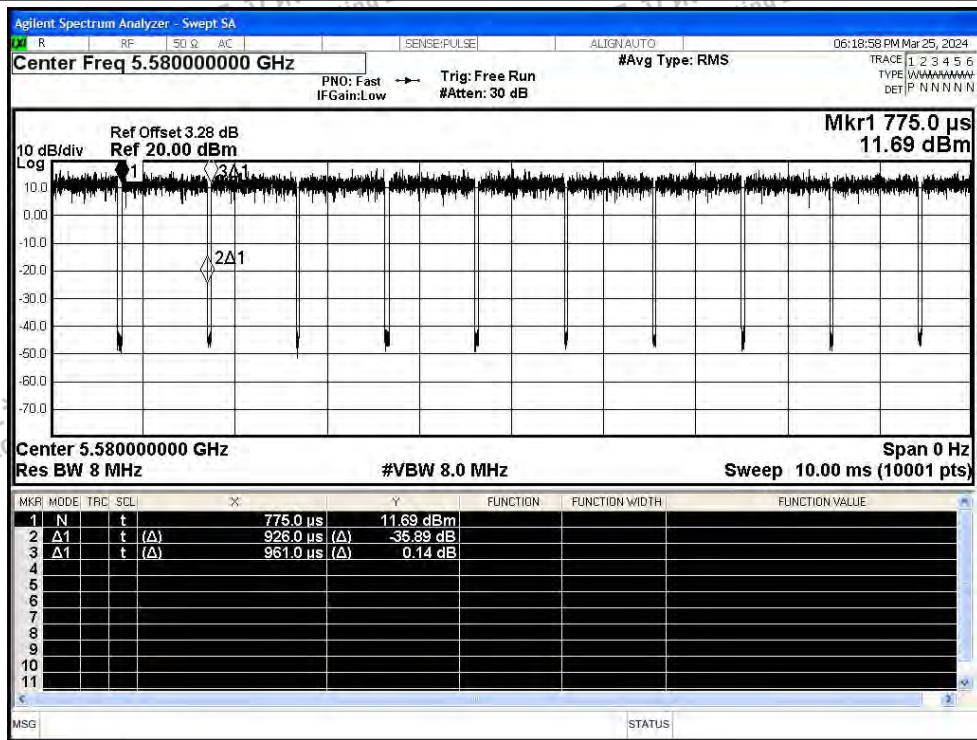


Duty Cycle NVNT n20 5700MHz Ant2

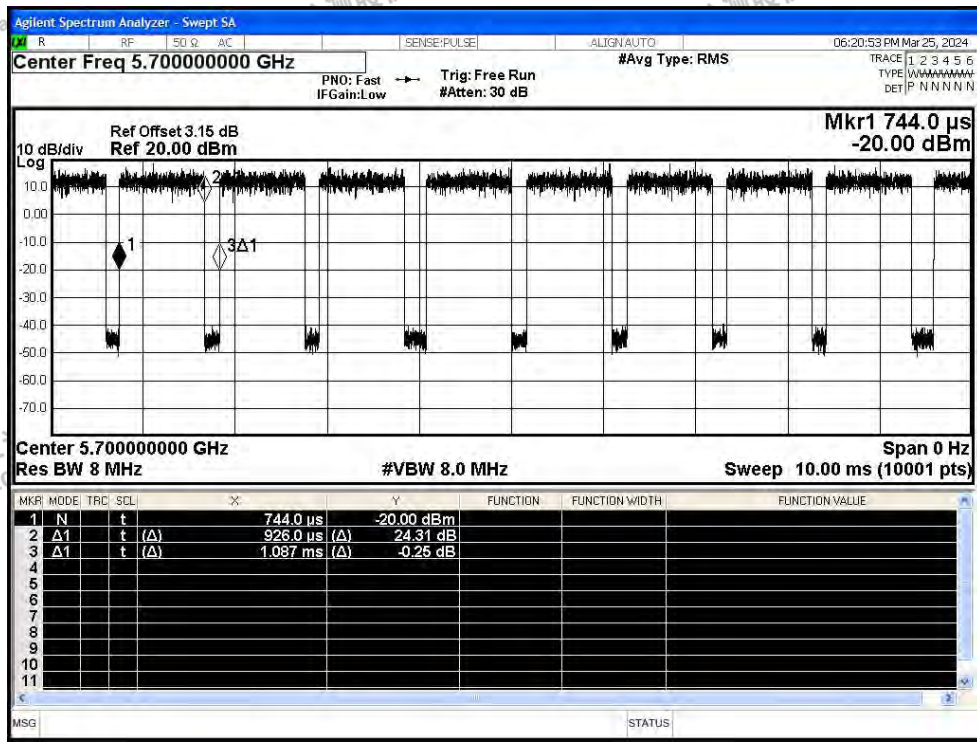




Duty Cycle NVNT n40 5510MHz Ant2

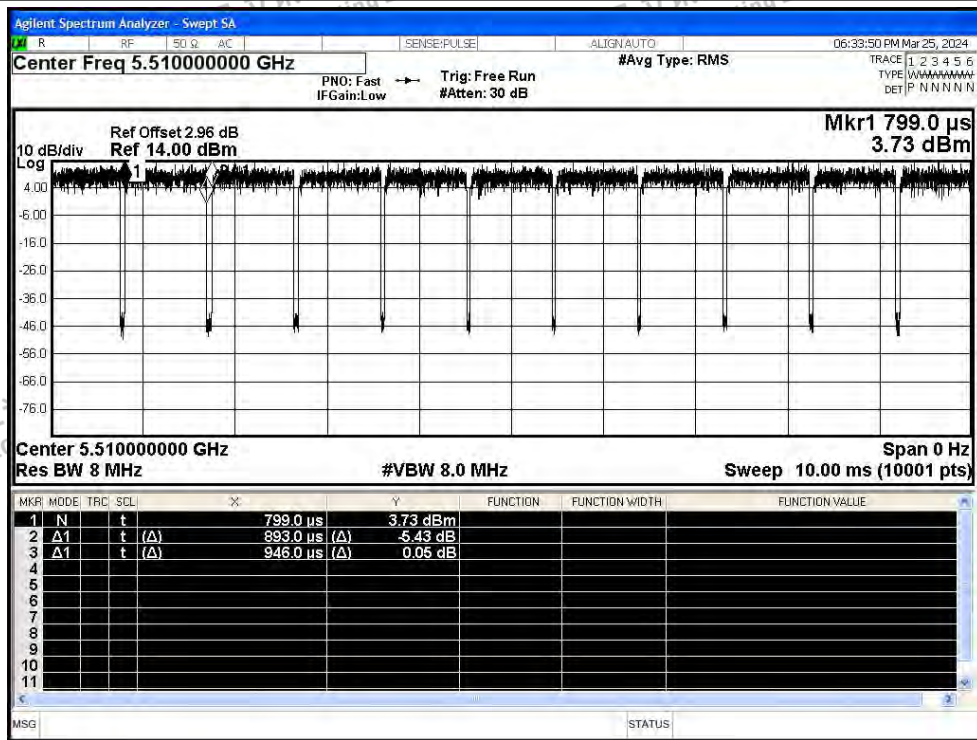


Duty Cycle NVNT n40 5550MHz Ant2

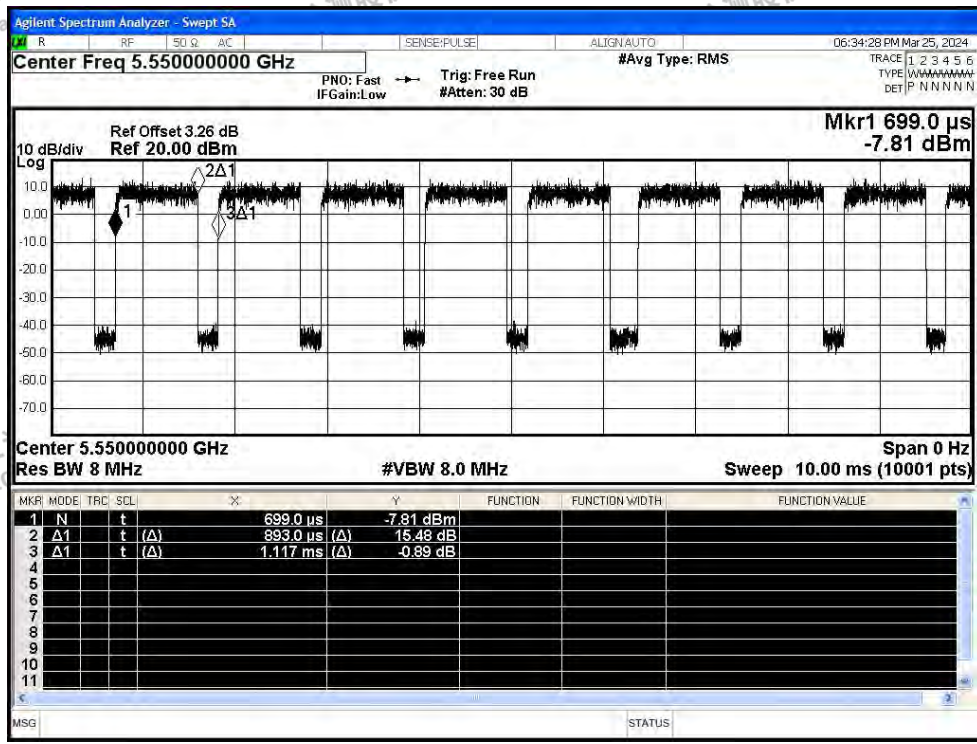






Duty Cycle NVNT n40 5670MHz Ant2

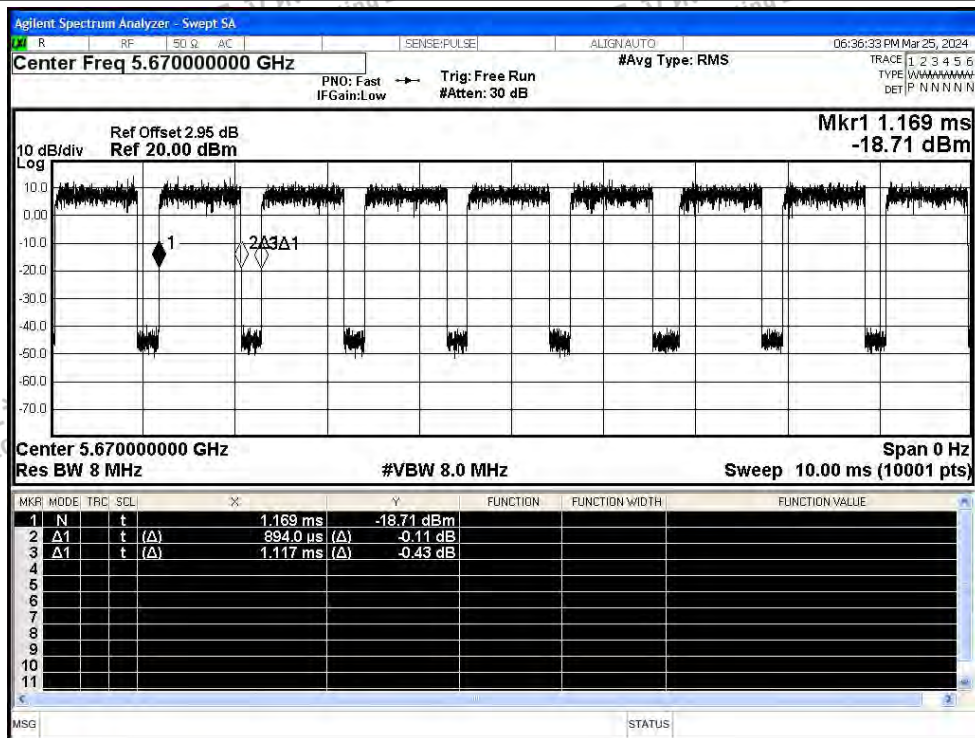


Duty Cycle NVNT ac20 5500MHz Ant2

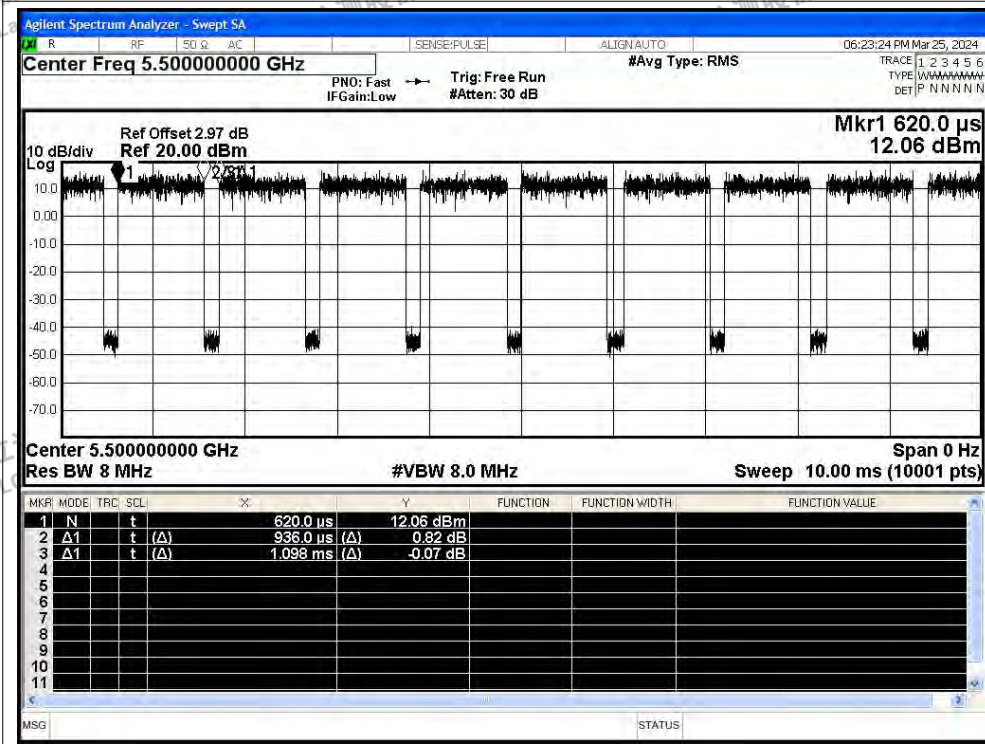




Duty Cycle NVNT ac20 5580MHz Ant2

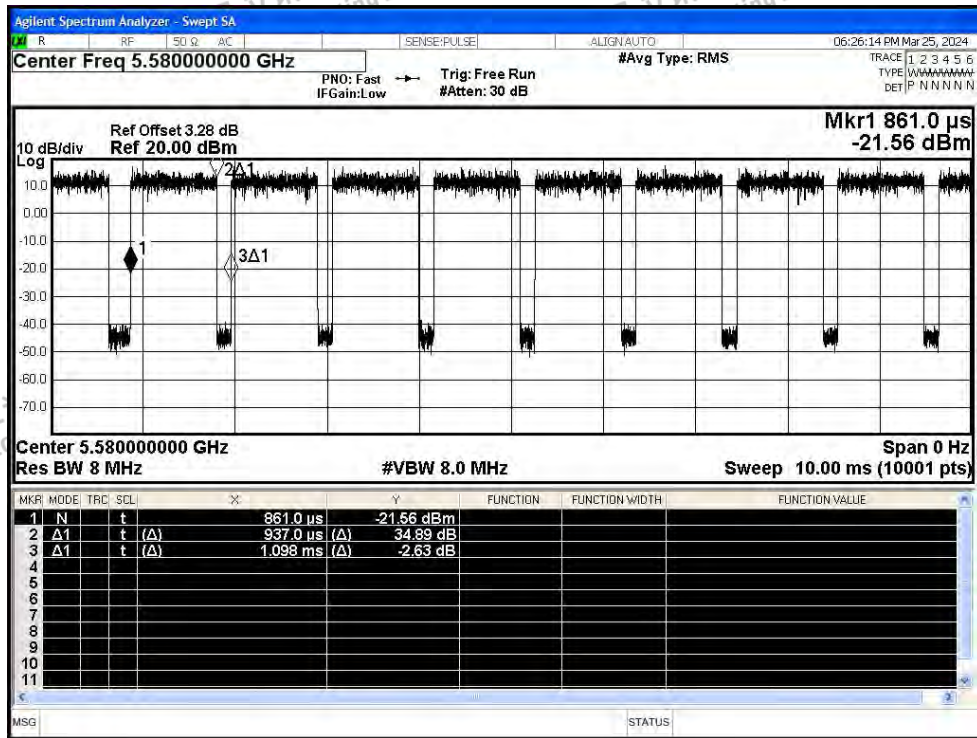


Duty Cycle NVNT ac20 5700MHz Ant2

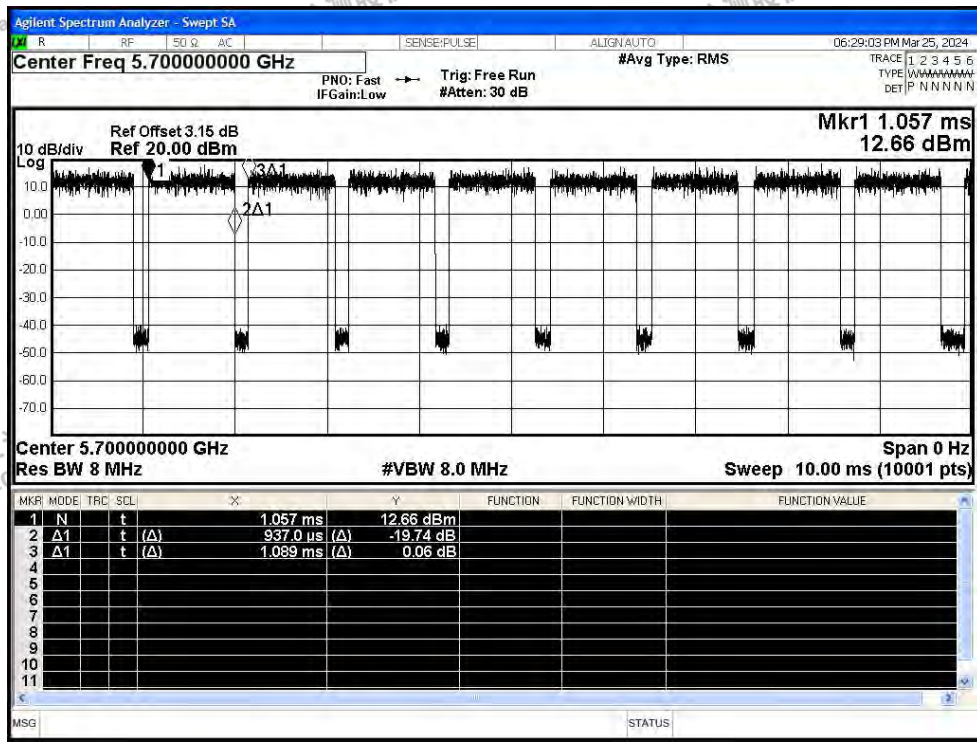




Duty Cycle NVNT ac40 5510MHz Ant2

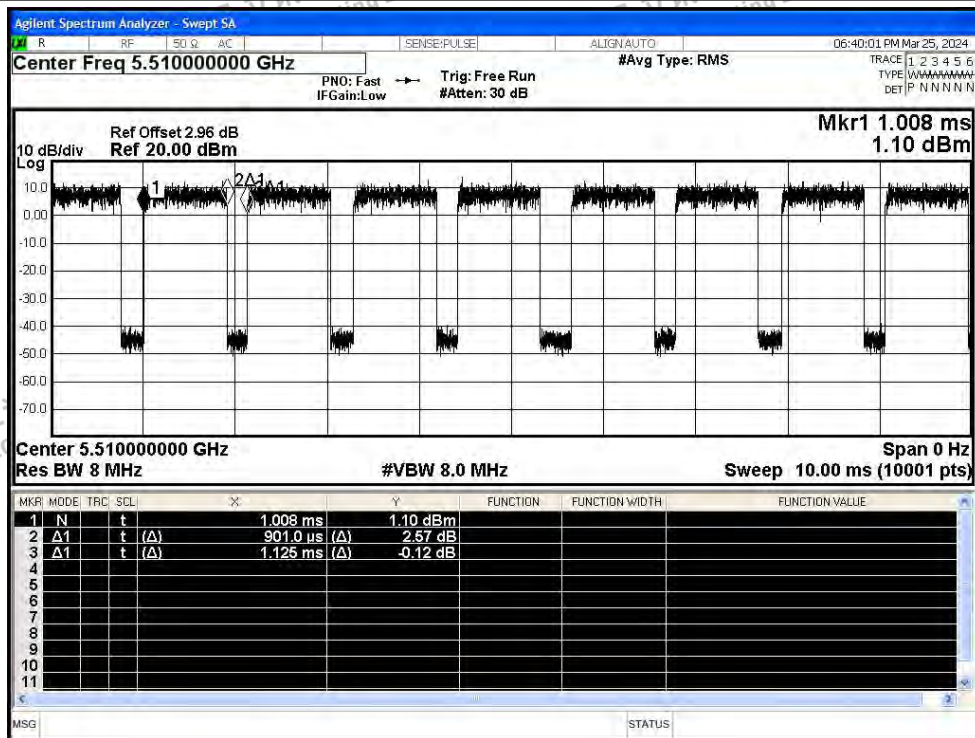


Duty Cycle NVNT ac40 5550MHz Ant2

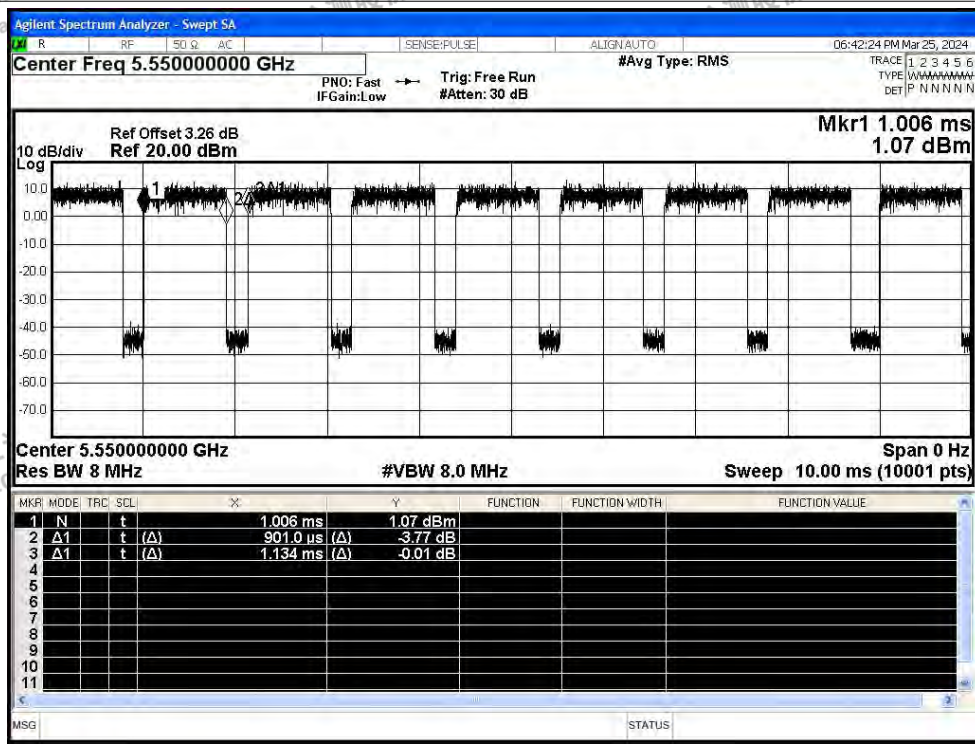




Duty Cycle NVNT ac40 5670MHz Ant2

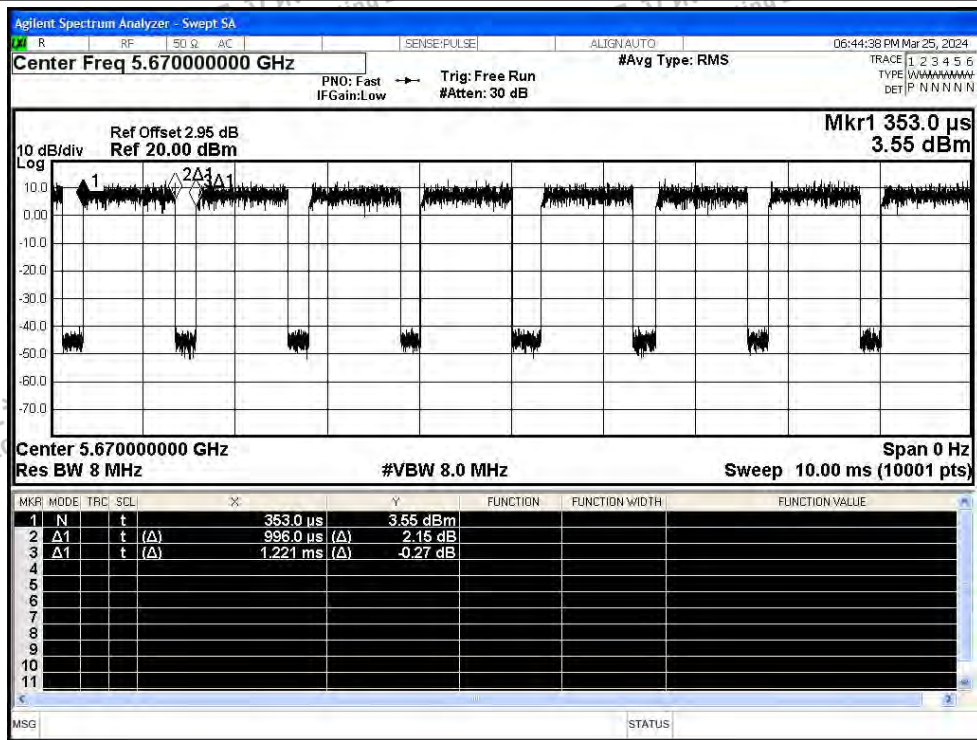

Duty Cycle NVNT ac80 5530MHz Ant2

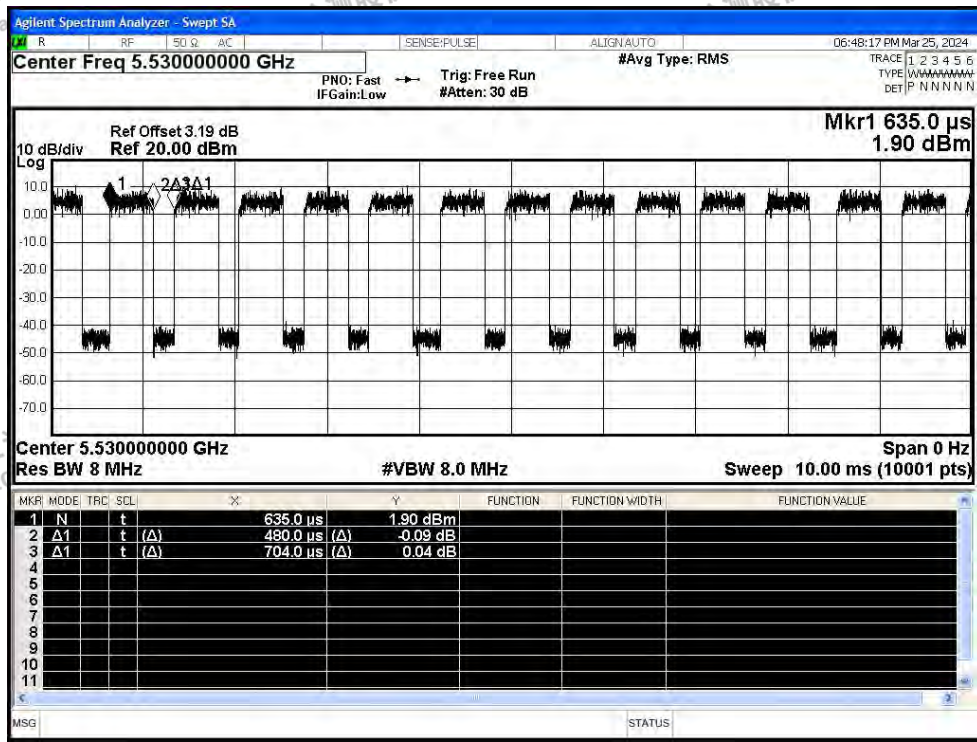



Duty Cycle NVNT ac80 5610MHz Ant2

