



**SRXII Manual**


**Wireless DSP subwoofer amplifier**



# TABLE OF CONTENT

<b>1. Introduction</b>	<b>03</b>
<b>2. SRXII Overview</b>	<b>04</b>
2.1 Included in the box	04
2.2 SRXII Layout	05
2.3 LED indications	06
<b>3. How to set up</b>	<b>07</b>
3.1 Setting up the SRXII	07
3.2 Pair with transmitter using WiSA	07
3.3 Connect to preamp	08
3.4 Connecting satellite speakers	08
<b>4. How to use</b>	<b>09</b>
4.1 Audio playback	09
4.2 Automatic Standby	10
4.3 Manual Crossover	10
4.4 Level adjustment	11
4.5 Phase adjustment	11
<b>5. Trouble shooting</b>	<b>12</b>
5.1 Factory reset	12
<b>6. Safety &amp; Warnings</b>	<b>13</b>
6.1 Important Safety Instructions	13
6.2 Warning	14
6.3 Compliance	16

# 1. Introduction

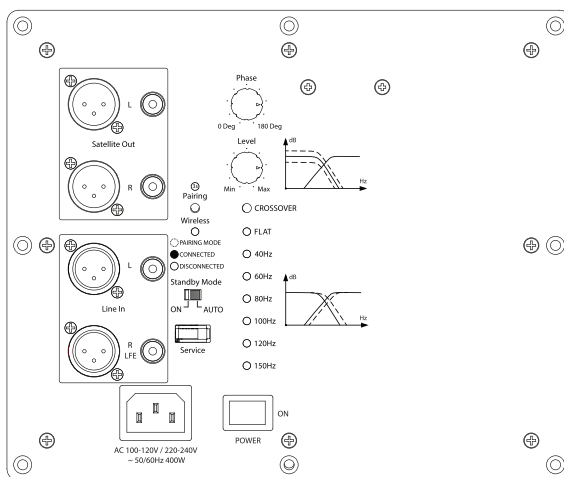


Thank you for buying the SRXII. We hope you will enjoy it!

## Features


- **Bass-management:**  
Configurable bass-management system to freely setup cross-overs, phase, and level.
- **App support:**  
Easy control of the SRXII through APP. Personalize your settings to get the best listening experience.
- **DSP functions for manual and Room EQ:**  
Adjust your speakers using multiple audio filters or use our automatic Room EQ so your system sound just right.
- **Standby mode:**  
Standby mode can be adjusted to match your use of the product.

## 2. SRXII Overview

### 2.1 Included in the box

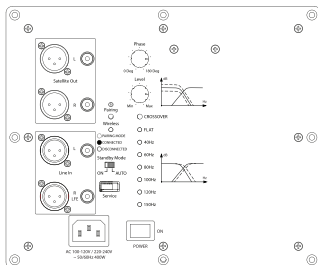


1x SRXII

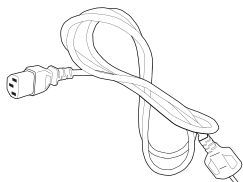


1x Power cable

## 2.2 SRXII Layout

FRONT

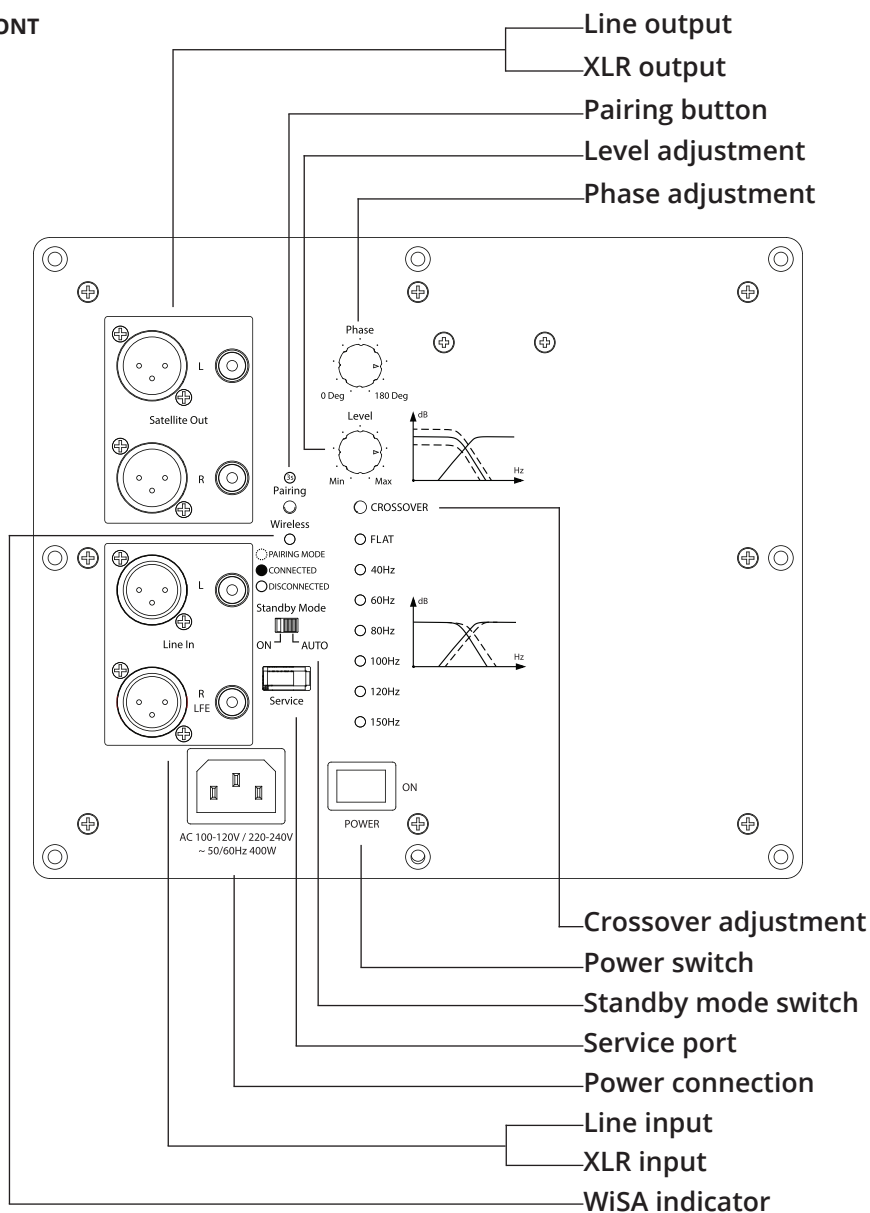


## 2.3 LED indications

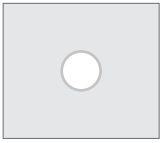

**Solid white:** Connected




**White blink:** Pairing mode

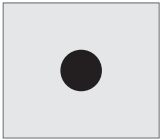

**LED OFF:** Disconnected

## 3. How to set up

### 3.1 Setting up the SRXII

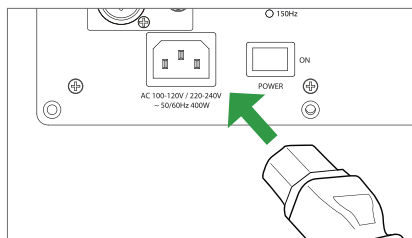


#### Connect power supply

- Plug the included *power supply* into the SRXII.
- Turn ON the device using the power button.


### 3.2 Pair with transmitter using WiSA

The SRXII can be paired with any WiSA transmitter.

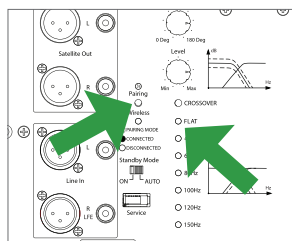

#### Transmitter with bass-management

- Set crossover on the SRXII to FLAT.
- Press and hold the pair button on SRXII for 3 seconds.
- Follow the instructions of the WiSA transmitter to complete pairing.

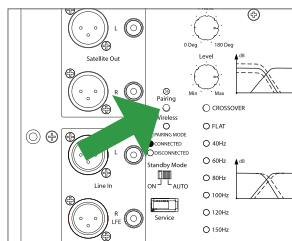


#### Transmitter without bass-management

- Press and hold the pairing button on the SRXII for 3 seconds.
- Follow the instructions of the WiSA transmitter to complete pairing.


### 3.3 Connect to preamp

The SRXII can be connected to preamps using XLR or phono cables.

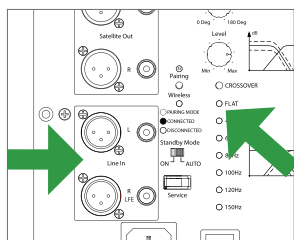

#### Preamp with bass-mangement

- Set crossover on the SRXII to FLAT.
- Use XLR or phono cables to connect the SRXII with the preamp using LINE IN ports.

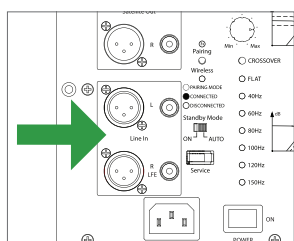

#### Preamp without bass-management

- Use phono cables to connect the SRXII with the preamp using with LINE IN ports.


### 3.4 Connecting satellite speakers

The SRXII can be connected with an external power amplifier or powered speaker to play satellite output. The highpass cross-over of the satellite output will be set according to the crossover setting on the unit or in the APP.



## 4. How to use


### 4.1 Audio playback

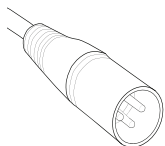

#### XLR

- Any source with XLR output can be connected to the SRXII through the LINE IN ports.

 **NB: XLR input supports up to 5Vrms**




#### Phono

- Any analogue source with phono output can be connected to the SRXII through the LINE IN ports.

**NB: Phono input supports up to 2.5Vrms**


## 4.2 Automatic Standby

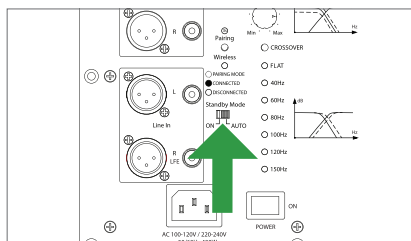

### Standby mode ON/Auto

- When set to Auto, the subwoofer will enter standby automatically after the time defined in the APP (default 20min) without signal. When set to ON, the subwoofer will remain ON always until power is removed.


## 4.3 Manual Crossover

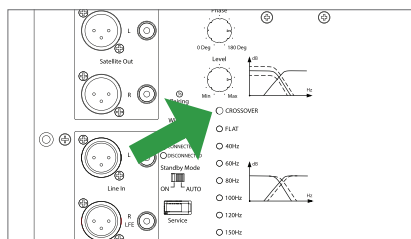

### Adjust crossover

- To adjust the subwoofers crossover frequency, push the button to set the corresponding -6dB frequency.
- Via rearplate operation, the 4th order highpass and lowpass filters are adjusted together, giving them both -6dB frequency according to the showing.
- The frequencies can be adjusted freely and individually via the APP.


## 4.4 Level adjustment

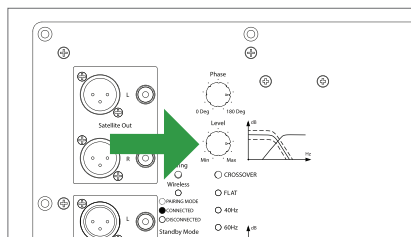

### Adjust the output level

- Adjust the subwoofer output level by rotating the knob.
- The adjustment is used to align your subwoofers output level with your main speakers level.

## 4.5 Phase adjustment

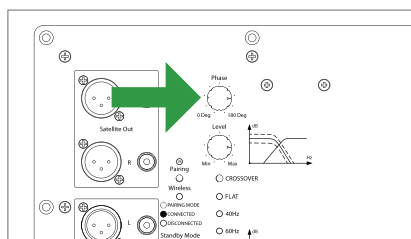

### Adjust the subwoofer phase

- Adjust the subwoofer output phase by rotating the knob.
- The adjustment is used to align the subwoofer with your main speakers.

## 5. Trouble shooting

### 5.1 Factory reset

To perform a factory reset press and hold the crossover button for 10 seconds.

## 6. Safety & Warnings

### 6.1 Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produces heat.
9. Do not defeat the purpose of the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a grounding plug. The wide blade or the third plug is provided for your safety. If the provided plug does not fit into our outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## 6.2 Warning

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

A warning that an apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.



This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying this product.



**ATTENTION:** RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR.



**WARNING:** The terminals marked with this symbol are hazardous live. External wiring connected to these terminals requires installation by an instructed person or the use of ready-made leads or cords.



**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**ATTENTION:** AFIN DE RÉDUIRE LES RISQUES D'INCENDIE OU DE CHOC ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU.



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**ATTENTION:** AFIN DE RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, NE PAS RETIRER LE CAPOT. AUCUNE PIÈCE À L'INTÉRIEUR. CONFIER L'ENTRETIEN À DU PERSONNEL QUALIFIÉ.



The lightning flash arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## 6.3 Compliance



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.



# IC

This device complies with CAN ICES-003 (B)/NMB-003(B).

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à la norme CAN ICES-003 (B)/NMB-003 (B).

Cet appareil contient des émetteurs / récepteurs exempt (s) de licence qui sont conformes aux RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas provoquer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

## **RF Exposure**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements de la IC établies pour un environnement non contrôlé. Cet équipement doit être installé et fonctionner à au moins 20cm de distance d'un radiateur ou de votre corps.

**Company Information:**

Platin Gate ApS  
Anelystparken 31C  
8381 Tilst  
Denmark

**Manufacturer information:**

HANSONG (NANJING) TECHNOLOGY LTD  
8 Kangping Road  
Jiangning Economy and Technology Development Zone  
211106 Nanjing  
China

**For documentation and other information see:**

<https://platinaudio.com/pages/platin-product-documentation>



