 


## 1. Product appearance

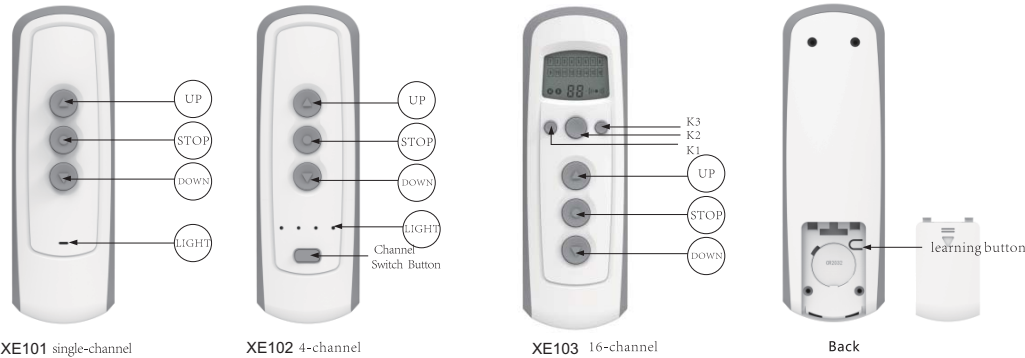

## 2. Technique data

- Power: 3V  $\overline{\text{DC}}$  Direct Current model:CR2032
- Working Temperature: -10 C to +60 C (LCD emitter)
- Working Temperature: -20 C to +60 C (Non-LCD emitter)

- Currency:  $\leq 12\text{mA}$
- Code: Rolling Code
- Frequency: 433.92MHz

 
### ⚠ WARNING

Do not ingest battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## 3. Code learning

01. Single-channel Short press the learning button on the back, the code learning is successful.


02. 4-channel

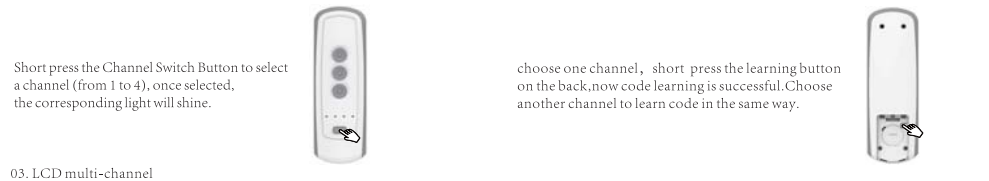

Short press the Channel Switch Button to select a channel (from 1 to 4), once selected, the corresponding light will shine.

choose one channel, short press the learning button on the back, now code learning is successful. Choose another channel to learn code in the same way.

 03. LCD multi-channel

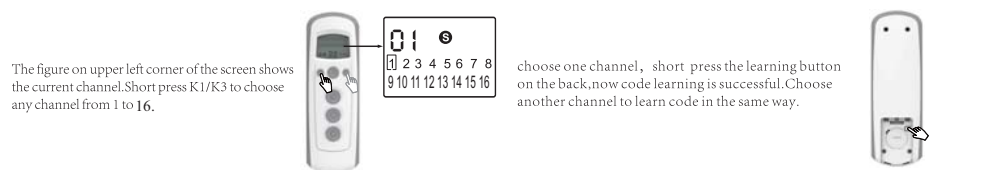

The figure on upper left corner of the screen shows the current channel. Short press K1/K3 to choose any channel from 1 to 16.

choose one channel, short press the learning button on the back, now code learning is successful. Choose another channel to learn code in the same way.

## 4. Single Control

Press K1/K3 button to select a channel, then the corresponding motor can be controlled by the emitter through UP/STOP/ DOWN button.

 
## 5. Group Control(4-channel emitter)



Short press the Channel Switch Button to select different channels (from 1 to 4), once selected, corresponding light will shine.

Note: If all of the four lights are on, it means the emitter is in Group Control state.

## 6. Group Control(LCD emitter) Short press K2 button to choose group control **M** or Single control **S**

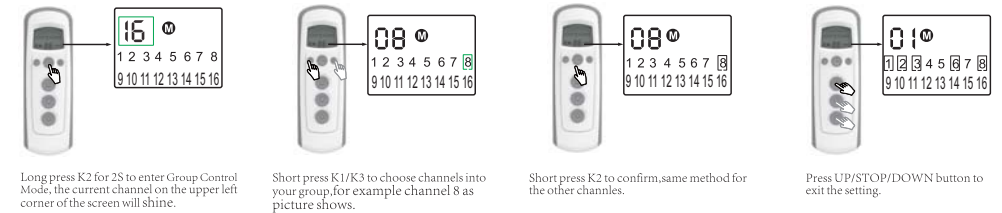


Long press K2 for 2S to enter Group Control Mode, the current channel on the upper left corner of the screen will shine.

Short press K1/K3 to choose channels out of your group, for example channel 8 as picture shows.

Short press K2 to confirm, same method for the other channels.

Press UP/STOP/DOWN button to exit the setting.

## 7. Delete Group Control

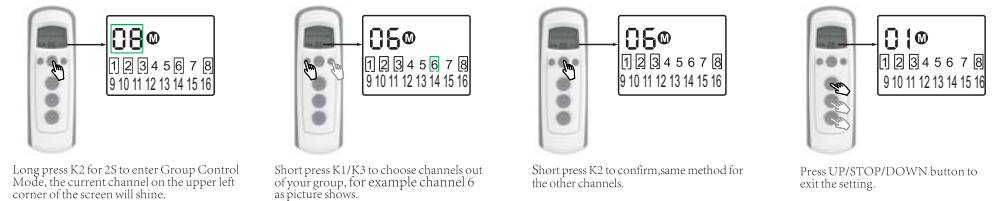 

Long press K2 for 2S to enter Group Control Mode, the current channel on the upper left corner of the screen will shine.

Short press K1/K3 to choose channels out of your group, for example channel 6 as picture shows.

Short press K2 to confirm, same method for the other channels.

Press UP/STOP/DOWN button to exit the setting.

Note: whether in **M** or **S** mode, the current channel is always selected

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.