


TEST SETUP PHOTO(S)

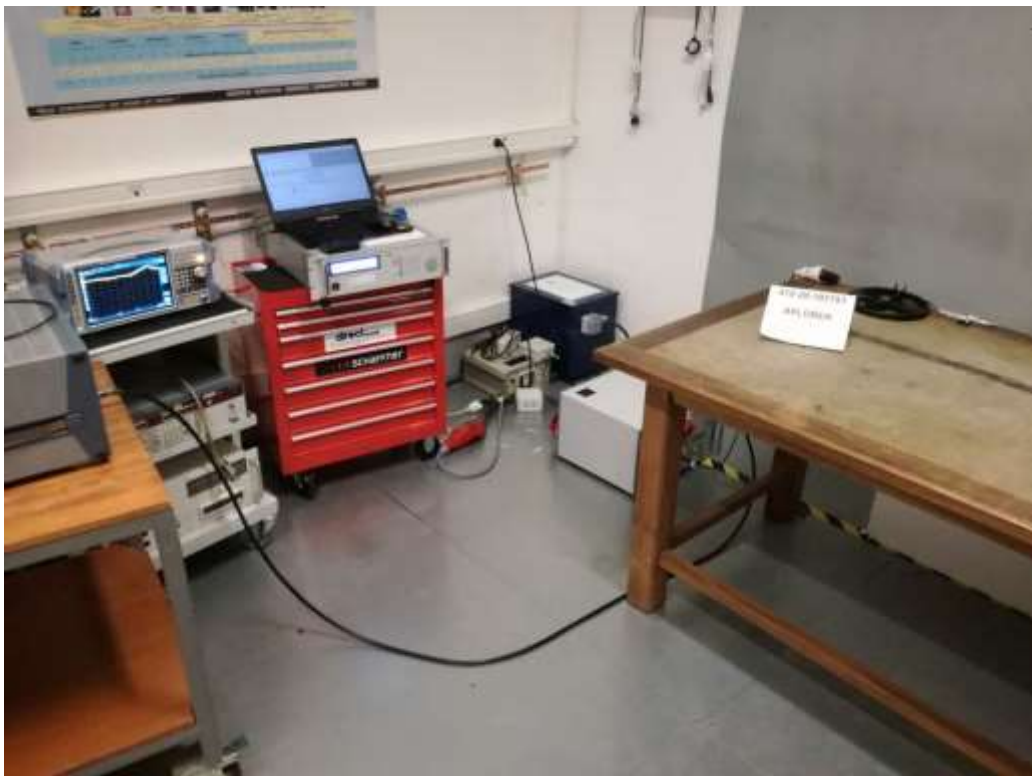


TEST SETUP PHOTO(S) -EUT POSITIONS



TEST SETUP PHOTO(S) -EUT POSITIONS



TEST SETUP PHOTO(S) – FOR PRELIMINARY MEASUREMENT

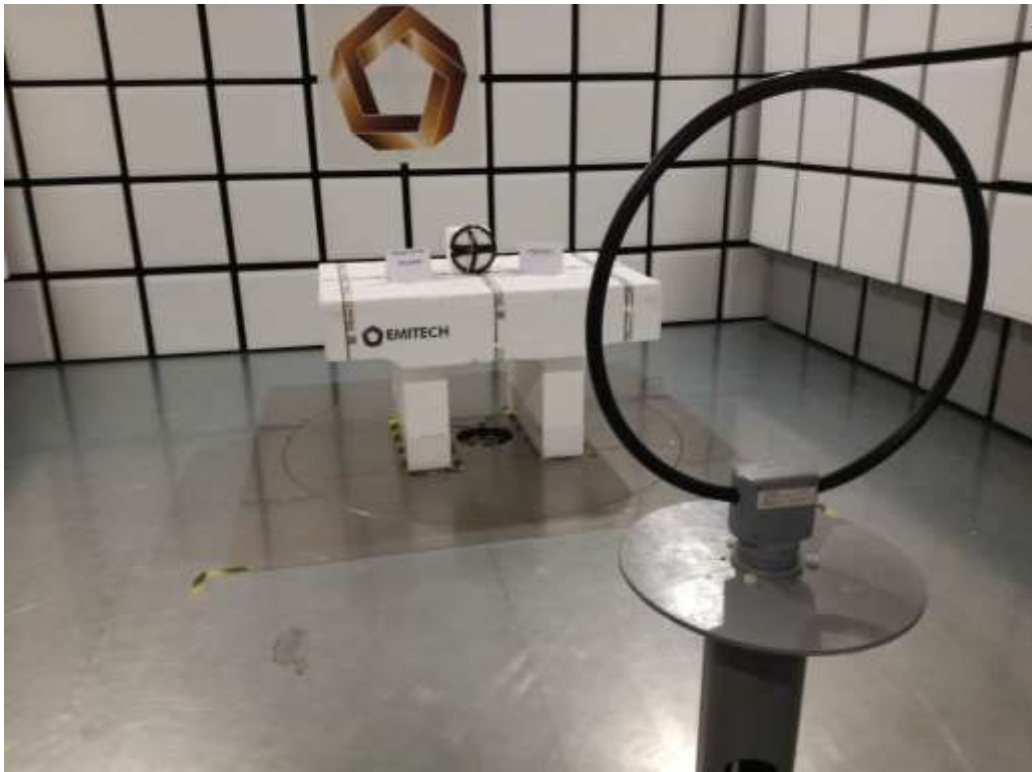

TEST SETUP PHOTO(S) -EUT POSITIONS



TEST SETUP PHOTO(S) -EUT POSITIONS



TEST SETUP PHOTO(S) – FOR FREQ < 200MHZ



TEST SETUP PHOTO(S) – FOR FREQ > 200MHZ



TEST SETUP PHOTO(S) -EUT POSITION 1



TEST SETUP PHOTO(S) -EUT POSITION 2



TEST SETUP PHOTO(S) -EUT POSITION 3



TEST SETUP PHOTO(S) - (OATS) - FOR FREQ 4.1KHZ





**TEST SETUP PHOTO(S) - (OATS) - FOR FREQ 45.19KHZ**

