

CONTENTS AND BATTERY INSTALLATION

 
 
Contents

- 2x Battle Tracks
- 2x Remote Controls

Battery Installation

Each vehicle requires 3 AA 1.5V batteries (not included) and each remote requires 4 AA 1.5V batteries (not included).



Use a Phillips head or Cross screwdriver to loosen the screw securing the battery cover on the bottom of each vehicle and remote. Insert the batteries, ensuring the correct polarity. Replace the battery cover and tighten the screw.

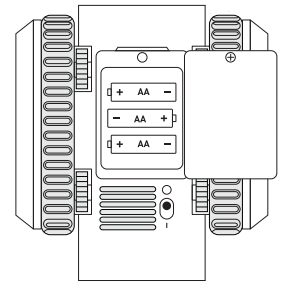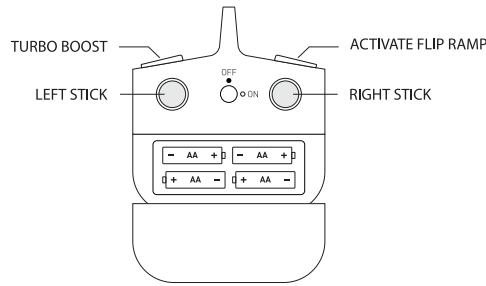



PLAY

1. Turn the power knob on the remote clockwise and flip the power switch on the vehicle to ON. The remote pair light and vehicle lights will pulse. They will turn solid when paired.
2. Control the vehicle using the remote-control sticks. The left stick controls the left wheels and the right stick controls the right wheels. Push both sticks up to go forward and down to go backward.
3. The purpose of the game is to flip your opponent over. To do so, you need to drive the front wedge of your vehicle into your opponent.
4. Once you are in position, press the FLIPPER button on the top right of the remote. This will activate your ramp.
5. Some positions are easier to flip your opponent over than others. Try different strategies and angles to achieve victory.
6. If you need a speed boost, to charge at or get away from your opponent, press the TURBO button on the top left of the remote for a temporary boost of speed. The turbo boost charges up every 20 seconds. The lights on the side of vehicle will fill up and a sound will play signifying the boost is ready for use.

 
 
Forward and Backward

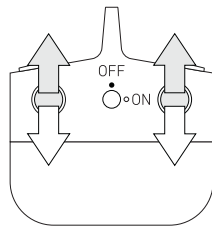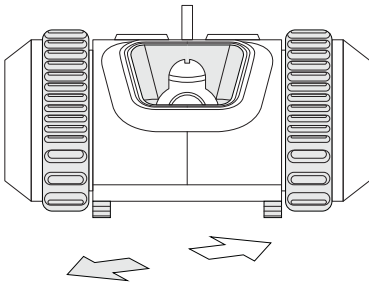

Spinning Action

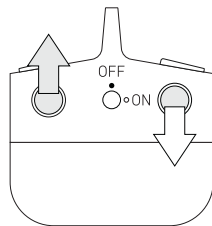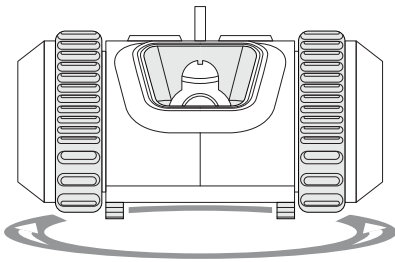  

Flipping Action

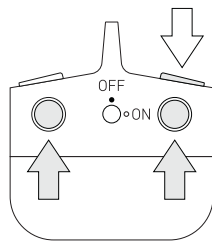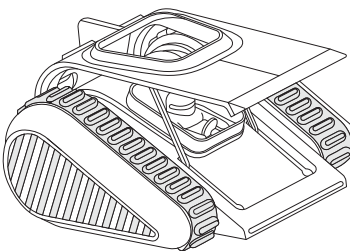  

SAFETY WARNINGS

- Adult supervision required.
- Do not use people or animals as obstacles.
- Never operate your vehicle in inclement weather, rain, or standing water.
- Keep fingers, hair and loose clothing away from wheels while vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING:
CHOKING HAZARD - Small
Parts. Not For Children Under
3 Years.

Model No.: 1014430

Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.
KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.