

CONTENTS AND BATTERY INSTALLATION

Contents

- 1 Baja Street Racer
- 1 Remote Control


Battery Installation

Vehicle:

- The vehicle requires 6 AAA 1.5V batteries (not included).
- Alkaline batteries recommended.
- Make sure the power button on the vehicle is set to o.
- Use Philips-head screwdriver to loosen and remove the battery cover.
- Remove the battery holder and insert batteries as indicated in the diagram.
- Replace the battery holder into the vehicle and screw the battery cover back on.

Remote control:

- The remote control requires 3 AAA 1.5V batteries (not included).
- Use a tool to press and hold the battery release button on the back of the remote control.
- Slide down the battery cover.
- Insert batteries as indicated in the diagram.
- Slide the battery cover back into place securely.

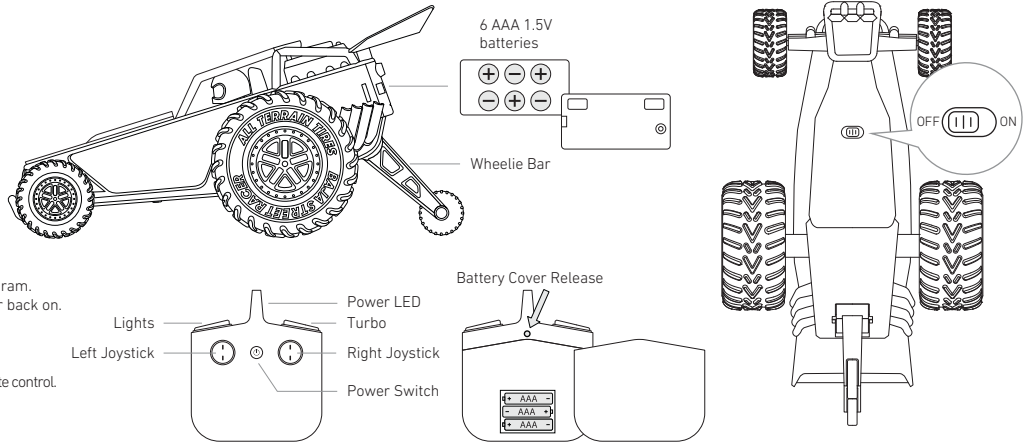

HOW TO PLAY

Pairing

- Power on the remote control by pressing the power button.
- Power on the car by flipping the power switch to the on position (I).
- Wait up to 60 seconds for the light to stop blinking. Once the light says on without blinking, the remote control and car have been successfully paired.
- If the light does not stop blinking within 60 seconds, power off the remote control and car and then repeat steps 1 to 3.
- Place the car on a hard, flat surface and start racing!

Pairing Multiple Vehicles


- Make sure all vehicles and remote controls are powered off.
- One at a time, pair each vehicle with its remote control. Make sure to leave each vehicle and remote control powered on until all the vehicles and remote controls are paired.
- If pairing fails, power off all vehicles and remote controls and then repeat steps 1 and 2.

Controls

- To drive forwards, push forward simultaneously on both the left and right joystick.
- To reverse, pull back simultaneously on both the left and right joystick.
- To turn, push forward on either the left or right joystick without moving the other joystick.
- To spin, push forward on either the left or right joystick and pull back on the opposite joystick.
- Press the turbo button to drive faster and perform tricks.

Wheelie Bar

- Push the wheelie bar up or down to change how your car drives.
 - Setting the wheelie bar in the middle position allows the front wheels of the car to lift halfway.
 - Setting the wheelie bar in the up position allows the front wheels of the car to lift fully.
 - Setting the wheelie bar in the down position will keep the front wheels of the car closer to the ground.
- While the wheelie bar is in the middle or up position, press the turbo button and drive forward to perform impressive wheelies or try to pull off a turbo spin!

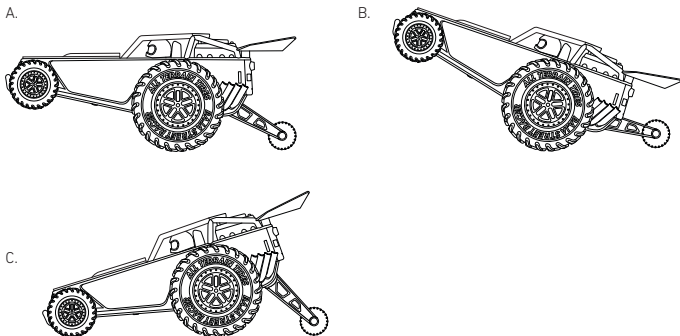

For Multiple Drivers

- Make sure to power off all racer and remote controls.
- One by one, each player should sync their racer and remote control by following the steps listed in the Solo Drivers section. **IMPORTANT:** After syncing each vehicle, make sure to leave each vehicle on until all players have completed the syncing of their vehicles.
- If there are problems syncing any vehicle, all drivers should turn off their remote controls and vehicles and restart the process.

SAFETY PRECAUTIONS

- Do not sit, step, stand, or place objects on the vehicle. It is not designed to support extra weight.
- Adult supervision is recommended when operating the vehicle.
- Always drive responsibly and make sure driving paths are clear. Never drive towards or in close proximity to people or animals.
- Never submerge the vehicle in water and avoid driving the vehicle through water.
- Keep fingers, hair, and loose clothing away from tires and all moving parts while the vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or remote control near sources of heat or under direct sunlight for long periods of time.
- Thoroughly inspect products before every use. If the product appears worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

Battery Warnings

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Sharper Image® name and logos (including the 77 logo and Tomorrow's Tomorrow) are trademarks or registered trademarks. Distributed by and © 2023 MerchSource, LLC, Irvine, CA 92618. All rights reserved.

Model No.: 1017328

WARNING:
CHOKING HAZARD — Small Parts.
Not for children under 3 years of age.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE. Due to continuous product improvements, illustrations in this manual may differ slightly from the actual product.

Printed in China

FOR CUSTOMER SUPPORT, PLEASE CALL

1-800-374-2744