

VIVITAR[®]

ESSENTIAL COLLECTION

BLUETOOTH SPEAKER



WIRELESS



ANSWER
CALLS



RECHARGEABLE
BATTERY



VB60011BT

USER'S MANUAL

 
BC



Important Safety Precautions

When using your Vivitar Bluetooth Speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not use your speaker near water. Clean using a soft cloth or paper towel.
3. Do not place your speaker on any wet surfaces.
4. Do not allow children or the infirm to play with your speaker without adult supervision.
5. Do not expose your speaker to excessive heat, flames or fire.
6. Always press all buttons carefully. Do not manhandle your speaker.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
10. Do not drop, puncture or expose your speaker to excessive trauma.
11. Your speaker is not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Use only the supplied chargers and cables. Unplug this device when not in use for long periods of time or during lightning storms.
14. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts. -Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing your Vivitar Bluetooth Speaker, item VB60011BT. You can use your speaker with iPads, iPhones, iPods and many other types of smartphones and Bluetooth devices to stream music and enjoy hands-free calling. In order to get the best results when using this device, please read this manual first before using.

Package Contents

- Vivitar VB60011BT Bluetooth Speaker
- USB Charging Cable
- AUX Cable
- User's Manual with Warranty Information

Specifications

Bluetooth Specification: V2.1+EDR

Bluetooth Range: Up to 33 Feet (10 Meters)

Charging Input: DC5V/1A

 
Battery Type: 3.7V, 2200mAh Lithium-Ion Battery

Charge Time: Approximately 5-8 Hours


A Quick Look at Your Device

1. Play / Pause / Answer
2. Mode
3. Previous Track
4. Next Track
5. Volume -
6. Volume +
7. Auxiliary Port
8. TF Card Slot*
9. USB Port**
10. Charging Port
- 11.ON/OFF Switch

Top View

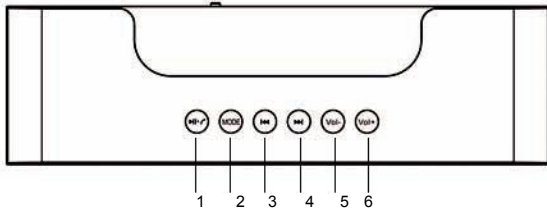

Rear View

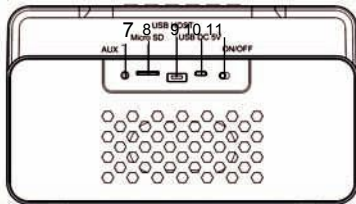 

*The TF Card Reader can read TF or Micro SD memory cards up to 32GB in size. Your speaker can play .MP3, or .WAV music files stored on your memory card.

***You can insert most thumb drives or jump drives into the USB Port. Your speaker can play .MP3, .WAV or .FLAC music files stored on your drive. Note that the USB port cannot be used to charge your electronic devices.

Charging Your Speaker

Your speaker has a built-in, rechargeable lithium-ion battery. To avoid damage, do not attempt to remove the battery. The full performance of the battery is only achieved after a few charging-dis-charging cycles. Charge the battery fully before first use. To do so, follow the steps below:

1. Connect one end of the included USB charging cable to the charging port on your speaker. Then plug the other end of the USB charging cable into a USB port on your computer or a suitable power adapter in order to recharge the internal rechargeable battery.

NOTE: The internal battery of your speaker takes approximately 5-8 hours to charge when completely drained.

2. When the battery is charging, the LED indicator light will turn red. The LED indicator light will turn off when the battery is fully charged. Unplug when charging is complete.

NOTE: Overcharging could reduce the life of the battery. A charged battery will lose its capacity if it is not used on a regular basis.

Important!

To avoid a complete discharge of the battery, charge your speaker at least once every three months.

 
Selecting a Mode

Once your speaker is powered on, you can press the Mode Button repeatedly to choose where your speaker will play music from. You can select from the following modes as shown on the display screen on the front of your speaker:

blue: Select this mode in order to play music from a Bluetooth sound source. Make sure this mode is selected before pairing your Bluetooth audio device with your speaker.



line: Select this mode in order to play music from an audio source connected to the speaker's Auxiliary Port using the included 3.5mm Audio Cable.



usb: Select this mode in order to play music from a thumb drive or similar device inserted into your speaker's USB Port. "SCH or NO D" will appear on the display screen if no drive is inserted.



card: Select this mode in order to play music from a memory card inserted into your speaker's TF Card Reader slot. "SCH or NO D" will appear on the display screen if no card is inserted.



radio: Select this mode to listen to FM radio stations. Use the Next Track and Previous Track buttons to switch stations.



Pairing Your Speaker with a Bluetooth Device

Your speaker can be paired with most Bluetooth devices including iPads, iPhones, iPod Touches, and most smartphones, laptops and tablets. In order to pair your speaker with a phone, follow the steps below:

1. Slide the ON/OFF switch to the ON position to power on your speaker. Make sure that “Blue” appears on your speaker’s display screen to indicate that you are in Bluetooth mode. If it does not, press the mode button repeatedly until you are in Bluetooth mode. Once in Bluetooth mode, your speaker will automatically get ready to pair.
2. Go to the Bluetooth Manager of your Bluetooth device.
3. Search Bluetooth devices and select “Vivitar B60011” to start connecting.
4. Enter “0000” if your device asks for the PIN code.

Note: If a memory card is inserted in the TF Card Reader slot, or a thumb drive is inserted in the USB Port, your speaker will automatically go into the associated mode. Similarly, if an audio source is connected through your speaker’s Auxiliary Port your speaker will automatically go into Auxiliary Input Mode (Line In). Repeatedly press the Mode button to switch between modes.

Using Your Speaker

Powering Your Speaker On and OFF

1. Slide the ON/OFF switch to the ON position to power on your speaker. If you have already paired your speaker to your Bluetooth device, they will automatically remain paired each time you power on your speaker.
2. Slide the ON/OFF switch to the OFF position to power on your speaker.

Listening to Music

- Play/Pause/Answer Button: Quickly tap to play or pause a track.
- Quickly tap the “NEXT TRACK” button to advance to the next song in a playlist.
- Quickly tap the “PREVIOUS TRACK” button to go back to the previous song in a playlist.
- Quickly tap the “VOLUME +” button to increase the volume.
- Quickly tap the the “VOLUME -” button to decrease the volume.

Auxiliary Input Mode

To use your speaker with devices that are not Bluetooth enabled, plug one end of a standard 3.5mm audio cable into the Auxiliary Port on the rear of your speaker. Plug the other end into the headphone jack on your audio device.

Using the Phone Function

- Answering a Call: Quickly press the PLAY/PAUSE/ANSWER button to answer an incoming call.
- Reject an Incoming Call: Press and hold the PLAY/PAUSE/ANSWER button to reject an incoming call.
- Ending a Call: Quickly press the ANSWER button to end a call.

The phone function can only be used when there is a Bluetooth connection between your speaker and phone.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or 0-800-917-4831 in the UK or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

Vivitar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

