

ImpactV

Quick Set-up and User's Guide



 Easy

 Fast

 Social

 Handfree

 Fun

CONTENTS:

.....

User notes	1
1. Preparation before using.....	2
2. Pay attention.....	3
Product Specification	4
Appearance Reference	5
1. On-board buttons.....	5
2. Buttons of Remote Control.....	6
Frame Set-up	7
1. Before set-up.....	7
2. Setting up your wireless network and your connected WI-FI digital frame.....	7
Operation Instruction	10
1. Menu.....	10
2. Settings.....	11
Performance Parameters of the Album	14

User Notes

In order to avoid the consuming of battery for the first-time use of this album, there is a plastic paper of insulation which separates the battery on the cover of control remote of the packing box; please pull the plastic paper down before using. The method of installing and changing the battery: it needs to change the battery when the album is used for a long time or the remote control is not sensitive or the distance of remote control is very close. The press-key of remote control should be placed down and pull out the battery slot of remote control to take out the waste battery; use the “CR2025-3V” new battery of the same size with the “+” electrode up to put in the battery slot and then close the battery slot.



Preparations before using

After unpacking, please check carefully whether the accessories are complete as the pictures showing below:



Please read the User Manual carefully to get the operating methods and notes before using the frame.

Pay attention

- Only working in the defined range of AC/DC power supply. AC adapter inputs 100-240V~50/60Hz and outputs DC of 9V, 1.5A. Do not use power adapter which does not meet the requirement. If not using the album for a long time, please cut off the AC power of the adapter to ensure safety.
- While plugging into or pulling out of the power socket, the plug should be grasped firmly and the power cord shall not be pulled.
- Place the product on a flat and stable surface and pull out the rear stand, the power should not be turned on until the product has been supported stably. Do not put the album on rugged surface which is easy to be vibrated while using it.
- Avoid direct sunlight as well as using under the sunshine, do not use in environment with high temperature nor beside the radiator or heater. Neither using in bathroom nor natatorium under humid temperature. Prevent rain or water drops entering into the album.
- If moving the product from environment of outdoor low temperature to the indoor high temperature, or in case the difference in temperature is tremendous, please wait for 30 to 60 minutes before turning on the product.
- Since the LCD is made from brittle glasses, it is prohibited to knock the display with sharp objects or hand, do not flap nor fling the album while using, in order to prevent breaking the album or personal hurt.
- Do not wipe the display surface with dry cloth or objects including chemical detergent. The display surface could only be wiped lightly by soft cloth.


Product Specification

- LCD Display: 8-Inch LCD screen (800 X 600 pixels)
- Communications: Internal 802.11b/g (WEP64, WEP128, WPA1, WPA2)
- Interface: MMC/SD/MS card slot; USB 2.0 client port
- Memory Size: On-board FLASH memory 256M
- Remote Control for PC-less easy setup
- Touch Border design for easy navigation
- DVD quality video play
- Frame with its own email address, Email video clips to the frame
- Acceleration feature to get photo to frame from social networks and photo sharing sites in minutes
- Simply the best end-to-end platform to share photos and short videos with family and friends far away
- iPhone direct to frame enabled
- Weight: 3.0Lbs

Appearance Reference



On board buttons

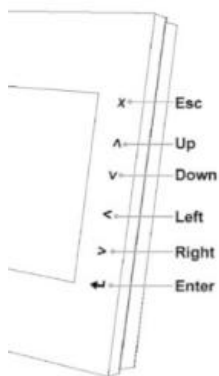

- Esc button: Go back to the upper menu
- Up button: Press it going upwards
- Down button: Press it going downwards
- Left button: Press it going to the left direction
- Right button: Press it going to the right direction
- Enter button: It functions as the OK button under the menu and the settings

Buttons of Remote control

- Power button: Press it to turn on the power and then turn off the power
- Play/Pause button: it functions as the play and pause switch when playing pictures, videos; it can use as the selective play under the status of picture browsing.
- Esc button: Go back to the upper menu
- Del button: Delete files you don't like
- Menu button: The return function can be implemented when processing this button while playing pictures and videos.
- Up button: Press it going upwards
- Down button: Press it going downwards
- Left button: Press it going to the left direction
- Right button: Press it going to the right direction
- Enter button: It functions as the OK button under the menu and the settings
- Volume button: It can adjust the volume when playing videos.
- Mute button: Press it to turn down the sound and then turn up the sound when playing video.

Frame set up

■ Before set-up

Please have the following items ready before you begin the setup of your Connected Wi-Fi Digital Frame:

- Your Connected Wi-Fi Digital Frame, along with the power supply, USB cable.
- Internet connected Wi-Fi network with known SSID (network name), authentication type and the corresponding encryption key (WEP) or Pre-Shared Key, PSK (WPA), if encryption is implemented.


■ STEP1:

Power up your connected Wi-Fi Digital Frame by plugging in the power cord. The below message will appear on the frame indicating that the frame is searching for an available Wi-Fi signal.




■ **STEP2:**

If your frame cannot locate a Wi-Fi signal, it will show a message indicating that no Wi-Fi network is connected. Please press the **Enter** button on your Remote Control with **Scan again**.

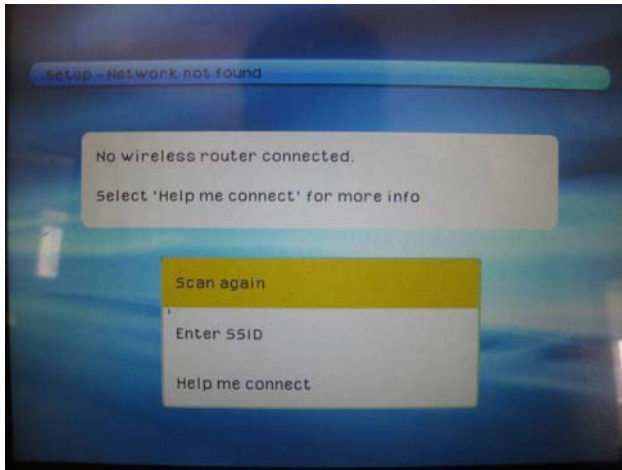


■ **STEP3:**

The frame will scan for any available Wi-Fi networks automatically. Press to highlight your specified Wi-Fi network, and then press **Enter**:

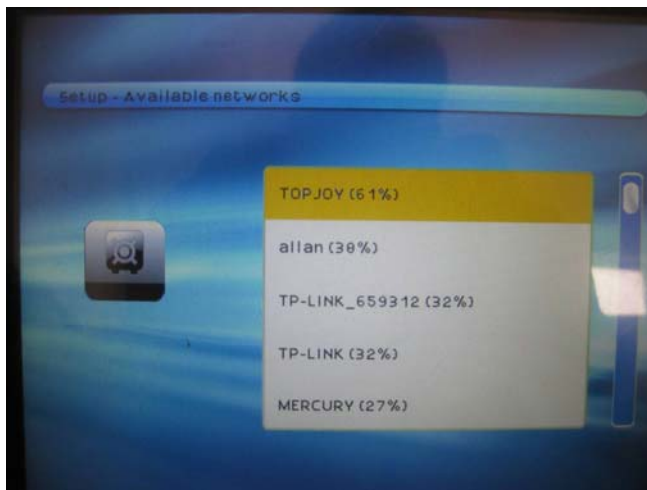


■ Step4:

 Please enter your password by pressing the virtual keyboard buttons displayed on the screen by pressing to highlight your entries and then press **Enter**.

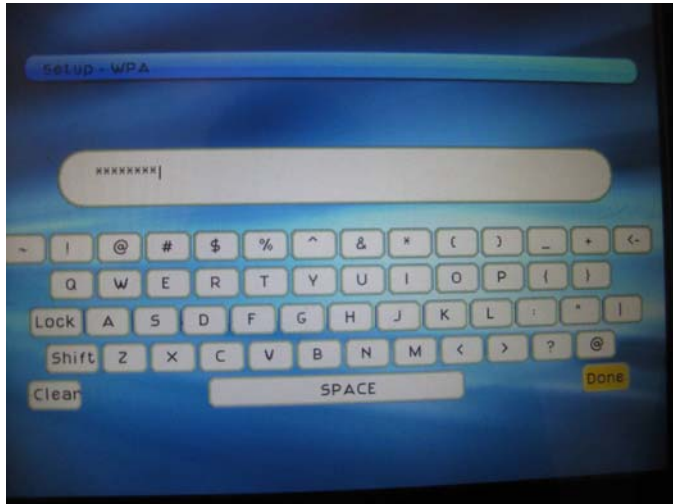

■ Step5:

Once the Wireless Network has been completed, the following message will be displayed on the frame:

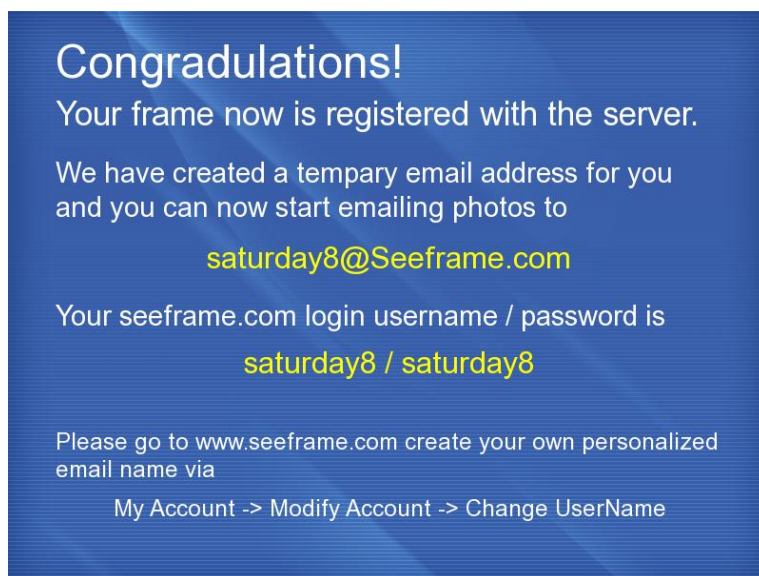


You have now completed the set-up process and are ready to start enjoying your Connected Wi-Fi Digital Frame.

Operation Instruction

Menu


Place the frame well and connect it into the power adapter and the network, the main menu of power-on picture will appear when pressing the ESC button on the board.:

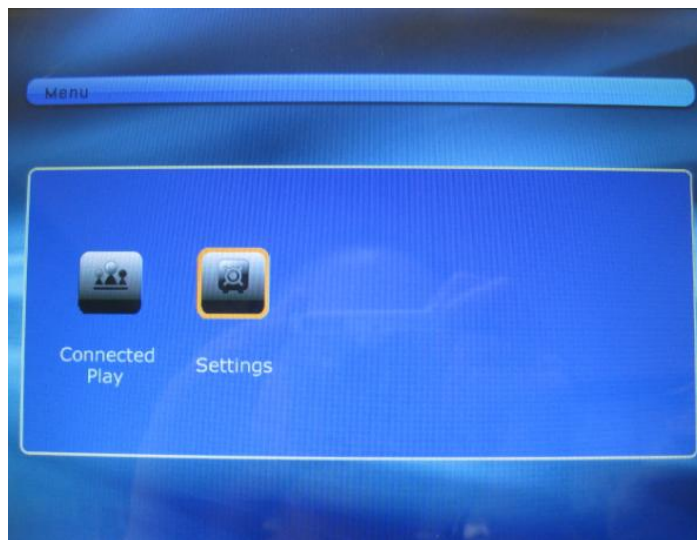

Use the direction key to select the function icon and enter into it by pressing the Enter button.


Connected Play:

Select the picture and video icon at the menu of function selection and press Enter button to enter into picture and video playing.

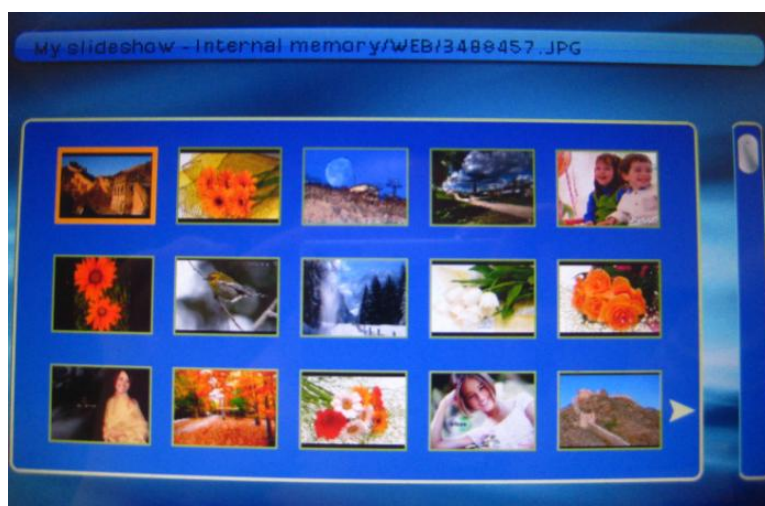 


Settings:

 
- Wi-Fi Networking: Press it to check the network status; scan for wireless networks and then exit wireless networks.

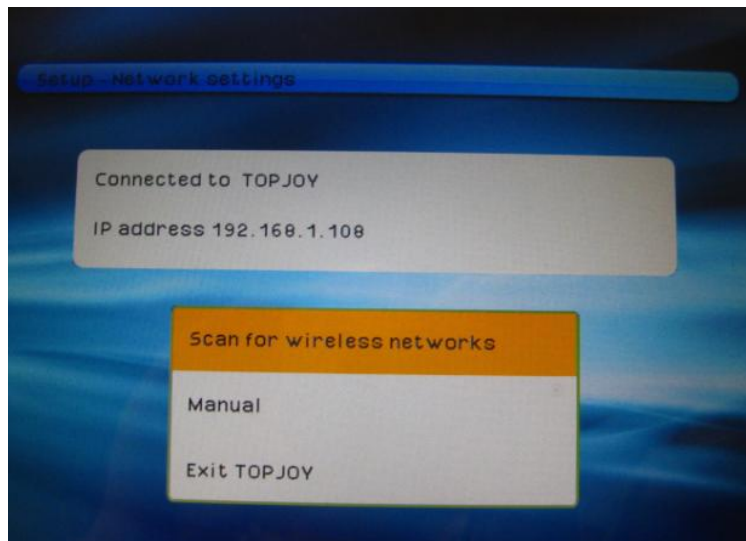

 
- Time and clock:
On/off schedule: Select the Enable button; press up/down button to set the time of power on; press the left/right button to move the cursor; press up and down button to set the time of power off and press Enter after setting.

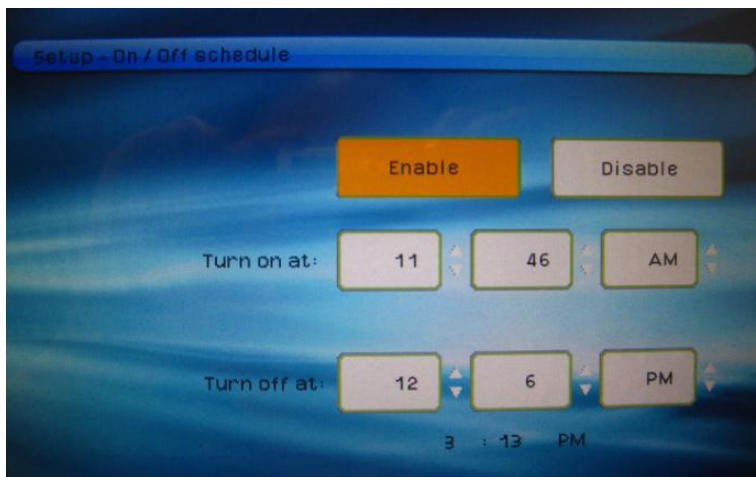

 
Set time: Set the time by pressing up/down button, press the left/right button to move the cursor and press Enter after setting.

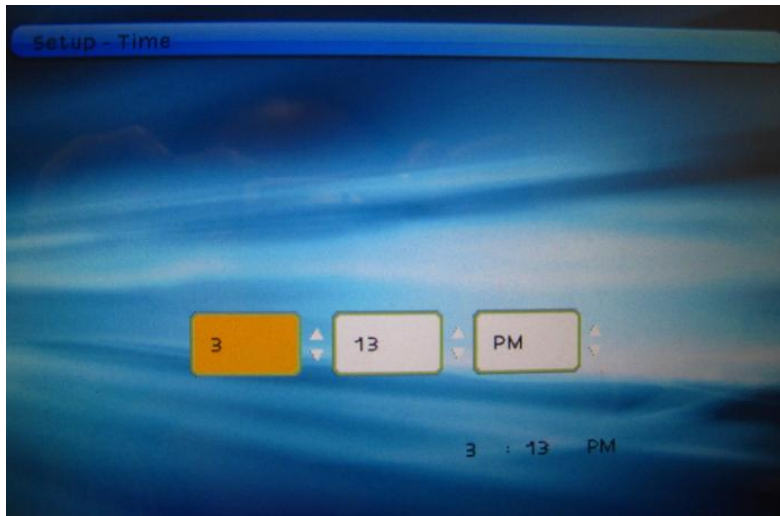

 
- Slideshow Speed: Adjust the slideshow speed by pressing the up/down button. .

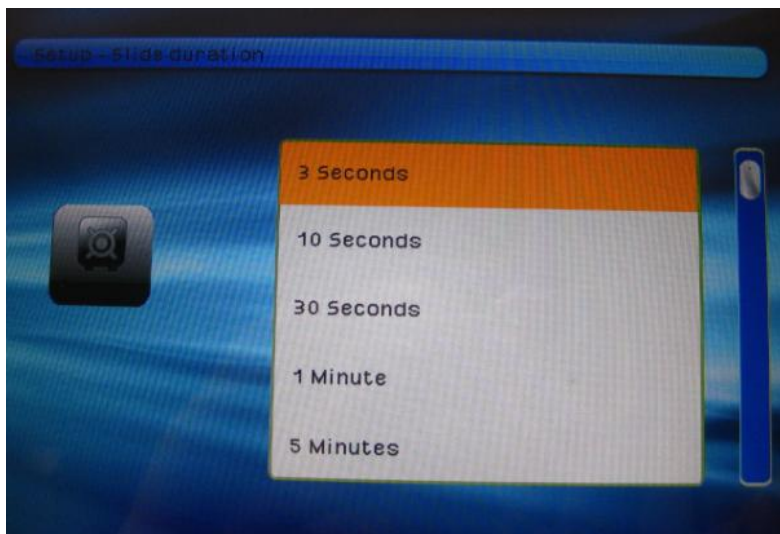

 - Slideshow Effect: There are 5 effects of slide playing; press the up and down to select needed effects and press Enter to confirm.

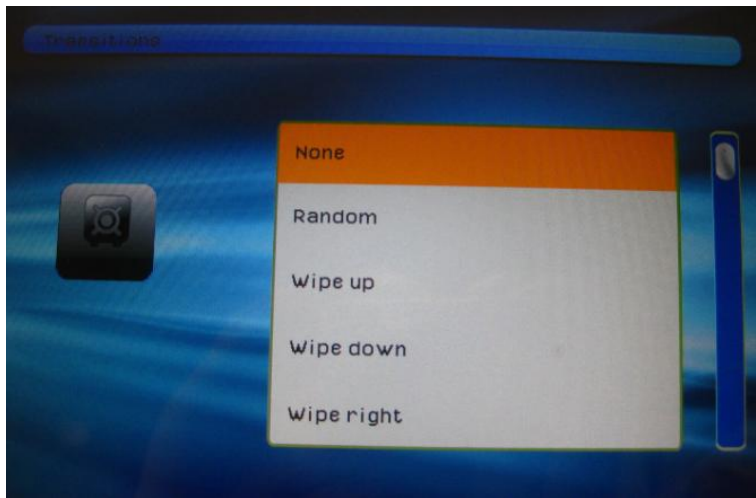

 - Brightness: Adjust the brightness by pressing the left/right button.

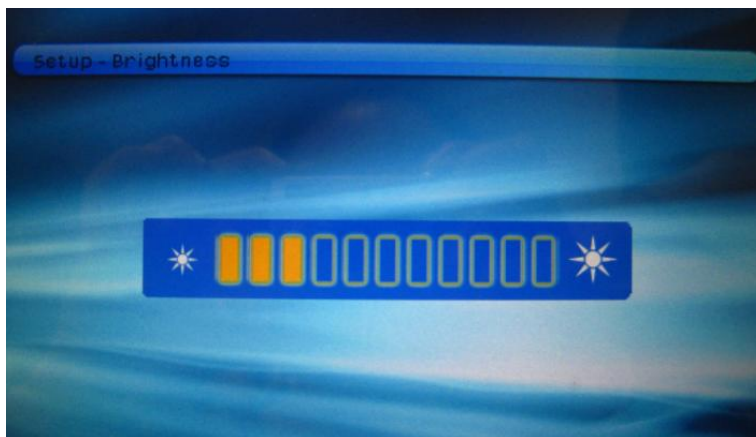

Performance Parameters of the Frame

.....

- 1) LCD Display: 8-Inch LCD screen
- 2) Resolution: 800 X 600 pixels contrast: 4:3
- 3) Communications: Internal 802.11b/g (WEP64, WEP128, WPA1, WPA2)
- 4) Picture format supported: JPEG.
- 5) Video formats supported: MPEG1, MPEG2, MPEG 4 file (AVI, WAV, and WMA).
- 6) Interface: MMC/SD/MS card slot; USB 2.0 client
- 7) Memory Size: On-board FLASH memory 512M (support up to 1GB)
- 8) Remote Control for PC-less easy setup
- 9) Touch Border design for easy navigation
- 10) Email video clips to the frame
- 11) Search & send video clips from Photo bucket, YouTube, and more
- 12) DVD quality video play
- 13) simply the best end-to-end platform to share photos and short videos with family and friends far away
- 14) Power supply: Input: 100-240V~50/60Hz AC; Output: 9V/1.5A DC
- 15) Operating temperature:-4 to 140 degrees F (-20 to 60 degrees C);
Storage temperature: -22 to 185 degrees F (-30 to 85 degrees C).
- 16) Warranty: 12months
- 17) Weight: 3.0 Lbs 18) Certificate: CE/FCC/RoHs

Accessories:

User Manual
AC power adapter
Remote control
USB cable

Shipping Info.

carton size: 53.5*41.6*37cm
quantity/carton: 10pcs
G.W. /carton: 14.2kg
loading qty (20''): 3846pcs

PF Digital Inc.
6819 Elm St, Suite 16
Mclean, Virginia 22101, USA

Customer Care: support@estarling.com
Comments about our products: info@estarling.com
Privacy questions: privacy@estarling.com
Press inquires: press@estarling.com

FCC warning statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.