

## Contents

<b>1. Foreword.....</b>	<b>5</b>
<b>2. Safety Precautions.....</b>	<b>6</b>
<b>3. Introduction to This Phone.....</b>	<b>10</b>
3.1 Keys.....	11
3.2 Display Screen.....	12
3.3 Status Icons.....	12
3.4 LCD Backlight.....	13
<b>4. Quick Introduction.....</b>	<b>13</b>
4.1 Insert the SIM Card .....	13
How To Install.....	13
SIM Card Precautions: .....	14
4.2 Install the Battery and Battery Cover:.....	14
4.3 Charge/Recharge the Battery.....	15
4.4 Use of Battery.....	16
Monitoring Battery Power.....	16
Battery Power Reminder .....	16
4.5 Turn On or Off.....	17
4.6 Use of Password .....	17
PIN Code .....	18
PUK Code.....	18
PIN2 Code .....	18
PUK2 Code.....	19
Call Barring Password.....	19
<b>5. General Functions .....</b>	<b>19</b>
5.1 Dial a Number .....	19
International Call:.....	19
Dial an Extension Number .....	19

Dial a Number Using the Phonebook.....	20
Redial the Last Number.....	20
Speed Dial: .....	20
5.2 Adjust Volume.....	20
5.3 Answer a Call .....	20
5.4 During a Call: .....	21
Call Waiting.....	21
Call Holding .....	21
Answer a Second Call .....	22
Hold/Swap .....	22
Mute/Unmute.....	22
Handsfree.....	22
Built MPTY:.....	23
5.5 Input Methods.....	23
5.6 Keypad Lock .....	24
<b>6. <i>Menu Instructions</i> .....</b>	<b>25</b>
6.1 Phonebook .....	25
Search .....	25
Create a New Entry .....	26
Delete .....	26
Copy.....	26
Setting.....	27
Storage Status .....	27
Speed Dial .....	27
6.2 Short Message .....	27
Write Message.....	27
Inbox.....	28
Outbox .....	29

Drafts .....	29
Voice Mail.....	29
Broadcast Message .....	30
Delete All.....	30
Check Storage.....	30
Message Counter .....	30
Message Setup.....	30
6.3 Call Records .....	31
Incoming Calls.....	31
Outgoing Calls.....	31
Missed Calls .....	31
Delete.....	32
Call Duration .....	32
6.4 Settings .....	32
Display Settings.....	32
Clock Settings.....	33
Call Settings.....	33
Security.....	34
Network Settings.....	35
Shortcut.....	36
Factory Default.....	36
6.5 Profiles.....	36
Standard.....	36
Conference.....	37
Outdoor.....	37
Indoor.....	37
Headset .....	37
6.6 Tools .....	37

Calendar .....	37	
Alarm .....	37	
Calculator .....	37	
Flashlight .....	38	
6.7	38	
FM Radio .....	38	
6.8	Sim Tool Kit .....	39
7.	Battery Information .....	39
7.1	Disposal of Waste or Worn Battery .....	41

## 1. Foreword

### Important Notices

You are strongly recommended to keep a separate written record of all important data. The manufacturer assumes no responsibility for any data lost as a result of accidents, improper use, replacement of batteries or any loss incurred by the third party which may arise from the use of this device.

Our company reserves the right to amend the contents in this manual, and owns the right of final interpretation to the contents, as well.

## 2. Safety Precautions

 Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.



### Safe driving

(1) Do not use the phone when driving. When you have to use the phone, please use the handsfree feature.

(2) Please put the phone safely in the phone stand. Do not put it in the passenger seat or any place from which it may fall down in case of vehicular collision or emergency brakes.



**Turn off during a flight**  
Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



### Turn off the phone when within an area where blasting takes place.

Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.



### Turn off the phone when any dangerous goods are in the vicinity.

Please turn off your phone when you are within a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.



### In the hospital

Please obey related rules or bylaws of the hospital when using your phone. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone,

will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.



#### **Interference**

Each and every phone's performance may be affected due to radio interference.



#### **Professional service**

The phone must be installed or repaired by no other personnel than authorized professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.



#### **Accessories and battery**

You shall use accessories authorized only by the phone manufacturer.



#### **Proper use**

Please use the phone in a normal way. Do not touch the antenna unnecessarily after the phone is turned on.



#### **Emergency call**

You may enter a telephone number (105, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service area. Press the Send Key to call out, and report your position and introduce what has happened briefly. Do not end the call without authorization.

**Note:** Like any other phone, this phone's specific features may not be supported by some network whose coverage or wireless signal is troubled (some networks do not support emergency service calls by 105,

etc. even). Therefore, do not rely solely on this phone in case of some special emergencies (such as medical first aid, etc.). Please consult your local network operator for verification.

**Warning:**

We declare that:

- The product is installed with battery separately in the box. The FCC ID label is placed on Payment Terminal clearly visible to all persons at the time of purchase.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Do not attempt to disassemble the Payment Terminal and battery by yourself. Non-expert handling of the devices may damage them.
- Your Payment Terminal is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic

and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for Payment Terminal employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the Payment Terminal transmitting as its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the Payment Terminal is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 3. Introduction to This Phone

**Front View**



### 3.1 Keys

This phone has the following keys:

Key	Name	Annotations
	Send Key	Dial or answer a call. In Idle mode, press this key to browse the Call History.
	End Key	End a call. Long press this key to turn on or off the phone. In the Function list status, press this key to return to Idle mode.
	Function soft keys	Left soft key and Right soft key; used to execute the operation as instructed by the words on the last row of the screen.
	Navigation / OK key	Used to scroll the function list in the main menu or the items in the Phonebook. In Edit mode, to move the cursor; in Idle mode, to enter a designated function. Use to enter the calculation symbols in the Calculator. OK key: to confirm. In the Idle screen, long press to turn on or off the flashlight.


	<p><b>Keypad</b></p> <p>Used to input numbers, letters and characters. In the Edit screen, press # to change the input method; press * to switch to the Symbol interface. In Idle mode, Long press the # key to switch between the current profile and the Conference mode.</p>
--	---

### 3.2 Display Screen

This phone has only one LCD (master LCD), which comprises three parts:

- 1) Status icons are on the top which shows the signal strength, battery power level, etc.
- 2) Behavioral Text and Graphics Area are in the middle, which shows numbers, words and icons.
- 3) Icon names are shown at the bottom.

### 3.3 Status Icons

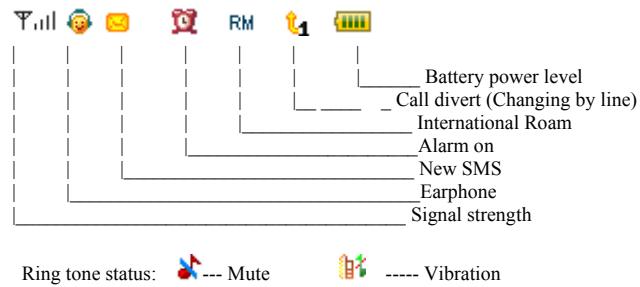

### 3.4 LCD Backlight

The backlight time duration on the display screen and keypad can be set in Display Settings. If you do not press any key within a certain period of time, the backlight will be turned off automatically when the set time duration expires.

## 4. Quick Introduction

### 4.1 Insert the SIM Card

The SIM card stores your phone numbers, PIN (personal identification number), PIN2, PUK (PIN phone unlocking key), PUK2 (PIN2 unlocking key), IMSI (international mobile subscriber identity) codes and network information, as well as Phonebook and SMS (Message service) data, etc.

#### How To Install

1. Put the phone backside up, press the concave part on the battery cover; push the battery back upward to take it out.
2. Locate the SIM card seat, and push the metal side of the SIM card downward into the seat.

**Note:** The cropped corner of the SIM card shall correspond to that of the mark.



Note: When installing the SIM card, make sure the phone is turned off, and disconnected from other devices such as charger, etc.

#### **SIM Card Precautions:**

- (1) Turn off the phone, and wait a few seconds before pulling out or inserting the SIM card again.
- (2) Handle the SIM card with care, as friction or bending may cause damage on the SIM card.
- (3) When the phone is not in use, please keep the SIM card in a place out of children's reach.
- (4) If a wrong SIM card is inserted or the SIM card is damaged, the screen will display "No SIM Card" after the phone is turned on. Take out the SIM card, check if it has been inserted along the correct route, and then insert it into the phone again.
- (5) If the screen displays "SIM Card Damaged", please forward it to the network operator for repair.

#### **4.2 Install the Battery and Battery Cover:**

1. Refer to "How to remove the battery cover" to remove the battery cover.
2. Make sure the metal side of the battery falls at the metal contact area

on the phone, push the battery into the battery seat.

3. Replace the battery cover, push it down until tight.



#### 4.3 Charge/Recharge the Battery

1. Put the phone backside up and find the charger socket at the bottom of the phone.
2. Connect the charger with the charger socket. Note: **The shape of the plug must be consistent with the socket.**
3. Connect the other end of the charger with the power source.
4. After the charging is finished, switch off the power and pull out the plug.



**Notes:**

- (1) If the remaining power in the battery is too low to turn on the phone, you have to charge the phone for a period of time, before the screen displays its charging indicator.
- (2) Make sure that the standard voltage and power in your place match with the rated voltage and power of the charger.
- (3) During the charging/recharging period, you may turn on or off the phone.
- (4) Use the battery only for its intended purpose. Never use a charger or battery that is damaged.

#### **4.4 Use of Battery**

##### **Monitoring Battery Power**

When the battery is low:

- (1) The battery low message displays.
- (2) The empty battery icon blinks.

##### **Battery Power Reminder**

- (1) If the battery is not used for a long period of time, please charge the battery fully before putting it away.
- (2) The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
- (3) If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

(4) Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.

(5) If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger then disconnect and reconnect it to begin charging the battery.

#### **4.5 Turn On or Off**

- 1) Press the End key for a short while to turn on the phone. The screen will show a Power-on display.
- 2) Enter the wallpaper screen.
- 3) Enter the phone lock password when you are requested, by the display screen, to do so, and press the Left soft key to confirm.
- 4) Enter the PIN code as requested and press the Left soft key to confirm.
- 5) Press the End key for a short while, to turn off the phone.

#### **4.6 Use of Password**

Your phone and SIM card have multiple passwords, which help prevent your phone and SIM card from being used illegally.

Enter the correct password when you are requested to enter any of the passwords that are introduced below (marked by a “\*”), then press the Left soft key to confirm. If you enter a wrong password, please press the Right soft key to delete the wrong password first, before entering the correct numerals.

You may use the menu “Settings —> Security” to change the PIN code, PIN2 code and Phone Lock Password.

### **PIN Code**

The PIN code (4-8 digits) is used to prevent your SIM card from any unauthorized use. The PIN code is usually provided together with the SIM card by the network operator.

If the PIN verification function is activated, then you will be requested to enter the PIN code every time you turn on the phone.

If you have entered a wrong PIN code three times, the SIM card will be locked up.

**Warning:** Once you have entered your PIN code wrongly for three consecutive times, the SIM card will be locked up, and will not be unlocked until you enter your PUK code. The PUK code is usually kept by the network operator.

### **PUK Code**

The PUK code (a password used to crack the PIN code, 8 digits) is used to crack a locked PIN code. The PUK code is provided together with the SIM card by the network operator. If not supplied, please contact your network operator. In case you have entered your PUK code wrongly for 10 times, the SIM card will lose its effect; in such a case, please contact your network operator to replace your SIM card with a new one.

### **PIN2 Code**

The PIN2 code (4-8 digits) is provided together with the SIM card, and used to set such functions as “Call Cost” and “Fixed Dial”, etc.

To find out if your SIM card supports such functions, contact your network operator.

If you have entered your PIN2 code wrongly for 3 times, the PIN2 code will be locked, and not be cracked until you enter the correct PUK2 code.

## PUK2 Code

The PUK2 code (a password to crack the PIN2 code, 8 digits) is used to crack a locked PIN2 code. The PUK2 code is provided together with the SIM card by the network operator. If not supplied, please contact your network operator. In case you have entered your PUK2 code wrongly for 10 consecutive times, you will be unable to use those functions that can not be activated without the PIN2 code. To use such functions, contact your network operator and replace the SIM card with a new one.

## Call Barring Password

To activate call barring it is necessary to use the Call barring password. When you apply for this specific network function, you may acquire this password from your network operator.

## 5. General Functions

### 5.1 Dial a Number

- 1) In Idle mode, enter an area code and telephone number, and press the Send Key  to dial the number.
- 2) Press the End key  to end the call.

#### International Call:

Long press the key  , the screen shows a “+” symbol. Enter the country code, area code and telephone number, and press the Send Key  to call out.

#### Dial an Extension Number

After entering the operator's number, long press the key  , the

screen shows a “p” symbol, then enter the extension number, and press the Send Key  to call out.

#### **Dial a Number Using the Phonebook**

- In Idle mode, press the Left soft key to access the Phonebook List. Search for your desired contact. Press the key containing the initial letter of the name you want, and then press Up/Down Key to find the desired contact.
- Press the Send Key  to dial the number.

#### **Redial the Last Number**

- In Idle mode, press the Send Key  to display the call records.
- Press the Left/Right  to displays the Incoming calls, Outgoing Calls and Missed Calls. Use the Up/Down Key to select your desired number.
- Press the Send Key  to dial the number.

#### **Speed Dial:**

- Edit the speed dial numbers in the “Phonebook — Speed Dial”.
- Press the numerals (2~9) on the Speed Dial list in Idle mode for a short while to dial your desired number preset in the Speed Dial list.

#### **5.2 Adjust Volume**

During a call, you can press the Left and Right key to directly adjust the volume.

#### **5.3 Answer a Call**

- 1) When someone is calling you, the phone will give a ring tone or will

vibrate.

- 2) Press the Send Key  to answer the call.
- 3) To end the call, you can press the End key .
- 4) To turn down a call, you can press the End key  directly or the Right soft key.

**Note:** If the caller ID can be identified, the phone will show the telephone number of the caller (if this telephone number has been stored into your Phonebook, then the caller's name will be displayed).

#### 5.4 During a Call:

During a call, you can use multiple control functions.

##### Call Waiting

If the network supports the Call Waiting function and you have activated the Call Waiting service, you will hear a beep during a call if a third person calls you.

##### Call Holding

If the network supports the Hold function, you can make another call when talking to someone:

- Directly enter a number or take the phone number you desire from the Phonebook, press the Send Key  to make a second call.
- The first call is held automatically after the second call is connected. You can press the Right soft key to swap between them.

### Answer a Second Call

- Press Send Key  to answer the second call, and the first call (on line) is held automatically; As for how to proceed after you receive the second call, please refer to “Hold/Swap”.

**Note:** This function needs the Call Waiting function activated.

- Press End key  or press the Right soft key  to turn down the second call and continue with your current call.

### Hold/Swap

When the first call is held, you are answering a second call:

Press the Right soft key to swap the first call for talking, and the second call is automatically put on hold.

You can press the Left soft key to enter the option list screen. Select Mute, Handsfree, Build MPTY, Release All or Phone Book to execute.

### Mute/Unmute

This function can turn off or on the phone's microphone and other microphone connected functions. The “Mute” function can prevent the person whom you are talking to from hearing your voice.

During a call, press the Left soft key  to enter the Option list. Select “Mute” to turn off your phone. Press the Left soft key again to select “Unmute” to turn it on.

### Handsfree

This function can turn off or on the phone's loudspeaker. During a call, press the Right soft key to turn on the loudspeaker. When the

loudspeaker is on, press the Right soft key again to turn off the loudspeaker, and go back to the normal talking status.

#### **Built MPTY:**

If the network supports the MPTY function, you can make a conference call.

When you are answering a call and another call is on hold, you can press the Left soft key to enter the option list to select 'Built MPTY' to build a conference call.

When the conference call is activated, you can press the Left soft key to enter the options list to select Browse MPTY to view the members. You can press the Left soft key to enter the option list to select Split to split the conference call or select Disconnect to end the selected call.

When the conference call is activated you can press the Right soft key to hold the conference call and dial another call.

When there is an incoming call, you can press the Send key to answer it and the conference call is put on hold automatically.

#### **5.5 Input Methods**

This product is easy, convenient to use, and allows you to enter English words, numerals and symbols.

You can enter words in English, including any letter, numeral, punctuation mark or any special symbol into the phone.

#### **Switch Input Methods**

In the Editing mode, press the key  to switch between input methods:



Press the key to go to the Symbol selection screen.

**Eng** Intellectual English Input Method: When entering a word, you only need to enter the target key once. The phone will present those possible matches by using the association function. You can press the Left/Right key to select your desired word, and press the Left soft key to select the cursor position.

E.g. to enter the word “welcome”, you only need to press the keys containing the letters “w”, “e”, “l”, “c” for the word will appear on the screen.

**abc** When you use this input method, you shall press the letter key you desire:

Press once to enter the first letter.

Press twice to enter the second letter.

Proceed likewise.

**ABC** The same method as above.

**Abc** Press once to enter the first capital letter, then small letter.

### Numeric Input

**123** In this input method, enter your desired numerals.

## 5.6 Keypad Lock

In Idle mode, long press the key  to lock the keypad.

To unlock, press the  key and then press the  key to unlock.

## **6. Menu Instructions**

The following context lists out the brief explanations to each function this phone offers.

### **6.1 Phonebook**

#### **Search**

This function allows you to browse the telephone records in the Phonebook in alphabetic order of the initial letters of the names. By using this function, you can search for the desired number in the Phonebook.

Select “Search” in “Phonebook” to enter the index list screen, press the key including the letter to display the relative record quickly.

Press Up/Down Key to browse the items then press Send  Key to make a call.

After pressing the “Option” soft key toward an item, you can proceed as follows:

- (1) Dial: Dial the phone number you selected.
- (2) Send Message: In the Options list, select “Send message” to go to the Edit Message page; meanwhile, your selected telephone number is automatically brought into the message and taken as the telephone number of the recipient.
- (3) Edit: Edits records in the Phonebook.
- (4) Delete: Deletes a record from the Phonebook.
- (5) Create: Add a new record.

(6) Copy: If you have selected a telephone number in the Phonebook, select “Copy” to copy this number to the SIM card. If you have selected a telephone number in the SIM card, then select “Copy” to copy this number to the phone.

(7) Move: If the concerned number is stored in the SIM card, then it will be moved into the phone; and vice versa.

(8) Storage Status: Displays the occupied capacity and total capacity of the Phonebook and those in the SIM card.

#### **Create a New Entry**

This function allows you to add a new number in the Phonebook in either the SIM card or the phone. Proceed as follows:

Now let's cite an example to explain how to add a new record:

- 1) Select “Create” in the menu of Phonebook;
- 2) Select “Save to SIM” or “Save to Phone” to enter the edit screen.
- 3) Input the name and the number.
- 4) If you enter anything wrong, please press the right soft key to clear the wrong input.
- 5) Press the “Accept” soft key to finish the entire process and save the new record.

#### **Delete**

To select whether to Delete One by One or Delete All.

#### **Copy**

This function allows you to duplicate a record from the Phone to the SIM card or from the SIM card to the Phone.

## Setting

Includes Fixed dial and Service Dial No. These two functions need network support. Please consult your local network operator for verification.

## Storage Status

This feature displays the occupied and the total capacity in the phone Phonebook and SIM card.

## Speed Dial

First edit the speed dial numbers and then long press the numerals (2~9) key in Idle mode for a short while to call out.

## 6.2 Short Message

- 1) In Idle mode, press the Left soft key to enter the Main Menu.
- 2) Press the Up/Down and Left/Right key to select "Short Message." Press the Left soft key to enter the SMS menu list screen. Select between Write Message, Inbox, Outbox, Drafts, Voice Mail, Broadcast Message, Delete All, Check Storage or Message Counter, Message Setup, and then press the "Select" soft key to execute the correlative operation.

## Write Message

When editing a message, you can press the key  to switch between input methods.

Firstly, enter the message content and press the key  to insert symbols after that, you can do as follows:

- 1) Press the "Option" soft key to select the following options:

- (1) Send: Send a message without saving.
- (2) Send and Save: Send a message then save it in the Outbox.
- (3) Send to Many: Send a message to many recipients.
- (4) Insert Number: Insert a number from the Phonebook into the contents.
- (5) Insert Template: Insert preset phrases into the contents.
- (6) Save: Save the message in Drafts.

**2) Select “Send and Save”, then enter the telephone number of the recipient or select a telephone number from the Phonebook. Press the Left soft key to send the message.**

#### **Inbox**

After a new message is received or the full capacity of the SMS memory is occupied, it will display the icon  on the top of the screen (which will blink when the full capacity of SMS memory is occupied). If the full capacity of the SMS memory is occupied, you cannot receive any new message any more. Please delete unnecessary messages in such a case.

- 1) Select “Inbox” to displays received messages in the Inbox. The one which marked with an icon  is unread.
- 2) Press the Left soft key to read the current message.
- 3) When reading messages, press the “Option” soft key to select the following options:
  - (1) Text Reply: Allows you to reply to the message according to the telephone number of the message forwarder.
  - (2) Delete: Allows you to delete the message.
  - (3) Extract Number: Allows you to save the telephone number.

(4) Forward: Allows you to forward it to your desired destination.

(5) Edit: Allows you to edit the original text message.

(6) Dial Back: Dial the telephone number back.

### **Outbox**

1) After entering the “Outbox”, sent messages displays those already out or unsent. Each message sent out is marked by a sent icon; and every message not sent successfully is marked by an unsent mark.

2) Press the “Select” soft key to read the current message.

3) When reading a message, you can press the “Option” soft key to select different options.

### **Drafts**

After entering Drafts, only messages saved in Drafts will be displayed.

### **Voice Mail**

In the “Voice mail” menu, press the Up/Down key to select “Listen to Voice Mail Message” or “Voice Mailbox Number”, press the “Select” soft key to enter.

1) Listen to Voice Mail Message: This function allows you to listen to voice mails from the Voice Mail Server.

2) Voice Mailbox Number: Set the voice mail server number.

**Note:** This is a service provided by the network, similar to that of an answering machine. This function allows the caller to leave a message when you are unable or not willing to answer a call. The telephone number of your Voice Mail Server is stored in the phone. For details, please contact your network operator.

### **Broadcast Message**

This network-based service allows you to receive various kinds of text messages regarding weather conditions or traffic news. For details, please contact your network operator.

- 1) Topic: You can select Topic, Add Topic, Edit Topic or Delete Topic
- 2) Language: This network-based service allows you to select a desired language to display the broadcast information.
- 3) Service Status: Turns on or off the Broadcast Message.

### **Delete All**

Select “Delete all” to Delete All, Delete Inbox, Delete Outbox or Delete Drafts.

### **Check Storage**

View the capacities occupied by Messages and total capacities in the SIM card and Phone. The concrete capacities are determined by the contents of Messages, Phone and SIM card.

### **Message Counter**

To view the sent and received counts and to reset counter.

### **Message Setup**

It includes the three items: Storage Media , Service Center, Protocol Type, Validity Period, Status Report.

- 1) Storage Media  
To set where the messages are to be saved (SIM Preferred or Phone Preferred).
- 2) Service Center

You can save or edit the service center number.

3) Protocol Type

To set message type as text, fax or email.

4) Validity Period

To set the validity period of the messages.

5) Status Report

After activating the delivery report function, you can receive a report from the SMS center regarding whether or not a message is sent successfully.

### 6.3 Call Records

In Idle mode, press the Left soft key to enter the Main Menu, press Up/Down and Left/Right key to select “Call Records”.

#### Incoming Calls

After entering this function, press Up/Down key to browse the records. You can press the Left soft key to select: Dial, Send Message, Send Number, Edit Number, Save Number, Delete, Delete All or Details.

**Note:** In Idle mode, press the Send Key to view the Call Records directly, press the Left or Right key to switch among Incoming Calls, Outgoing Calls and Missed Calls.

#### Outgoing Calls

The operation is the same as **Incoming Calls**.

#### Missed Calls

The operation is the same as **Incoming Calls**.

### **Delete**

You can delete Incoming Calls, Outgoing Calls, Missed Calls, or delete all call records.

### **Call Duration**

After entering this function, you can view the outgoing calls duration, incoming calls duration, last call duration or clear all calls duration.

### **6.4 Settings**

In Idle mode, press the Left soft key to enter Main Menu. Press Up/Down and Left/Right key to select “Settings” to enter.

#### **Display Settings**

Select “Settings→ Display Settings”.

##### **1) LCD Contrast:**

In the LCD contrast screen you can press the Left or Right key to adjust the LCD contrast. Press the Left soft key or OK key to confirm.

##### **2) Back Light:**

Press the Up/Down key to select. Press the Left soft key or OK key to confirm. If you do not press any key within a certain period of time, the backlight will turn off automatically when the set time duration expires.

##### **3) Wallpaper:**

Built-in pictures are available for you to choose from. Press the Up/Down key to select, press the Left soft key or OK key to view. In the view screen you can press Up/Down key to browse the last or next wallpaper, and press the Left soft key or OK key to confirm.

##### **4) Greeting Text:**

Press the Up/Down key to select Enable or Disable, press the Left soft key to confirm. Select “Enable” to edit the text, and then press the Left soft key to save it. The greeting text will be displayed on the Start-up screen when it turns on.

5) Date Time Display:

Press the Up/Down key to select Enable or Disable. Press the Left soft key to confirm. When you enable this function, the date and time will be displayed on the idle screen.

### **Clock Settings**

Select “Settings→Clock Settings”.

1) Date & Time Settings:

You can set time and date in here.

2) Date Display Format:

You can set the date format. DD means date, MM means month, and YYYY means year.

3) Time Display Format:

You can set a 12-hour or a 24-hour system.

### **Call Settings**

Select “Settings→Call Settings”.

1) CLIR:

You can press the Up/Down key to set Default Setting, On or Off. Press the Left soft key or OK key to confirm.

2) Auto Redial:

You can press the Up/Down key to Enable or Disable this feature. Press

the Left soft key or OK key to confirm.

3) Any Key Answer:

You can press the Up/Down key Enable or Disable this feature. Press the Left soft key or OK key to confirm.

**Phone Settings**

Select “Settings→ Phone Settings”.

1) Language:

Display optional languages. You can select Automatic or English and then press the Left soft key or OK key to confirm.

2) Keypad Lock:

You can press the Up/Down key to set Disable, 5, 15, 30, 60 Seconds, and then press the Left soft key or OK key to confirm.

3) Own Number:

You can input the name and number of the owner, and then press the Left soft key or OK key to confirm.

**Security**

Select “Settings→ Security”.

1) Power ON Pin:

You can choose On or Off and you can also change the PIN code. If you have set the SIM Lock as “On”, every time when you turn on the phone, you have to enter the PIN code. If you have entered a wrong code for three times, you will be requested to enter the PUK code (personal unlocking key). The PUK code is used to crack and change the locked PIN code. If the PUK code is lost or not supplied at all, please contact your network operator.

**2) Change PIN2:**

You can change your PIN 2 code. If you don't know the PIN 2 code, please contact your network operator.

**3) Phone Lock:**

You can choose On or Off, and you can also change the Phone password. By using this function you can lock or unlock your phone. To do so, enter the password to lock or unlock. When your phone is locked, you will be requested to enter the phone lock password when turning on the phone.

**Network Settings**

Select "Settings→ Network Settings".

**1) Call Waiting:**

When this function is activated, the network will inform you of any incoming call while you are in call conversation. For details, please contact your network service provider.

**2) Call Divert:**

This function allows you to transfer an incoming call to another specified phone number. For details, please contact your network service provider.

You can set the incoming call to be transferred to another preset phone number in different cases .

**3) Call Barring**

In the call barring submenu, you can raise the safety level by setting call barring groups. Some network providers may not offer this function. To use this service please contact your network provider. They will provide a four-digit password to allow you to use this function.

**4) Network Select Mode**

With this function, you can search the desired network and set network

search modes etc.

#### **Shortcut**

You can set a few items to be the normally used functions. In Idle mode, press the Down key  to enter the shortcuts list, press the

Up/ Down key  to select one of the functions and select to enter.

#### **Factory Default**

Select “Settings—> Factory Default”, enter the phone lock password to reset to factory default settings.

#### **6.5 Profiles**

In Idle mode, press the Left soft key to enter the Main Menu. Press Up/Down and Left/Right key to select “Profiles.”

#### **Standard**

##### **1) Set as default**

Select the “Set as default” and press the Left soft key to activate this setting.

##### **2) Personalize**

(1) Ring Tone: You can select your desired tone as the incoming call ring.

(2) SMS Alert Tone: You can select your desired tone as SMS alert ring.

(3) Alarm Tone: You can select your desired tone as the alarm ring.

(4) Alert Type: You can select single ring or repeat ring. Single: the ring tone is heard once only. Repeat: the ring tone repeats uninterruptedly.

(5) Ring Tone Volume: Press the Left or Right key to adjust the volume.

(6) Key Volume: Press the Left or Right key to adjust the volume.

(7) Vibration: You can choose to enable or disable.

#### **Conference**

For details, please refer to “Standard”.

#### **Outdoor**

For details, please refer to “Standard”.

#### **Indoor**

For details, please refer to “Standard”.

#### **Headset**

For details, please refer to “Standard”.

### **6.6 Tools**

In Idle mode, press the Left soft key to enter the Main Menu, press UP/Down and Left/Right key to select “Tools” to enter.

#### **Calendar**

The **Calendar** menu will display the calendar of the current month with the current date marked by other background frame. Press the **Up**, **Down**, **Left**, **Right** keys to change the date and the calendar information on the screen will also be changed.

#### **Alarm**

At most three alarms can be set in this mobile phone (the alarm will still be available even if the power is off)

#### **Calculator**

The phone provides you a calculator with four basic functions so that you

can make simple calculations.

Attention: The accuracy of the calculator is finite, thus it may produce some rounding error, especially under the circumstance of indivisibility. If the calculation exceeds the limit, the display area will express with the letter "E".

#### **Flashlight**

In this function you can press Up or Down key to select On or Off and press the Left soft key or OK key to turn on or turn off the flashlight.

In Idle screen you can also long press the OK key to turn on the flashlight or turn it off.

#### **6.7**

##### **FM Radio**

Enter the FM radio interface and press the Left or Right key to search the channel, and the frequency is on display. Press the Up or Down key to adjust the volume. Press "\*" or "#" key to select the saved channel circularly to listen, you can also press the number key 1~9 directly to listen to the radio. Press the Right soft key to exit.

On the FM Radio interface, press the left soft key to access the following options:

**Background Play:** Enter the background play mode.

**Channel List:** If you have already saved radio channels, you can move the cursor to the channel you would like to listen to. You can also select Edit in the options to edit the list.

**Set Frequency:** If you know the frequency of the radio channel you would like to listen to, enter the frequency and press the Left soft key or OK key to listen.

**Save Channel:** Save the channel which you are listening to.

**Auto Search:** The radio can search the channels automatically and ask you whether to save or not.

**Note:** The headset functions as the antenna of the FM Radio, you must connect the headset to the phone before listening.

#### 6.8 Sim Tool Kit

If your network operator offers such a service and you have subscribed for it, you will be able to use this function. If you insert a SIM card with a value-added (STK) function, you can use your desired service after selecting the STK service function.

### 7. Battery Information

- Please do not discard the battery into fire, otherwise it might cause fire or crack on the battery.
- When installing the battery, please do not force it in, otherwise leakage, overheating, crack and fire might occur.
- Please do not use hardware such as electrical wires, needles, etc, or place the battery with hardware such as necklace, etc. It might lead to leakage of liquid, overheating, cracking, and even fire.
- Please do not weld the pole tip of the battery, otherwise it might lead to the leakage of liquid, overheating, cracking, and even fire.
- If the liquid of the battery comes in contact with the eyes, it might cause ablepsia. At this time, please do not knead the eyes

with your fingers. Just flush the eyes with clean water and see a doctor immediately.

- Please do not disassemble or refit the battery, otherwise it might lead to the leakage of battery liquid, overheating, cracking, and even fire.
- Please do not place or use the battery near the fire, heater or other places with high temperatures. It might lead to the leakage of liquid, overheating, cracking, and fire.
- Stop using the battery and replace it with a new one when abnormal problems such as a rise in temperature, change of color or deformation occurs during use, charge or preservation.
- If the liquid of the battery spills onto your skin or clothes it might burn your skin. Please flush the liquid with water immediately. If necessary, please see a doctor.
- If the leakage of the battery produces a strange odor, please remove the battery immediately.
- Please do not make the battery humid, otherwise it might cause overheating, smoking, and erosion to the battery.
- Please do not discard the waste battery into general household garbage. Please deal with the waste battery according to provisions where they are definitely made.
- Please do not use or place the battery in direct sunlight. It might lead to the leakage of the battery liquid, overheating and deterioration in performance thus shortening the service life of

the battery.

- Please do not charge the phone continuously for over 24 hours.
- Please place the battery in a cool place where the sunshine can't reach it directly and the ventilation is good.
- The lifespan of the phone battery is limited. The service duration will reduce gradually after frequent charges. If the battery has been charged for several times and proved to be useless, that means the service life of the battery is over and you should replace it with a new one.

#### 7.1 Disposal of Waste or Worn Battery

When the battery in the phone can not be used any more, please replace it with a new one and keep the waste or worn battery in a proper place, before handing it to the competent organization for disposal.