

BTD02

## Wireless Portable Speaker USER MANUAL



### Preface

#### Dear Customer

 
Thank you for choosing UMI-BTS2 Wireless portable speaker. Please read the user manual carefully for proper instruction to maximize the advantage of our product. UMI wireless speaker is well designed and support wireless and Aux-in function. It provides you the best enjoyment of music at home, outdoors or in working place. The perfect sound and wide compatibility of the UMI-BTS2 will lead you to a wonderful music world.

### Precautions

#### Battery Notices:

- The device is powered by a built-in rechargeable Li-ion battery. Please charge the battery at least 8 hours before your first time use.
- Rechargeable battery should be charged under the adult supervision.
  - Use only the supplied USB cable to charge the battery. Improper charging may damage the battery and the device.
  - Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.
  - Should a battery leak, the device may become damaged. Clean the battery compartment immediately, and avoid touching your skin before washing your hands.
  - Avoid storing the battery in extremely hot or cold environment. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
  - Do not dispose battery in fire as they may explode. Battery may also explode if damaged. Please dispose them according to local regulation. Do not dispose them as household waste.
  - Do not drop, crush, or apply excessive force to the device.
  - Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places as it is not waterproof.
  - Clean the unit with a soft cloth or damp chamois leather. Never use solvents.
  - The unit can only be opened by qualified person.

### Product Schematic

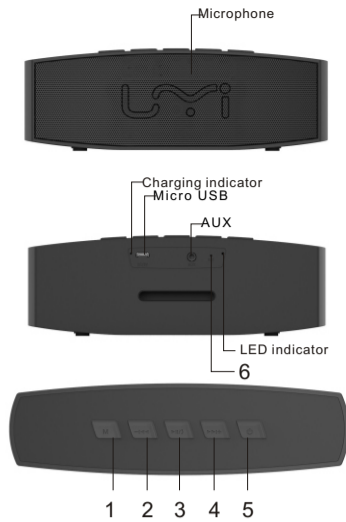

#### 1.M button:

Short press to switch wireless function, Audio-in Modes (Only when other devices connected to line-in port, short press can switch to Audio-in mode). In wireless mode while playing music, long press for disconnecting with current device, back to waiting for pair mode, when coming call was answered, long press for switching voice from portable speaker to smart phone.

#### 2. ≡◀◀

Long press for decreasing the volume, and short press for the previous music.

### 3. ≡▶▶

In wireless functional mode, short press for play/Pause, when coming calls, short press for answer/hang up call, long press for reject call. In wireless function mode while no coming call, double-click for re-dial last dialed phone number.

### 4. ≡▶▶

Long press for increasing volume, short press for next music.

### 5. ⏻

Long press for ON/OFF;

### 6. Reset

If the unit is freezing, use a thin object (like the end of a paper clip) to press the RESET button in the hole, then press POWER button to restart.

### Using Procedure

- Pairing UMI-BTS2 to your Smartphone (should within 10 meters of your Speaker)
- Activate pairing mode of UMI-BTS2 by switching the speaker "ON", LED indicator fast flashing in blue.
- At this moment, the device is in pairing mode and can be searched.
- Select "UMI-BTS2".
- If request the PIN, please enter "0000".
- The blue LED will flash in blue which indicates the successful connection; if fail to connect, please restart the device.

### UMI Speaker Specification

- Product Model: BTD02
- Standard: 2.1
- Speaker Power: 10W (5W\*2)
- Output Power: 6W (3W\*2)
- Battery: 1000mAh
- Frequency Response: 150HZ~12KHZ
- Power Supply: Lithium battery or USB cable
- Audio Source: iPhone, iPad, Smartphone, PC, Notebook, MP3, MP4, etc
- Function Spec.: Wireless, Microphone, Line-in

### Packaging Details

- Wireless Speaker\*1
- USB Charging Cable\*1
- User Manual\*1
- Aux Cable\*1

### Q&A

- Q: Why unable to pair up with other devices?  
A: 1. Please check if the speaker is still under searching status or restart it; 2. Please check if there are too many devices in the around that cause difficulty in connection.
- Q: Why the sounds rather low or distorted?  
A: 1. Please check the device's volume and then adjust it to a proper level; 2. Recharge the battery.
- Q: Why the music stops from time to time?  
A: Please check whether the speaker's effective transmission range is exceeded or there is an obstacle standing between the speaker and the device.
- Q: Why the indicator remains off?  
A: 1. It suggests the battery power drops quite low and retry once being recharged; 2. Restart it.
- Any doubts, please feel free to contact us.

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.