

372\*160mm(折叠后尺寸62x160mm),材质:80g书纸



NS-SPBTWT\_118-0037\_QSG\_V1\_EN.ai 1 4/25/2018 7:54:40 AM



INSIGNIA

## QUICK SETUP GUIDE

# Portable Bluetooth Speaker with Walkie-Talkie

NS-SPBTWT

 
### PACKAGE CONTENTS

- Speaker with walkie-talkie (2)
- Carrying straps (2)
- USB cables (2)
- Quick Setup Guide


### FEATURES

- Wirelessly stream from any Bluetooth device
- True wireless stereo (TWS) connects two speakers together to play left- and right-channel audio separately
- Rechargeable battery lasts up to 12 hours for music playback and 8 hours when using the walkie-talkie
- Water-resistant body protects from rain and liquids (not water-proof, do not submerge)
- Speaker phone for hands-free calls


#### Front

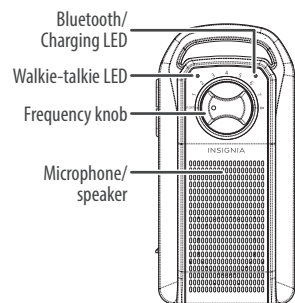

#### Left side

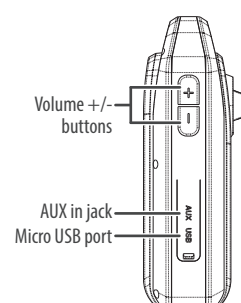 

#### Right side

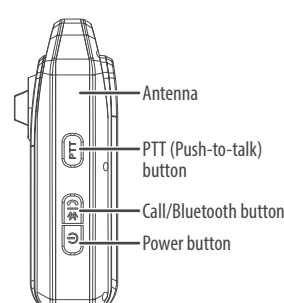 

Before using your new product, please read these instructions to prevent any damage.

### IMPORTANT SAFETY INSTRUCTIONS

 
- Read these instructions.
  - Follow all instructions.
  - Never expose the product to fire as this could result in personal injury.
  - Do not store the product in an extremely cold or warm environment.
  - Never dismantle the product.
  - Never let children play with the product.
  - Do not expose the speaker's battery to excessive heat such as sunshine, fire or like.
- Note:** The battery in this speaker cannot be replaced by the user.

### CHARGING YOUR SPEAKER

- 1 Lift the tab to open the rubber cover over the ports.
- 2 Connect a USB cable from your speaker to a computer or power adapter (not included). The charging LED is orange while charging and turns off when the battery is full.

#### Notes:


- The speaker beeps every five minutes when the battery is low.
- You can charge your speaker while playing audio or using the walkie-talkie.

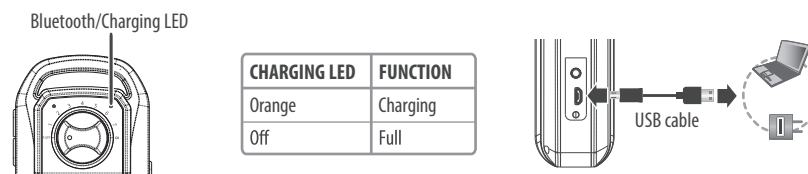

### CONNECTING AN AUDIO DEVICE

#### Bluetooth

 - 1 Press and hold (power) to turn on your speaker. The Bluetooth LED blinks blue quickly and your speaker enters pairing mode.
- 2 Make sure that your Bluetooth device is within 33 ft. (10 m) of your speaker.
- 3 On your Bluetooth device, turn on Bluetooth and select **NS-SPBTWT** from the list of available devices. Your speaker pairs with your Bluetooth device and the Bluetooth LED lights solid blue.
- 4 Use your Bluetooth device to control playback, making sure that its volume is set to at least 50%.
- 5 To disconnect:
  - Press and hold (Bluetooth/call) for three seconds.
  - OR
  - Un-pair your Bluetooth device from your speaker.

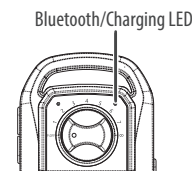

Flat size (W×H): 14.65 × 6.3 in. (372 × 160 mm)  
Final folded size: 2.4 × 6.3 in. (62 × 160 mm)



### AUX IN

- 1 Connect a 3.5 mm audio cable (not included) from your speaker's AUX jack to your audio device's headphone/audio out jack. The Bluetooth/Charging LED blinks blue slowly while connected to the cable.
- 2 Use your connected device to control playback, making sure that its volume is set to at least 50%.

### CONNECTING YOUR SPEAKERS WITH TWS

True wireless stereo (TWS) lets you connect your two included speakers together to play left- and right-channel audio separately.

- 1 Press and hold (Bluetooth/call) on both speakers for three seconds to disconnect from other Bluetooth devices and enter pairing mode. The Bluetooth LEDs blink quickly.
- 2 Press (Bluetooth/call) twice on one speaker. The speaker says "true wireless pairing" and pairs to the other speaker. Once paired, the speakers say "paired" and "left channel." The left-channel speaker's Bluetooth LED blinks blue slowly and the right speaker's Bluetooth LED is solid blue.
- 3 Make sure that your Bluetooth device is within 33 ft. (10 m) of your speaker.
- 4 On your Bluetooth device, turn on Bluetooth and select **NS-SPBTWT** from the list of available devices. When your Bluetooth device is paired, the left-channel speaker's Bluetooth LED beeps and continues to blink blue slowly.

**Note:** Only the left-channel speaker can be used for phone calls or AUX connections while using TWS.

- 5 Press (power). The speaker announces that it is either the left or right channel so you know which side to place the speaker on.

BLUETOOTH LED	FUNCTION
Blinks blue quickly	Bluetooth pairing mode
Lights solid blue	Paired to a Bluetooth device or is the right speaker when paired with TWS
Blinks blue slowly	Connected to an AUX device or is the left speaker when paired with TWS

### TAKING A PHONE CALL

The following functions are available when paired to a phone with Bluetooth:

- **Reject an incoming call:** Press and hold (Bluetooth/call)
- **Answer an incoming call:** Press (Bluetooth/call)
- **Switch audio between your speaker and phone:** Press and hold (Bluetooth/call)
- **End current call:** Press (Bluetooth/call)

**Note:** Only the left-channel speaker can be used for phone calls or AUX connections while using TWS.





## RECONNECTING TO A PAIRED DEVICE

 
When your speaker is not paired to a device, the Bluetooth LED blinks blue.

Your speaker loses the Bluetooth connection if you...	To reconnect...
Turn off your speaker.	Turn on your speaker. Your speaker searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range.	Make sure that your Bluetooth device is within 33 feet (10 m) of your speaker.
Turn off your Bluetooth device.	Turn on your Bluetooth device, then make sure that Bluetooth is on.
Turn off Bluetooth on your Bluetooth device.	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device.	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select <b>NS-SPBTWT</b> on your Bluetooth device.

**Note:** The Bluetooth range (33 ft./10 m) may be reduced if the wireless signal has to pass through walls or other obstructions.

## USING YOUR WALKIE-TALKIE

- 1 Turn the frequency knob to tune your walkie-talkie to the channel (1-8) that you want. The walkie-talkie LED lights green when you receive a signal.
- 2 Make sure that the person you want to talk to is on the same frequency and within 1.2 mi. (2 km) of you.
- 3 Press and hold the **PTT** (push-to-talk) button to speak, then release when you are finished. The walkie-talkie LED lights red while you transmit.  
**Note:** Speaker music will automatically pause/play when you press/release the PTT button.
- 4 To turn off the walkie-talkie, turn the frequency knob to **P-OFF**.

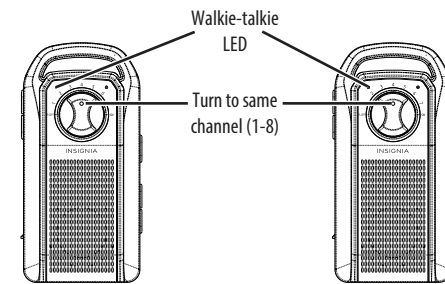

WALKIE-TALKIE LED	FUNCTION
Solid red	Send signal
Solid green	Receive signal
Blinks green	On a phone call

## RESETTING YOUR SPEAKER

- To clear your speaker's list of paired devices, press and hold for eight seconds. The speaker resets.
- Note:** Resetting may help if you have trouble pairing your speaker.



## TROUBLESHOOTING

PROBLEM	SOLUTION
<b>No power</b>	<ul style="list-style-type: none"> <li>Make sure that your speaker's battery is charged.</li> <li>Make sure that your speaker is turned on.</li> </ul>
<b>No sound or low volume</b>	<ul style="list-style-type: none"> <li>Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and <b>NS-SPBTWT</b> is selected.</li> <li>Turn up the volume on your speaker and Bluetooth device. Make sure that your Bluetooth device is not muted.</li> <li>Make sure that your speaker is not paired to another Bluetooth device.</li> <li>Make sure that your Bluetooth device is not paired to another Bluetooth device.</li> <li>Shorten the distance between your speaker and your Bluetooth device.</li> </ul>
<b>Cannot establish Bluetooth connection</b>	<ul style="list-style-type: none"> <li>Make sure that your speaker is in pairing mode. Press and hold the  (call) button to reenter pairing mode.</li> <li>Shorten the distance between your speaker and your Bluetooth device.</li> <li>Turn your devices off, then on. Re-pair your speaker and your Bluetooth device.</li> <li>Make sure that your speaker is not paired to another Bluetooth device.</li> <li>Make sure that your speaker and Bluetooth device are both in pairing mode.</li> <li>Make sure that your Bluetooth device supports Bluetooth v4.0 and below.</li> <li>Make sure that your Bluetooth device is not connected to any other device.</li> <li>Make sure that you have selected <b>NS-SPBTWT</b> on your Bluetooth device.</li> <li>Disconnect any audio cables connected to your speaker's AUX jack.</li> </ul>
<b>My Bluetooth device keeps unpairing</b>	<ul style="list-style-type: none"> <li>Shorten the distance between your speaker and your Bluetooth device.</li> <li>If the battery on your Bluetooth device is low, recharge the battery.</li> <li>If the battery on your speaker is low, recharge the battery.</li> </ul>
<b>"NS-SPBTWT" does not appear on my Bluetooth device</b>	<ul style="list-style-type: none"> <li>Shorten the distance between your speaker and your Bluetooth device.</li> <li>Put your speaker into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.</li> </ul>
<b>Poor sound quality</b>	<ul style="list-style-type: none"> <li>Move your speaker and Bluetooth device closer together.</li> <li>Try a different music source.</li> <li>Pair your speaker to a different mobile device.</li> <li>Try changing the volume on your music source.</li> </ul>
<b>Can't transmit or receive</b>	<ul style="list-style-type: none"> <li>Make sure that both walkie-talkies are fully charged and turned on.</li> <li>Make sure that you are within 1.2 mi. (2 km) of the person you want to talk to. This range may be reduced depending on the terrain or other interference in your area.</li> <li>Make sure that you and the person you want to talk to are on the same frequency. <b>Note:</b> The channel numbers may be different across different radio brands. Check the channel/frequency table to make sure that you're tuned to the same frequency.</li> </ul>
<b>I hear interference</b>	<ul style="list-style-type: none"> <li>The walkie-talkies may be too close together, try separating them farther.</li> <li>Make sure that both walkie-talkies are fully charged and turned on.</li> <li>Make sure that you are not touching the microphone or antenna.</li> </ul>
<b>I am hearing other people's conversations</b>	<ul style="list-style-type: none"> <li>Change to a different channel/frequency that others are not using.</li> </ul>

## SPECIFICATIONS

- Dimensions (L x W x H):** 2.7 x 5.5 x 1.6 in. (6.8 x 14 x 4.1 cm)
- Battery size:** 2,200 mAh
- Wattage:** 3W
- USB cable length:** 11.8 in. (30 cm)
- Bluetooth range:** 33 ft. (10 m)
- Run time:** 12 hours (speaker); 8 hours (walkie-talkie)
- Charge time:** 4.5 hours
- Weight:** .5 lbs. (.24 kg)
- Walkie-talkie range:** 1.2 mi. (2 km)

## LEGAL NOTICES

### FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

### RSS

#### IC Statement

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

1-877-467-4289 (U.S. and Canada)

01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies. Distributed by Best Buy Purchasing, LLC. 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2018 Best Buy. All rights reserved. **Made in China**

