 



NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Left-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Left-Ant1-PASS

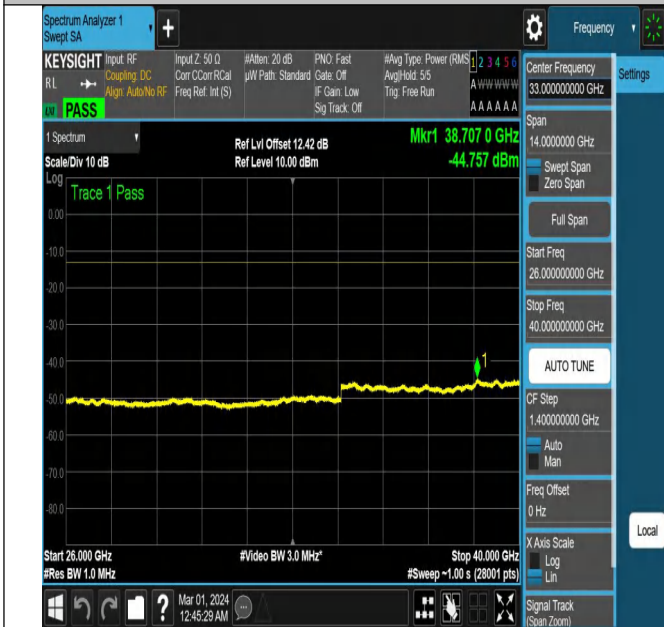

NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Left-Ant1-PASS

 NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS

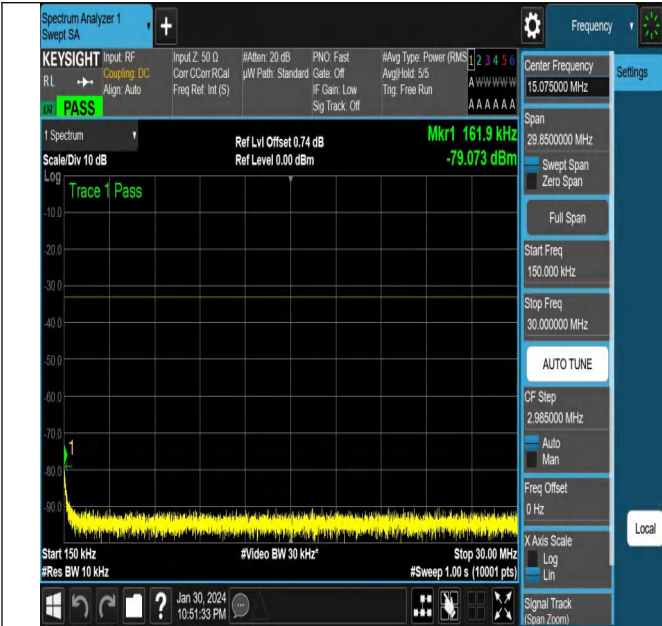


NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS

 
NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS

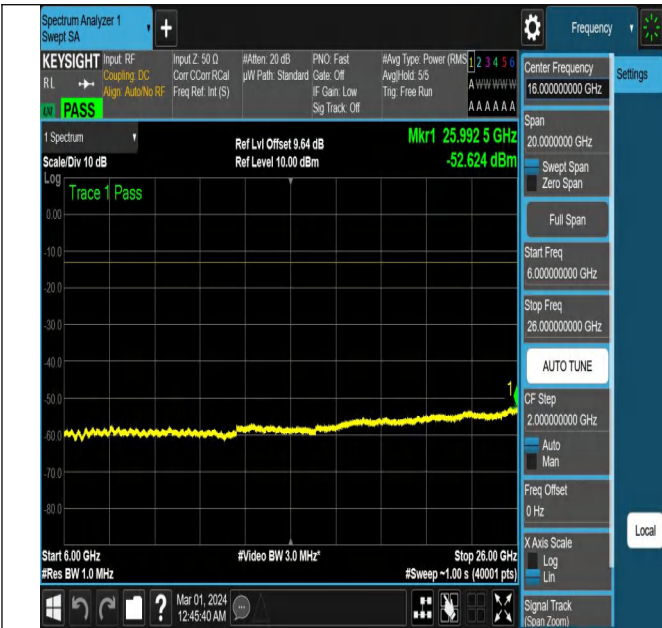

NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS



 
NTNV-N78-3450-3550-PC2-30-100-M-CP-16QAM-Edge_1RB
 _Right-Ant1-PASS

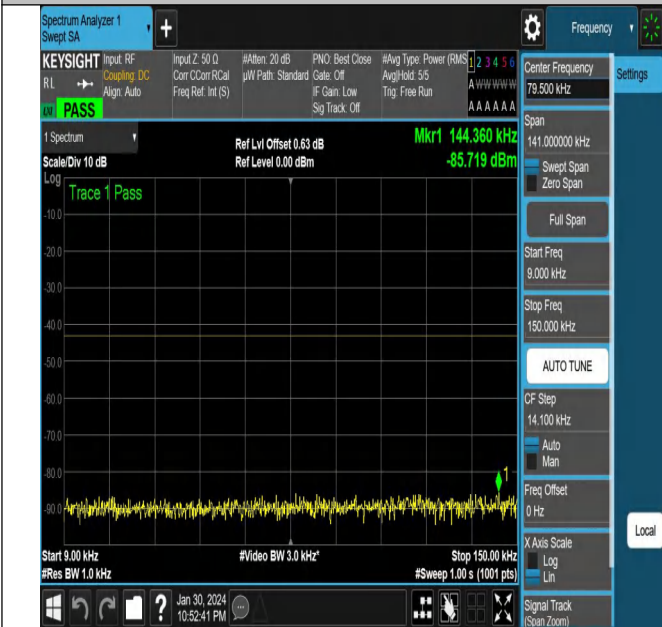

NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-
 Ant1-PASS



 NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-
 Ant1-PASS

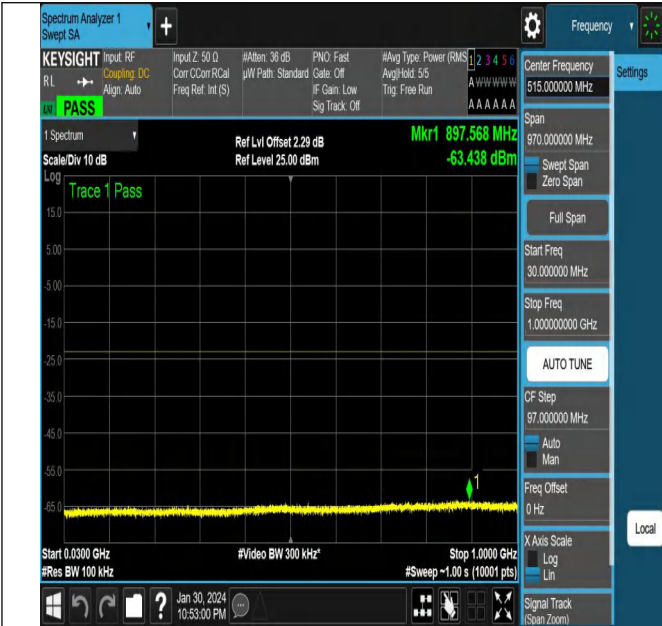


NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-

Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-

 Ant1-PASS

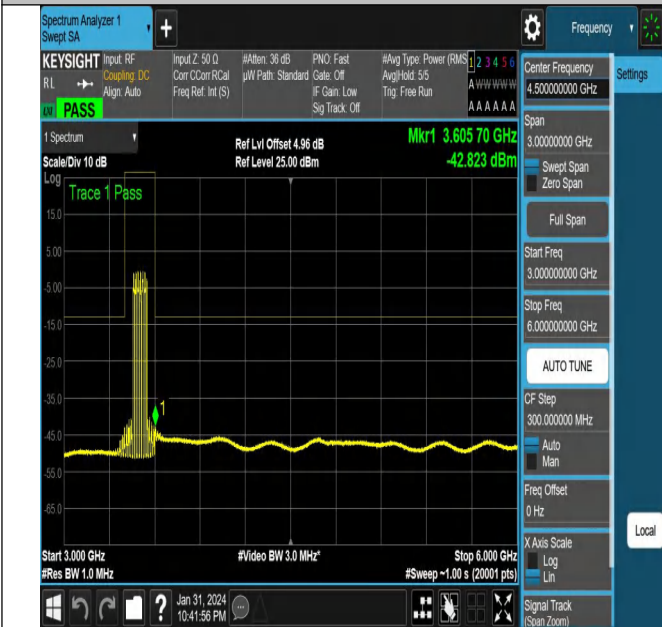


NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-

Ant1-PASS




NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-

 
Ant1-PASS

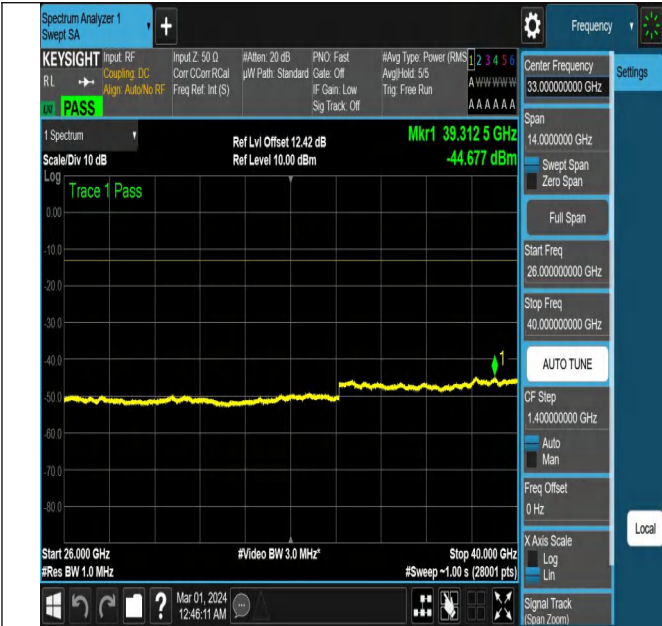

 NTVN-N78-3450-3550-PC2-30-100-M-CP-64QAM-Outer_Full-Ant1-PASS

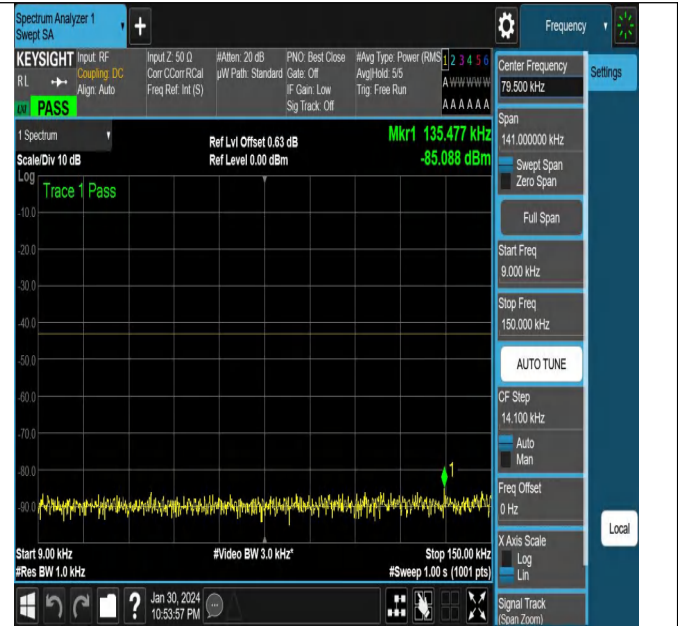

 NTVN-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB_Left-Ant1-PASS

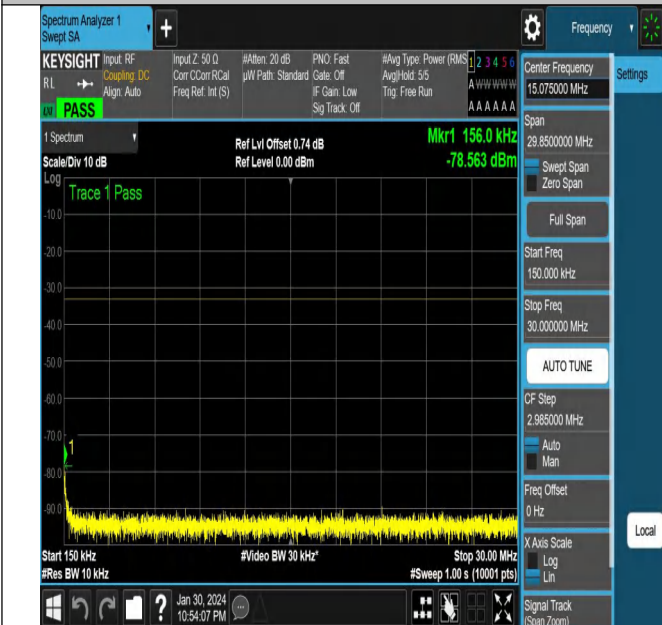

NTVN-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB_Left-Ant1-PASS



NTVN-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB_Left-Ant1-PASS



 
 
NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Left-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Left-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Left-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Left-Ant1-PASS

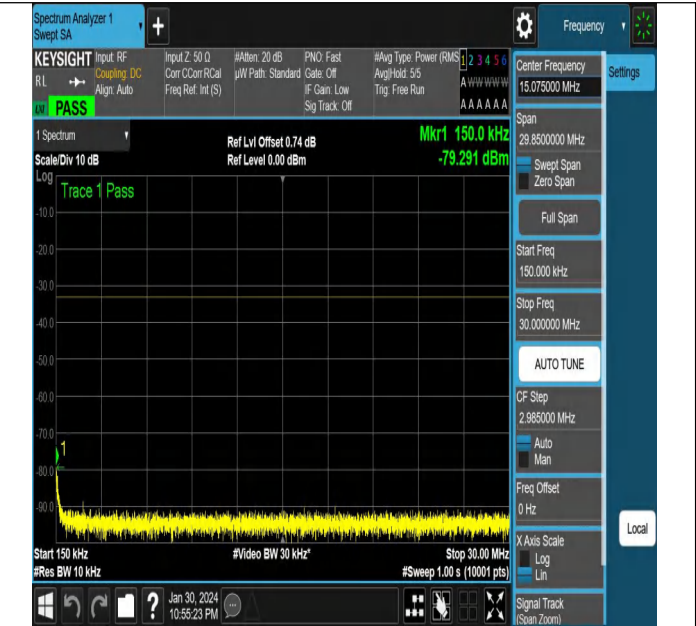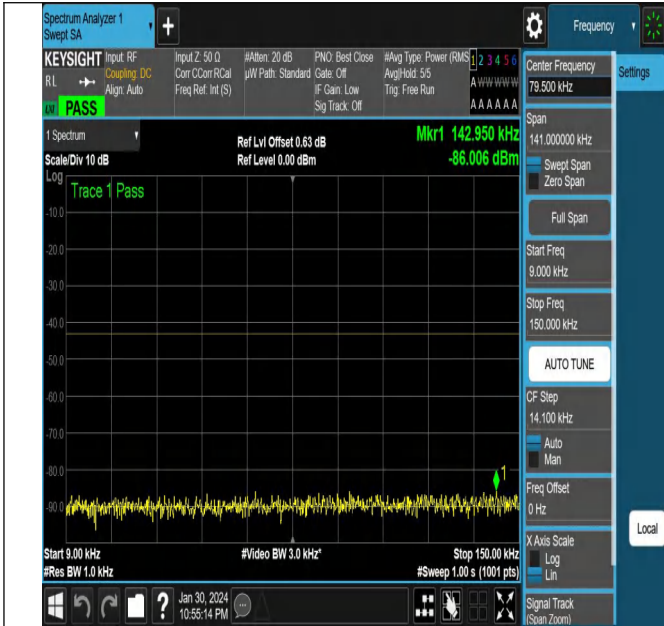


NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Right-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Right-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Right-Ant1-PASS

 NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
_Right-Ant1-PASS

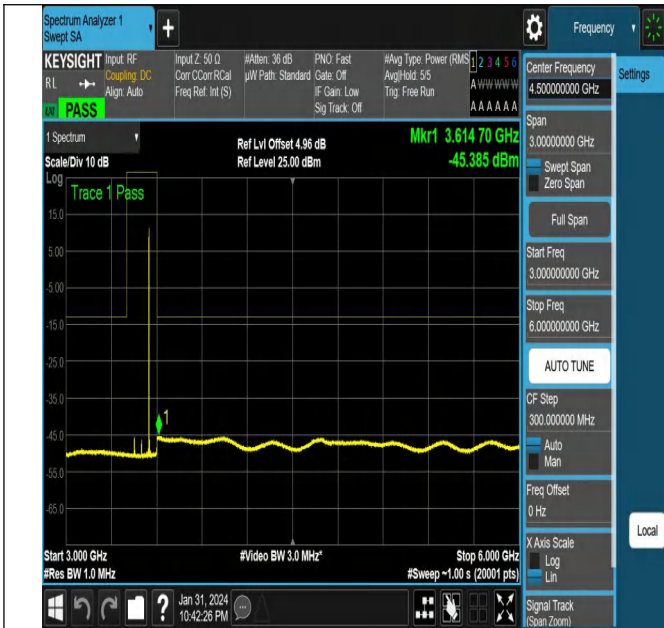

NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
 _Right-Ant1-PASS



 
NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
 _Right-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-64QAM-Edge_1RB
 _Right-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full
 -Ant1-PASS

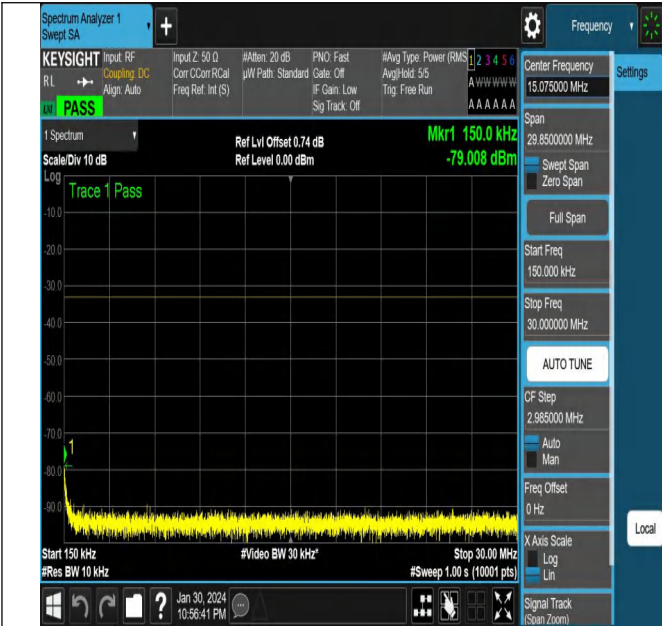


NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full
 -Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full
 -Ant1-PASS





NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full
 -Ant1-PASS

 NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full
 -Ant1-PASS

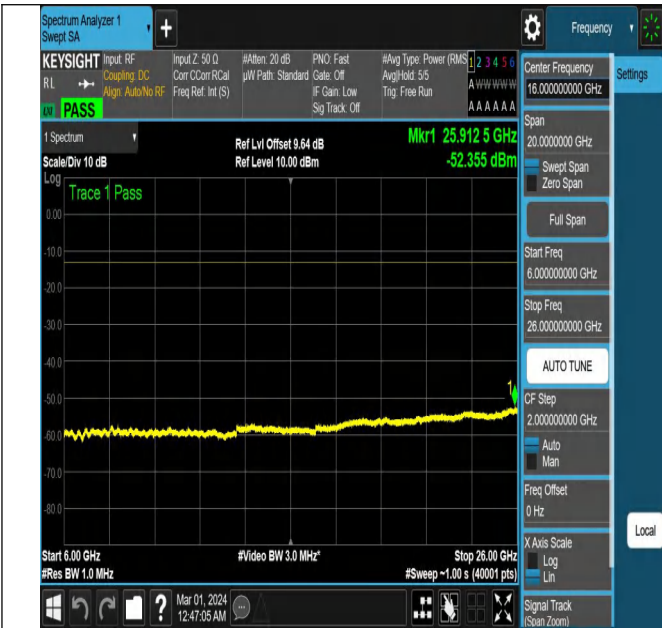



NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full -Ant1-PASS

  NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Outer_Full -Ant1-PASS

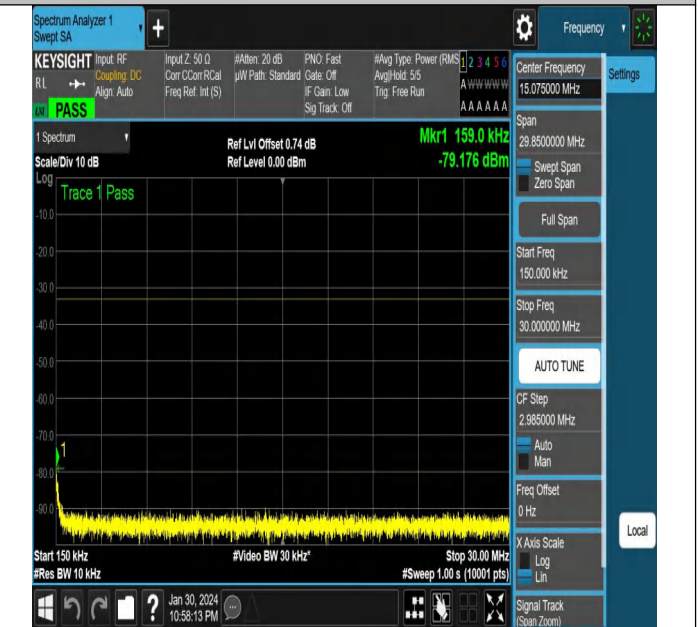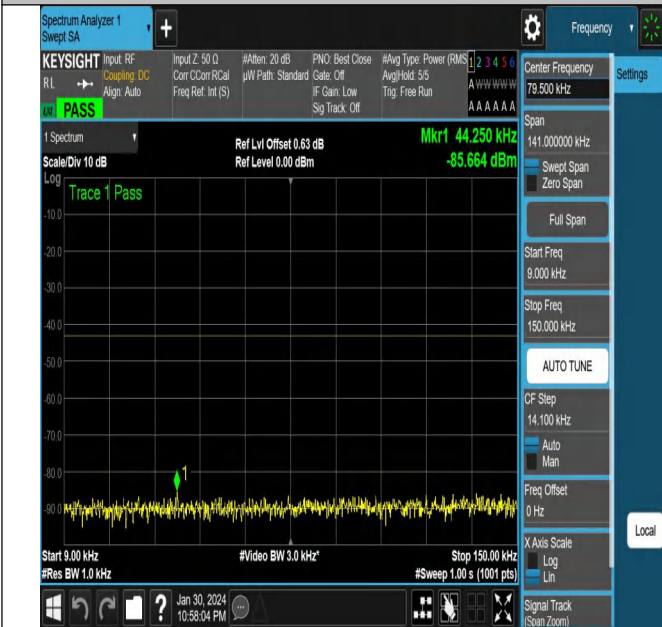

NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R B_Left-Ant1-PASS

  NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R B_Left-Ant1-PASS

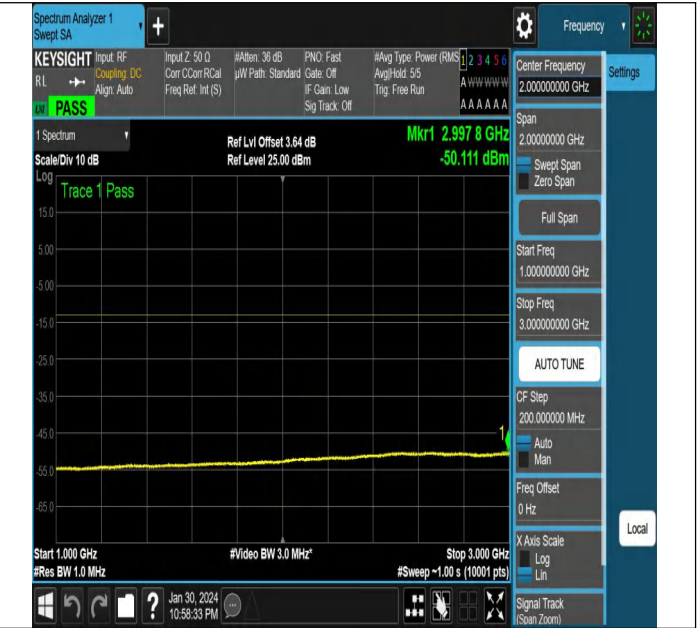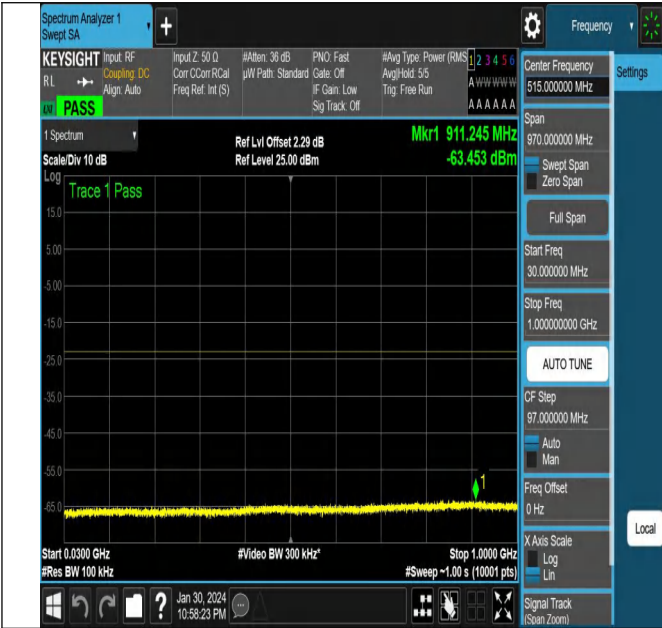


NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

B_Left-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

 B_Left-Ant1-PASS

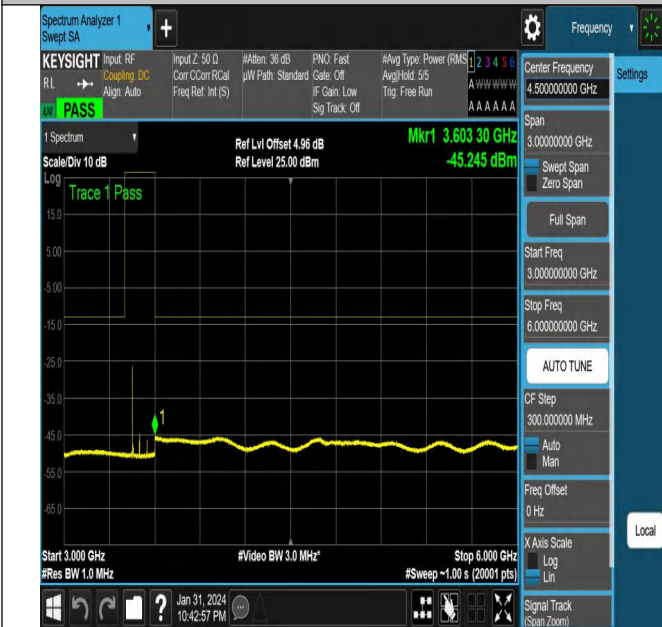


NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

B_Left-Ant1-PASS




NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

 
B_Left-Ant1-PASS

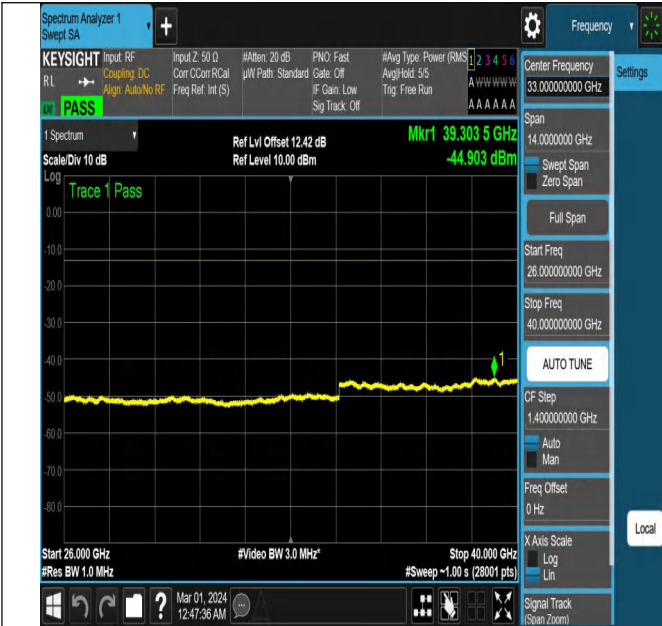

 NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R
 B_Left-Ant1-PASS

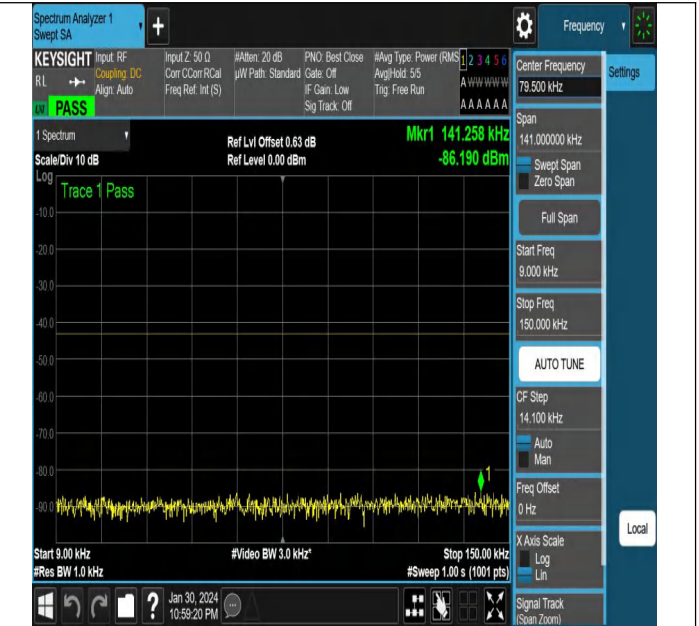

 NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R
 B_Right-Ant1-PASS

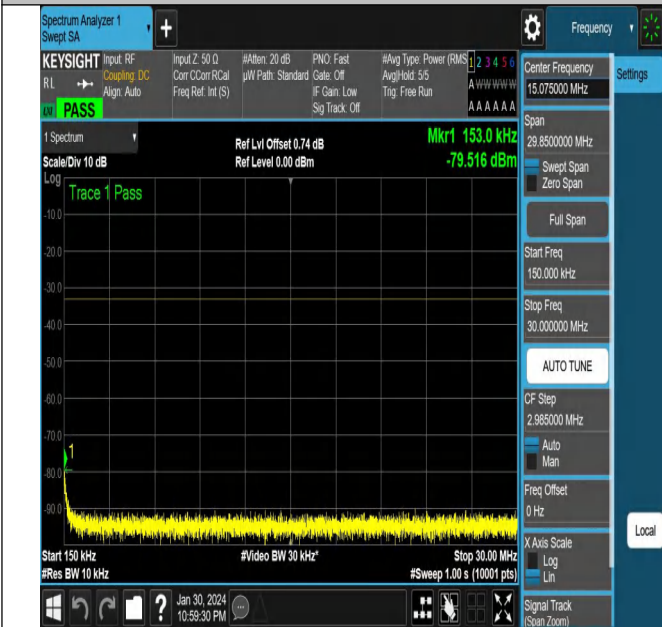

NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R
 B_Right-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R
 B_Right-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

B_Right-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

B_Right-Ant1-PASS

 
 


NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

B_Right-Ant1-PASS


NTNV-N78-3450-3550-PC2-30-100-M-CP-256QAM-Edge_1R

B_Right-Ant1-PASS

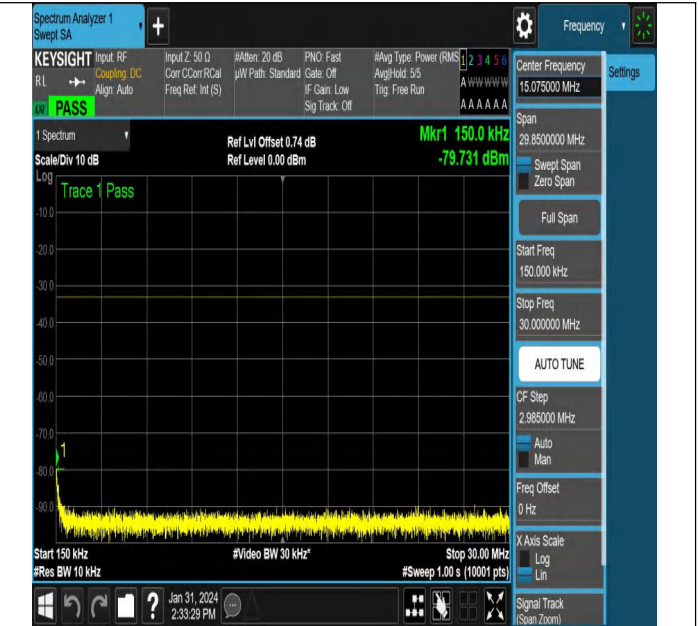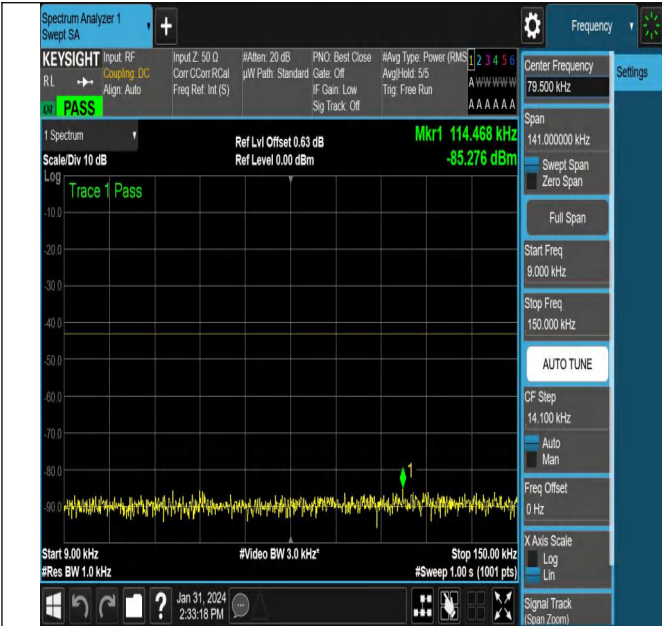


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
nt1-PASS

 NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
nt1-PASS

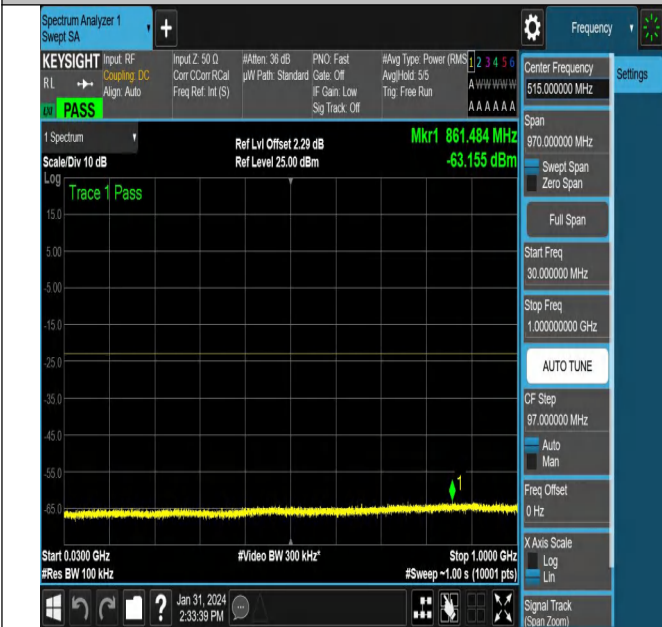


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
nt1-PASS

 NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
nt1-PASS

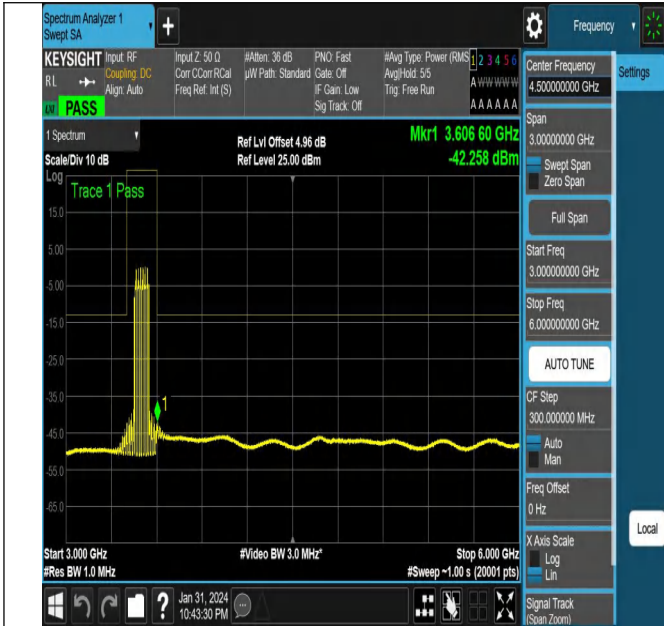

 NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
 nt1-PASS

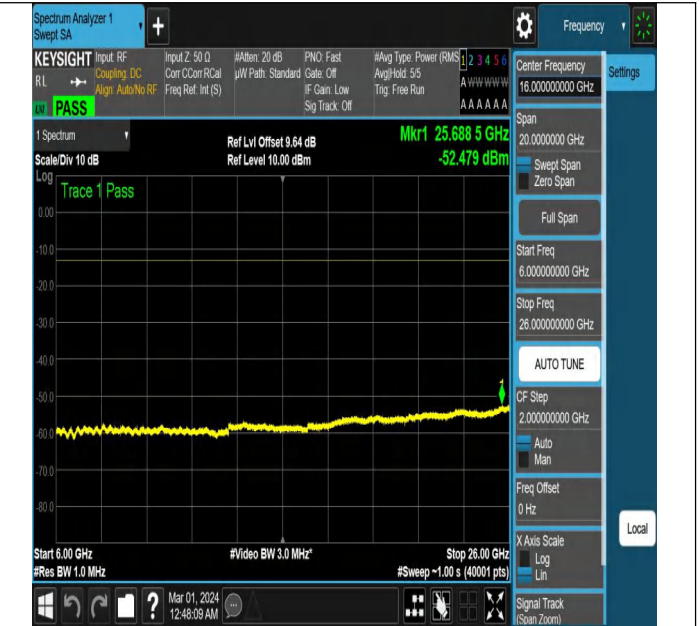


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
 nt1-PASS



NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Outter_Full-A
 nt1-PASS



 NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L
 eft-Ant1-PASS

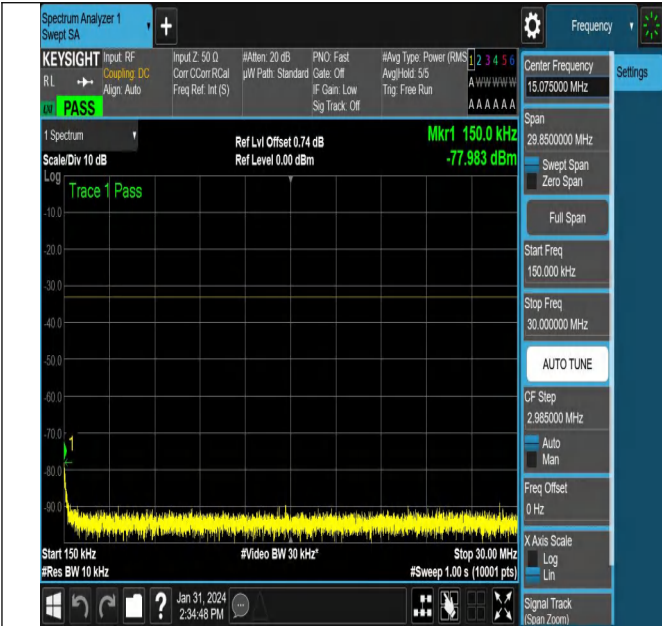

NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L

eft-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L

eft-Ant1-PASS

 


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L

eft-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L

eft-Ant1-PASS

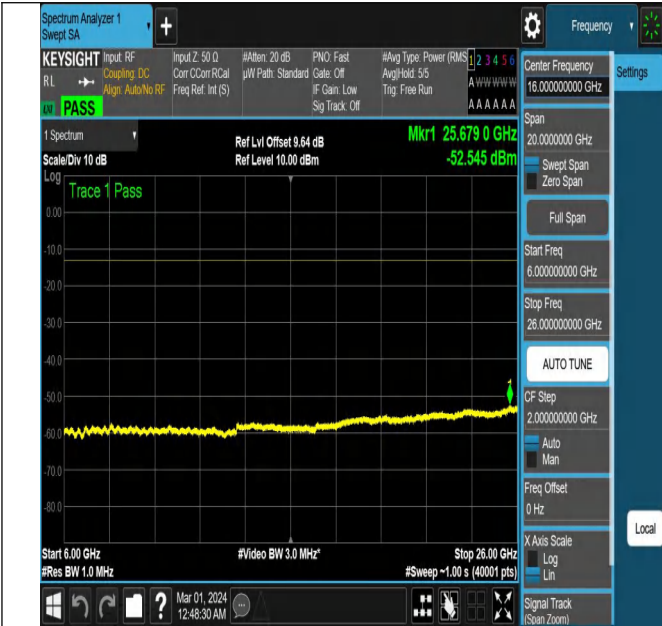


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L

eft-Ant1-PASS


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_L

 eft-Ant1-PASS

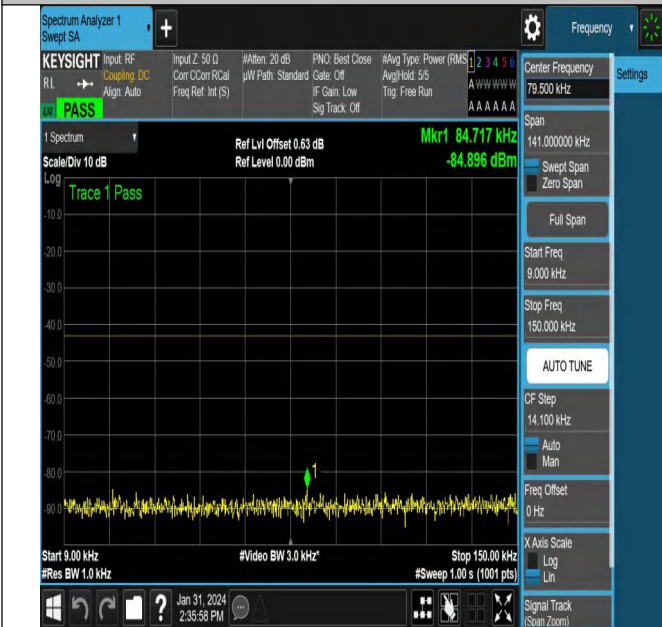


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_

 Right-Ant1-PASS

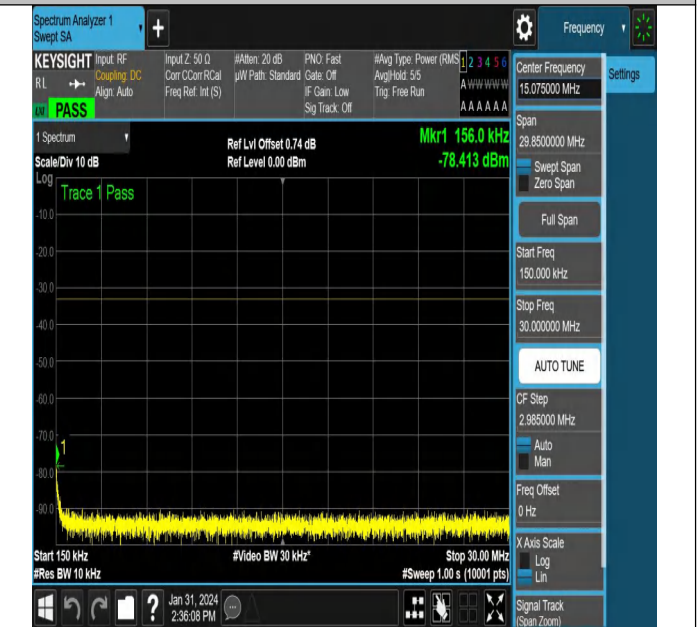

NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_

 Right-Ant1-PASS

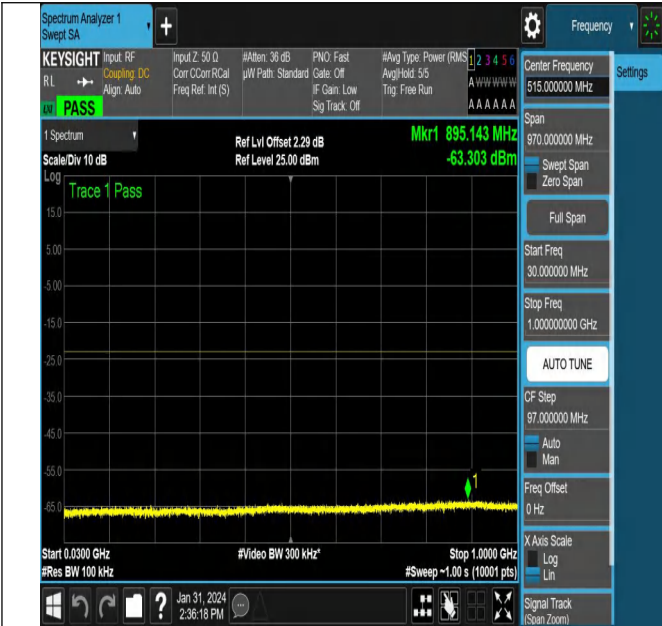


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_

Right-Ant1-PASS


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_

 Right-Ant1-PASS

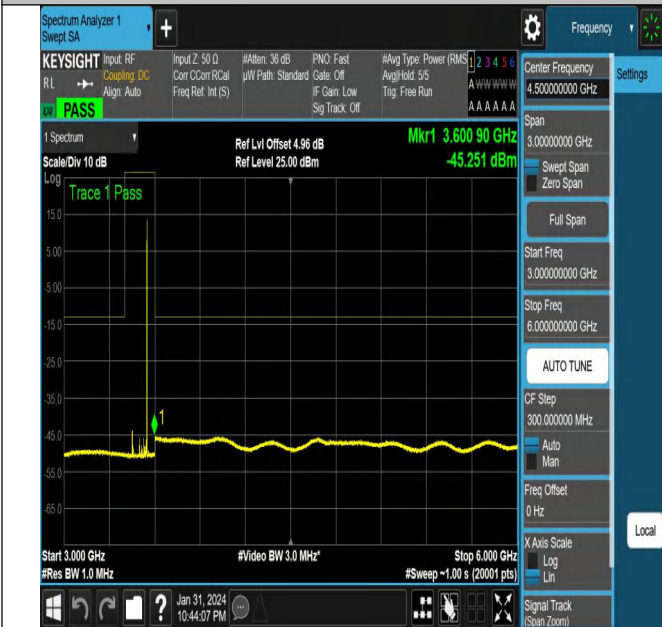


NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_

 Right-Ant1-PASS

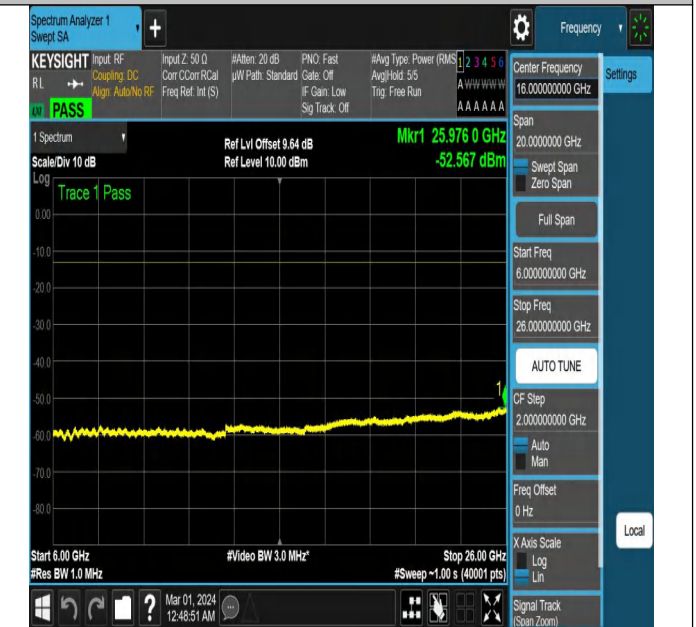

NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_

 Right-Ant1-PASS

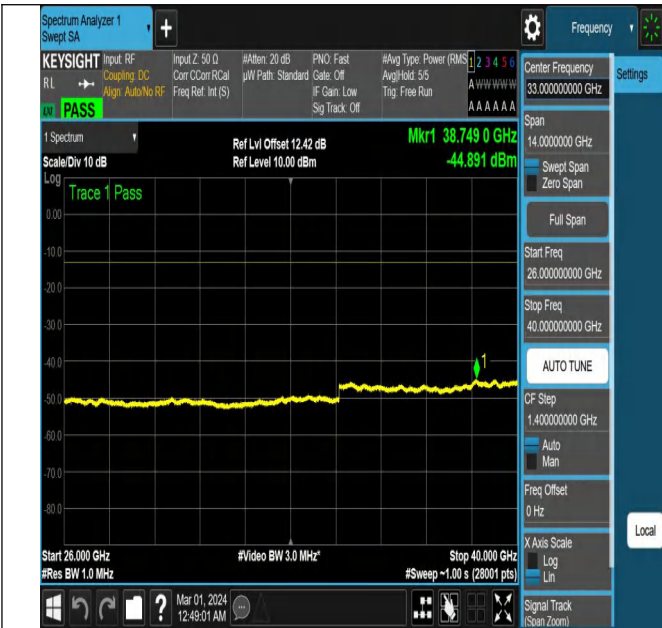

NTNV-N78-3450-3550-PC2-30-100-H-CP-QPSK-Edge_1RB_Right-Ant1-PASS



 
NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS

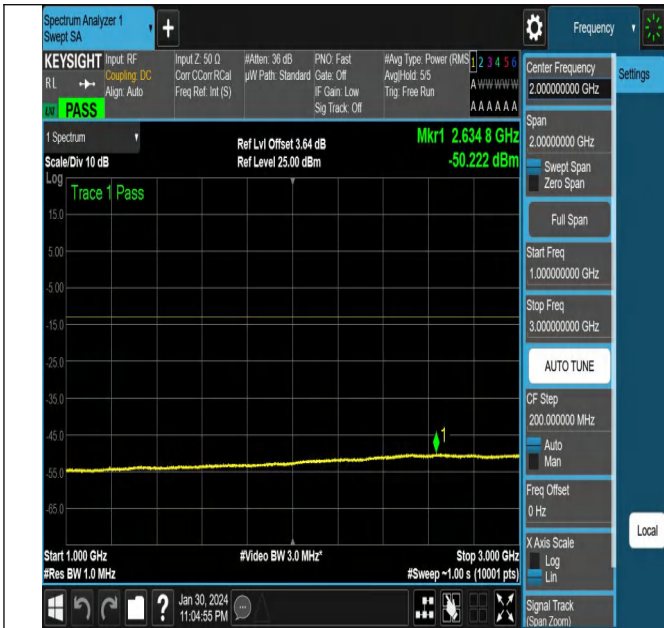



NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS

  NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Outer_Full-Ant1-PASS

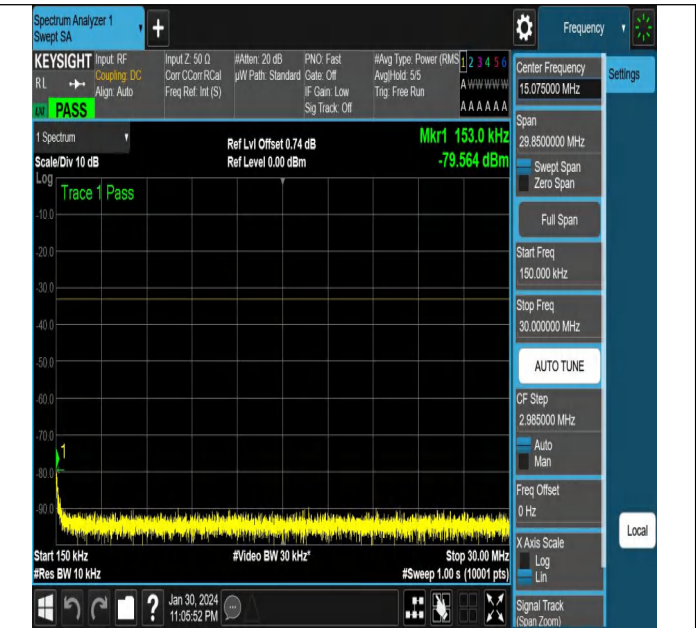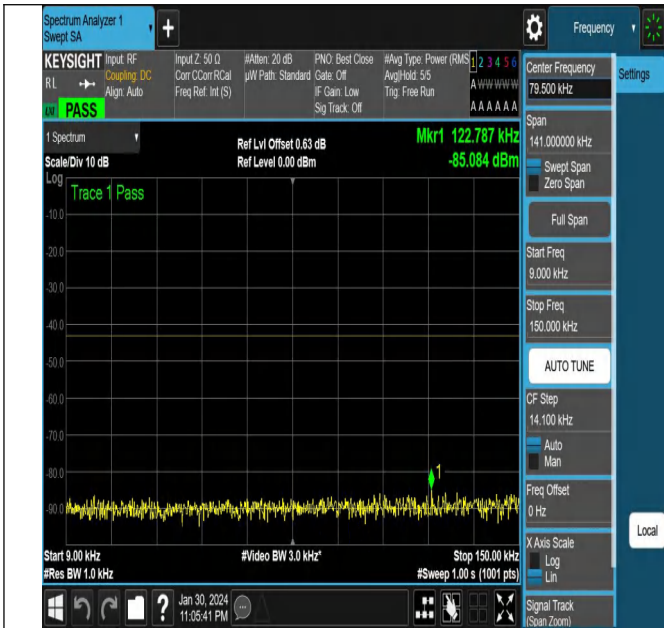

NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Edge_1RB_
Left-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Edge_1RB_
Left-Ant1-PASS



NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Edge_1RB_
Left-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-100-H-CP-16QAM-Edge_1RB_
Left-Ant1-PASS