 


NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_L eft-Ant1-PASS

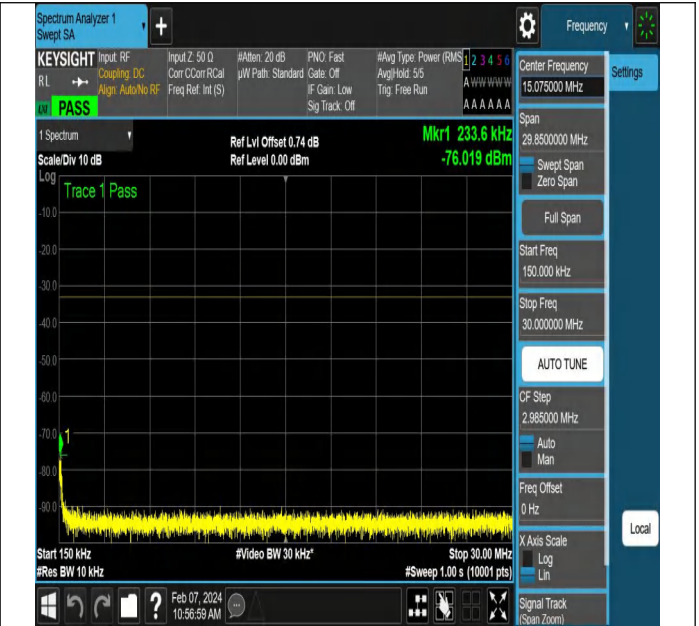

NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_L eft-Ant1-PASS



 
NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_L eft-Ant1-PASS




NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_L eft-Ant1-PASS




NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS

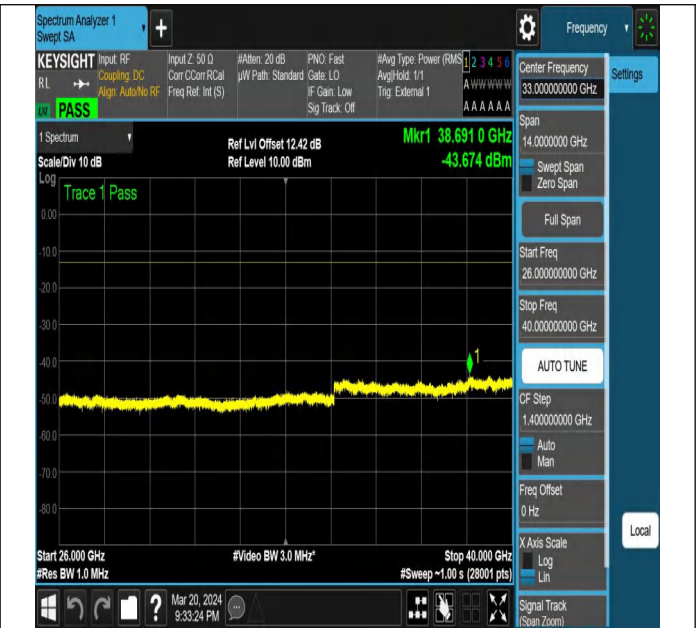

 
NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS

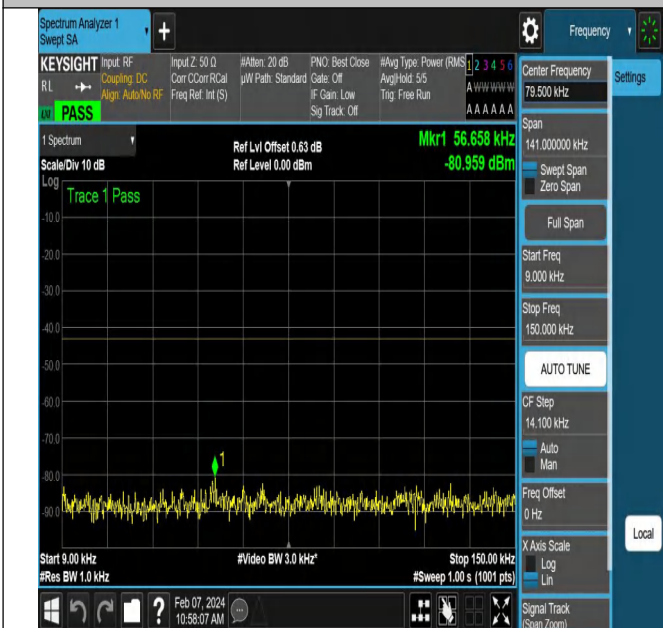

 NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_
Right-Ant1-PASS

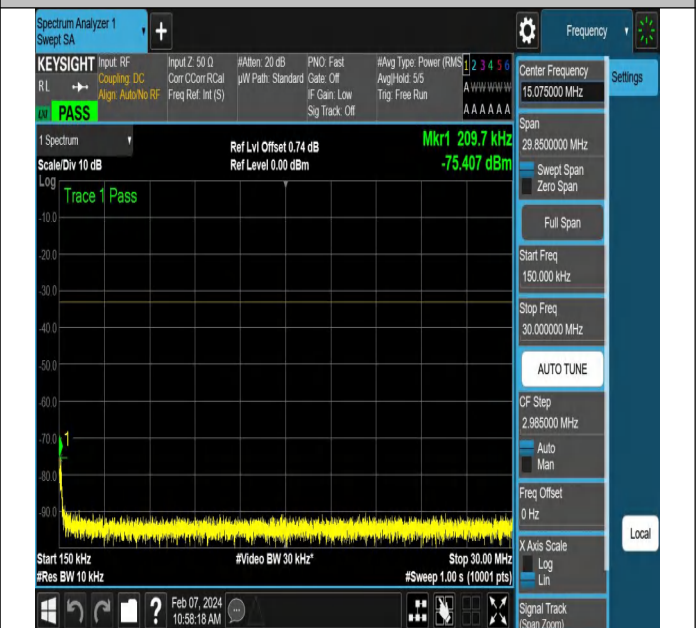


 NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_
Right-Ant1-PASS

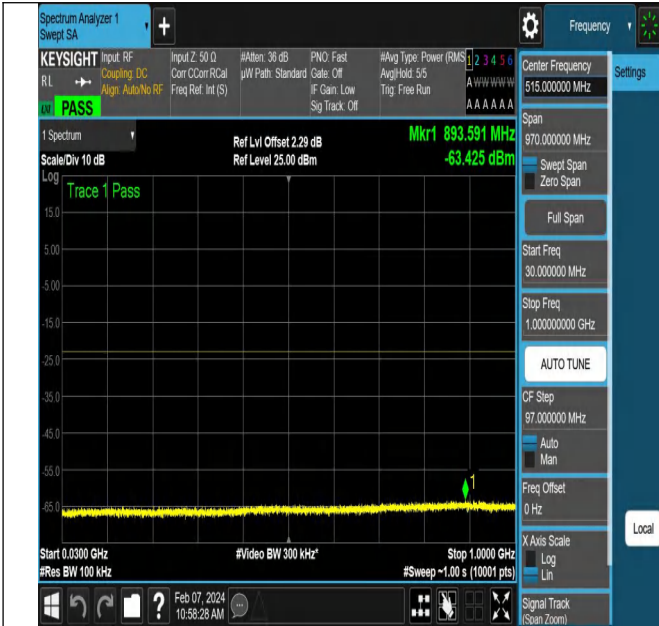


NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_

 Right-Ant1-PASS

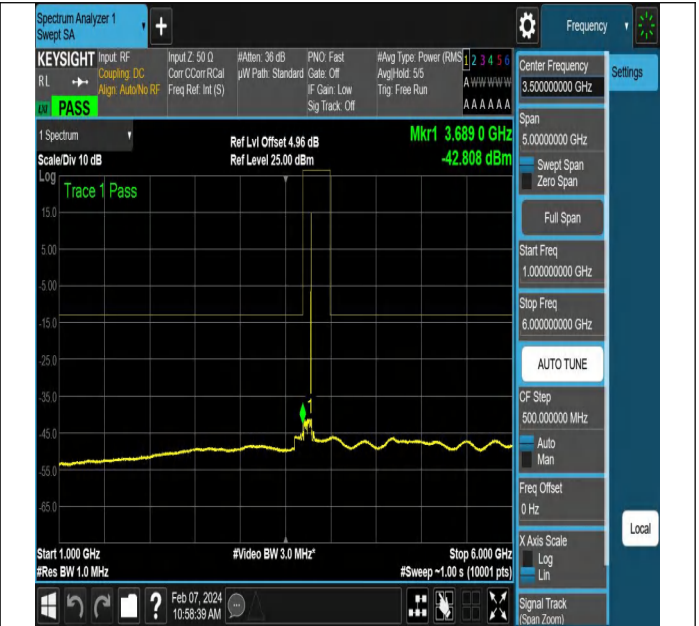


NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_

 Right-Ant1-PASS

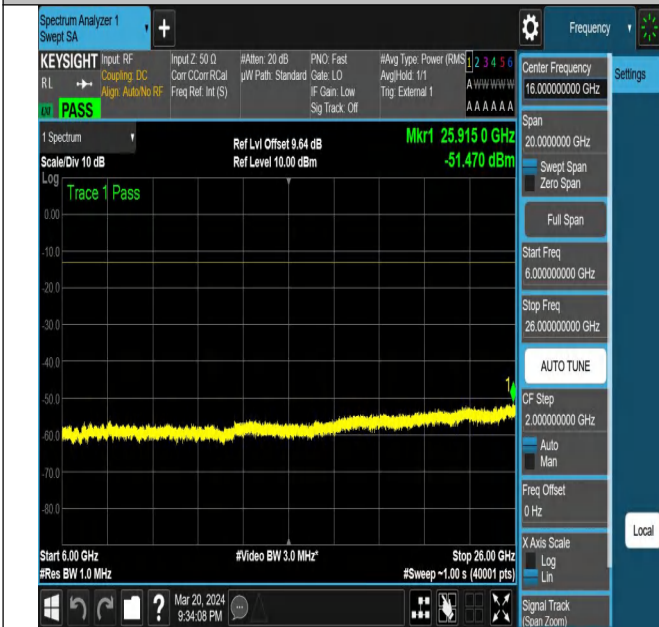



NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_

 Right-Ant1-PASS

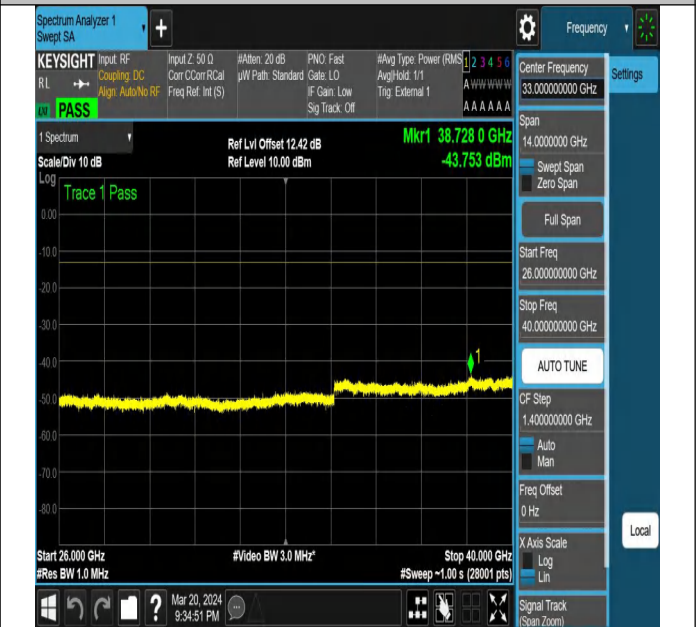


NTNV-N77-3700-3980-PC2-30-80-L-DFT-QPSK-Edge_1RB_

  Right-Ant1-PASS

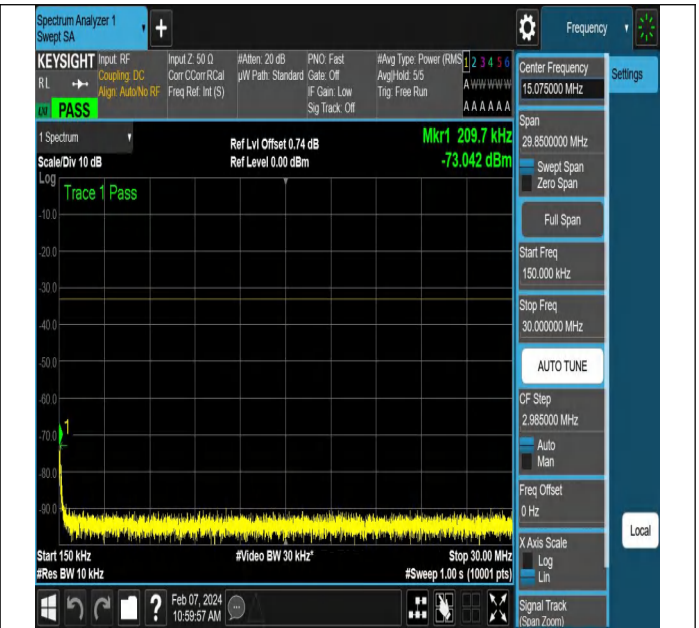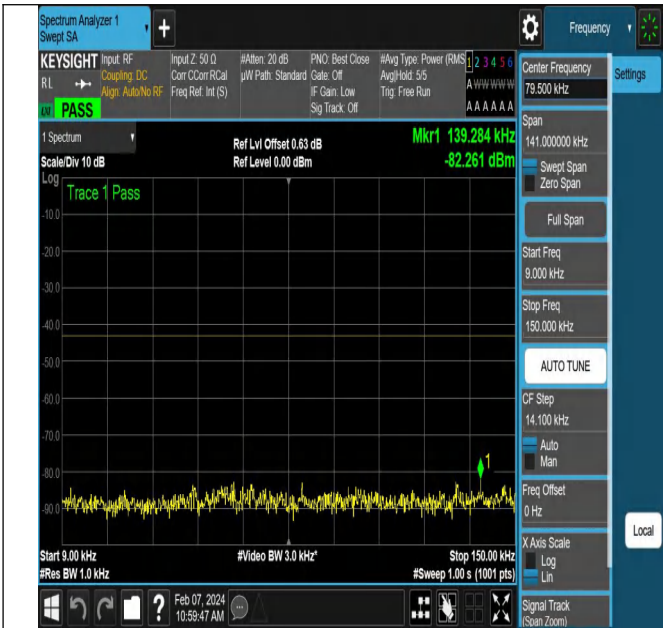

NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

 NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

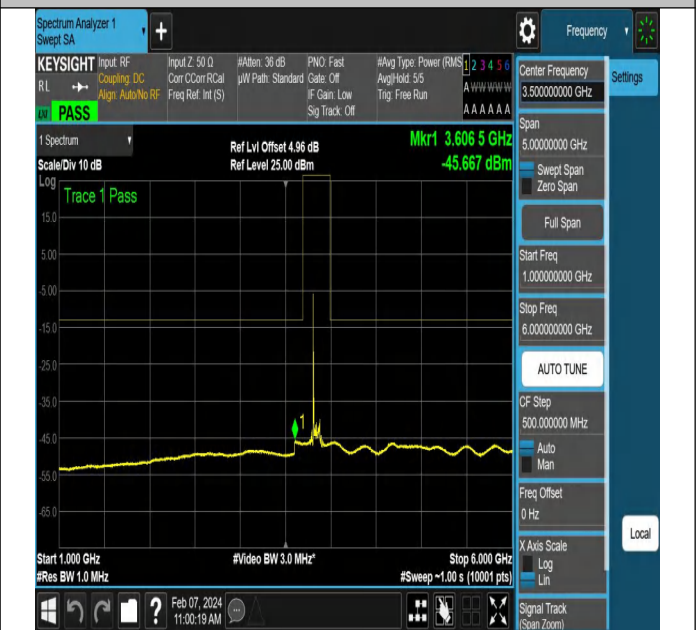


NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS


NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS



 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
 B_Left-Ant1-PASS

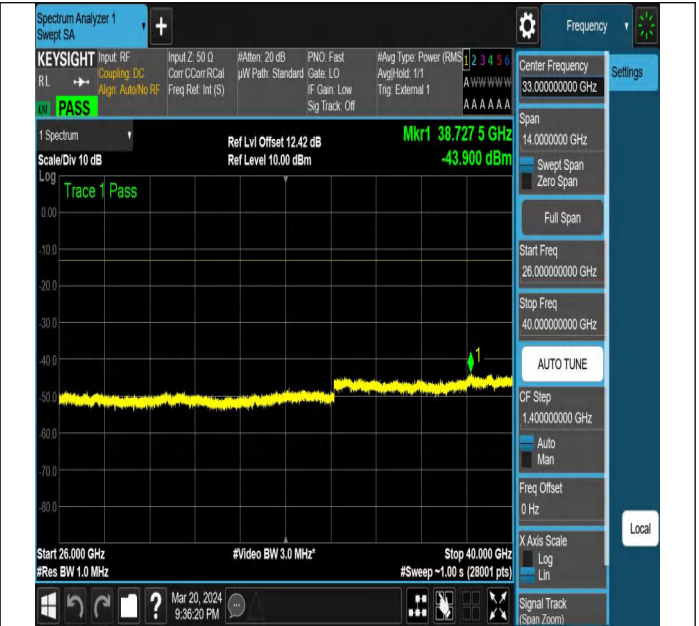

 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
 B_Left-Ant1-PASS

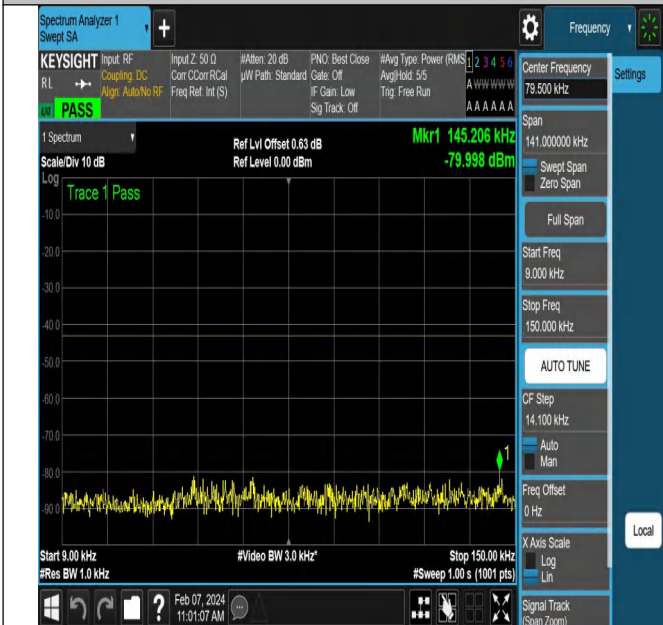

 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS

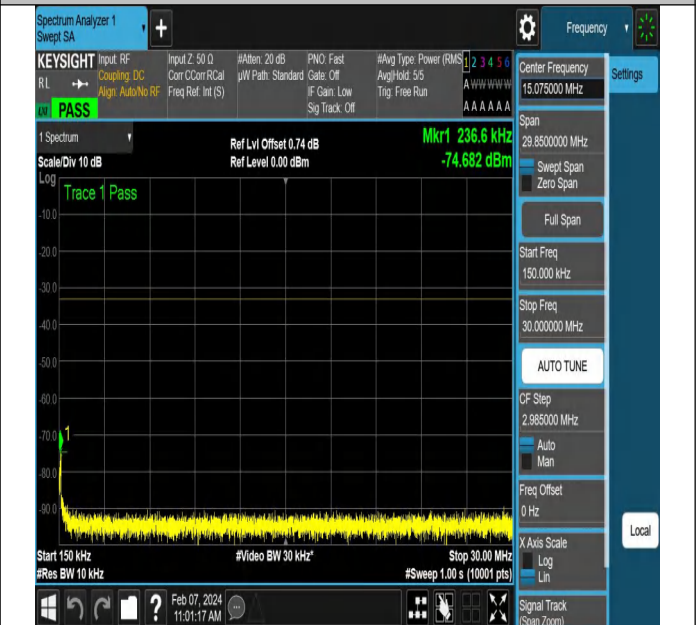

 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS

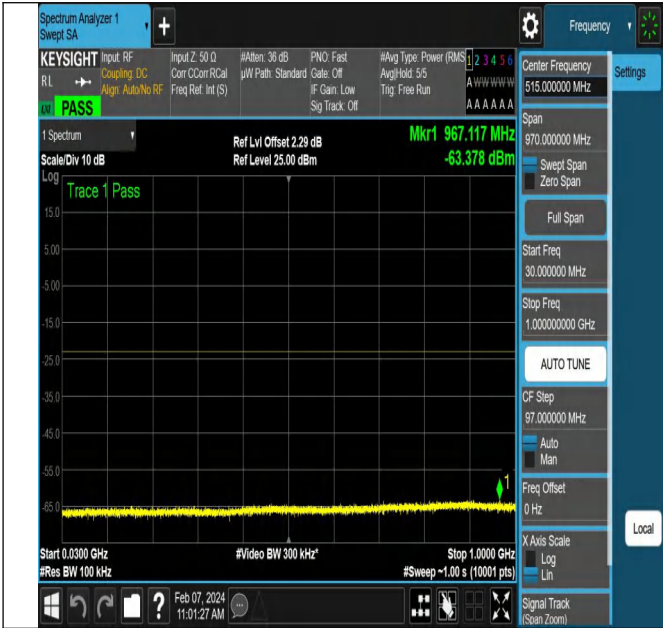

 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Right-Ant1-PASS

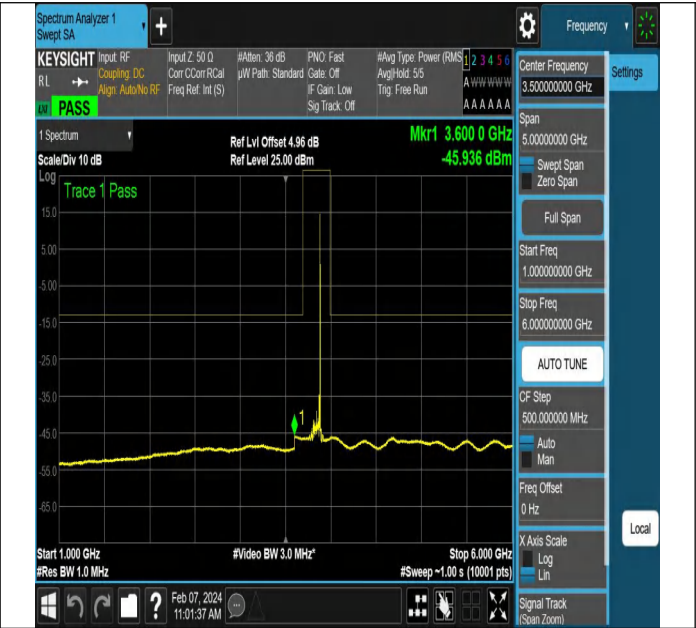


 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Right-Ant1-PASS

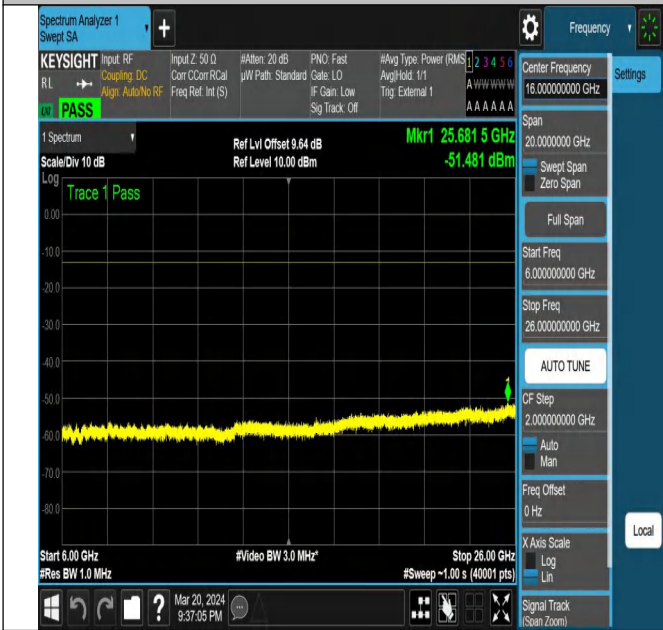

 NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Right-Ant1-PASS


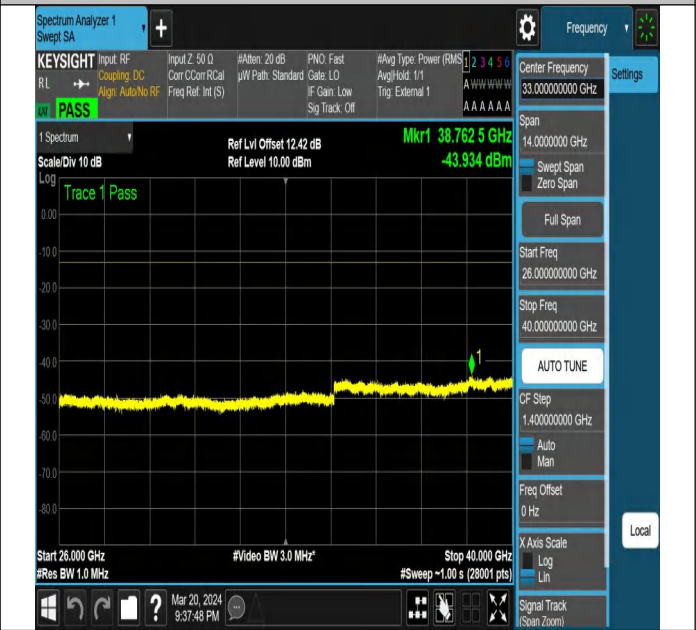


  NTNV-N77-3700-3980-PC2-30-80-M-DFT-PI2BPSK-Edge_1R
B_Right-Ant1-PASS

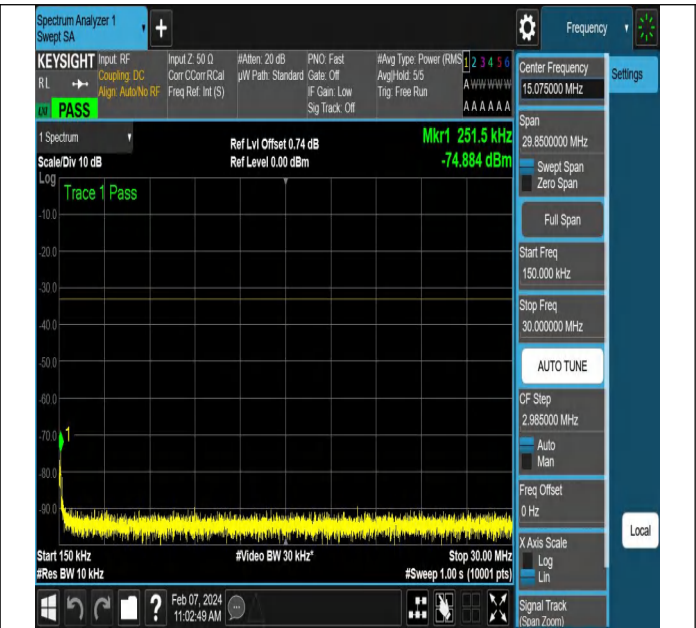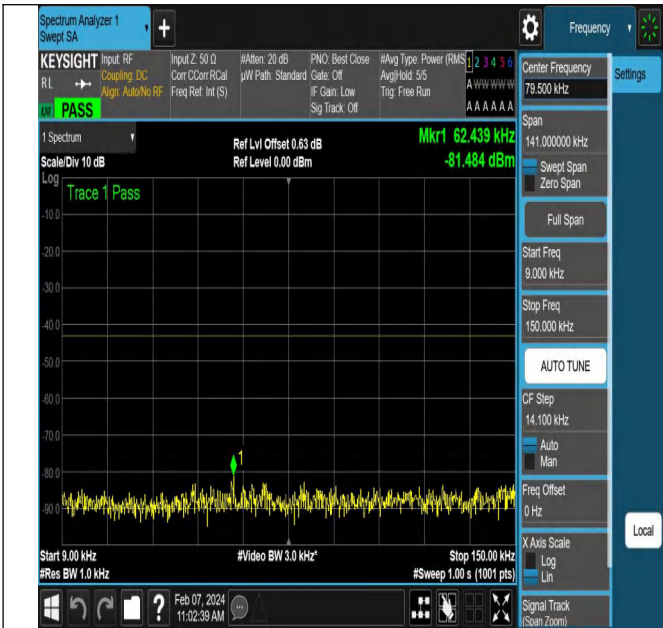


NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_
Left-Ant1-PASS

  NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_
Left-Ant1-PASS

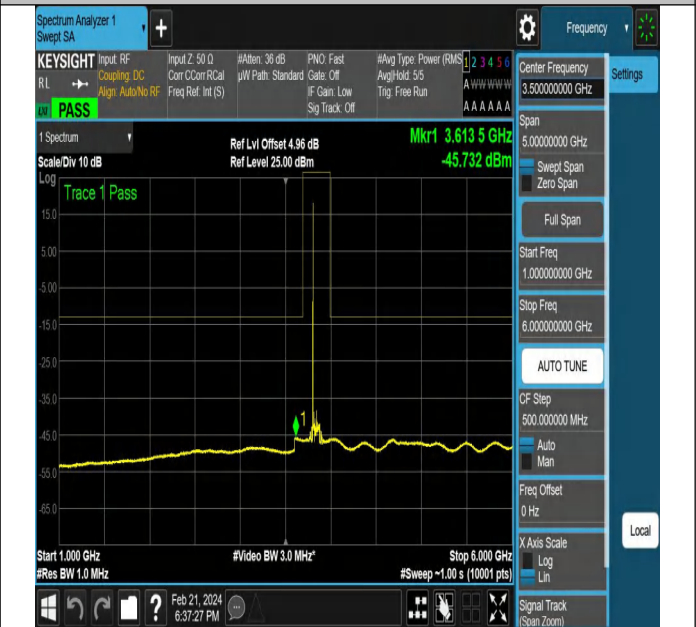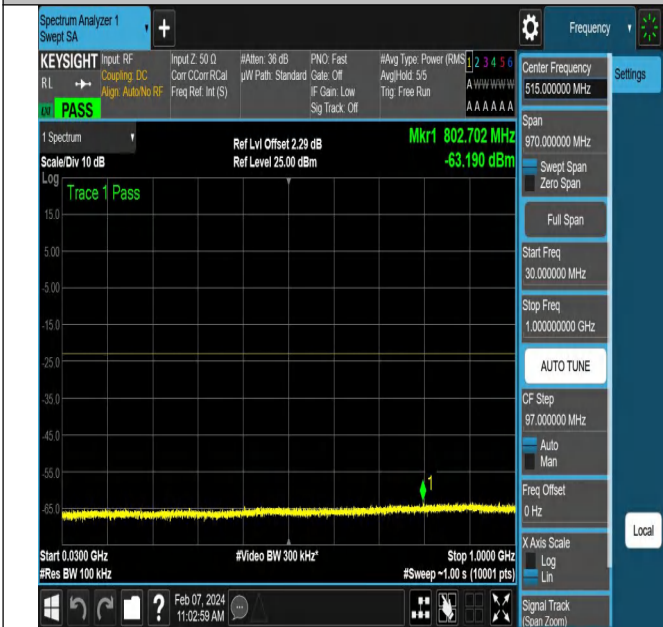


NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_
Left-Ant1-PASS

 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_
Left-Ant1-PASS

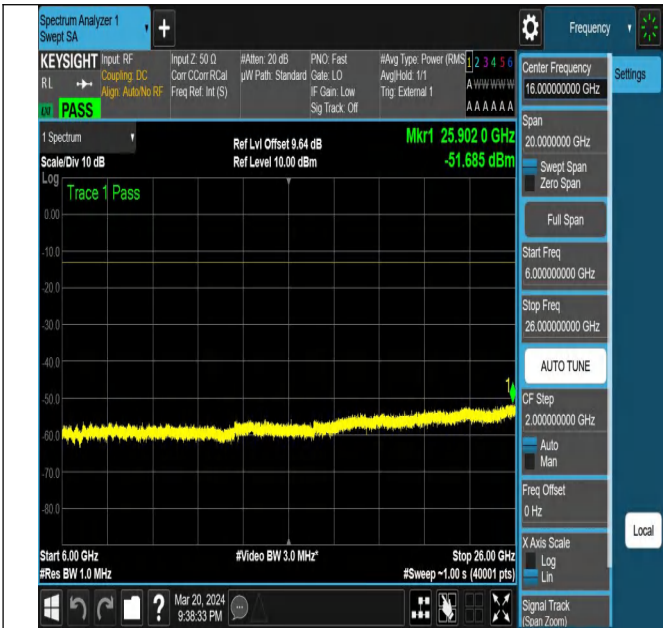

 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_ Left-Ant1-PASS

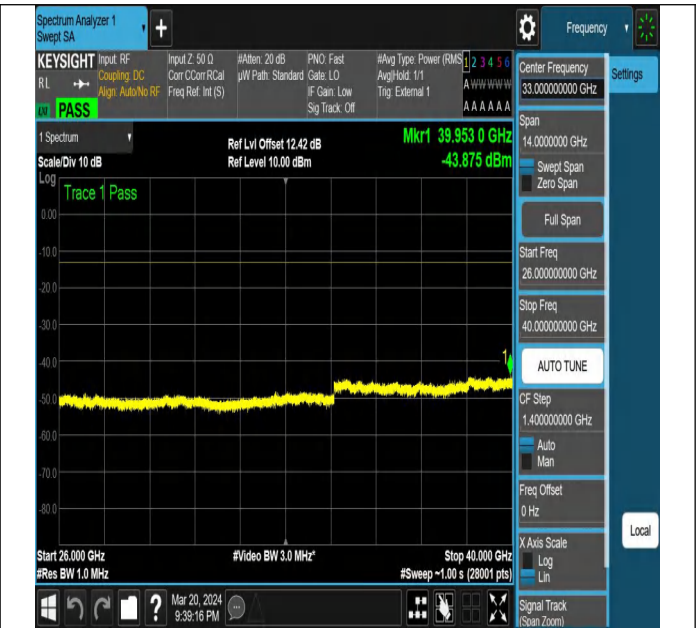


 
NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_ Left-Ant1-PASS

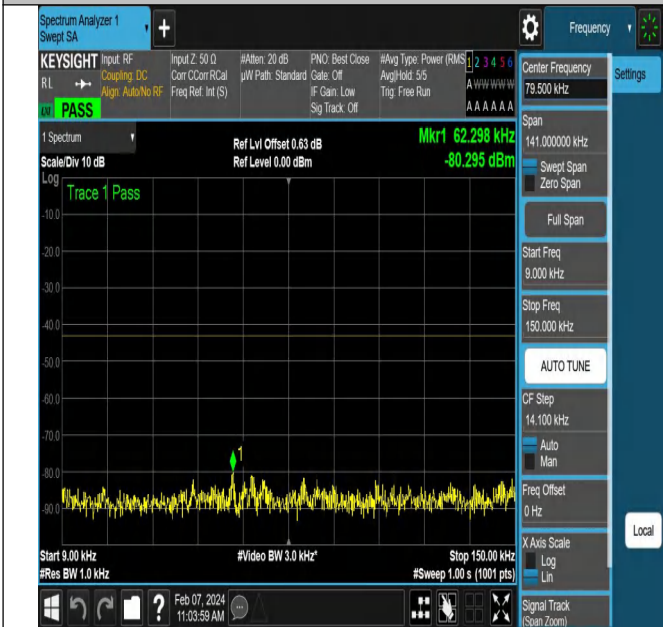

 NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_ Right-Ant1-PASS

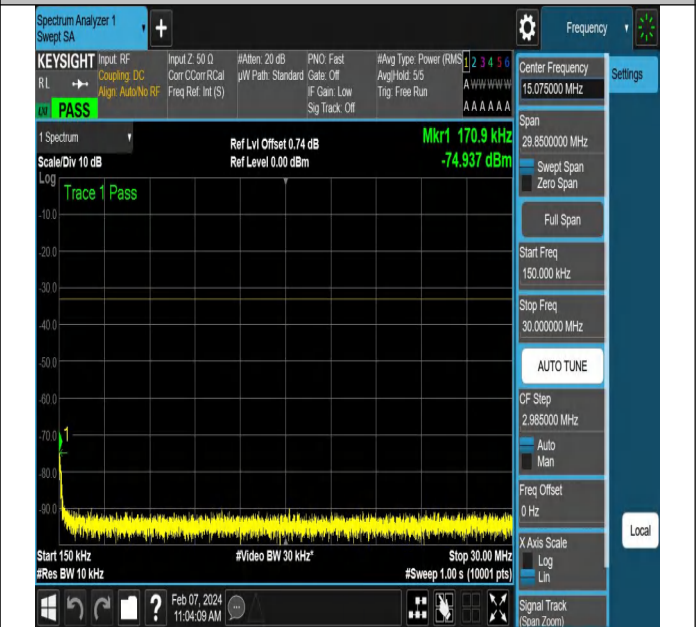

  NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_ Right-Ant1-PASS

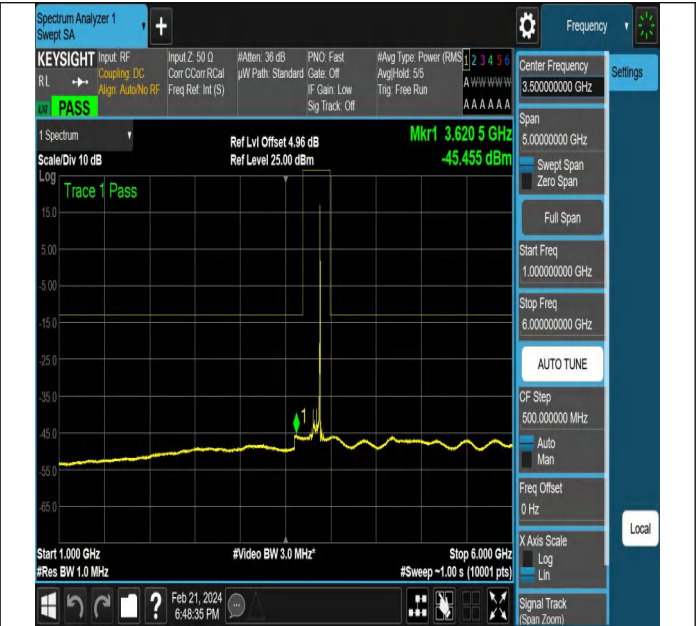
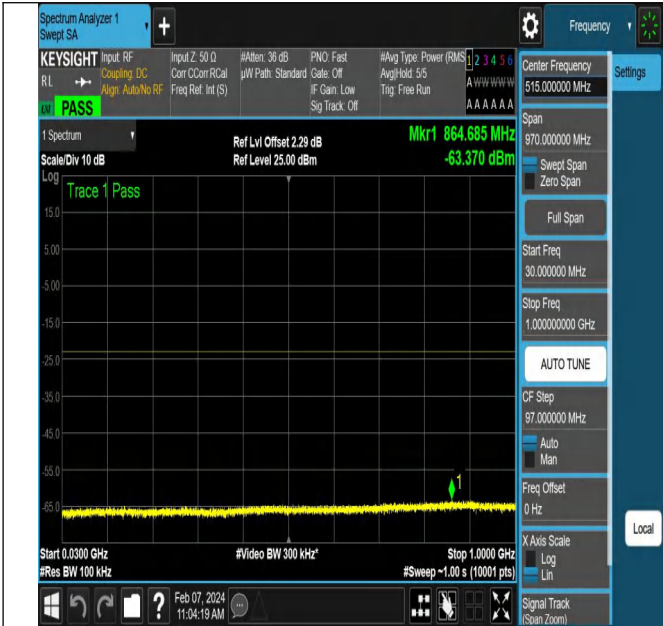


NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_

Right-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_

  Right-Ant1-PASS

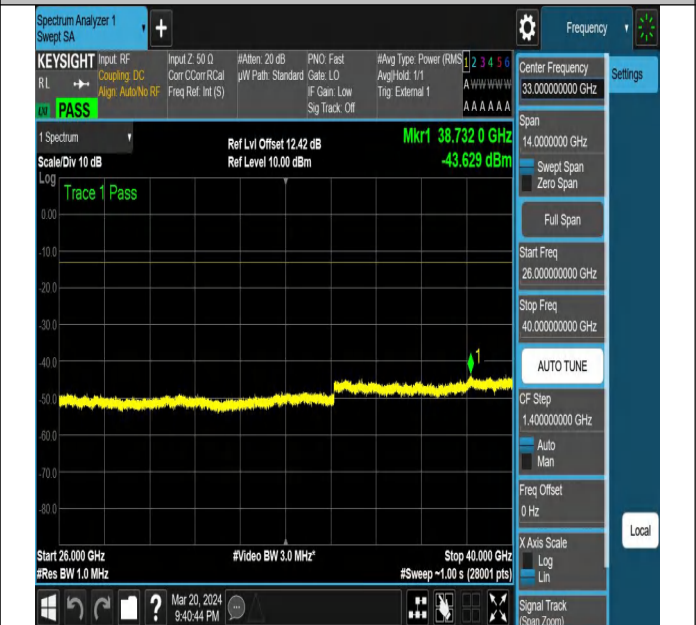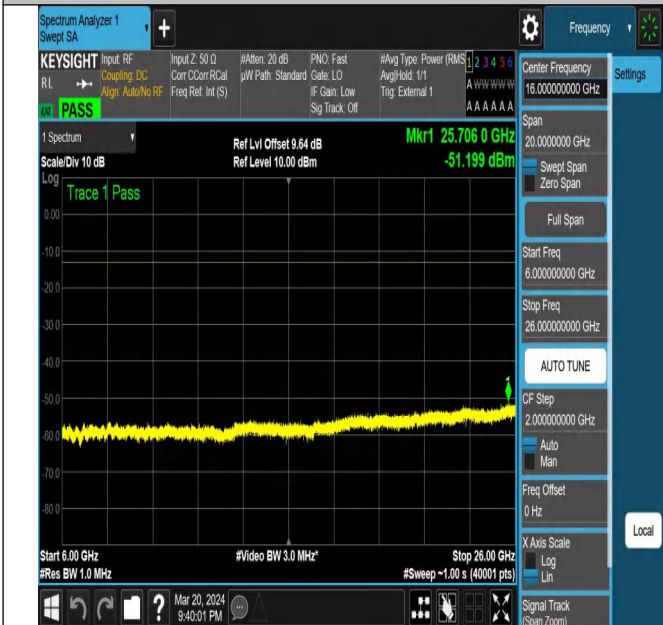


NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_


Right-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-80-M-DFT-QPSK-Edge_1RB_

 Right-Ant1-PASS

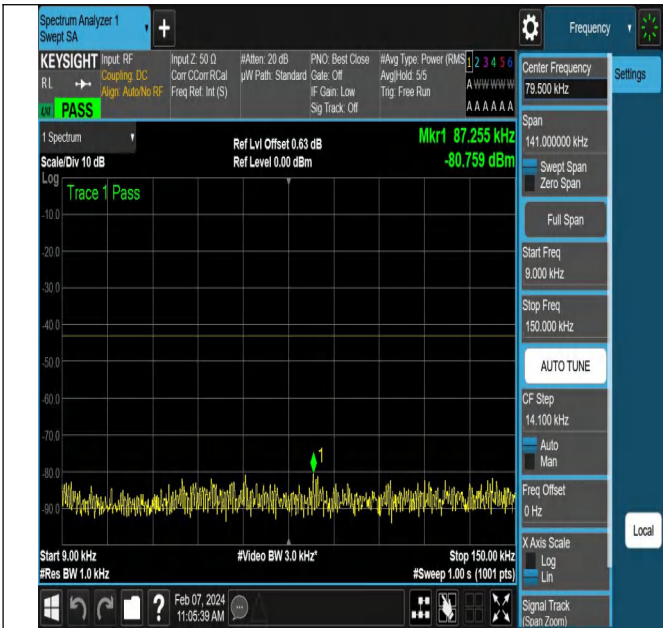

 NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

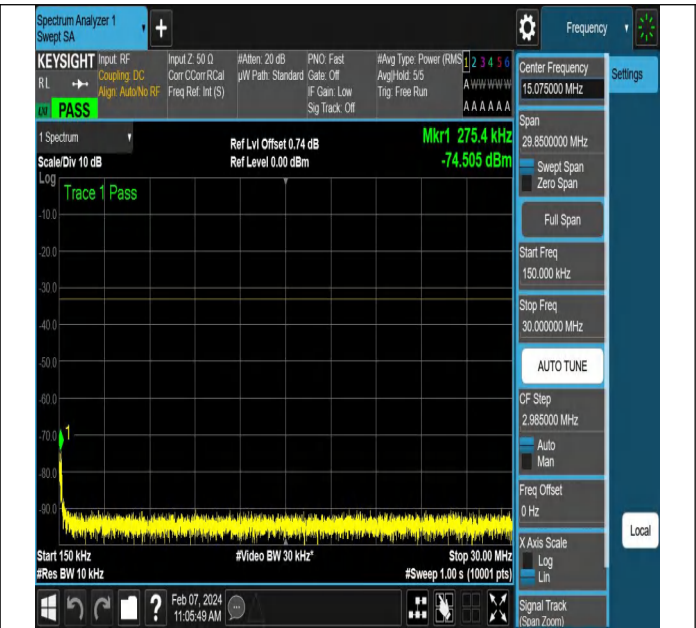


NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS




NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS



 NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

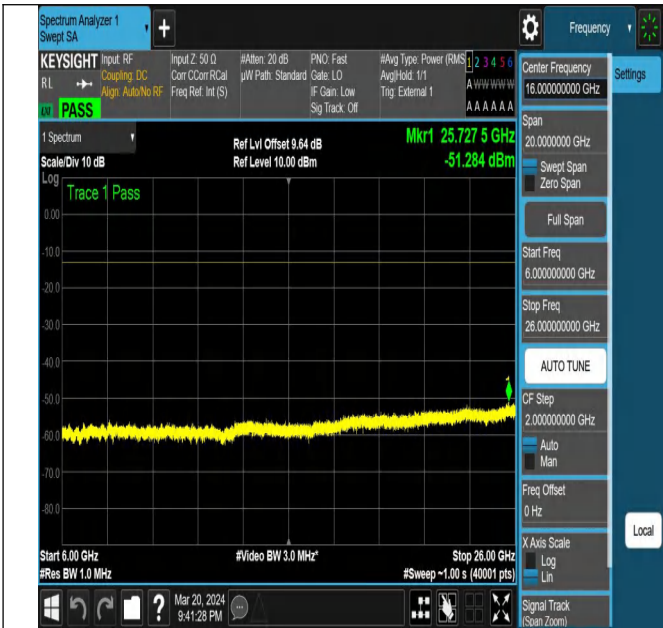

 
NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

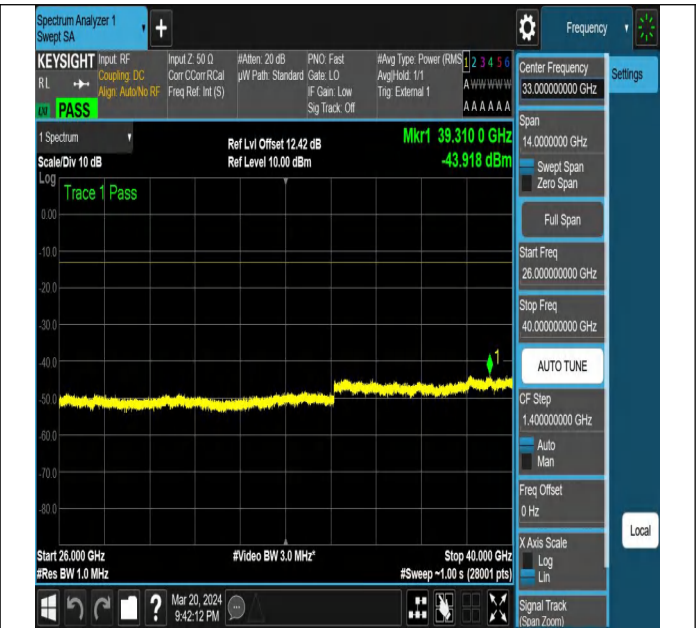


NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS



 NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Right-Ant1-PASS

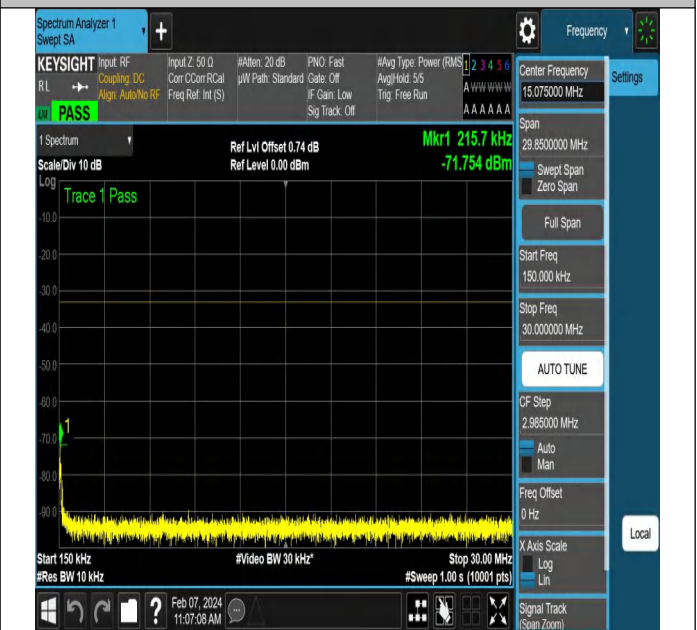

 
NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
B_Right-Ant1-PASS

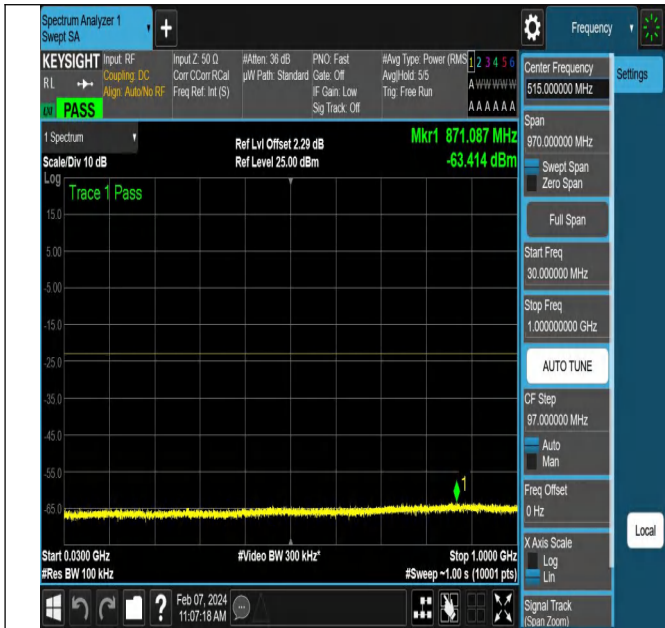


NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS




 
NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS

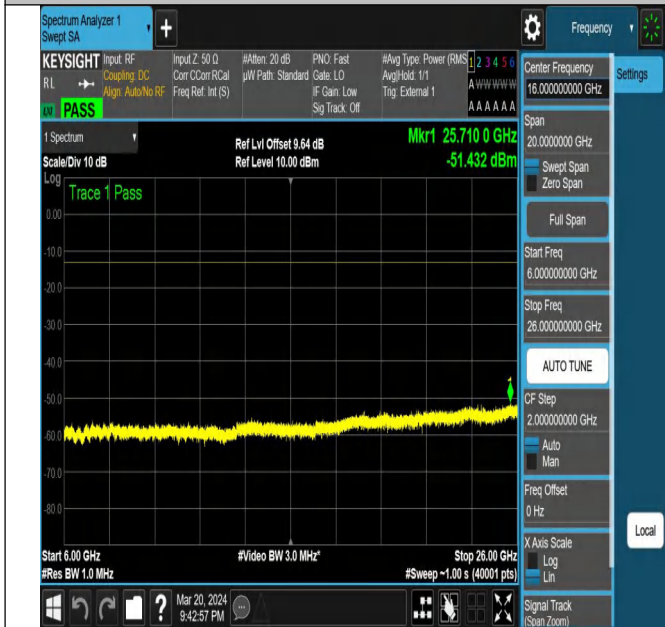

 NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS

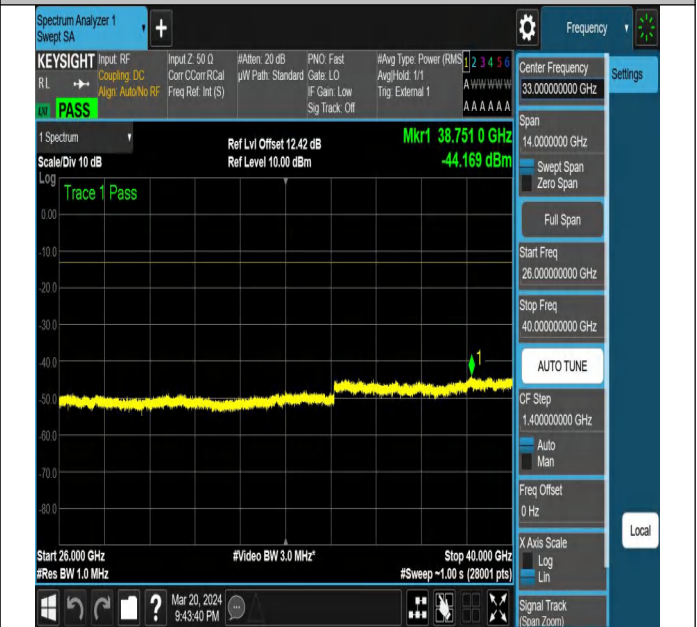

  NTNV-N77-3700-3980-PC2-30-80-H-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS

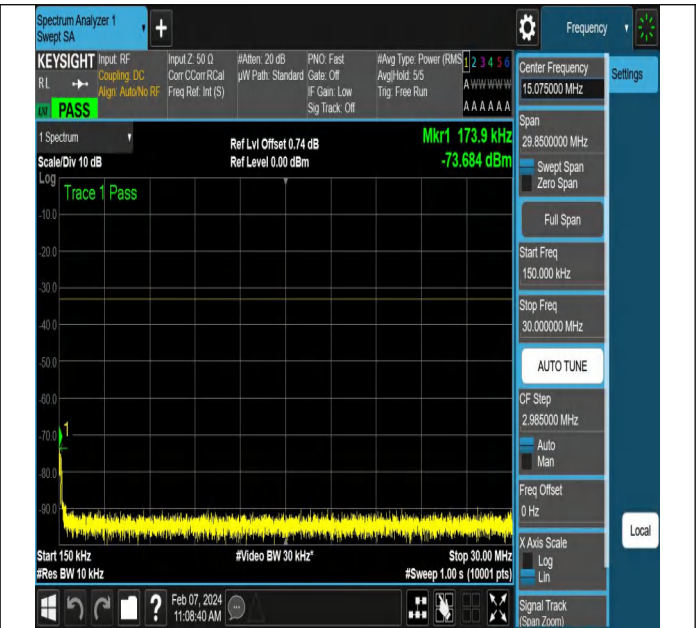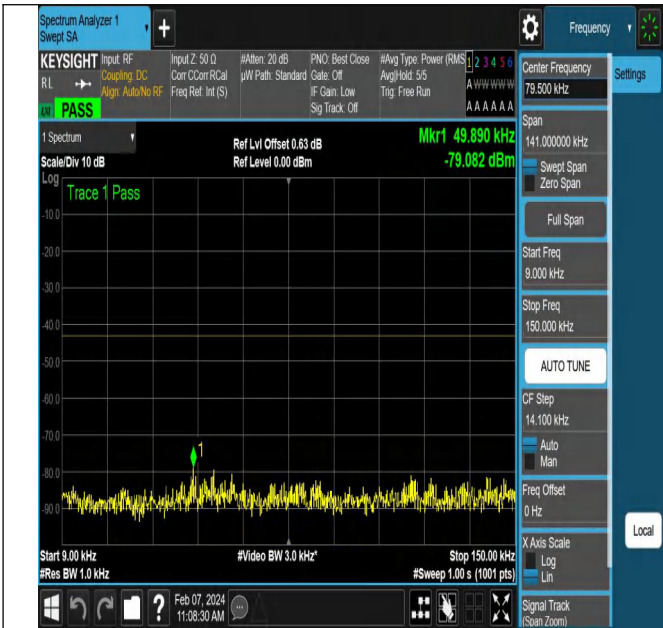

NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

Left-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

Left-Ant1-PASS

 


NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_


Left-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

Left-Ant1-PASS

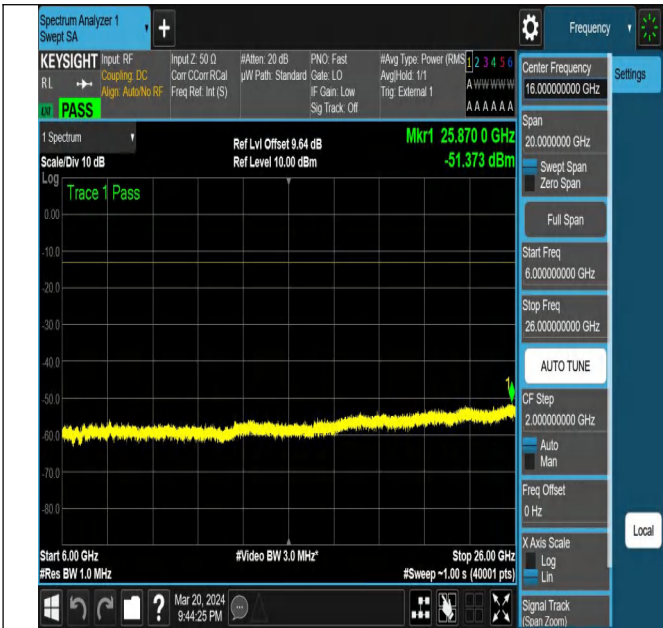

 
NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_
Left-Ant1-PASS

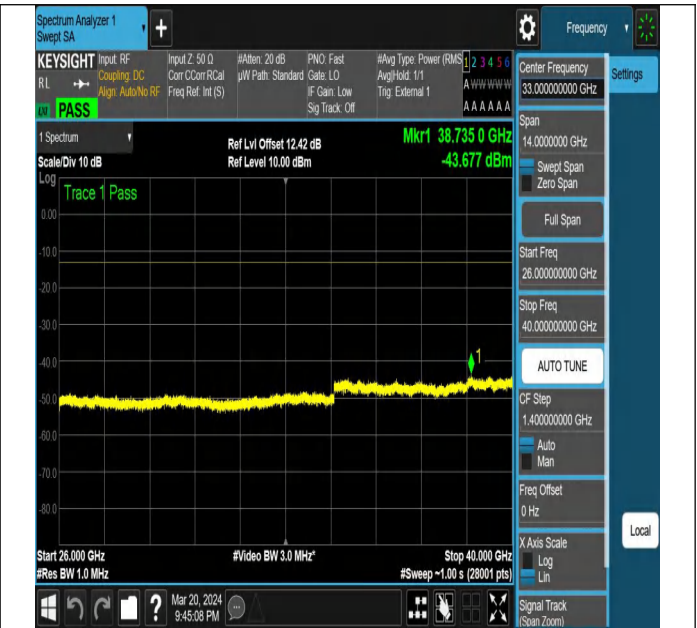


NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_
Left-Ant1-PASS



 NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_
Right-Ant1-PASS

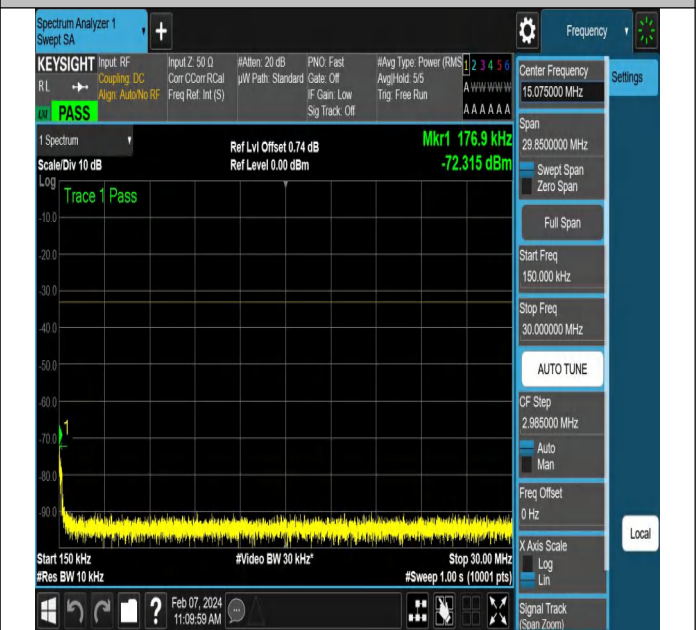

 NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_
Right-Ant1-PASS


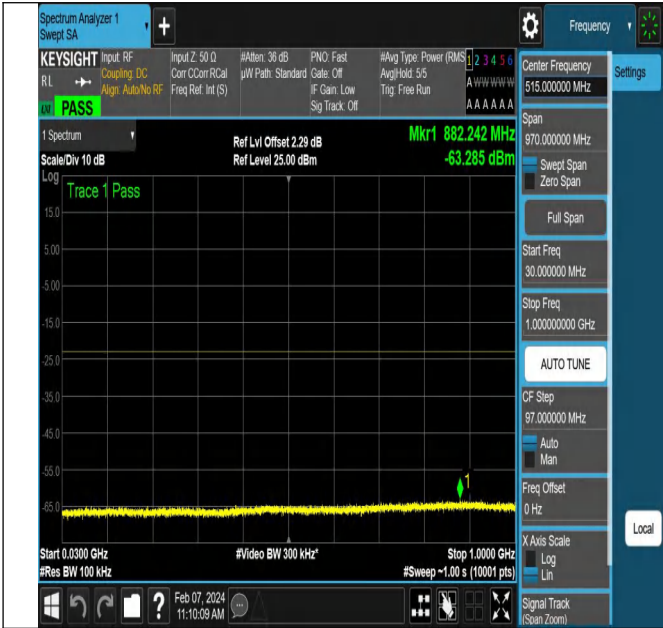


NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

Right-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

  Right-Ant1-PASS

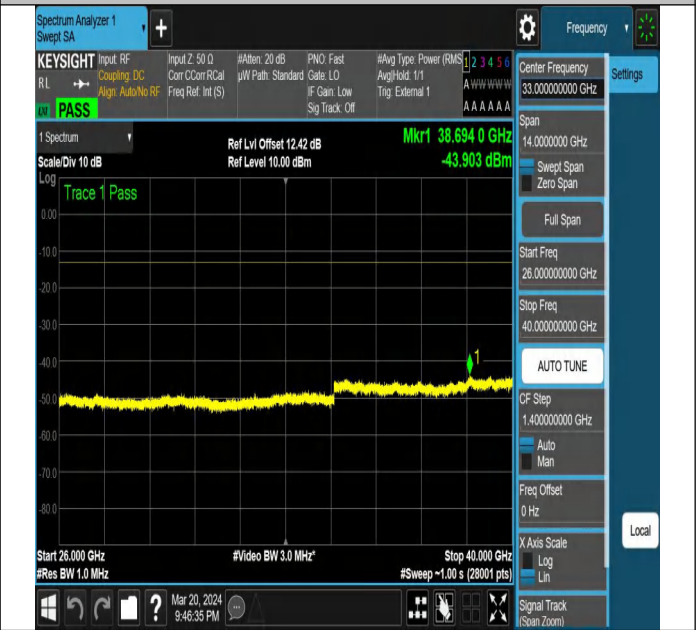
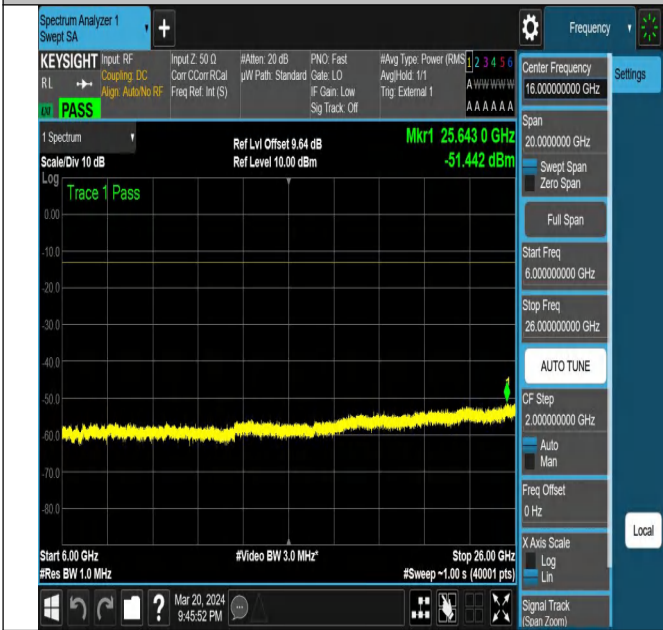


NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

Right-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-80-H-DFT-QPSK-Edge_1RB_

  Right-Ant1-PASS

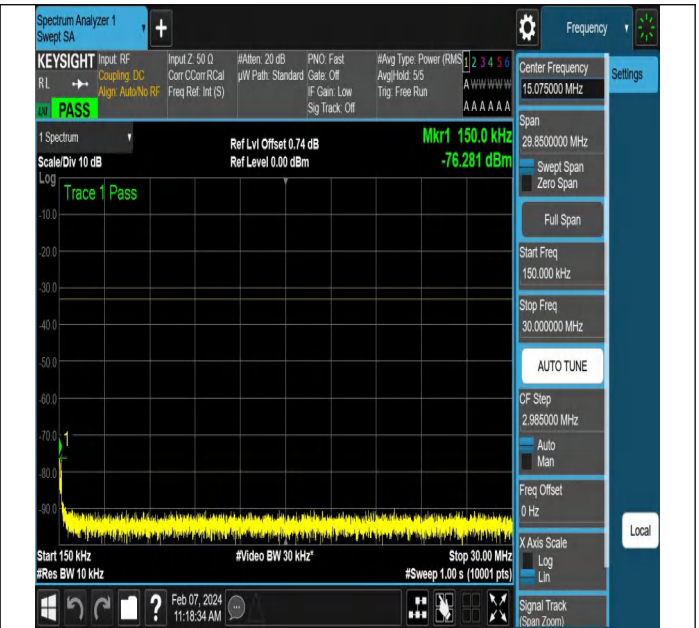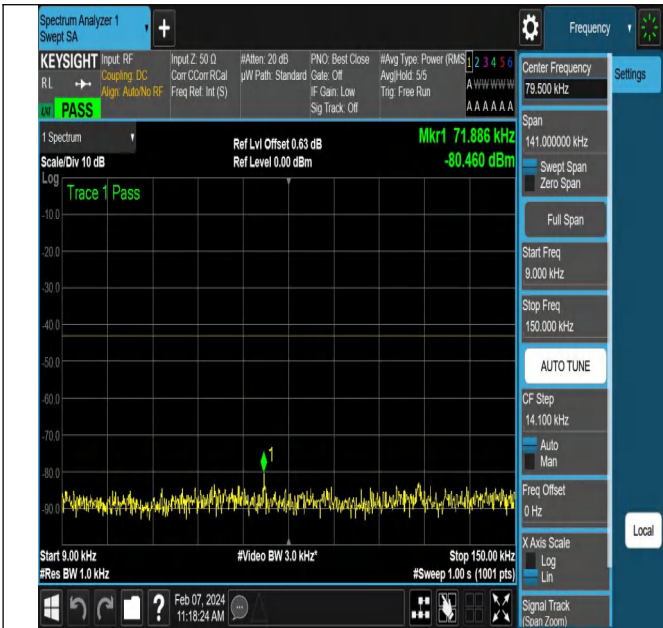

NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS

 


NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS


NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
B_Left-Ant1-PASS



NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
 B_Left-Ant1-PASS

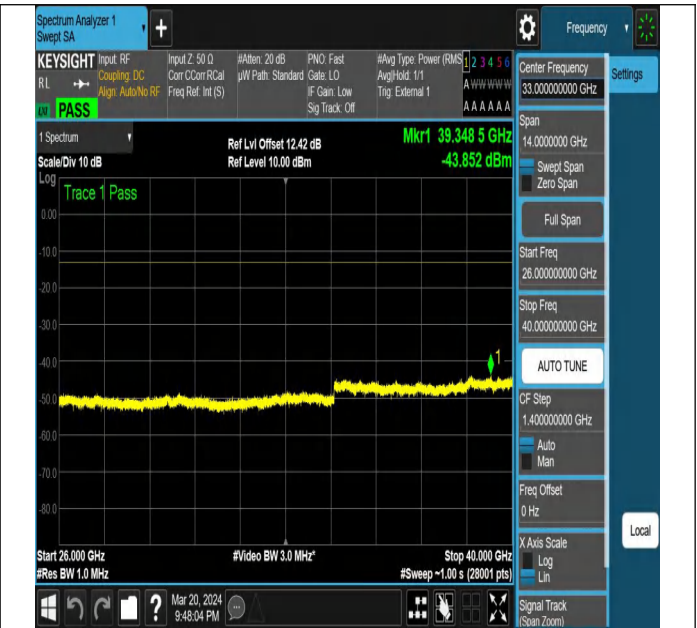


 
NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
 B_Left-Ant1-PASS

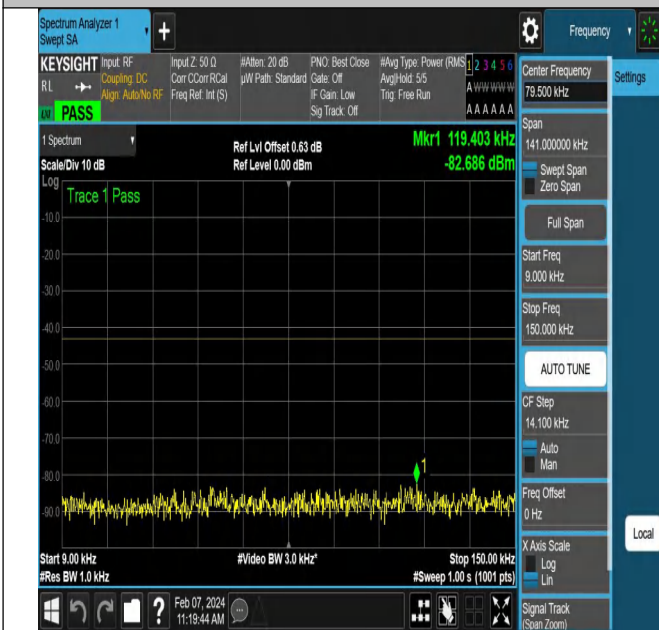

NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS



  NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R
 B_Right-Ant1-PASS

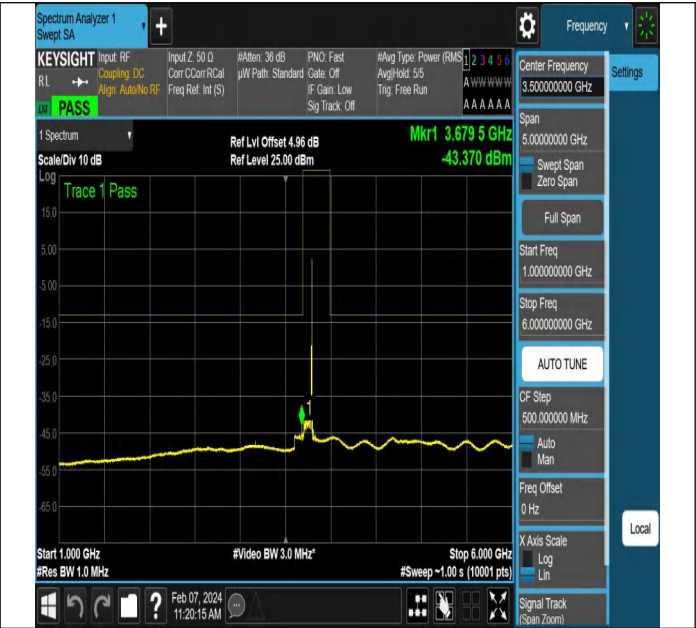
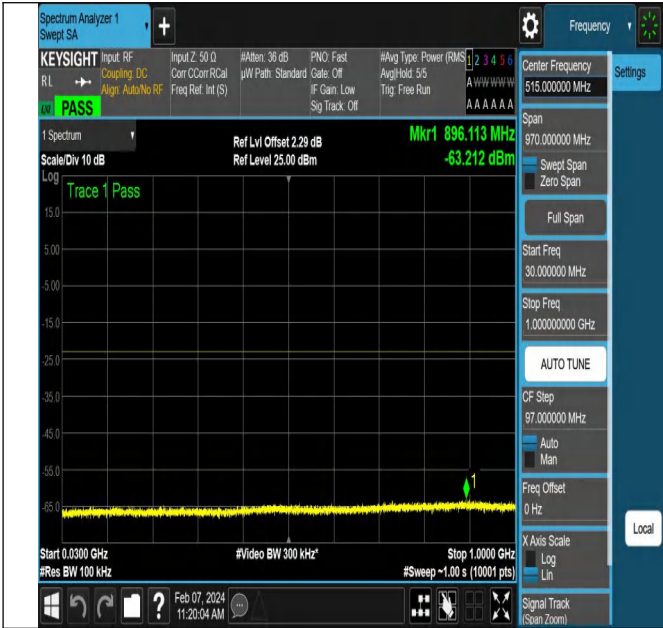


NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R

B_Right-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R

  B_Right-Ant1-PASS

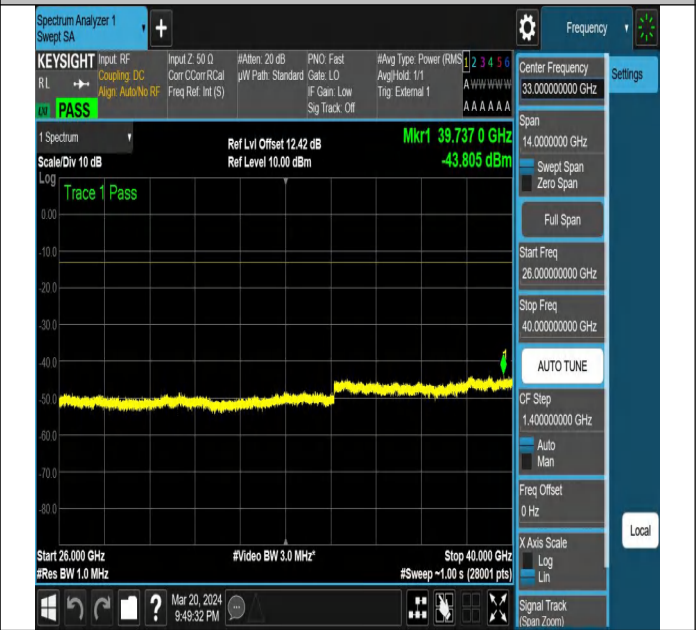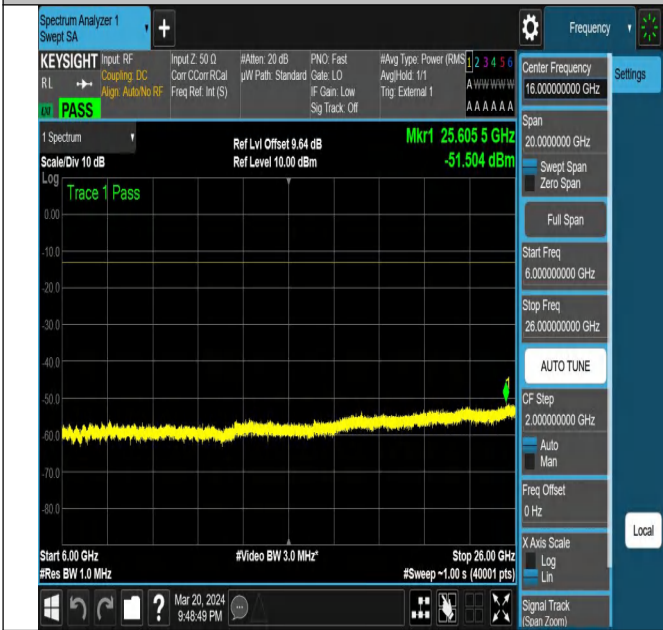


NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R


B_Right-Ant1-PASS

NTNV-N77-3700-3980-PC2-30-90-L-DFT-PI2BPSK-Edge_1R

 
B_Right-Ant1-PASS

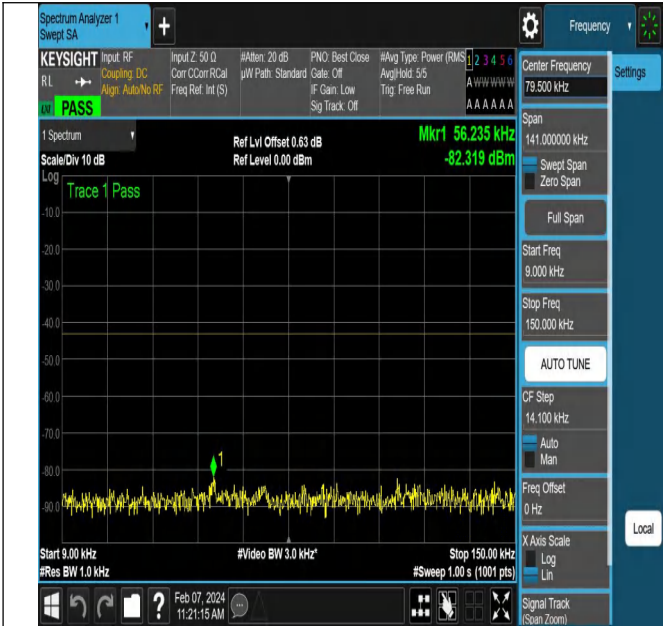

 NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS

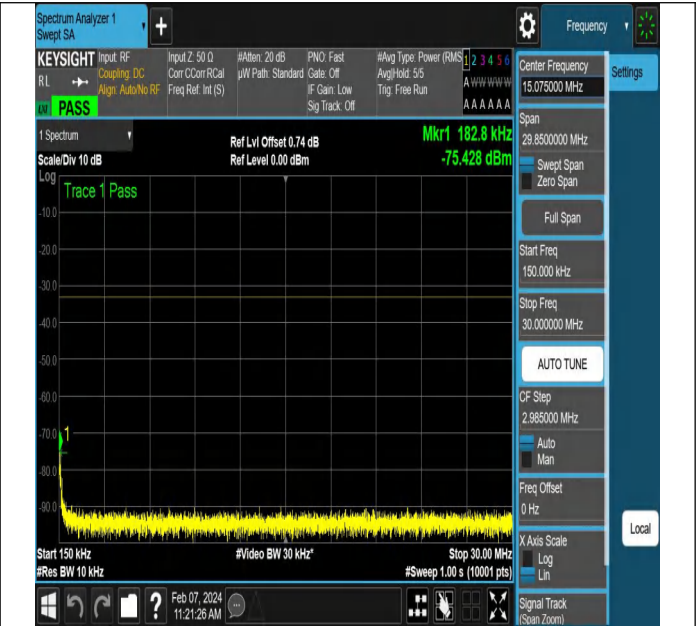

 NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS

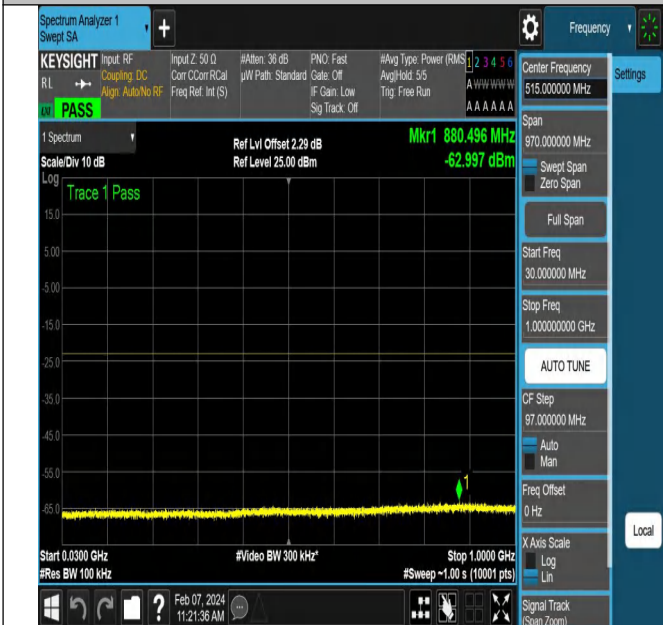


NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS




NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS



 
NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS

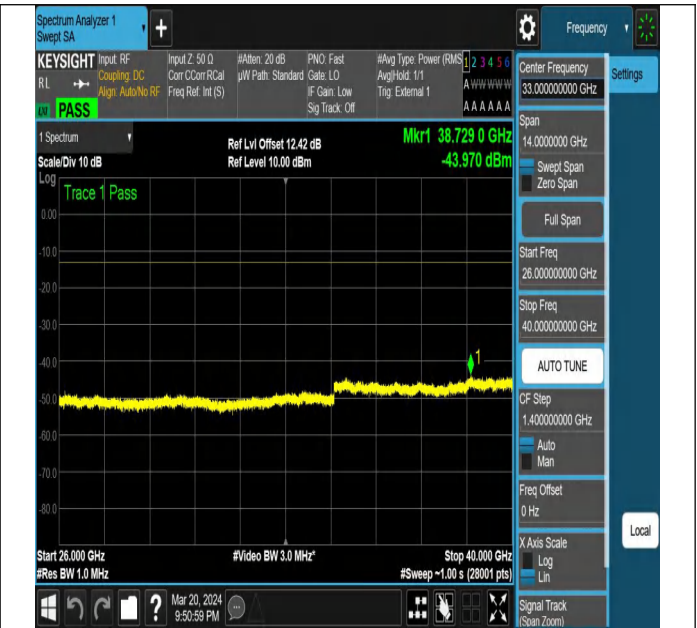

 NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_L
eft-Ant1-PASS

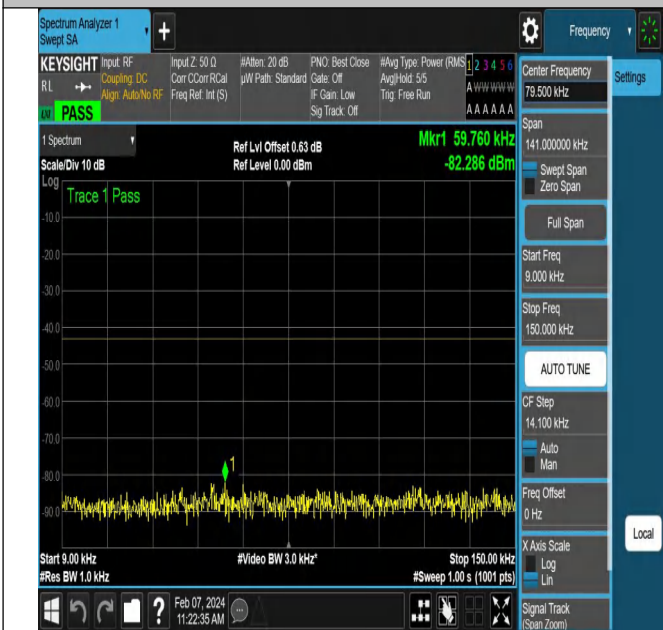

 NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_
Right-Ant1-PASS

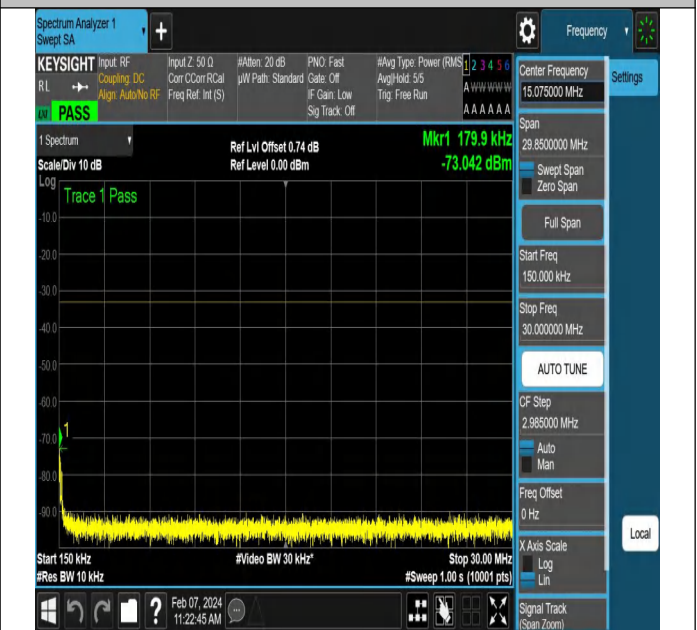

NTNV-N77-3700-3980-PC2-30-90-L-DFT-QPSK-Edge_1RB_
Right-Ant1-PASS