 


Channel Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **CHANNEL** in the main menu, it will highlight the option.

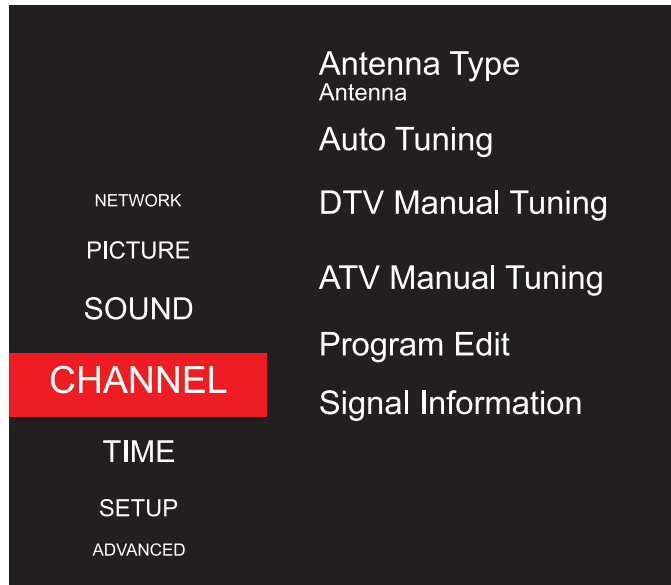

Antenna Type: Select the tuner mode between Antenna and Cable.

Auto Tuning: Select "Auto Tuning" to search the programs automatically. If you want to stop the auto tuning, press EXIT button. Then Select "Yes" to exit searching and "No" to continue searching.

DTV Manual Tuning: Search for the DTV programs manually. The search stops when a program is found and this program will be stored automatically. Press EXIT button to exit the searching. Before DTV manual search, you need to Select the desired UHF CH.

ATV Manual Tuning: Search for the ATV programs manually. When a program is found, press RED button to save it. Before ATV manual tuning, there are related items to be adjusted firstly, which differ by different sources as following instructions.

Program Edit: Edit the programs. You can delete programs, add programs to the favorite list, and so on.

 
Signal Information: Show the signal information of current DTV channel.

TV SETUP

Time Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **TIME** in the main menu, it will highlight the option.

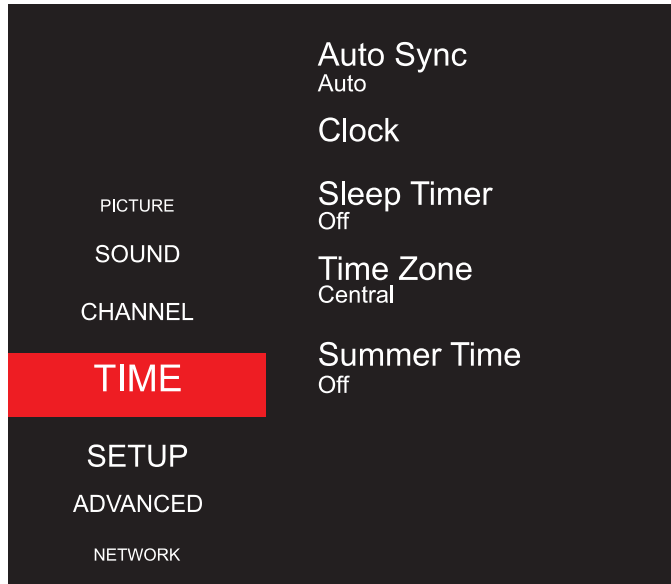

Auto Sync: Select the mode of auto sync to be "Auto" or "Manual".

Clock: Setup the TV clock. It is available only when Auto Sync is set to "Manual".

Sleep Timer: Set to turn off the TV set automatically. Choices are Off, 10, 20, 30, 60, 90, 120, 180 and 240 minutes.

Time Zone: Select the time zone. It is available only when auto sync is set to Auto.

 
Summer Time: Turn on or turn off the function of Summer Time.

TV SETUP

Setup Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **Setup** in the main menu, it will highlight the option.

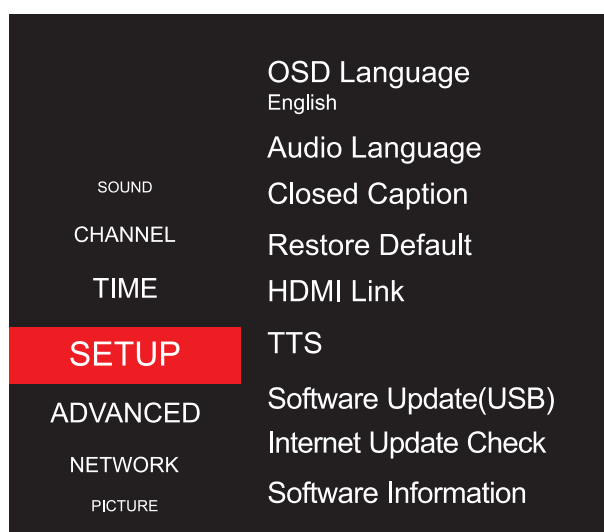

OSD Language: Select your desired OSD language.

Audio Languages: Set the primary or secondary digital audio language corresponding to the signal(Only for some regions).

Closed Caption: Setup the function of Closed Caption. You can set the options you want according to the menu options.

Restore Default: Restore Menu options to the factory defaults, and restart the initial setup.

HDMI Link (HDMI1): Command and control HDMI devices connected to the TV set. Please enter to the setup menu to turn it on.

TTS: Setup the function of Text-to-Sound.

Software Update (USB): Select to update Software from USB.

Internet Update Check: Update the software system by network connection.

Software Information: Show the current software information such as software version, etc.

App Settings: Setup for Netflix app, and show the software version.

Data Collection And Firmware Updates Notice: Read to accept or decline the "DATA COLLECTION AND FIRMWARE UPDATES NOTICE".

E-Manual: Select to enter the E-Manual to check the instructions of basic functions.

 
HDMI EDID: Switch the version of extended display identification data.

LOCATION: Select your TV environment.

Advanced Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select advanced in the main menu, it will highlight the option.

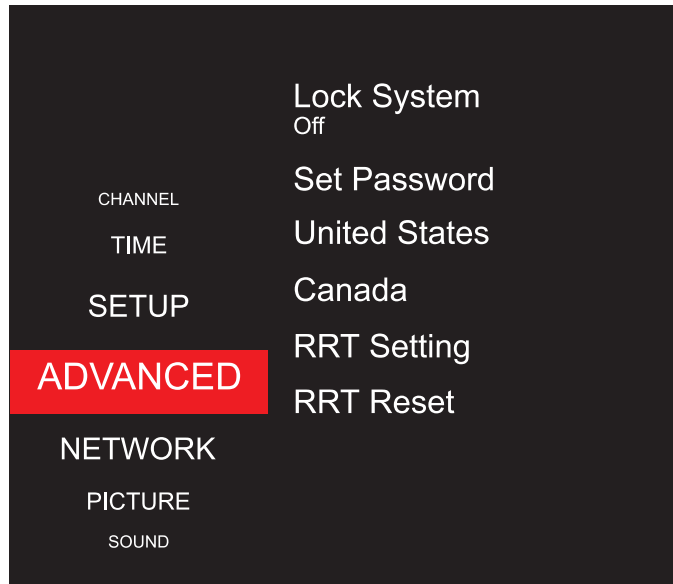

Input the initial password **"0000"** or your own password to access this feature, then press OK button to enter the following features.

Lock System: Select On to enable the following three menu items.

Set Password: Use to change the current Lock Password.

United States: Set united states rating.

Canada: Set canada rating.

RRT Setting: Adjust the settings of RRT(Region Rating Table).

RRT Reset: Reset the RRT settings to the defaults.

Note:

 
If you change the password and forget it, you can use the super password 8899 to enter the advanced system.

TV SETUP

Network Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select Network in the main menu, it will highlight the option.

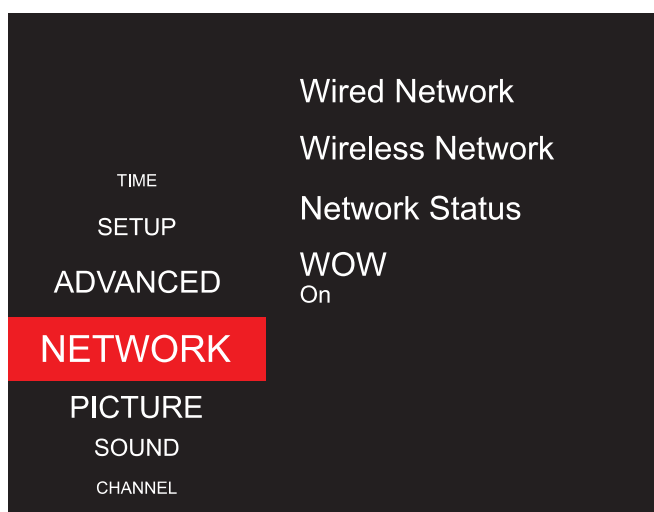

Wired Network:

1. Connect the network cable to the LAN port at the back of the TV.
2. Access main menu and select "NETWORK" sub-menu.
3. Select "Wired Network", and then select "Auto Input", wait a few seconds, the network configuration will be finished successfully.
4. You can also select "Manual Input" to input the network information manually to connect the wired Network.

Wireless Network:

1. Select "Wireless Network" and press OK button.
2. Read to accept or decline the Privacy Policy(Only for some regions).
3. Wait a few seconds, there will show a WLAN list. Select and press OK button to open the interface of inputting password.
4. Use navigation buttons to input the password, when finished, press the green button on the remote control to start the connection.

Network Status: You can check the detailed information of network connection herein.

WOW(Wake on WLAN): Turn on the TV from standby by WLAN connection.

USB Media Player

 
USB Media Menu

Note: Before operation MEDIA menu, Plug in USB device.

Press arrow button to select "MORE" in the Home Page, press "OK" button to enter sub-menu. Then press ◀/▶ button to select Media Player in this menu. Press "OK" button to enter.

Press ◀/▶ button to select the option you want to adjust in the main Media menu, then press "OK" button to enter.


Support format: JPEG, BMP and PNG for photo. MPG, MPEG, MP4, MKV, AVI and FLV for Movie, MP3 for music.

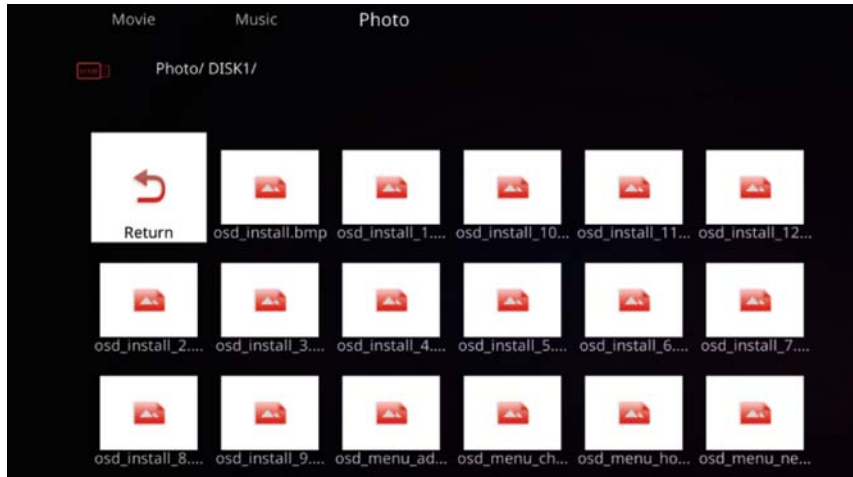

Movie Menu

Press ◀/▶ button to select Movie in the main menu, then press "OK" button to enter.

 Press menu button to return back to the previous menu and exit menu to quit.

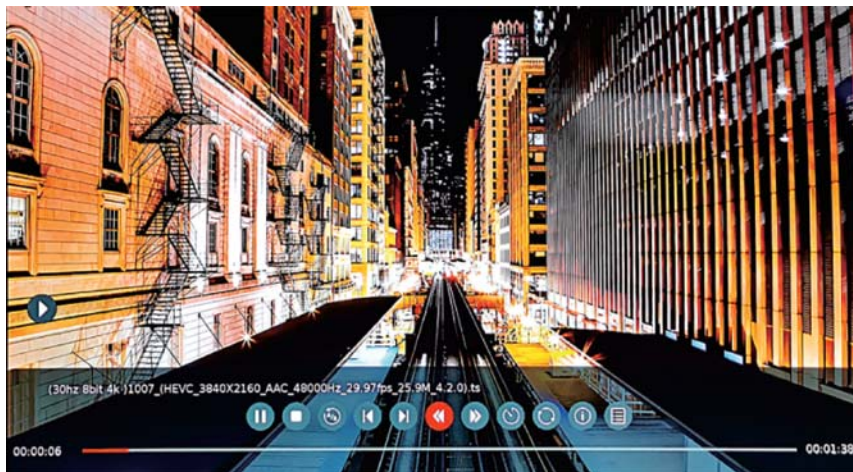


Press ◀/▶ button to select the file you want to watch in the file selecting menu, then press "OK" button to start playing, press media button to display and operate file details.

USB Media Player

Music Menu

 
Press ◀/▶ button to select music in the main menu, then press “OK” button to enter.
Press menu button to return back to the previous menu and exit menu to quit.

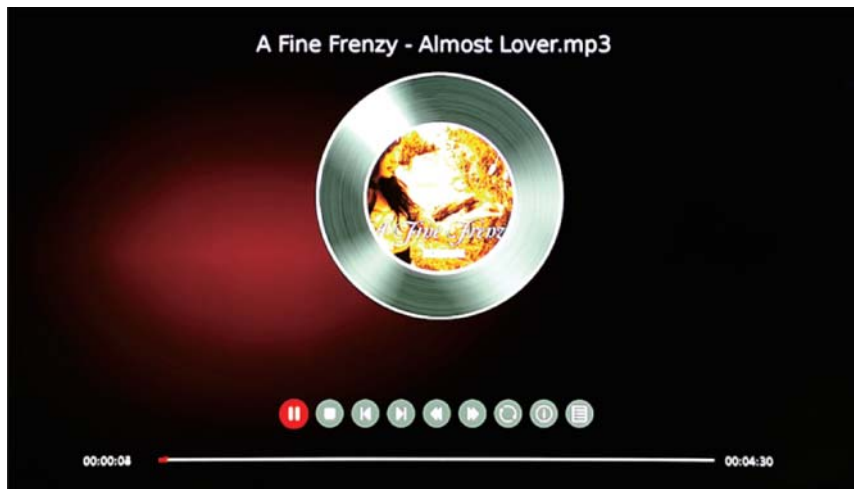

Press ◀/▶ button to select the file you want to listen to music in the file selecting menu, then press “OK” button to start playing, press media button to display and operate file details.

Photo Menu

 Press ◀/▶ button to select photo in the main menu, then press “OK” button to enter.
Press menu button to return back to the previous menu and exit menu to quit.

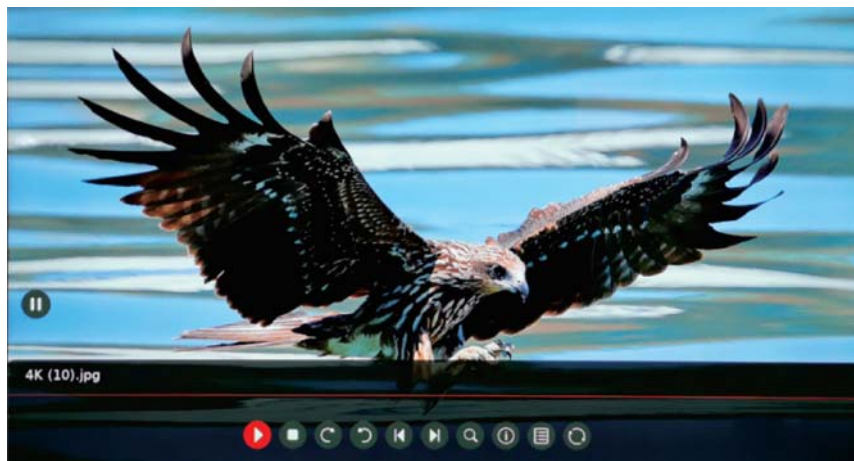


Press ◀/▶ button to select the file you want to watch in the file selecting menu, then press “OK” button to start playing, press media button to display and operate file details.

NOTE: It can not play TEXT format.

Smart TV Operation

Press **HOME** button on the remote control to enter the Main Launcher.

 Press the arrow buttons ◀/▶ to select the APP, then press “**OK**” button to enter.

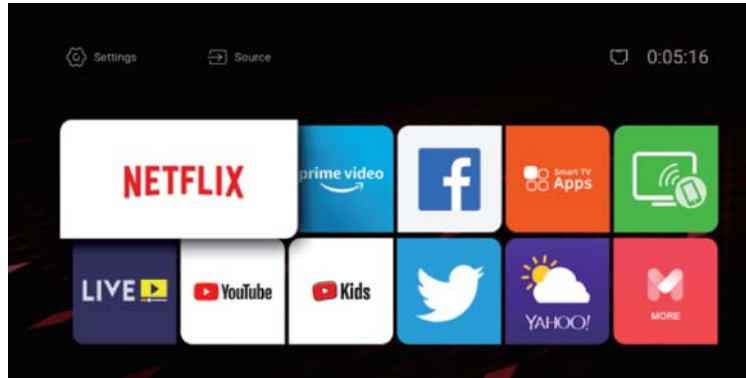

Note: Depending on the country where the TV is installed, certain apps may not be available.

NETFLIX

Press the arrow buttons ◀/▶ to select the netflix, then press “**OK**” button to enter.

 
After enter the NETFLIX you can see below login interface, input your account and password, press "OK" button, then you can enjoy the NETFLIX resources.



prime video

Press the arrow buttons ◀/▶ to select the Prime video, then press “**OK**” button to enter.

After enter the Prime video you can see below login interface, Complete the relevant operations based on the information on the screen, then you can enjoy the Prime video resources.

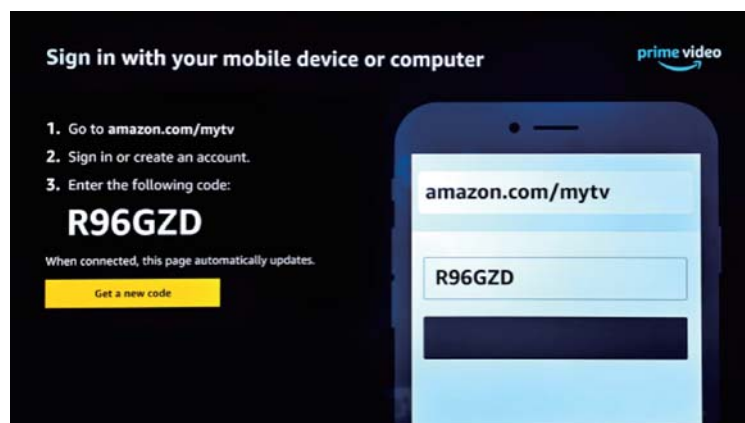

Smart TV Operation

 


Press the arrow buttons ◀/▶ to select the Facebook, then press “OK” button to enter.

After enter the FACEBOOK you can see below login interface with 8 random code, first pls visit <http://www.facebook.com/device> on your smart phone or computer and enter this code.

Second input your facebook account and password then login in.


Third enter the 8 random code which marked in the first picture. Then you can success to use facebook.

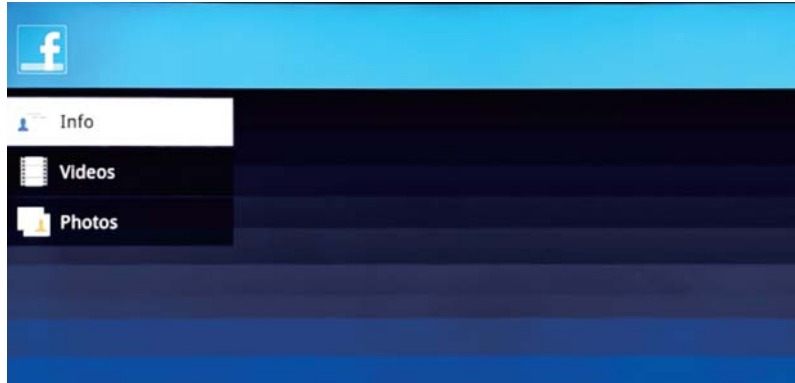

YouTube Press the arrow buttons ◀/▶ to select the Youtube, then press “OK” button to enter.


Use arrow button to select one video and press “OK” key to play. Press “Menu” key to exit playing.

 Press the arrow buttons ▲/▼ to open or close control menu when playing.

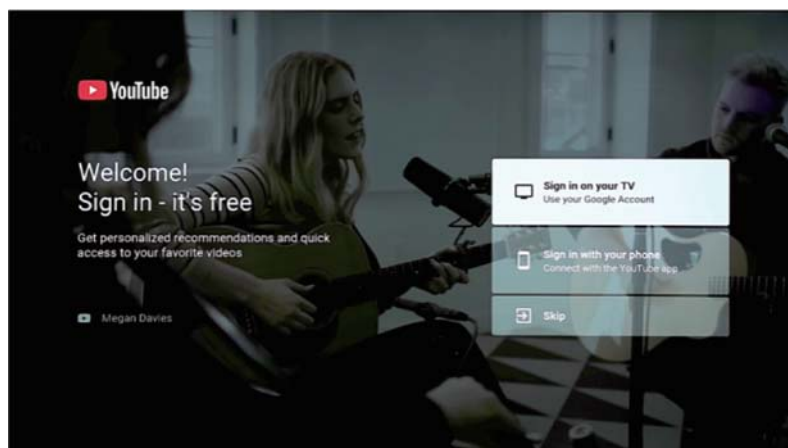

Press the arrow buttons ◀/▶ to select the twitter, then press “OK” button to enter.

 
After enter the twitter you can see below login interface, input your account and password, press "OK" button, then you can enjoy the twitter resources.

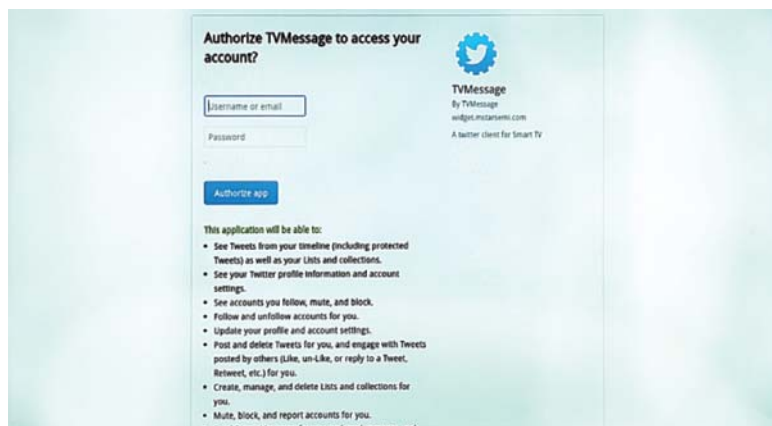


Smart TV Operation

 Press the arrow buttons ◀/▶ to select the Kids, then press “OK” button to enter.

 After enter the kids you can see below login interface, You can choose the operation you want according to the screen information.

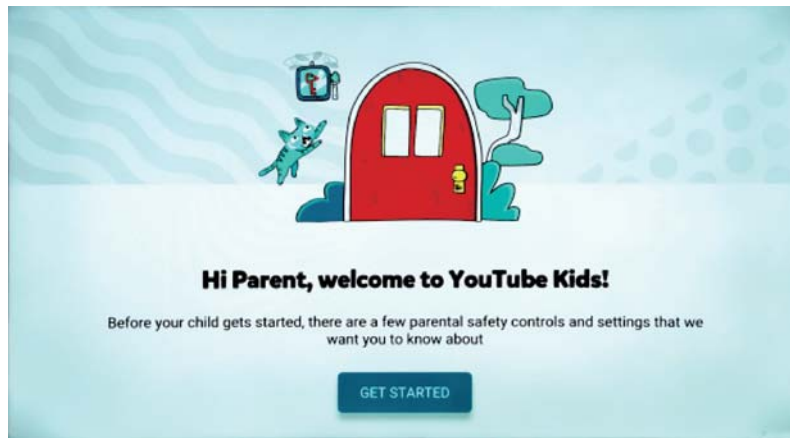

 Press the arrow buttons ◀/▶ to select the mirashare, then press “OK” button to enter.

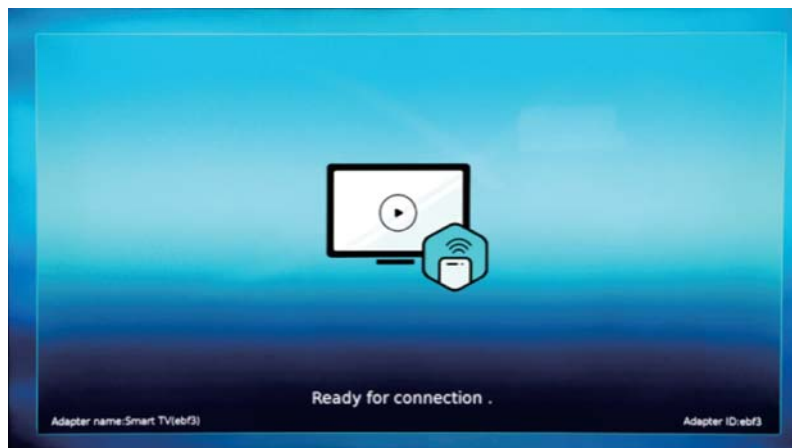

Press the arrow buttons ◀/▶ to select the Yahoo, then press “OK” button to enter.

Input a city or zip code press select to get the weather information.



DISPLAY MODE

VIDEO FORMATS

SUPPORTED COMPONENT / HDMI INPUT MODE			
Resolution	Horizontal Scanning Frequency (KHz)	Vertical Scanning Frequency (Hz)	Format
720 X 480	15. 73	59. 94	480 i
720 X 480	31. 5	59. 94	480 p
1280 X 720	45	60	720 p
1920 X 1080	33. 75	60	1080 i
1920 X 1080	27	24	1080 p
1920 X 1080	67. 50	60	1080 p
3840 X 2160	53.9	24	2160p
3840 X 2160	67.5	30	2160p
3840 X 2160	134.5	60	2160p

NOTE:

The above listed formats are also related to the AV devices you are about to connect. Before you connect this unit with others please read all instructions carefully and make sure all necessary cables are connected.

This unit may be incompatible with some other formats which are not meet the above conditions.

SPECIFICATION

Model Description		70"LED TV
Panel	Panel Type	LED Panel
	Diagonal Size	70inches
	Screen Format	16:9
	Resolution	3840 x 2160
	Brightness	300 cd/m ²
	Contrast	4000:1
	View Angle	176(H)/176(V)
	Response Time	8.0ms
	Maximum Color	16.7M colors
Systems	Color System	NTSC/ATSC
	Sound System	M/MTS
	Sound Output	L/R Speaker: 10W+10W
Input / Output Jacks	RF Input	75 ohm external terminal
	HDMI Input	480i, 480p, 720p, 1080i, 1080p, 2160p.
		HDMI1(2.0), HDMI2(2.0), HDMI3(2.0)
	Composite Video Input	1.0 Vp-p, 75ohms
	Sound Input	AV AUDIO: For CVBS/COMPONENT Audio input 500mV rms, Impedance: 20k ohms
	Digital audio out	S/PDIF Optical
Power	USB Port	Media player
	Power Requirement	100-120V~60Hz
	Rated Power Consumption	110W

This manual is only for your reference.
Specifications are subject to update without prior notice.

TROUBLESHOOTING GUIDE

SYMPTOM

CAUSE (AND REMEDY)

TV

Bad Picture (snow, multiple images distortion, blurry)

- Check the location of the antenna and adjust it if necessary.
- Make sure the antenna cable is firmly connected.
- Make sure all input cables are firmly connected.

No sound.

- Increase the volume.
- Check whether the mute function has been activated on the Remote Control.

Black and White picture.

- Check the PICTURE setting within the PICTURE menu.
- Check to make sure the program you are watching is broadcast in Color and not Black & White.

No picture or sound.

- Make sure the unit is plugged in and turned on.
- Make sure that the ATV mode is selected.
- Try a new channel to check for possible station trouble.
- Make sure the antenna is connected properly.
- Increase the volume.
- Make sure the antenna or audio/video source device is working properly.
- Make sure all cables are firmly connected.
- Check for local interference.

Colored patches of picture.

- Make sure there are no unshielded electrical devices nearby that are causing interference.
- Turn the TV off for 30 minutes, then try it again.

Panel function key does not respond correctly.

- Under the influence of electrostatic phenomenon, the product may malfunction and require user power reset.
- Unplug and re-plug the AC power cord.

The display monitor's panel goes hot.

- LED TV takes inside light phosphor. It may increase the temperature of the screen in some occasions. It's not a defect.

Unusual dots

- Black dots and Bright points may appear on the LED screen. This is a structural property of the LED panel and is not a defect.

Stripes on screen

- Adjust the impulse phase may decrease stripes. RGB in

The top of the monitor gets hot.

- It may occur during long-time working. It's not a defect.

Unable to select a certain channel.

- The channel may be skipped. Choose this channel by directly selecting the buttons from the remote control.

Disorder display at power on.

- This may be caused because of a very short interval between POWER OFF and ON.
- Unplug the power and restart.

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

1 Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.



MANUEL D'UTILISATION

Avant d'utiliser le TV, veuillez lire attentivement ce manuel et le conserver pour référence ultérieure.



Model: RNSMU7040



“Ce produit est fabriqué et vendu par Curtis International Ltd.

RCA, le logo de la RCA, le logo de deux chiens (Nipper et Chipper), sont des marques déposées ou des marques déposées de marque RCA Gestion et sont utilisés sous licence par Curtis International Ltd.

Tout autre produit, service, entreprise, commerce ou produit nom et le logo mentionnés aux présentes ne sont ni approuvés ni sponsorisés par Gestion de marque RCA ou de ses filiales.”

CONTENU

1	MISES EN GARDE DE SÉCURITÉ		1
2	CONSIGNES DE SÉCURITÉ IMPORTANTES		2
3	ACCESSOIRES		3
4	PRÉPARATIF		3
5	GUIDE DE RÉFÉRENCE DES COMMANDES	Télécommande	4
		Vue De Devant	5
		Vue De Côté	5
		Vue Arrière	6
6	MONTAGE MURAL		7
7	CONNEXIONS	Installation	8
		Connexion Antenne	9
		Connexion AV	9
		Connexion HDMI	10
		Branchement du cordon d'alimentation	10
		Connexion Optical audio output	11
8	INSTALLATION RAPIDE	Mise De L'appareil Dans Une Place Propre	12
		Mise En Circuit Initiale De L'appareil	12
		Sélection De Source	12
9	RÉGLAGE INITIAL DU TÉLÉVISEUR	Menu Image	13
		Menu Son	14
		Menu Canal	15
		Menu horaire	16
		Menu des paramètres	17
		Menu avancé	18
Menu Réseau	19		

CONTENU

10	Lecture Média USB		20
11	OPÉRATION DE TV INTELLIGENT		22
12	MODE D’AFFICHAGE	Formats Vidéo	25
13	CARACTÉRISTIQUES		26
14	GUIDE DE PANNAGE	Symptôme TV	27
15	GÂRÂNTIE LIMITÉE		28

** Les images, fonctions et autres informations fournies dans ce manuel sont fournies à titre indicatif. S'il ne correspond pas à l'objet réel, veuillez vous reporter au produit réel.*

MISES EN GARDE DE SÉCURITÉ

LA MARQUE DE PRUDENCE A ÉTÉ LOCALISÉE EMPLACEMENT À LA CLOTURE INFÉRIEURE DE L'APPAREIL.



AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'UN CHOC ÉLECTRIQUE, NE PAS RETIRER LE OUVERCLE(NI LE DOS). AUCUNE PIÈCE NÉCESSITANT L'ENTRETIEN PAR L'UTILISATEUR À L'INTÉRIEUR. POUR RÉPARATION, S'ADRESSER À UN RÉPARATEUR QUALIFIÉ.



Le symbole de la foudre et d'une flèche l'intérieur d'un triangle qui pointe vers le haut signale qu'il y a une « tension dangereuse » non isolée l'intérieur de l'appareil, suffisamment élevée pour causer un choc électrique.



Le point d'exclamation l'intérieur d'un triangle qui pointe vers le haut signale qu'il y a des instructions importantes de fonctionnement et d'entretien (réparation) dans la documentation qui accompagne cet appareil.



MISE EN GARDE:

-POUR RÉDUIRE LE FEU D'ORIGINE À RISQUE OU DÉCHARGE ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL POUR PLEUVOIR OU HUMIDITÉ.

-EN CAS DE PROBLÈME, DÉBRANCHEZ LE CORDON D'ALIMENTATION CA ET ADRESSEZ-VOUS À UN PERSONNEL DE RÉPARATION QUALIFIÉ.



AVERTISSEMENT:

-POUR RÉDUIRE LE FEU D'ORIGINE À RISQUE OU DÉCHARGE ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL POUR PLEUVOIR OU HUMIDITÉ.

-POUR ÉVITER LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUES, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ. NE PAS PLACER DES OBJETS REMPLIS DE LIQUIDE SUR L'APPAREIL OU À PROXIMITÉ DE CELUI-CI.

-EN CAS DE PROBLÈME, DÉBRANCHEZ LE CORDON D'ALIMENTATION CA ET ADRESSEZ-VOUS À UN PERSONNEL DE RÉPARATION QUALIFIÉ.

EMPLACEMENT

-N'utilisez pas l'appareil dans les endroits extrêmement chauds, froids, poussiéreux ou humides.

-Laissez l'air circuler librement autour de l'appareil.

Ne le couvrez pas avec du tissu et ne le placez pas sur un tapis ou de la literie.

SECURITÉ

-Lorsque vous branchez et débranchez le cordon CA, tenez la fiche et non le cordon. Le triage du cordon peut l'endommager et créer un risque.

-Débranchez le cordon d'alimentation CA si vous n'allez pas utiliser l'appareil pendant une longue période de temps.

ENDROIT DE PLAQUE DE MODÈLE

La plaque de modèle est située sur le dessous de l'appareil.

RENSEIGNEMENTS FCC

REMARQUE: Cet appareil a été soumis des tests et s'est révélé en conformité avec les limites pour un appareil numérique de classe B, conformément à la section 15 des règles de la FCC. Ces limites ont pour but d'assurer une protection raisonnable contre les interférences gênantes dans une installation résidentielle. Cet appareil génère, utilise et peut mettre des fréquences radioélectriques, et s'il n'est pas installé et utilisé selon les instructions, il peut causer des interférences nuisibles aux radio communications. Cependant, il n'y a pas de garantie que des interférences ne se produiront pas dans une installation donnée. Si cet appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en mettant l'appareil en et hors circuit, nous conseillons l'utilisateur l'une ou plusieurs des mesures correctives suivantes:

-Reorientez ou changez l'emplacement de l'antenne de réception.

-Augmentez la séparation entre l'appareil et le récepteur.

-Branchez l'appareil dans une prise sur un circuit différent de celui sur lequel le récepteur est branché.

-Adressez-vous au distributeur ou à un technicien qualifié de radio/téléviseur pour obtenir de l'aide.



AVERTISSEMENT:

Dès changements ou modifications apportés à cet appareil, non approuvés expressément par les responsables de la conformité. Pouvant être l'utilisateur le droit d'utiliser cet appareil.

HDMI®

HIGH-DEFINITION MULTIMEDIA INTERFACE

"HDMI, le logo HDMI et High-Definition Multimedia Interface sont des marques commerciales ou des marques déposées de HDMI Licensing LLC."



Cet équipement est un appareil électrique de classe II ou à double isolation. Il a été conçu de sorte à ne pas nécessiter une connexion de sécurité mise à la terre.