

# IRIS-W1 - Block diagrams

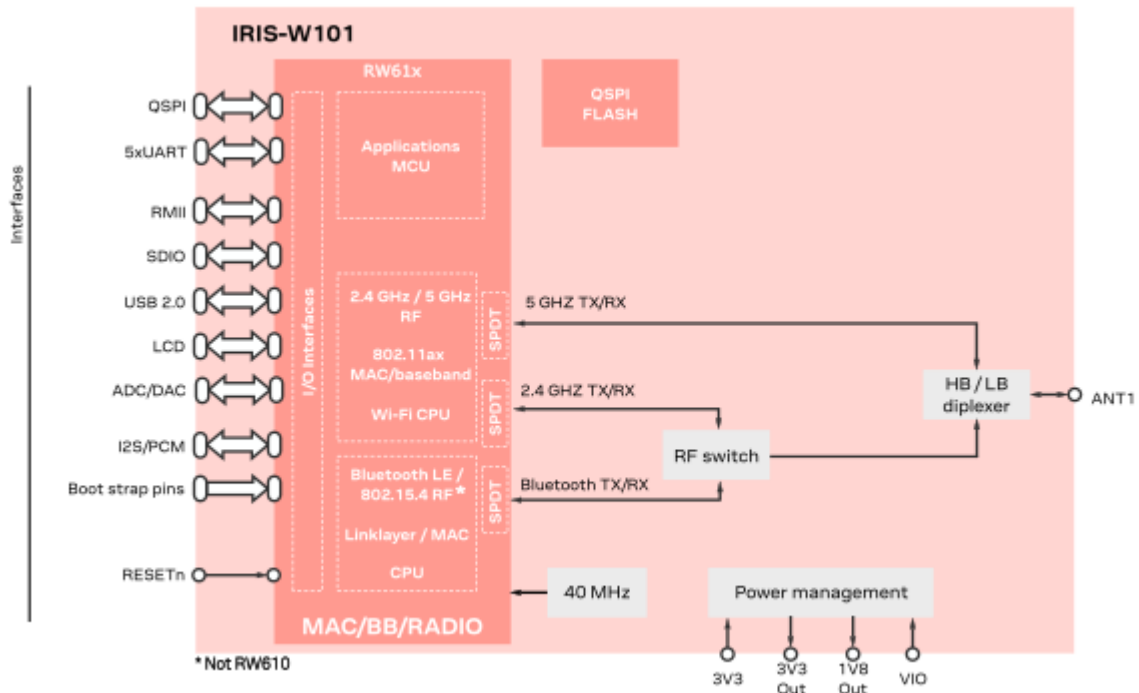


Figure 1: Block diagram for IRIS-W101-00B (RW612), IRIS-W101-10B (RW612), IRIS-W101-30B (RW610)

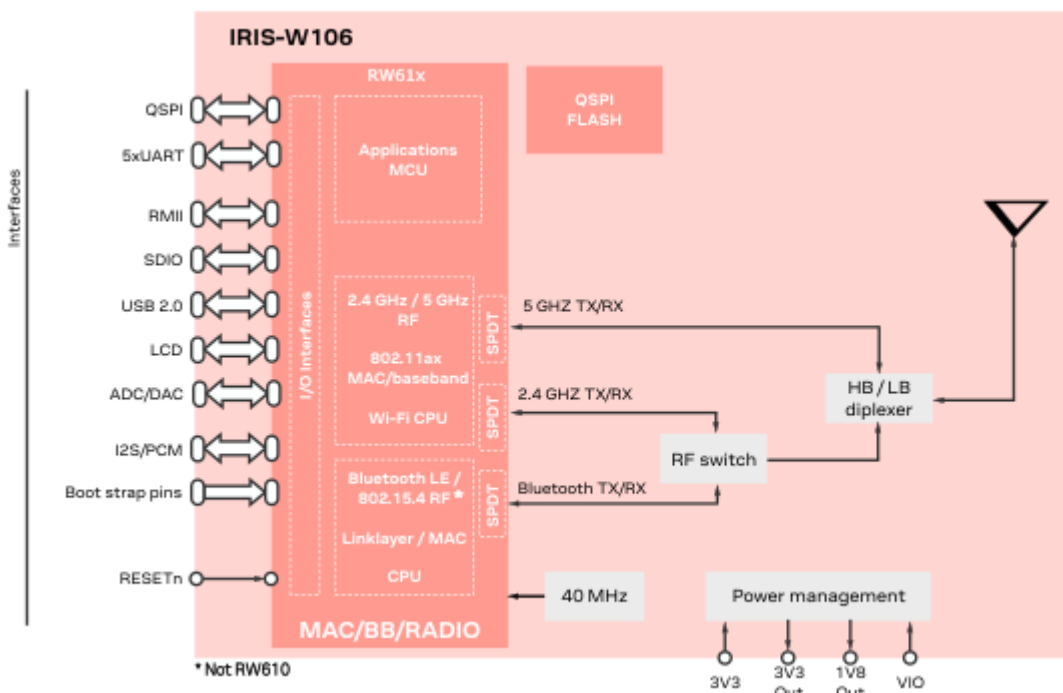


Figure 2: Block diagram for IRIS-W106-00B (RW612), IRIS-W106-10B (RW612), IRIS-W106-30B (RW610)

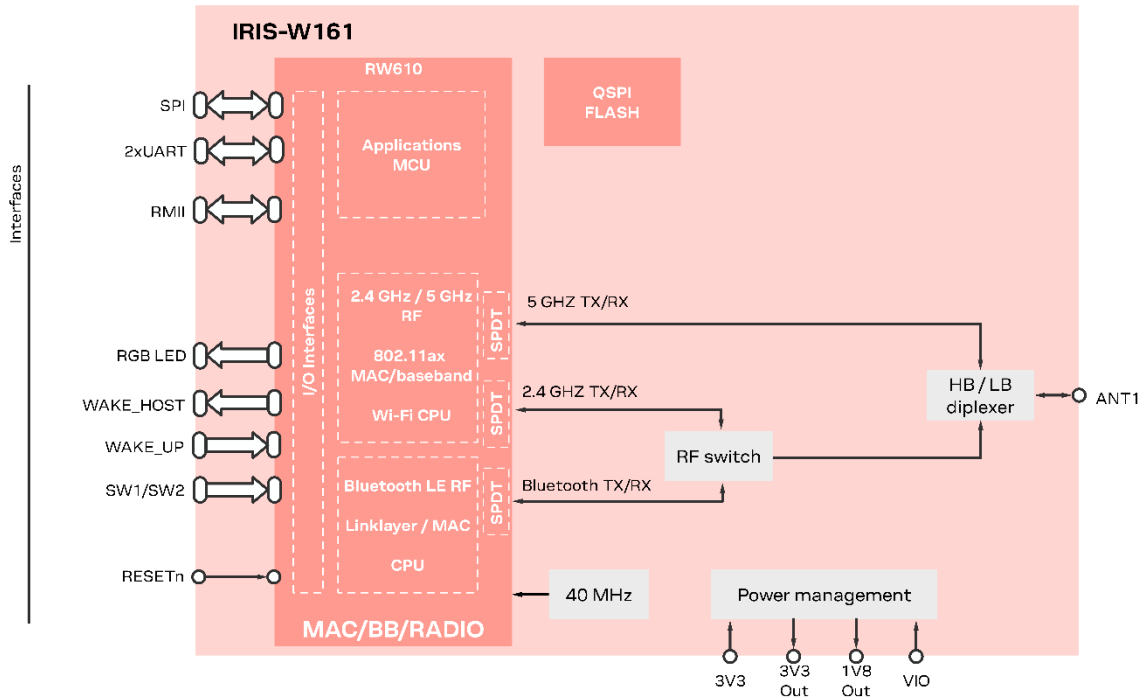


Figure 3: Block diagram for IRIS-W161-00B (RW610)

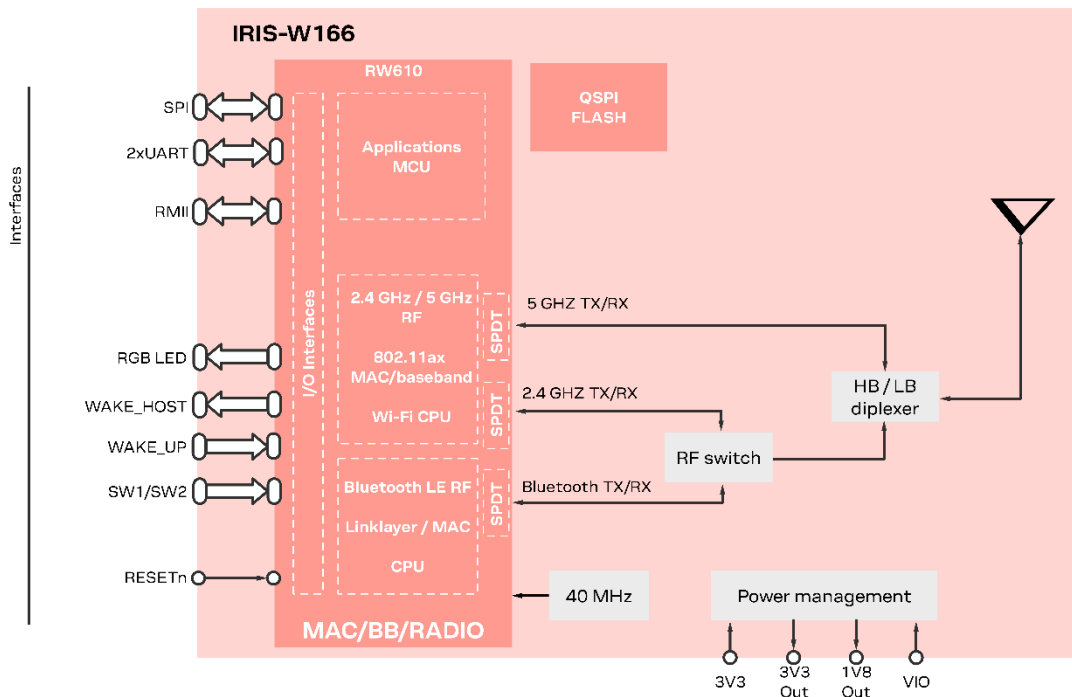


Figure 4: Block diagram for IRIS-W166-00B (RW610)