

WST-101 Four Button Wireless Remote

Specifications

Frequency: 319.5MHz
Battery: 3V lithium CR2032
Battery life: 5 years

Operating Temperature: 32°-120°F (0°-49°C)
Operating Humidity: 5-95% RH non condensing
Compatible with all GE/Interlogix receivers

Enrolling

Each remote is learned into a control panel as an unsupervised sensor and uses one available zone slot. For all Concord, Simon3 and Simon XT panels, use sensor group number 01, 03, 06 or 07. Please refer to your specific control panel installation manual for full instructions.

Operation



Lock

Depending on your control panel:
Press once to arm in Stay mode.
Press twice to arm in Away mode.
Press three times to activate the latchkey feature.



Unlock

Press this button to disarm your system. You do not have to enter your access code when you use this key to disarm the system.



Light

For Network X panels, press this button to arm the system in Stay mode. For Concord, Simon 3 or XT it will turn system controlled lights on or off.



Star

For Network X panels, this button will perform the same function as programmed for the Star key on keypad. For Simon 3 or XT panels with X-10 universal module, pressing this button will open/close the garage door.

Panic or Aux: If the remote is programmed using a panic or portable auxiliary group number. Pressing the **Lock** and **Unlock** buttons simultaneously will activate an audible or silent alarm (depending on group number) and initiate reports to the central station.

Replacing the Battery

When the battery is low a signal will be send to the control panel, or when a button is pressed the LED will appear dim or will not turn on at all. Follow these simple steps to replace the battery

1. With a key or small screwdriver, press the black tab located at the bottom of the remote (fig.1) and slide the chrome trim off.
2. Carefully separate the front and back piece of plastic to reveal the battery
3. Replace with a CR2032 battery ensuring the + side of the battery faces up (fig.2)
4. Re-assemble the plastics and ensure they click together
5. Ensure the notch in the chrome trim is aligned with the back of the plastic. It will only go on one way. (fig.3)

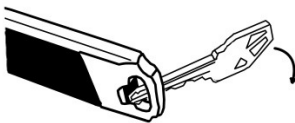


Figure 1

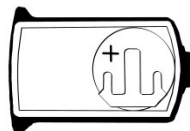


Figure 2



Figure 3

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from the receiver
- Consult the dealer or an experienced radio/TV contractor for help.

Warning: Changes or modifications not expressly approved by Ecolink Intelligent Technology Inc. could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC ID:XQC-WST101 IC: 9863B-WST101

Warranty

Ecolink Intelligent Technology Inc. warrants that for a period of 5 years from the date of purchase that this product is free from defects in material and workmanship. This warranty does not apply to damage caused by shipping or handling, or damage caused by accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions or as a result of any unauthorized modifications.

If there is a defect in materials and workmanship under normal use within the warranty period Ecolink Intelligent Technology Inc. shall, at its option, repair or replace the defective equipment upon return of the equipment to the original point of purchase.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Ecolink Intelligent Technology Inc. neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

The maximum liability for Ecolink Intelligent Technology Inc. under all circumstances for any warranty issue shall be limited to a replacement of the defective product. It is recommended that the customer check their equipment on a regular basis for proper operation.



2055 Corte Del Nogal
Carlsbad, California 92011
1-855-632-6546
www.discoverecolink.com