



'txtrbeagle

Quick Start Guide

1 Let's Get Started



1. Starting at the base of your txtr beagle, use your fingertips to open the battery cover.




2. Insert 2 x AAA batteries as indicated.
3. Starting at the top of your txtr beagle, replace the battery cover, ensuring it clicks into place tightly.

Tip:

Blinking status light (approx. 5 seconds) indicates that the batteries are empty.

2 Switch on your txtr beagle








1. Switch on your txtr beagle by pressing the On/Off button  once.
2. The status light will blink red briefly.

Tip:

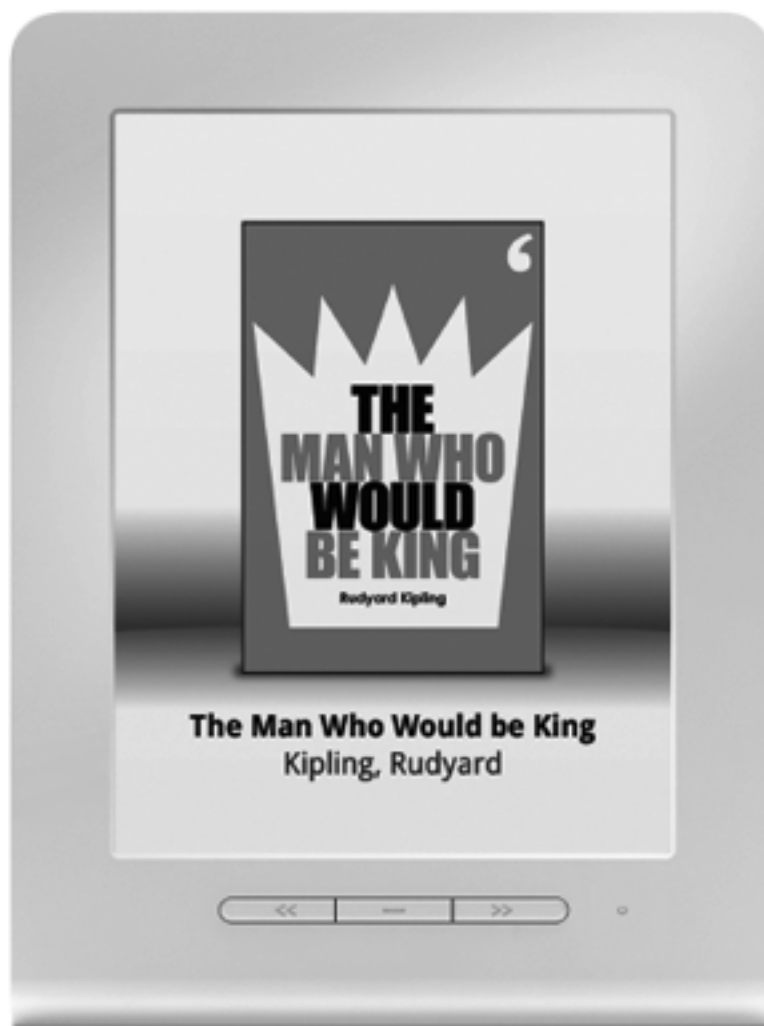Your txtr beagle will switch itself off after 10 minutes of inactivity, and display the sleep screen. To continue reading, simply press the On/Off button again.

 
3 Browse & Select Books



1. Press the Menu button  to go to book selection mode.
2. Press Next  or Back button  to browse books.
3. Press the Menu button  again to select a book to read.

4 Read


My particular Intermediate happened to be empty till I reached Nasirabad, when a huge gentleman in shirt-sleeves entered, and, following the custom of Intermediates, passed the time of day. He was a wanderer and a vagabond like myself, but with an educated taste for whiskey. He told tales of things he had seen and done, of out-of-the-way corners of the Empire into which he had penetrated, and of adventures in which he risked his life for a few days' food. "If India was filled with men like you and me, not knowing more than the crows where they'd get their next day's rations, it isn't seventy millions of revenue the land would be paying — it's seven hundred million," said he; and as I looked at his mouth and chin I was disposed to agree with him. We talked politics — the politics of Loaferdom that sees things from the underside where the lath and plaster is not smoothed off — and we talked postal arrangements because my friend wanted to send a telegram back from the next station to Ajmir, which is the turning-off place from the Bombay




1. Press the Next button  to turn the page.
2. Press the Back Button  to go back a page.


5 Pair your txtr beagle with your Smartphone



1. Turn txtr beagle on.
2. Press and hold the On/Off button  until the "Pairing with your smartphone" screen is displayed. Bluetooth is now activated.

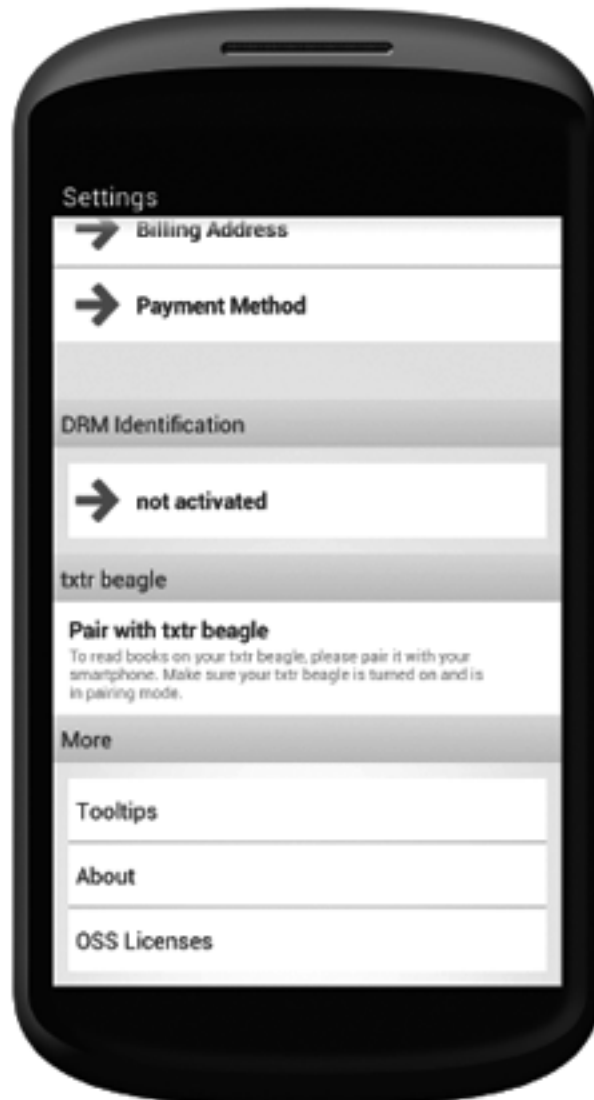

3. Download the latest version of the txtr ebooks app from Google play on your smartphone.
4. Launch the txtr ebooks app on your smartphone and select "Sign Up."
5. Go to "Settings" in the txtr ebooks app and select "Pair with txtr beagle."

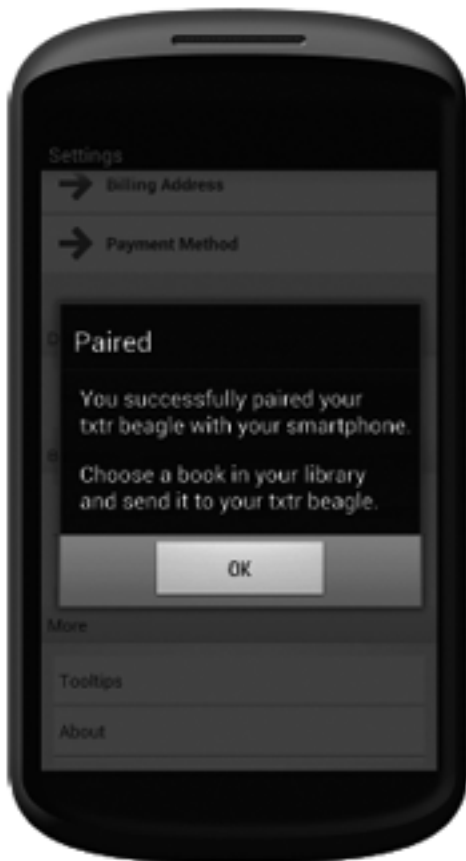


6. Once your txtr beagle is paired with your smartphone, a confirmation message is displayed.



7. Your txtr beagle is now ready to receive books, as indicated by the blinking blue status light.


6 Send Books from your Smartphone to your txtr beagle

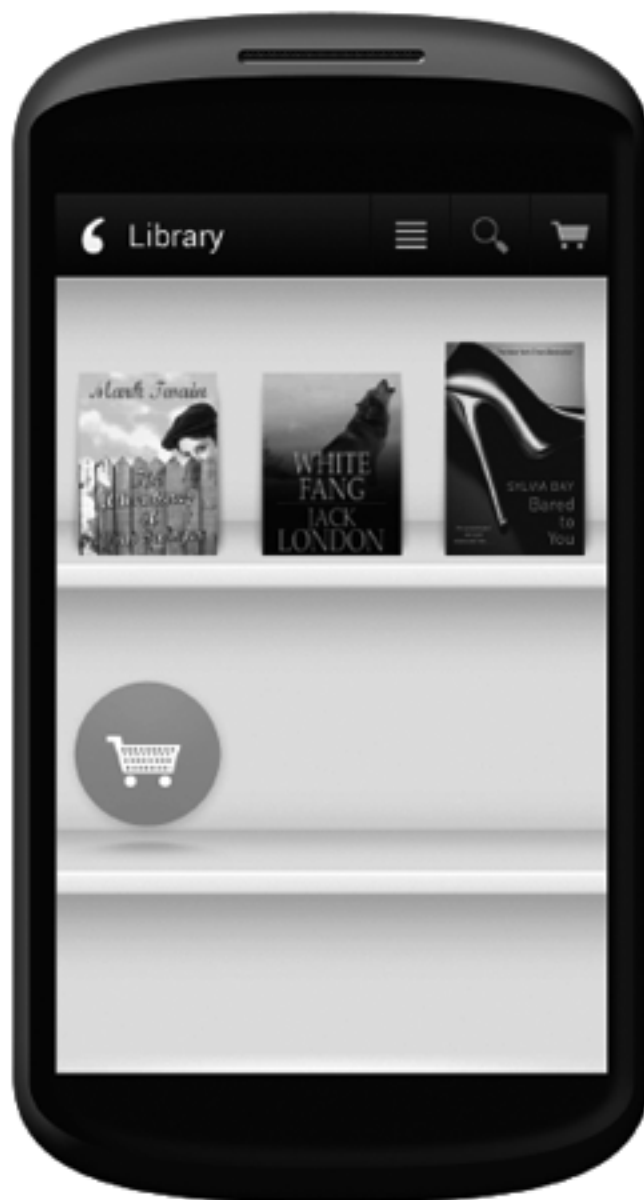

1. Launch the txtr ebooks app on your smartphone. Tap and hold the cover of the book you wish to send.





2. Select "Send to your txtr beagle." The book is sent to your txtr beagle. The blue status light is continuously on.

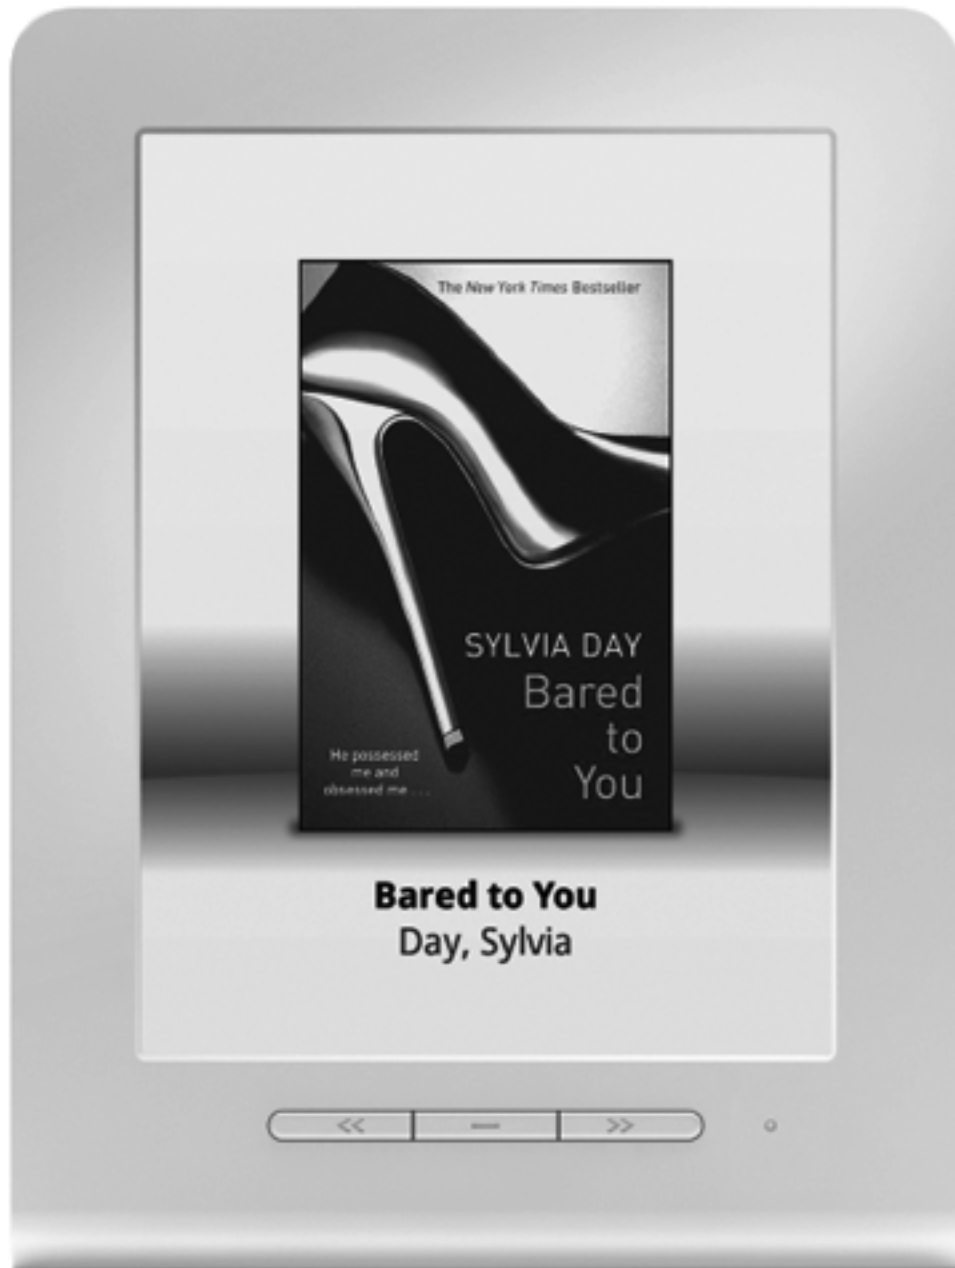

3. You can now start reading your book on your txtr beagle.

7 Unpair from txtr beagle

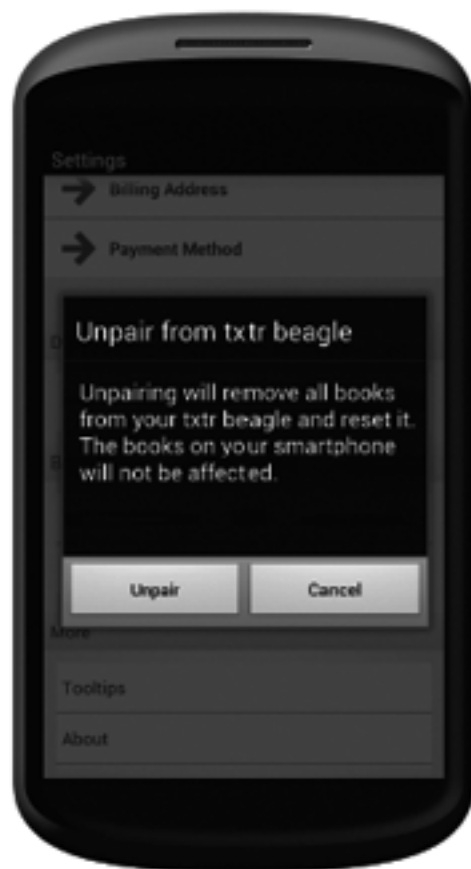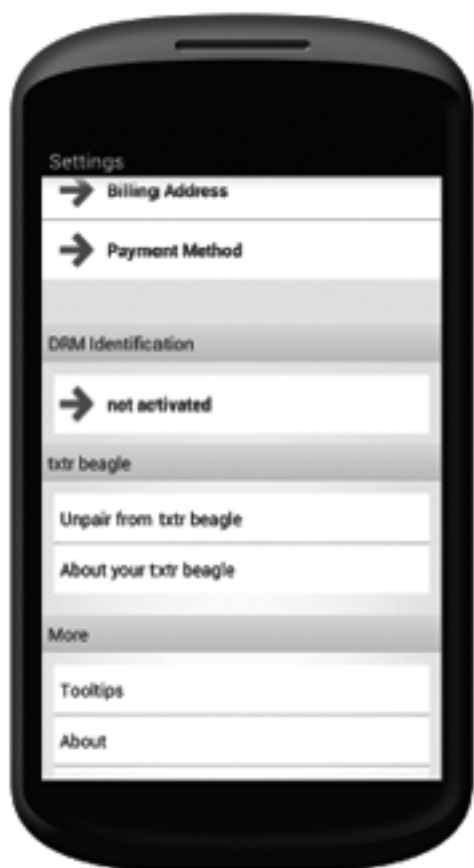

1. On your smartphone, go to “Settings” in the txtr ebooks app and select “Unpair from txtr beagle.”
2. Tap “Reset” to confirm this action. Note that this will remove all books from your txtr beagle and reset it. Books on your smartphone will not be affected.



Download the txtr App
for Android on play.google.com





CE 0890

EU Declaration of Conformity

Hereby, txtr GmbH declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2006/95/EC, 2004/108/EC and 99/5/EC.

FCC ID: XQIWR1108

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and **(2)** this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Txtr beagle 5” is designed in Berlin and manufactured in China by Hanwang Technology Co.,Ltd.