

# HALO® 8+

## OPERATOR'S MANUAL Full Function Radio Control MANUEL D'UTILISATION Toutes fonctions contrôlées par radiocommande MANUAL DE USUARIO Radio Control de Función Completa #702

Customer Toll Free Number (USA): 888-656-5869  
Numéro vert client (États-Unis): 888-656-5869  
Servicio Telefónico Gratuito (EE.UU.): 888-656-5869

Email Address: CustomerService@nkok.com  
Courriel: CustomerService@nkok.com  
Dirección de Correo Electrónico: CustomerService@nkok.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à la section 15 des règles de la Commission Fédérale des Communications (FCC). Son utilisation est soumise aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférences, et (2) cet appareil doit accepter n'importe quelle interférence, y compris les interférences susceptibles d'altérer son bon fonctionnement.

Este dispositivo cumple con la sección 15 del Reglamento del FCC. Su funcionamiento está sujeto a estas dos condiciones: (1) el dispositivo no debe causar interferencias y (2) el dispositivo debe aceptar cualquier tipo de interferencia, incluidas aquellas que puedan causar un funcionamiento no deseado del dispositivo.

Retain the packaging and manual for future reference as they contain important information.

L'emballage et le mode d'emploi contiennent des informations importantes, veuillez les conserver pour toute référence ultérieure.

Guarde el paquete y el manual para futuras consultas, ya que que contienen información importante.

**CAUTION:  
ELECTRICALLY  
OPERATED PRODUCT.**  
Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

**ATTENTION !  
PRODUIT FONCTIONNANT  
À L'ÉLECTRICITÉ :**  
CE PRODUIT N'EST PAS RECOMMANDÉ POUR LES ENFANTS DE MOINS DE 8 ANS. COMME AVEC TOUS LES PRODUITS ÉLECTRIQUES, DES PRÉCAUTIONS DOIVENT ÊTRE PRISES DURANT LA MANIPULATION ET L'UTILISATION DU PRODUIT AFIN D'ÉVITER TOUT RISQUE DE CHOC ÉLECTRIQUE.

**PRECAUCIÓN, ESTE  
PRODUCTO FUNCIONA  
CON ELECTRICIDAD:**  
NO RECOMENDADO PARA NIÑOS MENORES DE 8 AÑOS. AL IGUAL QUE CON OTROS APARATOS ELÉCTRICOS, DEBEN TOMARSE LAS MEDIDAS NECESARIAS DURANTE SU USO PARA PREVENIR DESCARGAS ELÉCTRICAS.

INPUT : 120V AC 60Hz 35mA  
OUTPUT : 7.2V DC 250mA

### Includes:

- Mongoose Vehicle
- Battery Charger
- 7.2V Ni-CD Battery Pack
- "9-Volt" Battery
- Transmitter
- Antenna
- 2 Antenna tubes
- Operator's Manual

### Inclut:

- Mongoose Véhicule
- Chargeur de batterie
- 7.2V Ni-CD Batterie
- "9-Volt" Piles
- Transmission
- Antenne
- 2 tubes pour l'antenne
- Manuel d'utilisation

### Incluye:

- Mongoose Vehículo
- Cargador de la Pila
- 7.2V Ni-CD Pila
- "9-Volt" Pilas
- Transmisor
- Antena
- 2 antenas
- Manual de usuario

© 2010 NKOK, INC.  
CITY OF INDUSTRY, CA 91746, USA  
www.nkok.com

© 2010 Microsoft Corporation. All Rights Reserved.  
Microsoft, 343 Industries, the 343 Industries logo, Halo, the Halo logo, Xbox, Xbox 360, and the Xbox logos, are trademarks of the Microsoft group of companies.

 **WARNING:**  
CHOKING HAZARD - Small parts.  
Not for Children under 3 years.

 
 **AVERTISSEMENT:**  
DANGER DE SUFFOCATION. - Petites pièces.  
Ne convient pas aux enfants de moins de 3 ans.

 **ADVERTENCIA:**  
PELIGRO DE ASFIXIA - Piezas pequeñas.  
No apto para menores de 3 años.

Made in China / Fabriqué en Chine / Fabricado en China

# Battery Installation Installation de la pile Instalación de la pila

## Vehicle Véhicule Vehículo

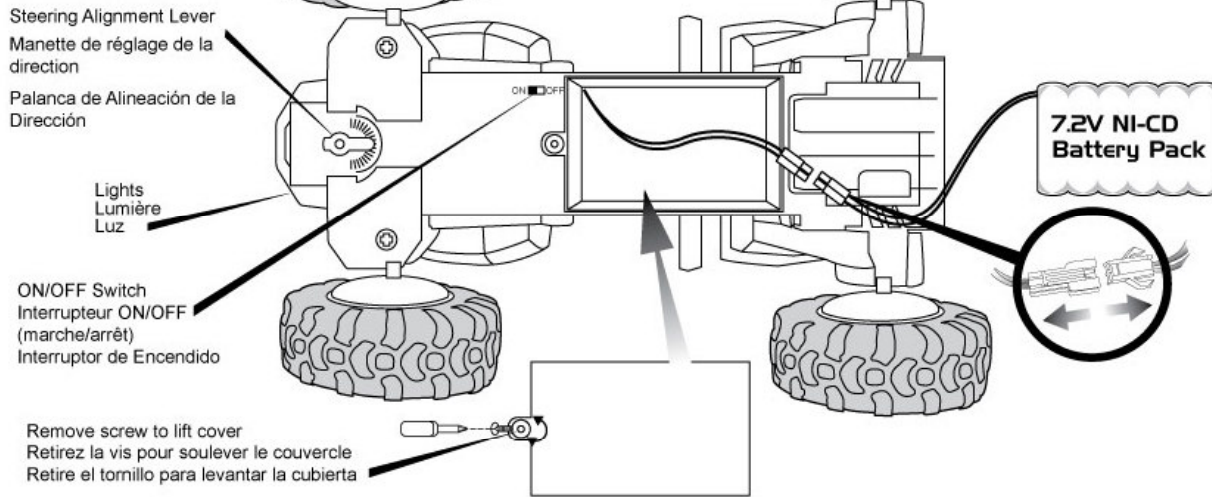


## Controller Radiocommande Controlador

**Battery Requirements:**  
7.2V Rechargeable Battery Pack and Charger (Included)  
1 "9 Volt" Battery (Included)

**Piles Requisites:**  
7.2V Des Piles  
Rechargeables Pack et Chargeur (Fournies)  
1 "9 Volt" Piles (Fournies)

 **Pilas Requeridas:**  
7.2V Pilas Recargables Paquete y Cargador (Incluidas)  
1 "9 Volt" Pilas (Incluidas)

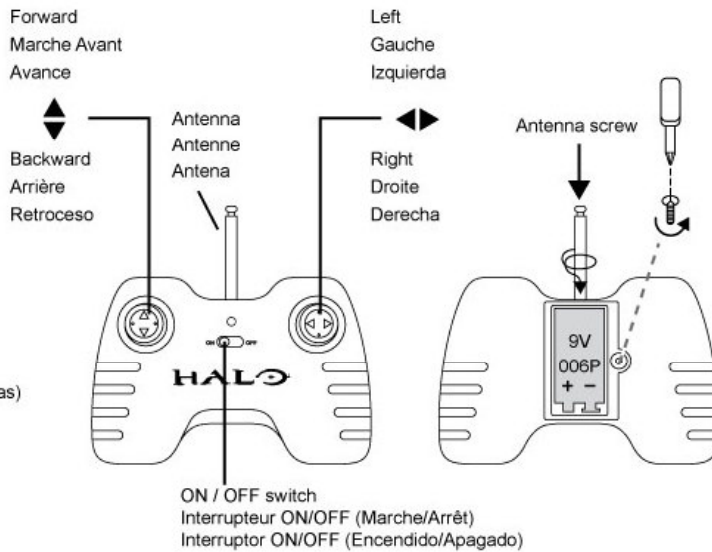

## Battery Pack Batterie Pila

### IMPORTANT!

7.2V battery packs are NOT charged prior to shipping and must be charged 8 hours before the first and second use.

1. Insert the supplied 7.2V Battery Pack securely into the charger as shown.
2. Plug the charger into a standard 110/120V indoor electrical outlet.
3. Allow the Battery Pack to charge for a minimum of 8 hours on the initial two charges. Subsequent charges require only 4 hours.
4. Remove Charger and battery from outlet. Unplug the battery pack from the charger by depressing the catch on one side of the connector, and gently pulling the plug halves apart. (Fig. 1)

**NOTE:** Battery Pack will become warm after charging or during use. Make certain to allow the Battery Pack to cool before recharging. Charging a warm Battery Pack will greatly reduce its life. Do not overcharge the battery pack which may result in battery failure.

### ATTENTION PARENTS:

The battery charger & battery pack need to be periodically examined for potential hazards. Any potentially hazardous parts need to be repaired or replaced.

## **F** IMPORTANT!

Les batteries de 7.2 V ne sont PAS chargées avant d'être envoyées et doivent être chargées pendant 8 heures avant la première et la seconde utilisations.

1. Insérez fermement la batterie fournie de 7.2 V dans le chargeur, conformément au schéma.
2. Branchez le chargeur dans une prise de courant intérieure, de standard 110/120 V.
3. Pour les deux premières charges, laissez la batterie charger pendant au moins 8 heures. 4 heures suffisent pour les charges suivantes.
4. Retirez le chargeur et la batterie de la prise. Soulevez le clapet situé sur le côté du chargeur pour pouvoir retirer la batterie chargée à fond. Ne laissez pas le chargeur branché sur la prise lorsqu'il n'est pas utilisé. (Fig.1)

**REMARQUE:** Après avoir été chargée ou pendant l'utilisation, la batterie devient chaude. Vérifiez que la batterie a refroidi avant de la recharger.

Recharger une batterie chaude réduit notablement sa durée de vie. Ne rechargez pas trop la batterie, cela risquerait de la mettre en panne.

### **MISE EN GARDE À L'ATTENTION DES PARENTS:**

Afin d'éviter tout danger potentiel, le chargeur de batterie et la batterie doivent être vérifiés régulièrement.

Toute pièce potentiellement dangereuse doit être réparée ou remplacée.

## **S** ¡IMPORTANTE!

La pila de 7,2V NO viene cargada de fábrica, por lo que debe ser recargadas 8 horas antes de ser usada por primera y segunda vez.

1. Conecte la pila de 7,2V suministrada en el cargador, como se muestra en el dibujo.
2. Enchufe el cargador a una toma de corriente estándar de 110/120V y resguardada del exterior.
3. Deje que la pila se cargue un mínimo de 8 horas durante las dos primeras cargas.

Las cargas posteriores solo requieren 4 horas para recargar las pilas.

4. Quite el cargador y la pila de la toma de corriente. Levante el enganche a un lado del cargador para retirar la pila cargada.

No deje el cargador en la toma de corriente cuando no esté en uso.

 
**AVISO:** La pila estará caliente después de ser cargada o cuando esté en uso. Permita de que la pila se enfríe antes de cargarla.

La recarga de una pila caliente puede reducir considerablemente su vida útil. No sobrecargue la pila, ya que podría provocar su mal funcionamiento.

### **ATENCIÓN PADRES:**


El cargador y la pila deben ser examinados regularmente en busca de posibles daños.

Cualquier pieza que presente posibles daños debe ser reparada o reemplazada.

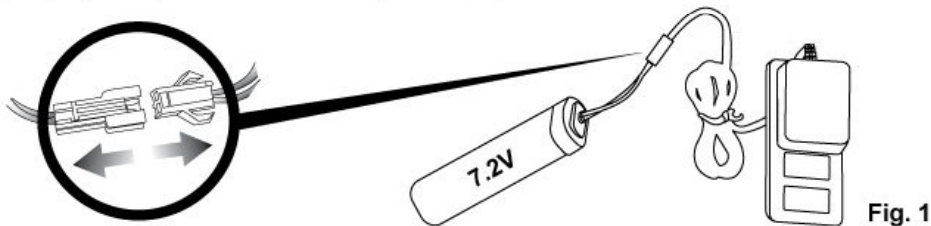


## **Insert the Antenna tube** **Insérez le tube de l'antenne** **Insertar la Antena**

 1. Locate the vehicle antenna wire, which leads through an opening on the top of the vehicle.
2. Localisez le câble de l'antenne du véhicule, à la sortie de l'une des ouvertures situées sur le dessus du véhicule.
3. Localice el cable de la antena, que sobresale por un orificio en la parte superior del vehículo.

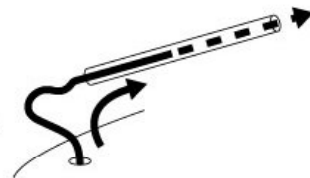

 4. Slide the vehicle antenna wire through the Vehicle Antenna Tube. Insert the tube into the opening.
5. Faites glisser le câble de l'antenne du véhicule à travers le tube de l'antenne. Insérez le tube dans l'ouverture.
6. Pase el cable por la antena del vehículo e inserte la antena en el orificio.

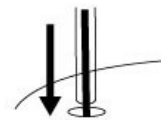

7. Tie a simple knot in the antenna wire to hold the Vehicle Antenna Tube in place.
8. Faites un simple noeud au câble de l'antenne, afin de maintenir le tube de l'antenne du véhicule bien en place.
9. Haga un nudo corriente al cable de la antena para fijar la antena en su lugar.



## **ⓐ TROUBLE SHOOTING**

### **Problem - Vehicle does not move or moves slowly.**

- Replace fresh 9V block battery in transmitter and that it has been installed in the correct position.
- Extend the antenna on transmitter for better range.
- **Has the Battery Pack been installed in the vehicle?**
- **Has the rechargeable Battery Pack been fully charged?**
- **Are the metal contact tabs touching, rusty or dirty in the transmitter?**
- **Make certain that the vehicle ON/OFF switch is in the "ON" position.**

## **BATTERY SAFETY INFORMATION**

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Only batteries of the same or equivalent type as recommended are to be used.
4. Batteries are to be inserted with the correct polarity.
5. Exhausted batteries are to be removed from the product.
6. The supply terminals are not to be short-circuited.
7. Non-rechargeable batteries are not to be recharged.
8. Rechargeable batteries are to be removed from the product before being charged.
9. Rechargeable batteries are only to be charged under adult supervision.
10. Dispose of battery(ies) safely.
11. Do not dispose of this product in a fire. The batteries inside may explode or leak.

## **CONTROL RANGE**

When the vehicle is driven beyond radio signal range, there could be a loss of control.

When operating outdoor, the distance range for most radio controlled vehicles is approximately between 50 Feet (15 meters) to 100 feet (30 meters).

The range is also subject to interference.

## **VEHICLE OPERATION**

Any of the following conditions may interfere with the behavior and function.

The transmitter signals can easily be interrupted.

Improper handling may hamper the performance of the vehicle.

## **SAFETY PRECAUTIONS**

### **Remember to avoid water, heat, sand and high impact!**

- Keep vehicle away from wet surfaces or rain.
- Avoid running on thick carpet or dusty floors.
- Avoid collision on hard surface.
- Avoid running 2 vehicles of the same frequency. Always run one at a time unless you purchase vehicle with different frequencies.
- Keep vehicle away from sandy or dusty areas.
- DO NOT operate your vehicle on the streets!
- DO NOT carry the vehicle by pulling the antennna wire.

## **CLEANING & MAINTENANCE:**

This toy vehicle needs periodic maintenance and cleaning.

Wipe body clean with a soft rag. Do not clean vehicle with chemical or water.

## **CAUTIONS**

1. Do not recharge Battery Pack if it is warm to touch. Allow Battery Pack to cool down before recharging. Recharging a warm Battery Pack will shorten the life of the Battery Pack.
2. Do not recharge a Battery Pack if it appears to be damaged or leaking.
3. Always unplug Charger when not in use.
4. Always remove Battery Pack from Battery Compartment when not in use.
5. Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.
6. Dispose of Rechargeable Battery Pack properly.
7. Do not attempt to to disassemble Battery Pack or Charger.
8. Do not use Battery Charger for any use other than instructed in this manual.
9. Recharging batteries should be done by an adult.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.