 
 
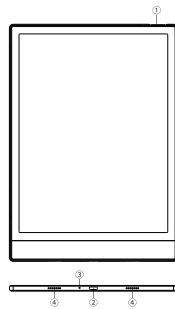 
 


快速説明書

BOOX Note5+
Quick Start Guide
快速说明书

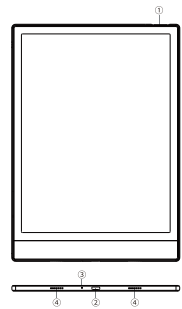

English

- ① Power ② USB-C Port
- ③ Micro SIM Slot ④ Dual Speakers

- a. BOOX Device b. Warranty Card c. Quick Start Guide
- d. Stylus Pen e. USB-C-Cable

QUICK START GUIDE

Turn on the device: Press and hold the power button for 2-3 seconds.

Charging: When the battery is low or the device can not be turned on, please connect your BOOX with a PC or an Adapter to charge it. When the device is charging, the indicator shows red. When the battery is fully charged, the indicator turns blue.

Firmware update: Load the update packages to the root directory of the local storage or get OTA updates on the device.

To force shutdown, press and hold the power button for about 10 seconds. You can read the 10th section of the User Manual on the official BOOX website: <https://www.boox.com/downloads/>

日本語

- ① 電源ボタン ② USB-Cポート
- ③ マイクロSIMスロット ④ デュアルスピーカー

- a. BOOX本体 b. 保証書カード c. クイックスタートガイド
- d. スタイラス e. USB-Cケーブル

クイックスタートガイド

本体の電源を入れます。電源ボタンを2-3秒長押ししてください。

充電: バッテリーが低く、電源が入らない場合は、BOOXデバイスをPCまたはアダプタに接続して充電してください。充電が始まると、インジケータが赤くなり、充電が完了すると青くなります。


ファームウェアの更新: 更新パッケージをローカルストレージのルートディレクトリにロードするか、デバイス上でOTAアップデートを行います。

強制シャットダウン: 電源ボタンを約10秒長押しして強制シャットダウンを行います。詳しくはユーザーマニュアルの10章を参照してください。BOOX公式ウェブサイトでユーザーマニュアルの10章を参照してください: <https://www.boox.com/downloads/>

FCC Statement

This device complies with the FCC Part 15.247 Class A digital device limits for radio frequency emissions. Operation of this device is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference from authorized radio communication services. This device has been tested and found to comply with the limits under normal operating conditions. However, there are no guarantees that interference will not occur in all environments. If you experience interference, you may need to take certain actions to reduce the interference, such as reorienting or relocating the device. Additional measures may be required, such as using a different power outlet or plugging the device into a different circuit or outlet. Changes to the device's default settings may be required to reduce interference. It is the user's responsibility to take these actions.

Model Number: BOOX Note5+
FCC ID: 2A651-BOOX Note5+
This device complies with the FCC Part 15.247 Class A digital device limits for radio frequency emissions. Operation of this device is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference from authorized radio communication services. This device has been tested and found to comply with the limits under normal operating conditions. However, there are no guarantees that interference will not occur in all environments. If you experience interference, you may need to take certain actions to reduce the interference, such as reorienting or relocating the device. Additional measures may be required, such as using a different power outlet or plugging the device into a different circuit or outlet. Changes to the device's default settings may be required to reduce interference. It is the user's responsibility to take these actions.

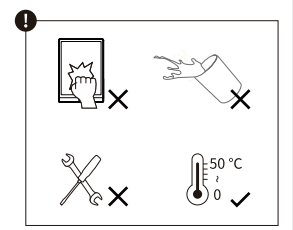

BOOX
Customer support center:
<https://www.boox.com/support/>
Email: help@boox.com
Made in China
©Boox International Inc. All rights reserved.

For further instructions, please learn from this guide or check the user manual or official website technical support: www.boox.com