

Rear Panel



Figure 3-6 SOL8SDR Plain Rear Panel

No	Item	Used for...
1	SMA 50 Ohm 2-way jack (socket)	COFDM B antenna connects here. This is the default transmit output.
2	SMA 50 Ohm 2-way jack (socket)	COFDM A antenna connects here.

Table 3-6 SOL8SDR Plain Rear Panel Key

The Left Panel



Figure 3-7 SOL8SDR Plain Left Panel

No	Item	Used for...
1	USB 2.0 4-way type A jack	Provides USB connectivity for host or peripheral devices.
2	Magjack RJ45 8-way jack	Provides Ethernet connectivity.

Table 3-7 SOL8SDR Plain Left Panel Key