

## **Operation Description**

### **The 72MHz Multi-Channel Transmitter**

**Power On the unit, and set the transmitter to the desired channel, plug the microphone into the audio input jack, and the transmitter will transmit the audio signal to the receiver.**

**We use the earphone as the antenna for this system. The frequency range is from 72.1MHz – 75.9MHz. The modulation is FM.**