



- 1- Band
- 2- Sensor
- 3- Clip
- 4- Cradle

**WARNING**

Read and review all instructions, illustrations and warnings if included or follow manufacturer recommended service and replacement procedures before installing. Professional Installation Only. Improper installation may result in the failure of the motor vehicle Tire Pressure Monitoring System (“TPMS”) Sensor to operate properly.

**Removal**

1) The tire and wheel assembly removal must be followed as outlined in the vehicle manufacturer’s Service Manual.

**Installation**

- 1) Inspect the sensor band and cradle and replace as needed.
- 2) Position the sensor into the cradle by inserting hinge end of the sensor into the hook end of the cradle and pushing the opposite end of the sensor down onto the cradle. Ensure sensor is fully seated into cradle ( a “click” noise will be heard).
- 3) Insert a new locking clip into the sensor.
- 4) Position Sensor 180 degrees from valve stem and tighten band.
- 5) The tire and wheel assembly installation must be followed as outlined in the vehicle manufacturer’s Service Manual.

**FCC and IC Notice**

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.