



Thank you for purchasing the X ROCKER! We know you will enjoy your X Rocker experience as much as we do.

Welcome to the world of interactive audio. With your new X Rocker you can now not only hear your music but actually FEEL it. Whether you are listening to music, watching a movie, or playing a game, you will become a part of it.

Get ready to experience sound as you never have!

**Do not return this product to the store.
Email service@acebayou.com or call
866-969-2603/931-359-2603 for troubleshooting advice.**

IMPORTANT: You must keep your original retail receipt as proof of purchase.

HAVE THIS ITEM NUMBER READY WHEN CONTACTING CUSTOMER SERVICE: #06109

Need Help? Email: service@acebayou.com Web: www.thexrocker.com Phone: 866.969.2603


XRocker™

don't just sit there. start rocking!




FEATURES

A-Control Panel

- A1 - Power On/Off
- A2 - Vibration Mode
- A3 - Vibration & Music SYNC Mode
- A4 - Volume Adjustment
- A5 - Bass Volume Adjustment
- A6 - Mute Mode
- A7 - Wireless Mode
- A8 - 12V DC Power Input Jack
- A9 - Audio Input Jack
- A10 - DC 3V/200mA Power Input Jack of Transmitter
- A11 - Audio Input Jack of Transmitter
- A12 - Power On/Off Switch of Transmitter
- A13 - Wireless Band Switch of Transmitter

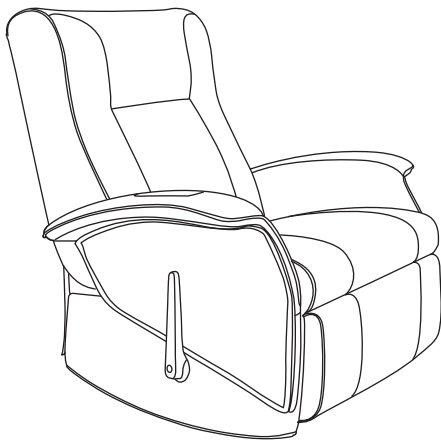


A

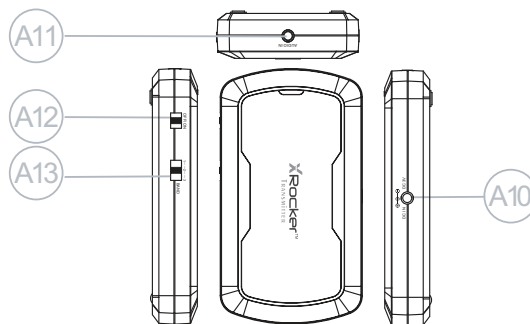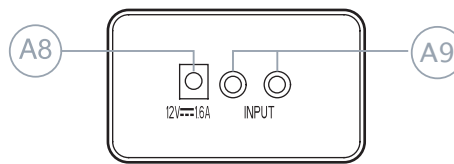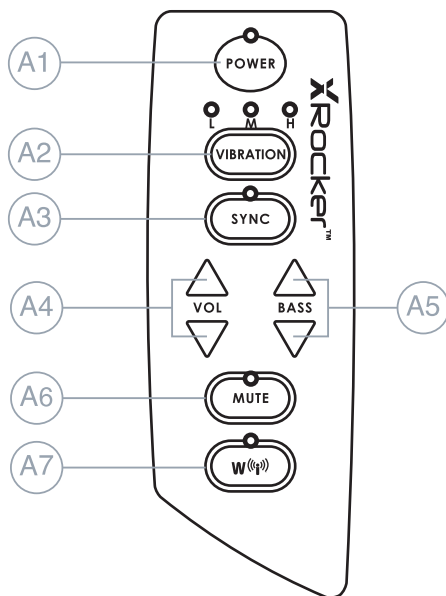

Need Help? Email: service@acebayou.com Web: www.thexrocker.com Phone: 866.969.2603

B-Accessories Supplied

- B1-3m RCA Stereo Male to RCA Stereo Male Plug Cable(1 PC)
- B2-INPUT:120V AC 60Hz
OUTPUT:12V DC 1.6A Main POWER Adapter.
- B3-RCA Female-to-Female Plug Adapter(2 PCS)
- B4-1m 3.5mm Stereo Male to Male Cable
- B5-0.15m RCA stereo Male to 3.5mm Stereo Male Cable(1PC)
- B6-Transmitter Box

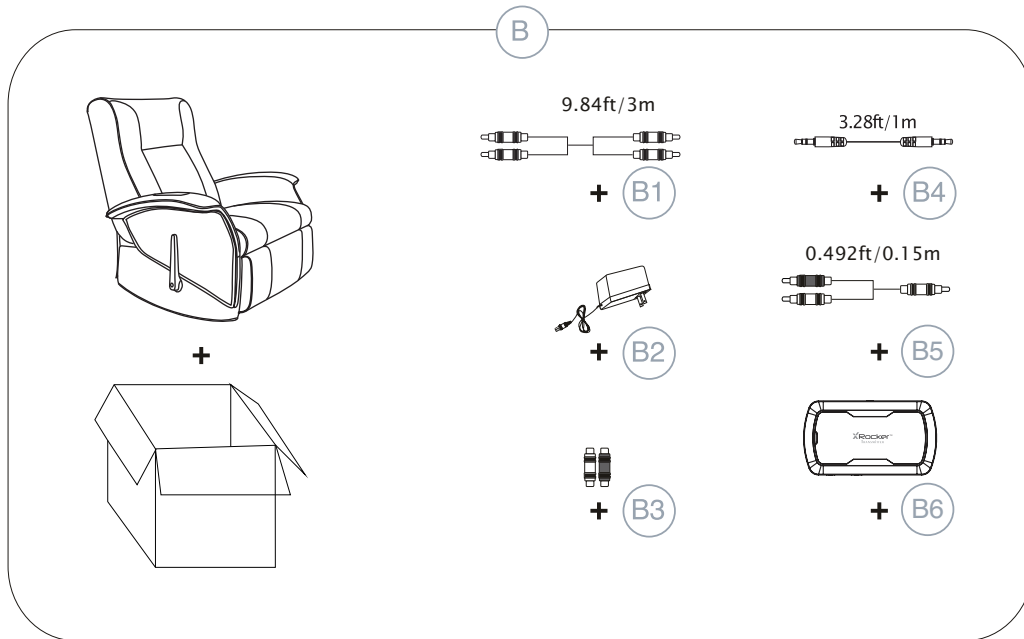

Some parts may vary slightly

C-Audio Specification

The Unit Specification

Signal-to-Noise Rate(Amplifier): Subwoofer :> 50dB
Satellite :> 60dB

Frequency Response: 60Hz~15kHz

Distortion: Subwoofer: < 4%(F=90Hz)

Satellite: < 1%(F=1 kHz)

Input: DC 12V/1.6A

TX/RX Specification

- 1) TX Power Supply 3V DC / 200mA
2 X AAA Batteries(BATTERIES ARE NOT INCLUDED)
- 2) TX Current: $\leq 40\text{mA}$
- 3) RX Current: $\leq 50\text{mA}$
- 4) TX Transmission distance:<65ft/20 meters (No buildings or other barriers)
- 5) Environmental temperature: 14°F~158°F/-10°C~70°C
- 6) Modulation mode: FSK
- 7) TX Work frequency: 914,914.5, 915MHz
- 8) RX Work frequency: 914,914.5, 915MHz
- 9) TX Power:<10dBm
- 10) RX Sensitivity:-95dBm
- 11) RX frequency range: 50Hz~12KHz
- 12) Second Harmonic Suppression: -40dB
- 13) Band Quantity: 3 channels

FUNCTIONS:



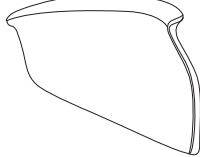
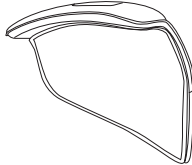
- Side control panel with volume, bass control, input jack and channel choice
- Back control panel with input and power jacks.
- Hardwood frame construction with dual layer foam cover for extra comfort
- Easy to clean heavy duty upholstery grade vinyl cover.
- Wireless audio transmission






READ BEFORE USAGE:

- Always make sure the backrest is locked before sitting in the chair
- Excessive use of audio equipment could lead to hearing loss
- Children under the age of 13 should not use this product without adult supervision.
- Strictly for indoor use—do not expose to direct sunlight, moisture or extreme temperatures
- If cover becomes wet, disconnect power immediately and don't use until completely dry.
- Do not attempt to remove the cover or any components. Removal of the cover or tampering with components puts you at risk for injury or death from electrical shock.
- When using in wireless mode connect the audio cable to the RX. Do NOT connect the audio input directly to the Recliner or the device will be DAMAGED.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

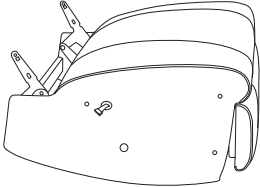
SET UP

1. Lift X Rocker out of box
2. Position the chair on the floor.
3. Follow the diagrams below to assemble the chair
4. Review the set up diagrams to familiarize yourself with the X Rocker's components, accessories, and set-up.
5. Locate the input panel on the back bottom corner of the chair. When used in wired mode, make sure that the control panel is not more than 9.84ft/3 meters away from the audio source and 6.56ft/ 2 meters away from power source.
6. Unpack the power adapter(DC 12V 1.6A) and connect it into the power outlet, then to the power jack on the back panel. (A8)
7. Press the power button (A12) and confirm that the power indicator light (A1) is on. In wireless mode, turn on the power (A12) to the TX box, confirm that its indicator light is on, turn the switch to adjust the channel.
8. Follow the diagrams to connect the X Rocker to the audio source of your choice in wired or wireless mode.
9. Adjust the bass and volume to your preference.

A	B	C	D
			
1	1	1	1

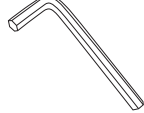
E	F	G	H	I
				
1	1	7	6	1

Need Help? Email: service@acebayou.com Web: www.thexrocker.com Phone: 866.969.2603

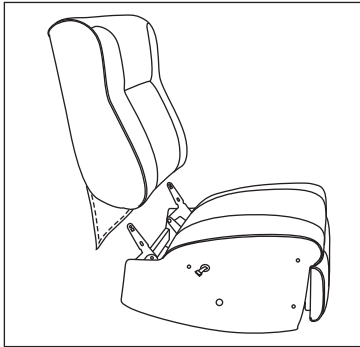


Step 1:

Lift the backrest(B) up, then lower the backrest into the seat brackets. Securely lock the flat head bolts into both sides of the seat(A).

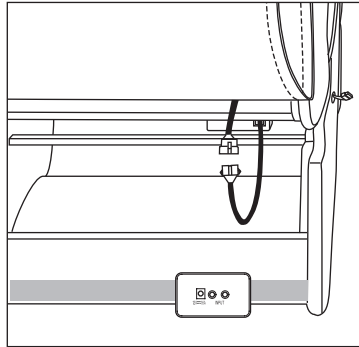


Step 2:

Connect the cable between the seat(A) and backrest(B). Make sure the terminal is fully inserted. Then attach the Velcro flap.

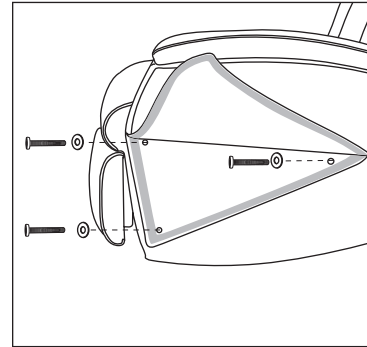


Step 3:

Open the Velcro flap of left armrest(C). Attach the left armrest to the seat using the parts shown in the illustration. Tighten the bolts with Allen wrench(I) provided.

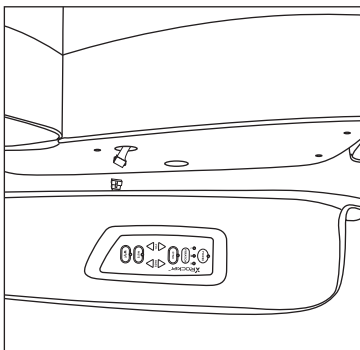


Step 4:

Connect the cable between the seat(A) and right armrest(D). Make sure the terminal is fully inserted.

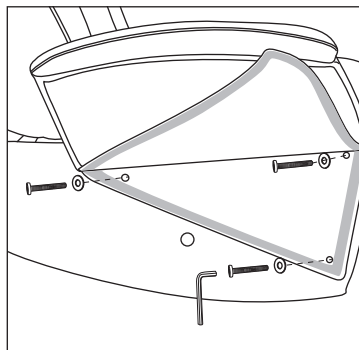

Step 5:

Open the Velcro flap of right armrest(C). Attach the right armrest to the seat using the parts shown in the illustration. Tighten the bolts with Allen wrench(I) provided.

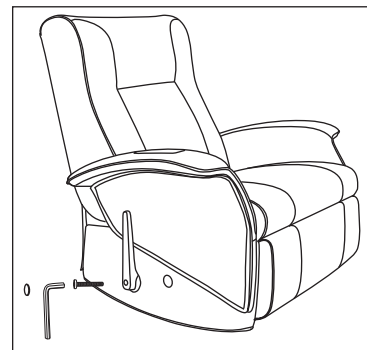

Step 6:

Attach the handle, please pay careful attention to the drawing to be sure you position it correctly. Insert the bolt and tighten it with the Allen wrench provided. Push the plastic cap (F) into the bolt hole to finish the assembly.

CONNECTION GUIDE

DIAGRAM 1 XBOX™, XBOX 360™, PLAYSTATION 3™ & Wii

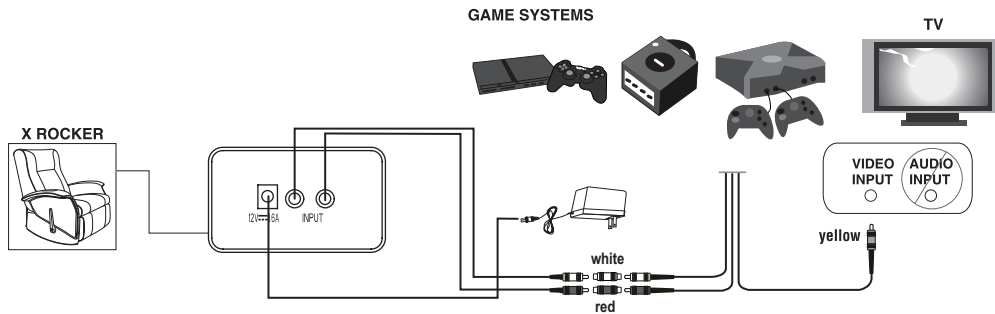


DIAGRAM 2 HOME THEATER & SATELLITE

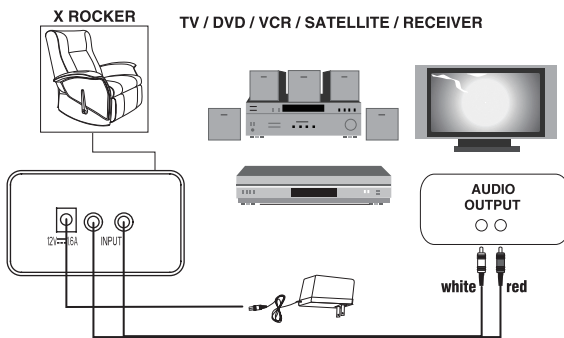


DIAGRAM 3 PORTABLE DEVICES

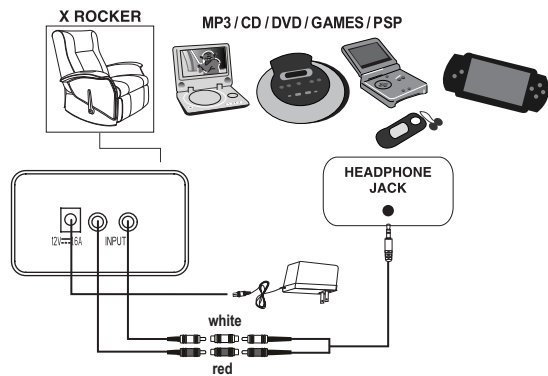


DIAGRAM 1 XBOX™, XBOX 360™, PLAYSTATION 3™ & Wii

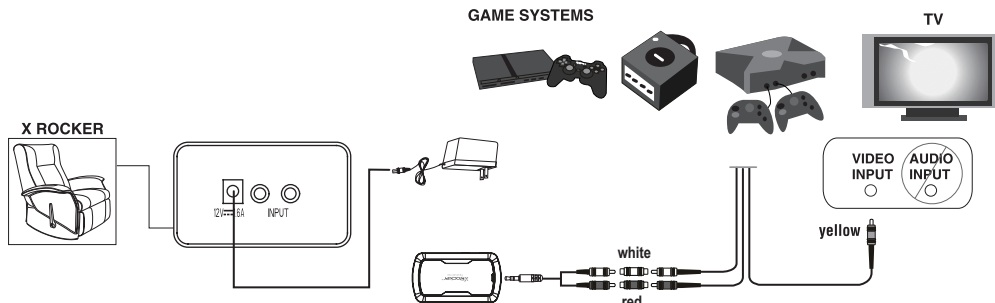


DIAGRAM 2 HOME THEATER & SATELLITE


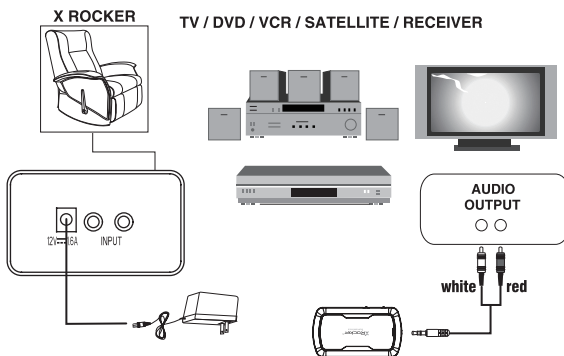


DIAGRAM 3 PORTABLE DEVICES

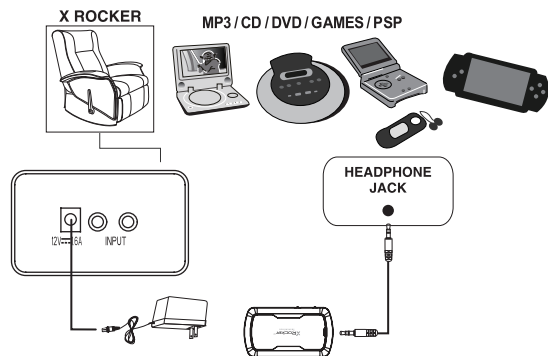

Need Help? Email: service@acebayou.com Web: www.thexrocker.com Phone: 866.969.2603

TROUBLE SHOOTING

- Unable to connect to game console -

Most gaming consoles are shipped from the manufacturer with an Audio/ Video RCA cable. The A/V RCA cable has three RCA plugs: a video plug (yellow) and two audio plugs (red and white). If your gaming console came with an A/V RCA cable, please follow the instructions supplied by the game console manufacturer for setting up your gaming console and connecting it to the television. Please note that you must leave the red and white audio jacks on the A/V cable UNCONNECTED. Once the console is properly connected to your TV, please follow the diagram in the illustrated X Rocker Set-up guide to connect the gaming console to the X Rocker.

If your gaming console was shipped with a coaxial cable, instead of an A/V RCA cable, you must follow an alternate set-up procedure (coaxial cable is the same type of cable that is used to connect a VCR to the TV). You will quickly recognize if your gaming console uses this type of cable. It connects the gaming console directly to the television and carries both the audio and video signal over a single cable. If your gaming console uses a coaxial cable, you CAN NOT connect it directly to the X Rocker. Instead, you must

Use an intermediary A/V device (such as a TV, VCR, DVD, TiVO, etc) Please follow these steps:

- a. Connect your gaming console to the intermediary A/V device via the coaxial cable.
- b. Connect the X Rocker to the 'Audio Out' jack on the intermediary A/V device.
- c. Follow diagram 2 in the X Rocker Set-up guide to connect the X Rocker to the intermediary A/V device and finalize the setup.

If your gaming console is attached to an HD TV with an HDMI cable. You will need to connect the chair using either the audio out jacks on the back of the TV or by plugging into the headphone jack on the front of the TV.

- Unable to hear any sound from the X ROCKER -

1. Check to ensure that the power adapter is properly connected. When properly connected, the indicate light on the control panel should light up. If the indicate light does not light up, try to use another power outlet in your home.
2. Make sure the power unit is turned on and indicator light on the control panel is lit. If it is not, please press the power switch on the control panel.
3. Once you have successfully completed 1. and 2. please review the X Rocker illustrated set-up guide. Double check all audio connections. Finally, check that the volume is turned to an audible level on both the TV and the chair.
4. If you have completed 1 – 3 and still do not hear sound, try connecting another audio source (CD player, television, VCR or game console) and go through the steps again. Still not working? Help is as easy as 1,2,3:
 1. Go to www.thexrocker.com for FAQ answers.
 2. Email service@acebayou.com.
 3. Call our customer service department at 866.969.2603 or 931.359.2603. Office hours are 8:30am to 5:00pm central standard time.

Need Help? Email: service@acebayou.com Web: www.thexrocker.com Phone: 866.969.2603



IMPORTANT: You must keep your original retail receipt as proof of purchase.

WARRANTY PAGE

Limited Warranty:

Ace Bayou warrants this product (including any accessories) against defects in material and workmanship for a period of 90 days from the date of first consumer purchase. This warranty is enforceable only by the original purchaser. ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE.

This warranty covers all defects in material and workmanship in this product, but DOES NOT COVER the following:

1. Damage, deterioration or malfunction resulting from:
 - a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this Owners Manual.
 - b. Any damage in the shipment of the products. (Claims must be presented to the carrier)
 - c. Repair, attempted repair, or modifications by anyone other than the Ace Bayou Service Center.
2. Any unit which has been modified or attempted to be modified or altered in anyway whatsoever.
3. Normal wear and periodic maintenance.
4. Any unit used for industrial or commercial purposes (including rental).
5. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses, batteries, etc).
6. Customer instruction installation, set up adjustments or signal reception problems

Ace Bayou will repair or replace (at its discretion) units covered by this warranty, without charge to the consumer for labor or materials. YOU ARE RESPONSIBLE FOR INITIAL SHIPPING CHARGES. However, we will pay the return shipping charges to any destination within USA if repairs are covered by the warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ACE BAYOU SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long and implied warranty lasts, so the above limitations may not apply to you.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DO NOT SHIP ANYTHING WITHOUT CONTACTING US FIRST. DO NOT SHIP ANY PARTS OF WHOLE UNITS TO THIS ADDRESS FOR REPAIR.

For service assistance, product information, or to locate a dealer nearest you please call or write to:

Ace Bayou Corp
PO Box 1853
Lewisburg, TN 37091
1-866-969-2603
service@acebayou.com

Need Help? Email: service@acebayou.com Web: www.thexrocker.com Phone: 866.969.2603