



radioshack 1201679

Rechargeable Portable Bluetooth® Receiver

User's Guide



We hope you enjoy your Rechargeable Portable Bluetooth Receiver from RadioShack. This receiver lets you wirelessly connect Bluetooth devices to non-Bluetooth devices, such as speakers. Please read this user's guide before using your new receiver.

Package Contents

- Bluetooth Receiver
- Micro USB Cable
- 3.5mm Audio Cable
- 3.5mm-to-RCA Audio Cable
- User's Guide

Specifications


Bluetooth Protocol V4.0
 Bluetooth Connection Range30 ft (9.14m)
 Battery TypeLithium polymer
 Battery Capacity.....500mAh
 Battery Charging Time2.5 hours
 Playtime Up to 12 hours

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

2

Charge the Receiver


- When the red LED flashes, charge the receiver.
- Use the supplied Micro-USB cable to connect the receiver's **5V/500mA** jack to a USB charger(not included) and power source.
- The red LED remains lit during charging, and turns off when charging is complete.
- Allow 2.5 hours for a full charge. When fully charged, the receiver is capable of up to 12 hours playtime.

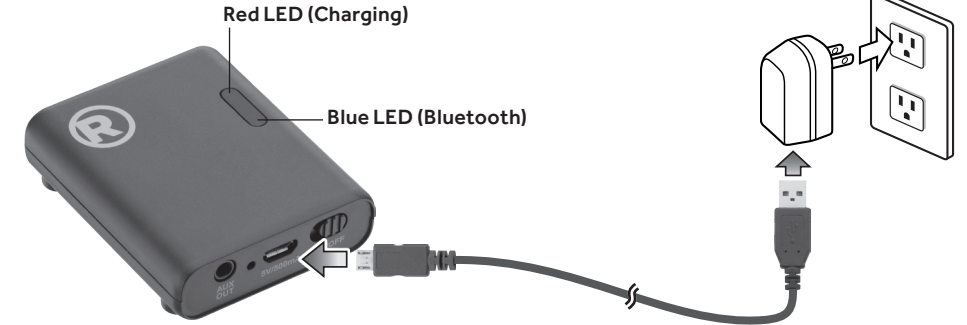


3

Use the Receiver

1. Use the 3.5mm audio cable to connect the receiver's **AUX OUT** jack to a speaker's line in jack. Or use the 3.5mm-to-RCA audio cable to connect the **AUX OUT** jack to an audio amplifier's line in jack.
2. (Optional) Using the Micro-USB cable, connect the receiver's **5V/500mA** jack to a USB charger and power source.
3. Slide the **ON/OFF** switch to **ON**. The receiver searches for a Bluetooth device. The blue LED flashes quickly.

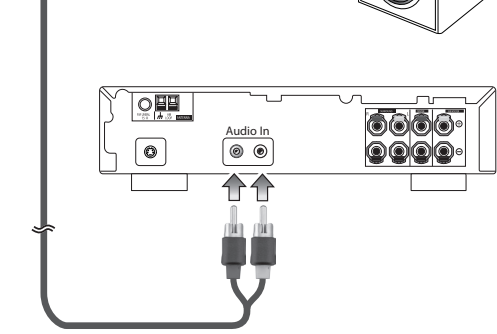

4

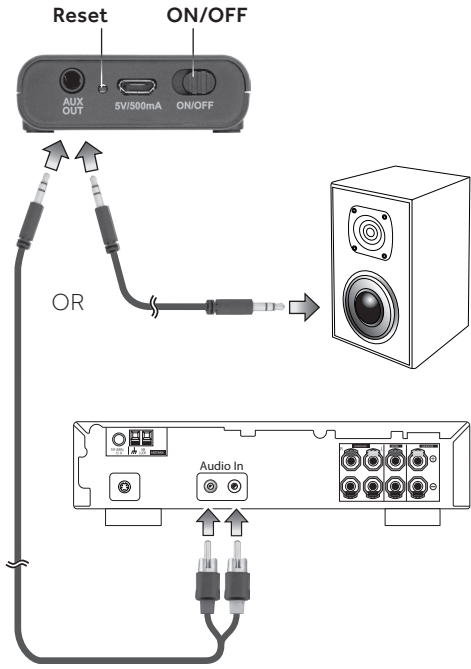

5

4. Activate your device's Bluetooth function (refer to your device's user's guide). When **RadioShack 1201679** appears in the Bluetooth devices list, pair it to your device.
 - After successful pairing, the blue LED remains lit.
 - If pairing fails, the blue LED turns off.

Note:

- If your device fails to pair with the receiver, move the receiver closer to the device and make sure the device's Bluetooth function is on.
- If you still can't pair with the receiver, reset the receiver: While the blue LED is flashing, use a paper clip to press and hold the Reset button until the blue LED flashes slowly three times.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

6

- there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.** This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to

7

follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser. Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law (a) replace the product with the same or a comparable product, or (b) refund the purchase price. All replaced products, and products on which a refund is made, become the property of RadioShack.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING,

8

BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Contact RadioShack at: RadioShack Customer Relations
 300 RadioShack Circle
 Fort Worth, TX 76102

www.radioshack.com

02/14

RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by RadioShack Corporation is under license.

© 2015 RadioShack Corporation. All rights reserved. RadioShack is a registered trademark used by RadioShack Corporation. Printed in China 01A15 1201679

9