

BP01

ConnectEasy GSM Phone

With Delicate Care Vigilance for Safety of Senior People



- Delicate care vigilance
- Extra clarity
- Free mobility
- Un-obstructive convenience



Table of Contents

1.	Important Safety Guideline.....	2
2.	Phone Overview	3
3.	Starting Up.....	5
3.1	Installing SIM card	5
3.2	Installing battery	5
3.3	Charging battery	6
3.4	Switching on/off phone.....	6
3.5	LCD display symbols.....	6
4.	Making Phone Call.....	8
4.1	Answering a call.....	8
4.2	Making a call.....	8
4.3	Making a call with Speed Dial button.....	8
4.4	Redialing.....	9
4.5	Making emergency call.....	9
4.6	Adjusting volume.....	10
4.7	Adjusting tone level response.....	10
5.	Menu Tree.....	10
6.	Setting Phonebook.....	12
7.	Message.....	13
8.	Call Log.....	14
9.	Care.....	14
9.1	Speed Dial	14
9.2	Emergency Call	15
9.3	Fall Detection-SOS service.....	16
9.3.1	Enabling Fall Detection-SOS Service.....	16
9.3.2	Disabling Fall Detection SOS service.....	17
9.4	Medical Alert.....	17
9.4.1	Doctor Appointment.....	17
9.4.2	Medicine Refill.....	18
9.4.3	Taking Medicine.....	19
10.	Organizer.....	20
11.	FM Radio.....	21
12.	Settings.....	21
12.1	User profile.....	21
12.2	Bluetooth.....	21
12.3	Phone setup.....	23
12.4	Network setup.....	23
12.5	Security setup.....	23
12.6	Restore factory settings.....	25
12.7	Call setting.....	25
13.	Content Table.....	27

1. Important Safety Guideline

Important:

please read this user manual carefully before you begin using the phone and keep this user manual for future use. If you pass the device to a third party, be sure to pass this manual too.



Non-observance of this manual can result in serious injury or damage to the device.



Warning: These warning notices must be observed in order to prevent any injury to the user or to third parties.

-Different countries may apply different regulations to the use of mobile phones(eg when driving, hospitals, at petrol stations, in aircraft).Please check the laws on the use of a mobile phone in your country and switch off the phone when usage is not permitted, or when dangerous situations or interference could occur.

- Only use the phone in accordance with its purpose and at locations where telephoning poses no dangers.
- Only use the manufacturer's charger and battery. Inserting an unsuitable battery or inserting the battery incorrectly can result in danger of explosion.The battery must not be opened or exposed to a flame.
- The operation of medical devices might be affected. The manufacturers of pacemakers recommend a minimum distance of 20cm between the devices and phone when the phone is turned on. Do not carry the phone in your breast pocket.
- If you suspect that there is interference between the phone and medical device, please consult your doctor before using these devices together again.
- Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not disassemble this unit. Take it to a qualified service technical when repair work is required.
- The unit should be kept away from heat source such as radiators or cooker.
- Do not use the phone at a refueling point, near fuel or chemical.
- Use dry cloth to clean the unit. Do not use any solvent.
- Do not keep the phone next to credit card or magnetic transport tickets. It might affect the information on the magnetic strips.

1.1 Safety Notices

If your phone is lost or stolen, please immediately inform your nearest telecommunication department or agent to disable the SIM card, so as to prevent others from using your phone and incurring economic loss to you.

When you contact telecommunication departments or agents, they may need to know the IMEI code of your phone (you can find it on the back label of your phone after removing the battery). Please

write down the code and keep it in a safe place for later use.

For the purpose of avoiding mistaken use of your phone, please adopt precautions such as:

- Set up the PIN code of your SIM card. The PIN code can prevent your SIM card from being used by unauthorized people.
- On a trip or travel outside, please do not disclose your phone in public, so as to avoid unnecessary loss. You'd better keep it close to you or lock it in your luggage.
- Enable call barring.

1.2 Safety Precautions

Before using your phone, please carefully read through these precautions, so as to ensure safe and correct use.

1.2.1 Current Precautions

- Use only the original or specified accessories. Other products may cause battery leakage, overheat, explosion, or fire.
- Do not severely bump, shake or throw your phone, so as to avoid faults and fire.
- Do not put your phone, battery or charger into your microwave oven or other high-pressure devices. Otherwise, it may cause circuit damage or fire.
- Do not use your phone at places with flammable or explosive gas. Otherwise, it may cause phone faults or even fire disasters.
- Do not put your phone in places of high temperature, high humidity or a lot of dust. Otherwise, it may cause phone faults.
- Please keep your phone away from kids, so as to prevent them from using it as a toy and incurring body injury.
- Do not put your phone on uneven or unstable tables, so as to avoid phone faults or damages incurred by dropping.

1.2.2 Mobile Phone

- In places where the use of mobile phones is prohibited, such as planes and hospitals, please shut down your phone, which will influence normal work of electronic equipment and medical instruments. Please follow relevant regulations of these places. This phone offers the automatic power-on function. Please check the alarm settings to make sure that your phone will not automatically power on during a flight travel.
- Please do not use your phone near to low-signal or high-precision electronic equipment. Radio signal interference may cause false operation or other problems of such electronic equipment. Special attention is required in case of the following devices: hearing aids, pacemakers and other medical electronic devices, fire detectors, auto doors and other auto control devices. For influence of mobile phones on pacemakers and other medical electronic devices, please consult corresponding manufacturers or local distributors.
- Please do not forcefully knock at the LCD display or use it to knock at any other stuff; otherwise the LCD will be damaged and LCD liquid will leak. If such liquid enters your eye, there will be the danger of blinding. In that case, please use clean water to wash your eyes (do not knead the eyes), and ask for help from the doctor.
- Do not disassemble or modify this phone; otherwise it may cause damage, electric leakage or circuit malfunction of the phone.

- In rare cases, when being used in cars of certain models, your phone may cause adverse influence on in-car electronic devices. In that case, do not use the phone to avoid the loss of security guarantee.
- Do not use sharp articles, such as pin or pen point to press the keypad. Otherwise, it may damage your phone or cause error operation.
- If the antenna is damaged, please stop using the phone to avoid body injury.
- Keep your phone away from magnetic articles such as magnetic cards, since radiation waves emitted by the phone may clear information stored on floppy disks, value-storing cards or credit cards.
- Keep tiny metal articles such as thumb pins away from the speakers of your phone. Since the speakers have magnetism during operation, it will absorb those small metal articles, and thus cause body injury to the user or damage the phone.
- Keep your phone away from water or other liquids, which may cause short-circuit, electric leakage or other malfunctions of your phone.
- Phone shall only be connected to a USB interface of version 2.0 or higher.

1.2.3 Battery

- Do not throw the battery into fire; otherwise it may cause fire or explosion.
- In packing the battery, do not impose excessive force; otherwise it may cause leakage, overheat, explosion or fire of the battery.
- Do not use electric wire or pins to cause short circuit of the battery; do not put the battery together with metal stuff including necklaces; otherwise it will cause leakage, overheat, explosion or fire of the battery.
- Do not solder the contacts of the battery; otherwise it will cause leakage, overheat, explosion or fire the battery.
- If liquid within the battery enters the eye, there will be danger of blinding. In that case, do not knead your eyes with your hand; use clean water to wash your eyes and then ask for help from the doctor.
- Do not disassemble or modify the battery; otherwise it may cause leakage, overheat, explosion or fire of the battery.
- Do not use or place the battery near to high-temperature places such as fire or heaters; otherwise it may cause leakage, overheat, explosion or fire of the battery.
- If the battery encounters abnormal temperature rise, color change or distortion during the course of use, recharging or storage, please terminate the use and replace it with a new one.
- If leaked liquid from the battery touches your skin or clothes, it may cause skin burn. In that case, please immediately use clean water to wash and ask for help from the doctor if necessary.
- If the battery leaks or emits unusual odor, please immediately keep it away from flamed fire to avoid fire or explosion.
- Please avoid the battery being affected with damp; otherwise it may cause overheat, smoking or erosion of the battery.
- Please do not use or place the battery in high-temperature environment such as direct sunlight; otherwise it may cause leakage or overheat of the battery, and may decrease its performance and shorten its lifespan.
- Do not recharge the battery for over successively 24 hours.

1.2.4 Charger

- Please use a 100-240V AC power supply. Other voltages will cause electric leakage, fire or damage to your phone and charger.
- It is strictly forbidden to cause short circuit of the charger; otherwise it will cause electricity shock, smoking or damage of the charger.
- Do not use the charger in case its power cable is damaged; otherwise it will cause fire and electricity shock.
- Please clean dust on power sockets as soon as possible.
- Please do not put containers with water beside the charger, so as to avoid short circuit, electric leakage or other malfunctions incurred by spilled water.
- If the charger touches water or other liquids, cut off the power supply immediately to avoid short circuit, fire, electricity shock and malfunctions of the charger.
- Please do not disassemble or modify the charger; otherwise it will cause body injury, electricity shock, fire or damage of the charger.
- Please do not use the charger in high-humidity places such as bathrooms; otherwise it may cause electricity shock, fire or damage of the charger.
- Do not use your wet hand to touch the charger, wire or power socket; otherwise it will cause electricity shock.
- Do not put heavy stuff on power cable or modify them; otherwise it will cause electricity shock or fire.
- Before cleaning or maintenance, please remove the plug of the charger from the power socket.
- When removing the plug, please grasp the charger. Pulling the power cable may damage the cable and incur electricity shock or fire.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

1.2.5 Cleaning& Maintenance

- Do not use your phone, battery and charger in places with high humidity such as bathrooms, and also keep them away from raindrops.
- Please use soft, dry cloth to clean your phone, battery and charger.
- Do not use chemical reagents such as alcohol, thinner or benzene to clean your phone.
- Dusty power socket may cause bad contract and power failure, so as to incur recharging failure. Please clean the power socket regularly.

■ 1.2.6 Generic Precautions

Mobile Phone:

- Please use your phone under the circumstances as follows: temperature: -10℃ to -50℃ and humidity: 35%~85%.
- Please do not use your phone near fixed phones, TV sets, radio sets and office automation equipment, so as to avoid influence on effect of such devices as well as your phone.

 
Battery:

- Please keep the battery in cold places with good ventilation and without direct sunlight.
- Lifespan of the battery is limited, and its use time will be shortened after frequent charging. When the battery fails to function after multiple times of charging, it may come to the end of its life, when please replace it with a new one of the same model.
- Do not litter used batteries with ordinary garbage. Where there are explicit regulations on the disposal of used batteries please follow the instructions of such regulations.

Charger:

- Do not charge your battery under the following circumstances: places with direct sunlight; external temperature under -10°C or over 50°C ; places with heavy humidity, dust or vibration (potential fault causes); near to electric appliances such as TV sets and radio sets (adverse impact on video/audio effect).

2. Phone Overview

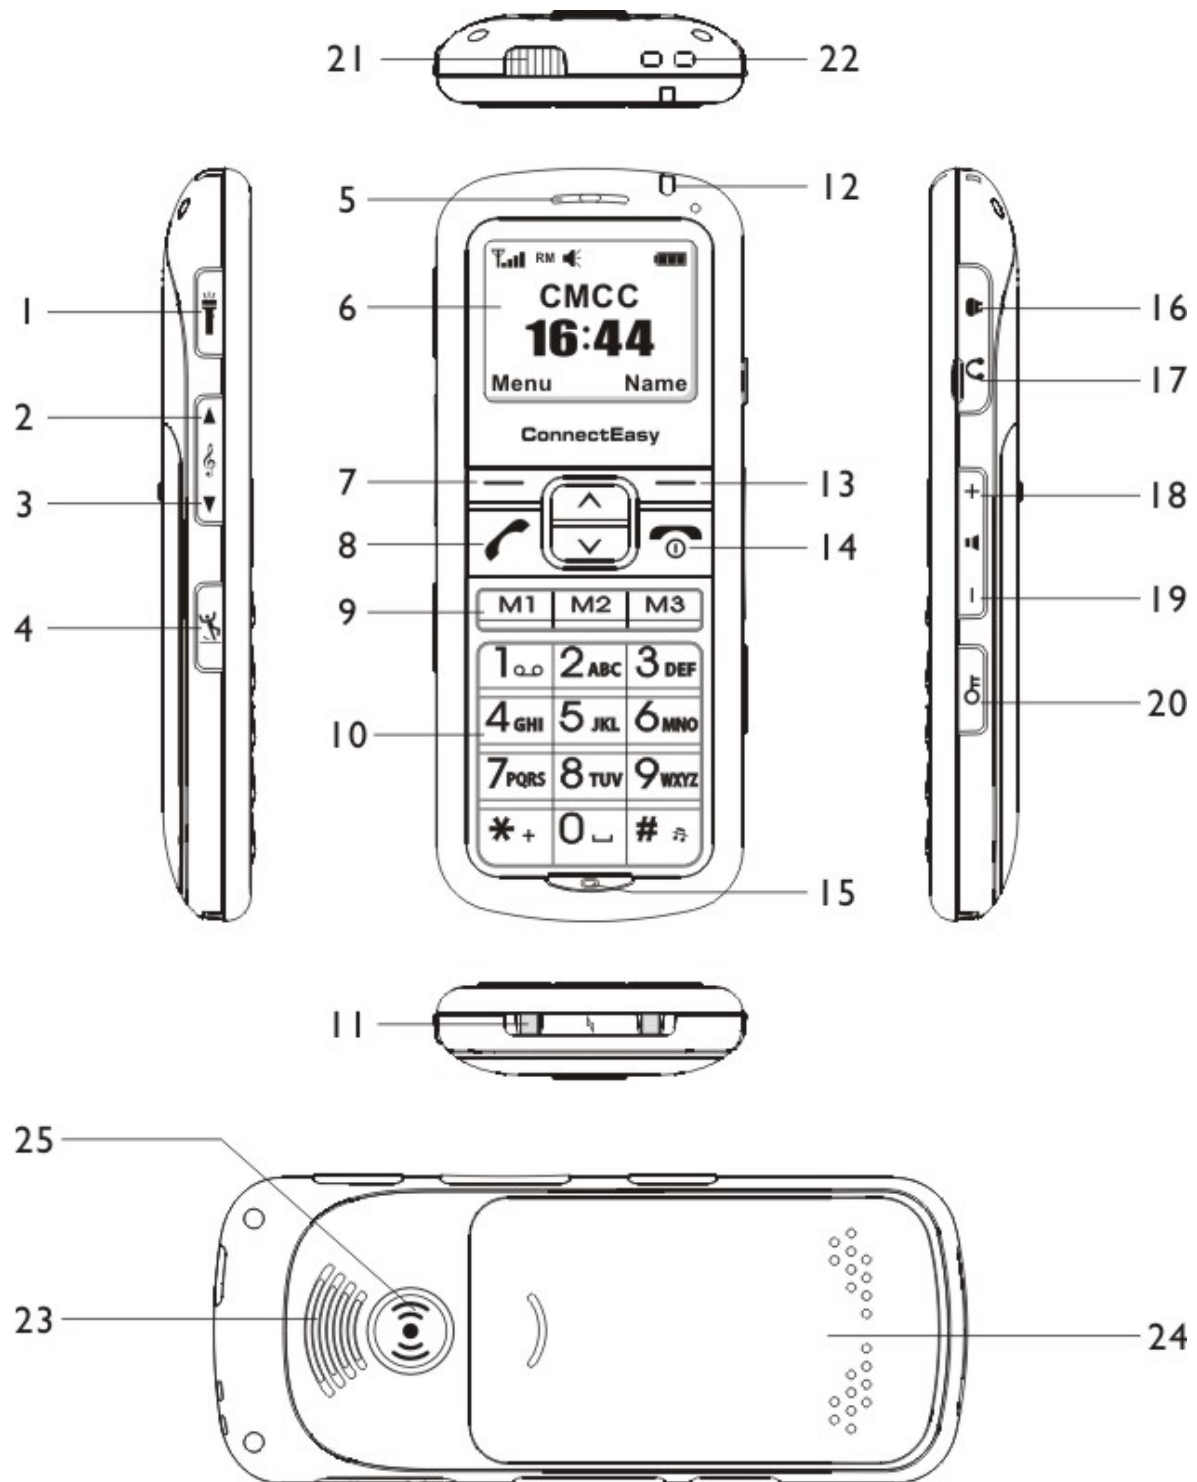


- | | |
|--|-----------------------------------|
| 1. Torch button | 14. Power ON/OFF(End call) |
| 2. Tone up | 15. Microphone |
| 3. Tone down | 16. Charging socket |
| 4. Fall sensor ON/OFF | 17. Earphone socket |
| 5. Earpiece | 18. Volume up |
| 6. Display | 19. Volume down |
| 7. Left soft key | 20. Key lock |
| 8. Talk | 21. Torch light |
| 9. Speed dial button | 22. Eye for neck strap |
| 10. Numeric keypad | 23. Loudspeaker |
| 11. Charging contacts(for use
with charging dock) | 24. Battery cover |
| 12. LED | 25. SOS(Emergency call
button) |
| 13. Right soft key | |

3. Starting Up


3.1 Installing SIM card

 Open the battery door, insert the SIM to SIM socket

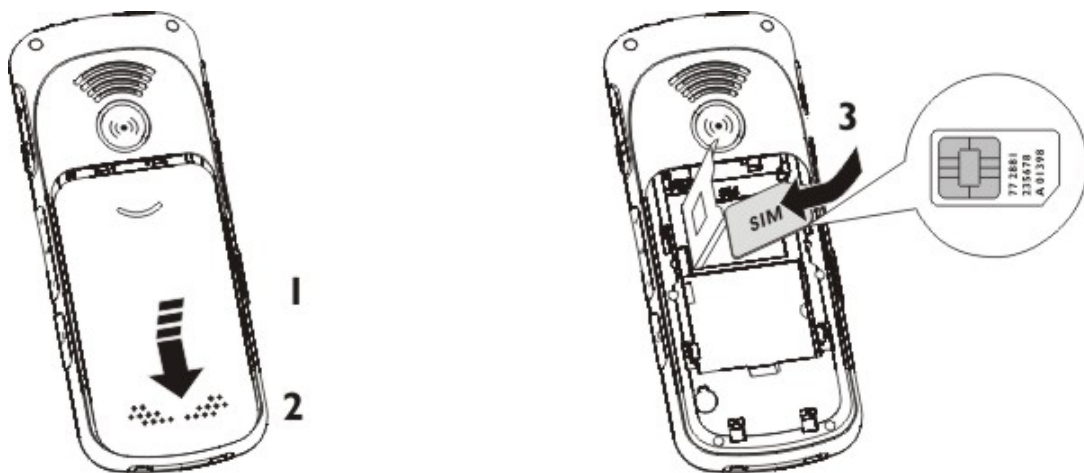

3.2 Installing battery

 
Insert the battery, close the battery door

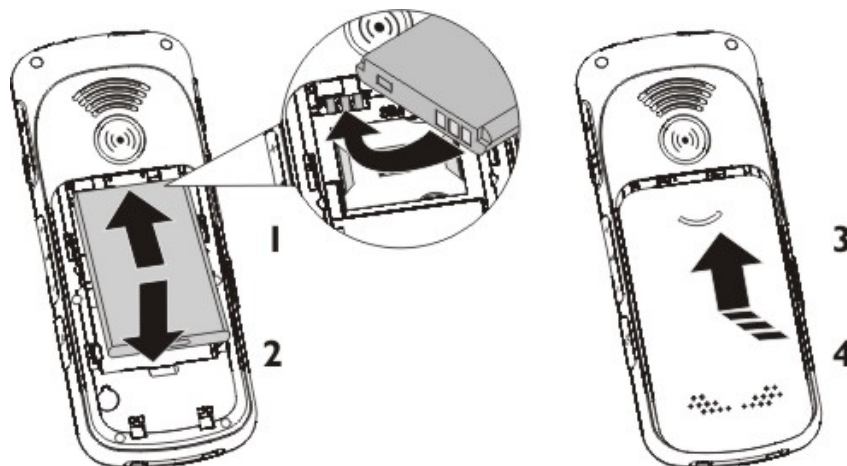

3.3 Charging battery



 Important: Fully charge the battery before using it for first time.

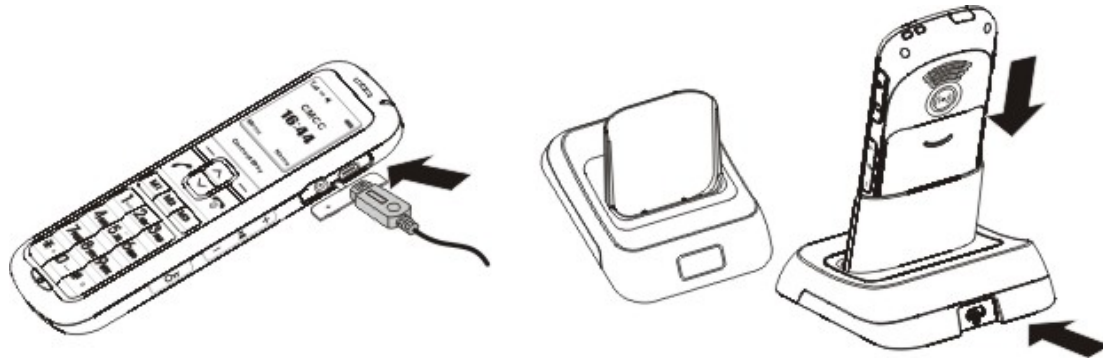

3.4 Switching on/off phone

Switching the phone ON:



Press and hold “power On/Off” button until the unit turns on.

Switching the phone OFF:



Press and hold “power On/Off” button until the unit turns off.

3.5 LCD display symbols

 Signal strength	 Add new connect
 Loudspeaker	 Copy all
 Battery display	 Delete
 Contacts	 Caller groups
 Quick search	 Settings

 Messages	 Call cost
 Write message	 Care
 Inbox	 Organizer
 Outbox	 Calculator
 Templates	 Calendar
 Text message counter	 Alarm
 Text message settings	 FM radio
 Voice mail server	 Settings
 Broadcast message	 User profiles
 Call log	 Bluetooth
 Missed calls	 Phone setup
 Dialled calls	 Network setup
 Received calls	 Security setup
 Delete call logs	 Restore factory setup
 Call timers	 Call setting

4. Making Phone Call

4.1 Answering a call



Press “Talk” button to answer a call



Press “End call” button to reject a call

4.2 Making a call



Enter the phone number



Press “Talk” button to call the number



Press “End call” button to end the call

4.3 Making a call with speed dial button



Important: Setting the phone number for Speed Dial -refer to section 9.1



Press and hold M1, M2, M3 until the corresponding number stored is calling.



Press “End call” button to end the call.

4.4 Redialing



Press “Talk” button to open the call list



Press “Up” or “Down” button to select the phone number dialed



Press “Talk” button to call



Press “End call” button to end the call

4.5 Making emergency call



Important: Setting SOS contact number -refer to section 9.2



When the phone is idle, press & hold “SOS” button will activate “SOS” dialing. A beep tone will be ringing and preset “SOS” message will be sent via SMS to the preset contacts. After few seconds, the phone will call the preset contacts and the LCD will show the calling number.

Preset “SOS” contacts can be up to 5 phone numbers. It’s highly recommended to save all 5 memories with your reliable contacts to maximize the chance of getting help in emergency.

4.6 Adjusting volume



During phone call, press “Volume up” or “Volume down” to increase or decrease the volume

4.7 Adjusting tone level response



Tone adjustment allows you to amplify the volume at desired frequency. During phone call, press “Tone up” button to amplify the volume at high frequency or press the “Tone down” button to amplify the volume at low frequency.

5. Menu Tree

Press “Left soft button” & “  Up” or “  Down” button to navigate the menu

Contacts

- Quick search
- Add new contact
- Copy all
- Delete
- Caller groups
- Settings

Messages

- Write message
- Inbox
- Outbox
- Drafts
- Templates
- Text message counter
- Text message settings
- Voice mail server
- Broadcast message

Call log

- Missed calls
- Dialed calls
- Received calls
- Delete call logs
- Call timers
- Call cost

Care

- Speed Dial
- Emergency Call
- Medical Alert

Organizer

- Calculator
- Calendar
- Alarm

FM radio**Settings**

- User profiles
- Bluetooth
- Phone setup
- Network setup
- Security setup
- Restore factory settings
- Call setting

6. Setting Phonebook

Quick search	Input the initial letter of the contact you want to search
Add new contact	Select SIM card or Phone Press “Left soft key” to enter the Name Press “Left soft key” and select “done” Go to Number and enter the number Press “Left soft key” and confirm “save”
Copy all	You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory
Delete	You can delete the contact from Phonebook
Caller groups	You can group your contacts in record from the Phone with selected ringtone
Settings	Go to “Memory Status” to view the memory status of SIM card or the Phone Go to “Name list filter” to select from SIM card memory or from the phone memory when you quick search the contact

7. Message

Write message

Input your message and confirm “Done”. You can select “send” Enter the phone number or search from your phonebook

Inbox You will be alerted when you have received a message. Go to read the message from Inbox

Outbox View your sent messages

Drafts This menu stores messages you have saved to send at a later time.

Templates There are some pre-defined message in the list.
You can view and edit the template message or create new messages.

Text message counter

This menu shows the list of messages sent and received

Text message settings

Profile settings is set according to your SIM card

Common settings -Delivery report:set the network to inform you when your messages have been delivered

Common settings -Reply path:allow recipients to reply to you through SMS server.

Voice mail server

This menu provides you with a quick way of accessing your voice mailbox (if you have this service from the network)

Broadcast message

Broadcast message are text messages delivered from the network operator to your handset. You can go the this menu to enable or disable it.

8. Call Log

Missed calls	View the last 20 unanswered calls
Dialled calls	View the last 20 outgoing calls
Received calls	View the last 20 incoming calls
Delete call logs	Delete any call logs in record
Call timers	View the duration of your incoming and outgoing calls
Call cost	View the cost of calls if it's provided by the network

9. Care

 
9.1 Speed Dial

Go to “Speed Dial” menu

Press “Left soft key”

Input the phone number and confirm OK.

You can input maximum 3 Speed Dial settings and make a quick call by pressing M1, M2 and M3.

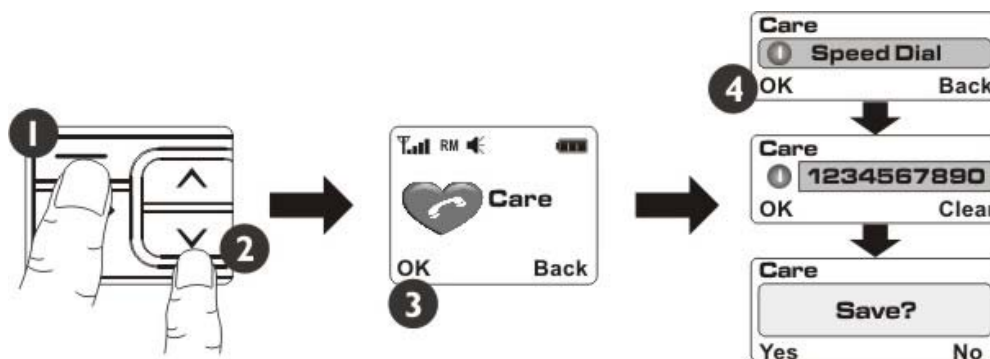


9.2 Emergency Call

Go to “Emergency Call” menu

Press “Left soft key”

Input the phone number and confirm OK.

 You can input maximum 5 SOS help list that you are sure they can provide help to you when you are in emergency.

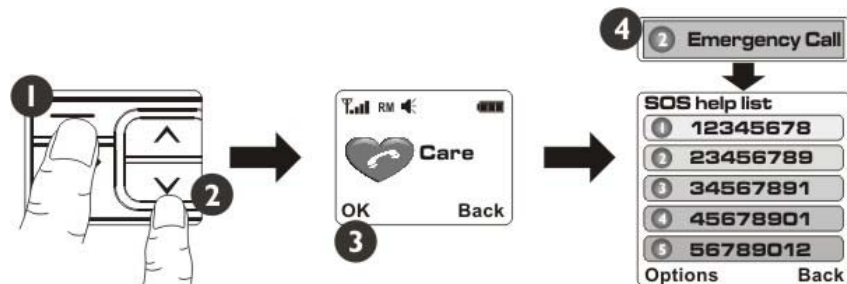

When the phone is idle and you press “SOS” button, the phone will activate the SOS function. The phone will ring and send “SMS” to preset 5 contact, then it will automatically dial the first preset contact.



If the first phone number is busy or no one answers, the phone will start calling 2nd, 3rd, 4th, & 5th sequentially until one of the helpers is connected. Between each cycle, the mobile will wait for a few minutes and activate the alarm to alert other persons in the close area to help the user.

During the operation, the user can cancel the SOS calling by press “Right soft key” to abort.



 
After you input the SOS contacts in the phone, the contacts will receive a SMS to acknowledge your contacts for the SOS registration. If you remove the contact from the SOS list, the phone will send SMS to notify the SOS deregistration.

9.3 Fall detection-SOS service

Fall detection-SOS service detects accidental fall of the user. When the user experiences accidental fall, the phone can trigger the automatic dialing to preset SOS contacts.


9.3.1 Enabling Fall Detection-SOS Service

Press “Fall Sensor” button, a beep tone will ring and LCD will display “Fall Detector Enabled”. The blue LED on top will flash indicating Fall detector is on.

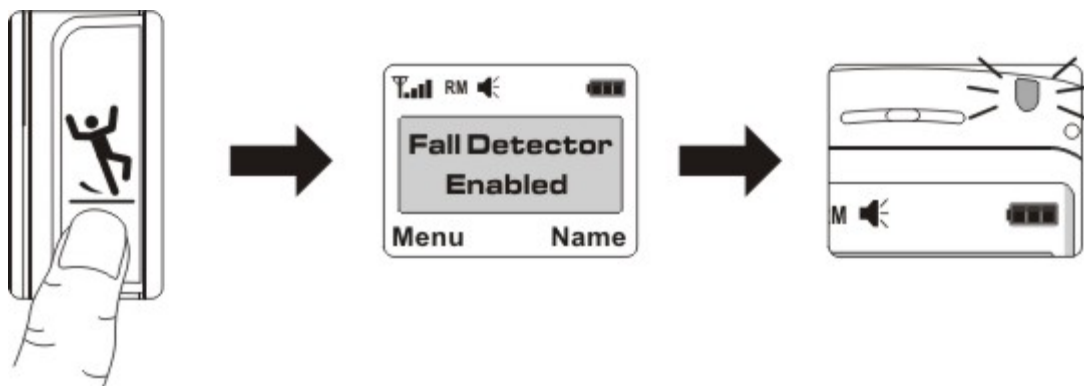

9.3.2 Disabling Fall Detection -SOS service

 Press “Fall Sensor” button, a beep tone will ring and LCD will display“ Fall Detector Disabled”. The blue LED on top will stop flash indicating Fall detector is off.

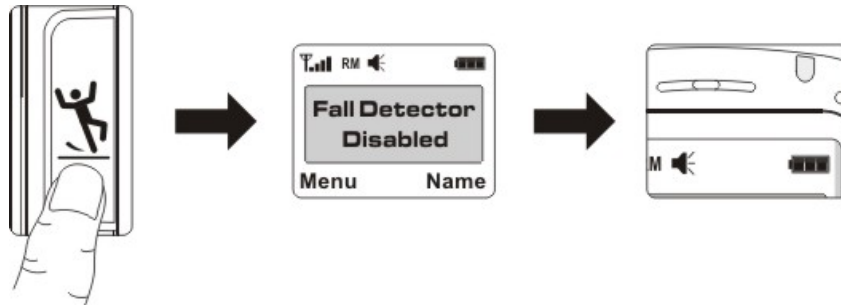

9.4 Medical Alert

9.4.1 Doctor Appointment

Go to “Care” menu, then “Medical Alert”



Go to “Doctor Appointment”

Press “Left soft key” to add appointment schedule

 
Input date, Input time, Input doctor name by edit “Note”


Press “Right soft key” to save the schedule

Press “Left soft key” to confirm saving

Press “  Up” or “  Down” button to scroll between the lines to input.

Press “Left soft key” to “View”, “Add”, “Edit” or “Delete” the schedule.

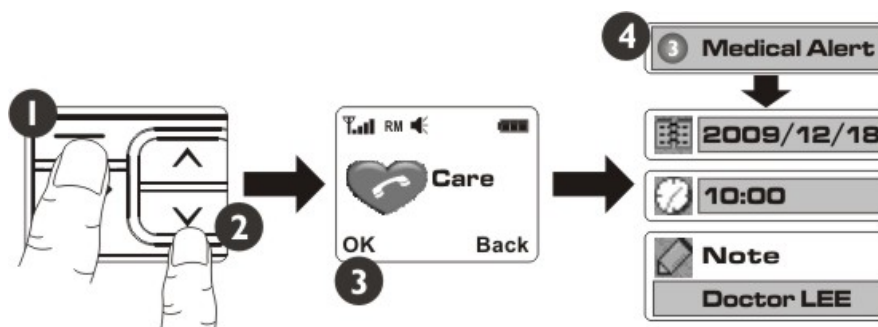

When you input an doctor appointment, the phone will remind you the appointment 1 day before the appointment. You can prepare or inform your helper to take you to doctor in advance. The Doctor appointment time will display on LCD. You can press “  Down” button to view the coming Doctor Appointment detail.

Remark:

The reminder will be activated according to the schedule set and the time of your phone. Please make sure the time of your phone is updated.

9.4.2 Medicine Refill

Go to “Care” menu, then “Medical Alert”

Go to “Medicine Refill”

Press “Left soft key” to add the medicine

Input date, Input time,

Input medicine to refill by edit “Note”

Press “Right soft key” to save the schedule

Press “Left soft key” to confirm saving

Press “  Up” or “  Down” button to scroll between the lines to input

Press “Left soft key” to “View”, “Add”, “Edit” or “Delete” the input.

When you input a Medicine Refill alert, the phone will remind you 1 day before the input time. You can prepare or inform your helper to get the medicine in advance.

Remark: the reminder will be activated according to the schedule set and the time of your phone. Please make sure the time of your phone is updated.

9.4.3 Taking Medicine

Go to “Care” menu, then “Medical Alert”

Go to “Taking medicine”

Press “Left soft key” to add the medicine reminder

 
Press “Left soft key” to turn on the medicine reminder

Input time,


Input time interval if you need to take the medicine within 10 hours again, Confirm Night mode or not,

Input Medicine name by edit “Note”

Press “Right soft key” then “Left soft key” to confirm turn on medicine reminder.

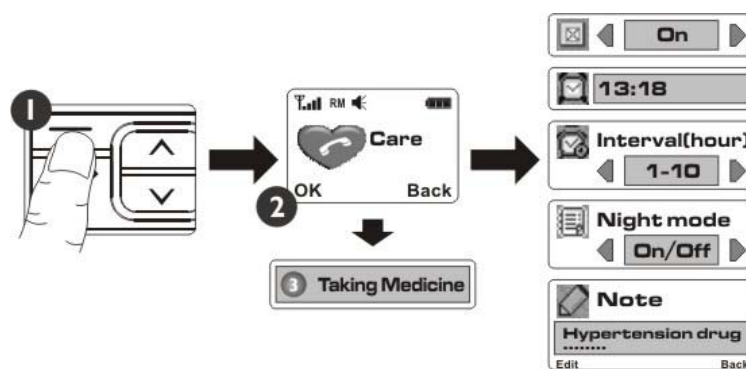

 When you turn on the medicine reminder, the LCD will display “??”

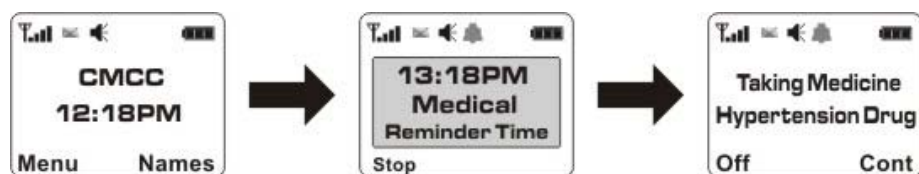

When it is time to take medicine, the alarm will ring to remind you. LCD will display “Taking Medicine xxx”

Press “Right soft key” to continue the medicine reminder. The alarm will ring again when time is next time interval.

Press “Left soft key” to turn off medicine reminder.

You can input maximum 10 medicine reminders.

10. Organizer

Calculator

This contains the standard functions such as +, -, x, ÷: Addition, Subtraction, Multiplication and Division.

Calendar

When you go to this menu, a calendar will pop up.



Alarm

You can set total 5 alarms. Select an alarm to set the alarm time. The Alarm icon will display on the LCD when you turn on the alarm.

11. FM Radio

Please plug the earphone to socket before you start FM radio function.

Go to FM radio menu

Press “  Up” or “  Down” button to change the FM frequency or Press “Left soft key” to select input Channel List (upto 30 channels), Manual Input FM frequency, or go to “Preset auto search” and press “Left soft key” to auto search the channel.

Go to “Settings” to turn on loud speaker setting.

Press “Right soft key” to stop FM radio playing and “End Call” button will exit FM radio.

12. Settings

12.1 User profile

You can change and customize the phone tone setup, volume, Alert type and Ring type for different events or environments.

12.2 Bluetooth

Power

Turn on/off Bluetooth

Inquiry audio device

Press “Left Soft key” will search new devices

Go the device you want to pair

Press “Left soft key” to confirm pairing

Enter a Bluetooth PIN code and press “Bond”.

Press “Left soft key” to confirm connecting

Using device options

From the device list, press “Options” to access the following options:

Connect/Disconnect

connect to the current selected device or disconnect

Set as default handsfree headset: default current connected device

Rename: rename the paired device

Authorize: determine whether the phone asks you to permit connection when the device tries to connect to your phone

Delete: remove the selected device or all displayed devices from the device list.

Service list: display available Bluetooth profile

My Device

Inquiry new device or go the device you want to connect

Press “Left soft key” to confirm connect

Settings

Visibility: allow other Bluetooth devices to search for your phone.

Change device name: change the assigned name of your phone displayed on other devices.

Audio path: select using your phone or other Bluetooth device.

12.3 Phone setup

Time and date

You can input update information of time and date

Schedule power on/off

You can set the schedule of auto Power On/Off.

Language

You can change the language for display text on the phone.

This change will also affect the language input mode.

Display characteristics

You can change settings of the phone display

LCD backlight

You can change the blightness of LCD backlight setting.

12.4 Network setup

Network selection

You can select a network that will be registered either automatically or manually.

Preference

You can set your preferred network list and priority.

12.5 Security setup

SIM lock

you can set the phone to ask for the PIN code for your SIM card when the phone is switched on. Input the PIN you set to turn off the SIM lock if you don't want to turn on the SIM lock.

Phone lock

You can set a security code to avoid unauthorized use of the phone

Auto keylock

When you enable this function, the phone keypad will be locked based on your setting.

You can press “Key lock” button to lock or unlock the keypad.

Fixed dial number (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

The numbers you wish to allow access to once this service has been enabled, must be added to the Number list after enabling Fixed dial number.

Barred Call (SIM card dependent)

The call barring service prevents your phone from making or receiving a certain category of calls.

This function must support by your network service.

This function requires the call barring password.

Change password

PIN is protection to prevent use by unauthorized person.

You can change the access codes: Phone password, PIN code, PIN2 code.

12.6 Restore factory settings

Input factory setting password 1122 and confirm

The phone will ask “yes to restore and reboot?”

Pres “Left soft key” to confirm reset or “Right soft key” to abort the reset

Note: The settings in the phone will be changed if you confirm restore settings.

Data stored on the SIM are unchanged.

12.7 Call setting

Caller ID

This network service allows you to prevent your phone number from being displayed on the phone to the person being called. However it must support by your network provider.

If you select “Set by network”, the phone will use the default setting provided by the network.

Call waiting

You can activate or deactivate the function if your SIM card supports this function.

Call divert

You can divert the phone call to designated phone number or voice mail if your SIM card supports this function.

Call barring

This network service allows you to restrict your call.

1. To select a call barring option

All outgoing: prohibit all outgoing calls

International: prohibit international calls

International expect to home: only allow calls to numbers within domestic country.

All incoming: prohibit incoming calls

Incoming when roaming: prohibit incoming calls when you use your phone outside of domestic country.

Cancel all: cancel all call barring settings

Change barring password: change the call barring password

The call barring service prevents your phone from making or receiving a certain category of calls. This function must support by your network service. This function requires the call barring password.

2. Select the type of calls to be barred.

3. Select Activate. To deactivate call barring, select deactivate.

Auto redial

Auto redial the last dialed if there is no reply

Speed dial

You can make speed dial by pressing number key “2-9” when the phone is idle. Please input the phone number for corresponding number of 2 to 9 and save.

More

Call time display

Turn on or off for call time display

Call time reminder

You can set call time reminder to remind you your calling time.


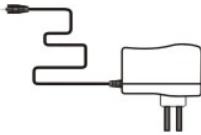 



Auto quick end

You can set a calling time duaration. When this function is activated, the phone will end the call automatically if the calling time duration set is reached.

Notices:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

13. Content Table

	GSM Phone
	Adaptor
	Headset
	Neck-strip
	Battery Pack

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types CS9133 (FCC ID: XWE-CS9133) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.313 W/kg and when properly worn on the body is 0.495 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with the FCC HAC requirements has also been tested E-Field and H-Field, the worst test result of M rating is M3

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.