


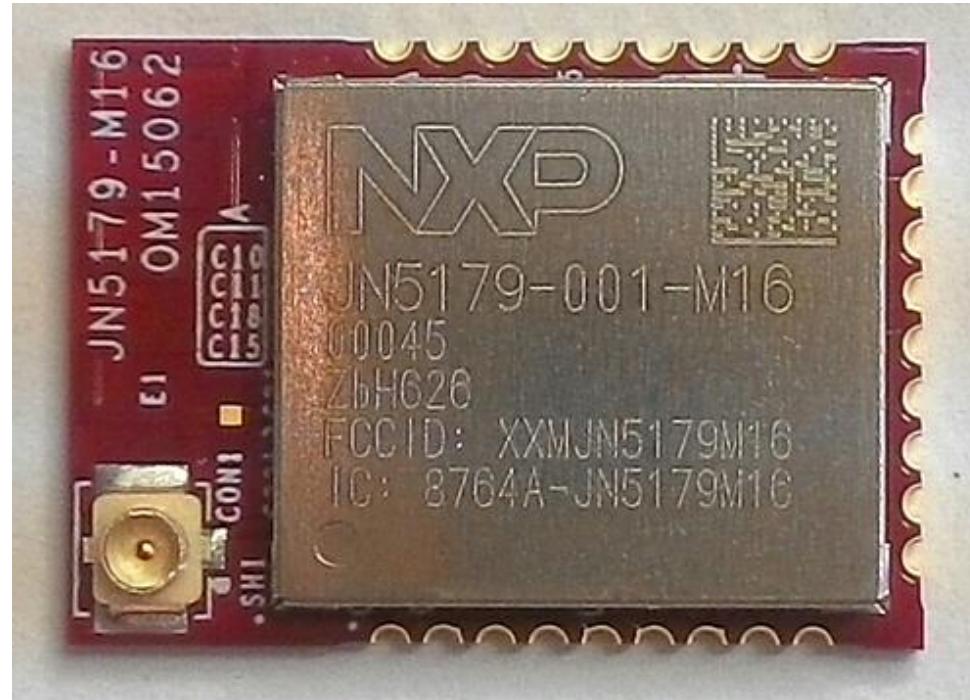

JN5179-001-M16 label location



Label location is on top of the module. It's laser marked on the metal shield