

ruwido

ruwido austria GmbH

Köstendorfer Straße 8

A-5202 Neumarkt a.W.

Austria

Telephone: +43(0)6216-4571

www.ruwido.com



DAIMLER REMOTE CONTROL

USER MANUAL

Model	2738-xxx
--------------	----------

Documentstatus: Open

Editor: Thomas Fischer

i. Revision Status

Version	Date	Author	Comment
1.0	20.08.2012	Th. Fischer	Created

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

1 Table of Contents

i.	Revision Status	2
1	Table of contents	3
2	About this document	4
3	Startup	4
4	Association	4
5	Transmitting data	4

CONFIDENTIAL

2 About this document

The following document describes the use of the remote control model 2738.

3 Startup

The remote control is battery operated. Please insert two fresh AAA batteries in the battery compartment on the back side of the remote.

The indication LED above the mode wheel indicates the battery status after each button press. If the LED blinks red after a button press the batteries should be replaced.

4 Association

To associate the remote with the receiving unit the buttons "ON" and "#" should be pressed simultaneously while the receiving unit is also in association mode. The indication LED blinks red during the association process and then blinks green when the association has finished successfully. If the association is not successful after 30 sec. the association process stops and the red indication LED stops blinking.

5 Transmitting data

After the association process has finished successfully the remote control send data after each button press and while turning the navigation wheel. A successful transmission is indicated by the green indication LED. An unsuccessful transmission is indicated by the orange indication LED.

Turning the mode wheel changes the mode in which the remote works; it does not send any data.