

---

**Digital Color Screen Phone Watch**

**WP1203 User Manual**

---

## Contents

<b>1</b>	<b>BASIC KNOWLEDGE.....</b>	<b>4</b>
1.1	INTRODUCTION.....	4
1.2	SAFETY INFORMATION.....	4
1.3	SAFETY AND HEALTH PRECAUTIONS.....	4
1.3.1	<i>General guideline.....</i>	4
1.3.2	<i>Mobile phone guideline.....</i>	4
1.3.3	<i>Batteries guideline.....</i>	5
1.3.4	<i>Charger &amp; accessories.....</i>	5
1.3.5	<i>Cleaning &amp; maintenance.....</i>	5
1.3.6	<i>Others.....</i>	5
<b>2</b>	<b>BEFORE START.....</b>	<b>6</b>
2.1	PARTS NAMES & EXPLANATION.....	6
2.1.1	<i>Technical Parameters.....</i>	6
2.1.2	<i>Key pad description.....</i>	6
<b>3</b>	<b>BASIC FUNCTIONS.....</b>	<b>6</b>
3.1	MAKING A CALL.....	6
3.1.1	<i>Domestic call.....</i>	6
3.1.2	<i>Fixed line &amp; extension.....</i>	7
3.1.3	<i>International call.....</i>	7
3.1.4	<i>Calling from call history.....</i>	7
3.2	EMERGENCY CALL.....	7
3.3	ANSWERING A CALL.....	7
3.4	CALL TIME.....	7
3.5	OPTIONS DURING A CALL.....	7
<b>4</b>	<b>FUNCTION MENU.....</b>	<b>8</b>
4.1	USING THE FUNCTION MENU.....	8
4.1.1	<i>Accessing function menu by scrolling.....</i>	8
4.1.2	<i>Using Shortcuts.....</i>	8
4.1.3	<i>Exit Menu.....</i>	8
4.2	MENU FUNCTION.....	8
1	<i>Phone book.....</i>	8
2	<i>Messages.....</i>	8
3	<i>Call History.....</i>	8
4	<i>Settings.....</i>	8
5	<i>Multimedia.....</i>	9
6	<i>Organizer.....</i>	9
7	<i>User Profiles.....</i>	9
8	<i>Bluetooth.....</i>	9
9	<i>Utility.....</i>	9
4.3	PHONE BOOK.....	10
4.4	MESSAGES.....	10
4.4.1	<i>SMS.....</i>	10
4.4.2	<i>Voice Mail Server.....</i>	11
4.5	CALL HISTORY.....	11
4.5.1	<i>Missed Calls.....</i>	11
4.5.2	<i>Dialed Calls.....</i>	11
4.5.3	<i>Received Calls.....</i>	11
4.5.4	<i>Delete Call Logs.....</i>	11
4.5.5	<i>Call Time.....</i>	11
4.5.6	<i>Call Cost.....</i>	12
4.5.7	<i>SMS Counter.....</i>	12
4.6	SETTINGS.....	12
4.6.1	<i>Pen Calibration.....</i>	12
4.6.2	<i>Phone Setup.....</i>	12

---

4.6.3	<i>Call setup</i> .....	12
4.6.4	<i>Network Setup</i> .....	13
4.6.5	<i>Auto Keypad Lock</i> .....	13
4.6.6	<i>Restore Factory settings</i> .....	13
4.7	<b>MULTIMEDIA</b> .....	13
4.7.1	<i>Audio Player</i> .....	13
4.7.2	<i>Camera</i> .....	13
4.7.3	<i>Photo Library</i> .....	14
4.7.4	<i>Video Camera</i> .....	14
4.7.5	<i>Video Library</i> .....	14
4.7.6	<i>Sound Recorder</i> .....	14
4.8	<b>ORGANIZER</b> .....	14
4.8.1	<i>Calendar</i> .....	14
4.8.2	<i>To Do List</i> .....	15
4.8.3	<i>World Clock</i> .....	15
4.9	<b>USER PROFILES</b> .....	15
4.10	<b>BLUETOOTH</b> .....	15
4.11	<b>UTILITY</b> .....	15
4.11.1	<i>STK</i> .....	15
4.11.2	<i>File manager</i> .....	16
4.11.3	<i>Stopwatch</i> .....	16
4.11.4	<i>Games</i> .....	16
4.11.5	<i>Calculator</i> .....	16

---

# 1 Basic Knowledge

## 1.1 Introduction

- Thank you for choose our digital color screen mobile phone. By reading these guidelines before using your mobile phone you will have an overall knowledge of this phone set and understand its simple but outstanding functions.
- This phone set is designed for GSM. On top of basic functions, it enables you to use name card style phone book, sound effect, clock/ alarm, agenda, unit conversions, health management, calculator, games, audio player, camera (optional), video recorder (optional), sound recorder and other functions. It serves your work and leisure time. Having unique interface and perfect feature designing this phone set meets all your expectation.
- Our phone set meets the GSM standard and has the qualification from related organizations worldwide.
- Our company reserves the rights modifying the content in this Instruction without pre-notify.

## 1.2 Safety information

- Under the circumstance of stealing and lost, contact the telecom branch or sales outlet immediately.
- When you contact with telecom branch and sales outlet, it is necessary to provide them with IMEI number (printed on the back of the phone set, remove the battery to discover it). Please record the IMEI number and keep it safe for future use.
- To prevent miss usage of your phone set please take precautions such as:
  - Set the PIN number of the SIM card, and update it timely
  - When get off the car ,please do not leave the phone set unattended, keep it with you or in the suitcase.
  - Set call barring.

## 1.3 Safety and health precautions

Read the guidelines before using your phone. Failure to comply with them may be dangerous.

### 1.3.1 General guideline

- Only use the approved batteries and charger. Other products may lead to leaking, over heat, exploding and fire
- Avoid violent drop, shake or hit to the mobile phone, otherwise damage or fire may occur.
- Do not place mobile phone, batteries or charger in or on the microwave oven or high pressure equipment. That may damage the mobile phone.
- Do not use mobile phone in potentially explosive or flammable atmosphere. Using mobile phone in such area could cause fire or explosion.
- Do not keep mobile phone in hot, humidity or dusty space.
- Keep mobile phone out of the reach of children. Do not let children play with mobile phone.
- Do not leave mobile phone on unstable or uneven place. Such condition may result in mobile phone falling.

### 1.3.2 Mobile phone guideline

- Switch off your mobile phone before boarding an aircraft or in hospital and any other facility where posted notices require you to do so. Mobile phone effects the electronic equipments and medication equipments. This phone set has auto switch on function, please check your alarm setting and make sure the phone set will not switch on automatically during the flight.
- Certain electronic equipment may not be shielded against the RF signals from our phone, such as hearing aid, pacemakers, other medical devices, fire sensor, auto gate and others. For the satisfactory operation of the equipment and for the safety of personnel, please consult the manufacturer or local sales outlet to discuss alternatives.
- Do not put hard pressure or hit on the screen. Rough handling can break the internal circuit board and the screen. The liquid from screen can dangerous human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- Do not modify or dismantle the mobile. Unauthorized modify or dismantle will result in damaging the mobile phone.
- In some cases, mobile phone has side effect to the vehicle carried electronic equipments. Please do not use mobile phone under that circumstance. Failure to observe these instructions may lead to the denial of legal right.
- Do not operate mobile phone with sharp object such as needle or ball pen. Sharp object will damage mobile phone or lead to malfunction.
- Please do not use mobile phone which wire is damaged. Otherwise it will dangerous the user.
- Please do not place mobile phone close to magnetic objects. Mobile phone can eliminate the information from disc, credit car and other cards.
- Please keep small metal objects away from mobile phone's ear phone. The speaker has magnetism and attract small metal objects which has potential to damage itself and the one who use it,
- Precipitation, humidity and liquids will corrode electronic circuits. Keep the phone dry.

### 1.3.3 Batteries guideline

- Please keep mobile phone away from fire. Fire will damage the batteries and lead to explosion.
- During changing batteries, hard pressure will cause the batteries leaking, over heated, explosion and caught fire.
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (wire line, clip) or necklace connect two terminals. Short circuit may damage the battery.
- Please do not weld the battery's terminal. Welding the battery will damage it.
- The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- Do not modify or dismantle the battery. Unauthorized modify or dismantle will result in damaging the mobile battery.
- Do not place batteries in or on the microwave oven or over heated places. That may damage the battery.
- During charging, using or storing, if batteries temperature rise, color change, or deformed, please stop using and replace with new battery.
- The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- If the battery liquid is leaking or smelly, please remove it from fire to avoid explosion.
- Please keep battery away from humidity. Humidity will cause over heat, corrosion of the batteries.
- Please do not leave the battery in hot places such as in a car in summer as you will reduce the capacity and life time of the battery.
- Please do not leave the battery on charger for over 24 hours

### 1.3.4 Charger & accessories

- Please charge with dedicated voltage. Using mismatched power will damage the mobile phone and charger.
- Short circuit charger is forbidden. It will cause electric shock and damage the charger.
- If the power line is damaged, please do not use the charger.
- Please keep the charger free from dust all the time.
- Keep charger away from liquid. Spilled liquid will dangerous the charger.
- If charger has close contact with liquid, take off the charger from socket immediately to prevent further damage.
- Do not modify or dismantle the charger. Unauthorized modify or dismantle will result in damaging the charger or personnel.
- Please do not charge in humidity place. Humidity will cause over heat, corrosion of the batteries.
- Do not touch the charger, power line or socket with wet hands. Doing so may give you an electric shock or damage the phone.
- Do not store heavy article on top of power line or dismantle it. Doing so will cause electric shock and fire.
- Unplug the charger from socket before cleaning and maintenance.
- Take the terminal to unplug the charger. Pulling the power line to unplug will damage the charger and cause electric shock or fire.

### 1.3.5 Cleaning & maintenance

- Mobile phone, batteries and charger are not water proof. Please do not use them in humidity place such as shower room. Avoiding spilled by rain.
- Clean mobile phone, batteries and charger with soft fabric.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the mobile phone.
- Please clean the socket regularly. Dirt will make the charger malfunction.

### 1.3.6 Others

#### Mobile phone:

- Please always keep the phone at room temperature between 5°C ~ 40°C and humidity between 35% ~ 85%.
- Please keep mobile phone away from telephone, TV, Radio and other office electronic appliances. Mobile phone will have side effect over such equipments.

#### Batteries:

- Keep batteries away from direct sun shine. Keep batteries in cooling place with good ventilation
- Lifespan of batteries are limited. The stand by time of the batteries will be shortening after frequent charging. When the operation time is noticeable shorter than normal, the batteries are worn out. It is time to buy a new battery.
- Dispose of used batteries in accordance with location regulation. Always recycle. Do not dispose of batteries with normal daily waste.

#### Charger:

- Please do not charge in the following places: under direct sun shine, temperatures below 5°C or above 40°C place, humidity or dusty place, vibrate place, place close to TV, radio or other appliances.

## 2 Before start

### 2.1 Parts names & explanation

#### 2.1.1 Technical Parameters

Measurement: 60mmx43.5mmx15.5mm  
Voltage: 3.7V  
Maximum charging voltage: 4.2V  
Standard Li-ion capacity: 500mAh  
Stand by time: about 100~120 hours  
Call time: about 1.5~2 hours  
Input : 100~240V 50/60Hz 200mA

#### 2.1.2 Key pad description



##### K-CALL :Send

Press it to make a call, answer a call; show call history.

##### K\_OK: Left soft key

In idle screen, press it to get into Photo book.

##### K-Audio: Audio Shortcuts

Press it to enter Audio player.

##### K-CAMERA: Camera Shortcuts

Press it to Camera

##### K\_HUP: End

Press it to hung up a call, switch on/off mobile. Press it in edit screen to get back to idle screen.

## 3 Basic functions

### 3.1 Making a call

When cellular network service provider shows on the screen, you can receive or make a call through network. The received signal strength is shown on the up left corner of the screen (maximum 5 lines—best signal condition)

The quality of network connection is affected by the environment. Moving within small scale can improve the network connection quality.

#### 3.1.1 Domestic call

Use the Number key to input the phone number then press Send key to make connection. Press Right soft key to delete symbols or number. The image is showing on the screen during connecting. The current calling status is also showing on the screen.

Press END to end a call

### 3.1.2 Fixed line & extension

Call the switch board first then dial the extension number. If key in P (Pause) between the switch board number and the extension number, the mobile phone will finish the whole process and connects with the extension directly. Press \* key to input P.

Country code switch board number P extension number Send key

Sample for Pause.

If you have voice mail service with 8880000 the box number is 6666 and pass word as 8888, you dial 8880000 P 6666 P 8888.

The first part of this number is dialing the voice mail service

After connecting, 6666 to the right voice mail box.

Before key in the pass word, the second Pause key P will cause 5 seconds delay then send in 8888 pass word.

### 3.1.3 International call

To dial an international call press \* key until the + sign show up on the screen. This will enable you to dial an international call at anywhere even without knowing the pre fixed country code.

After that input the country code and the number you want to dial. Country code follows the common regulation such as 49 for Germany, 44 for UK, 46 for Sweden.

Take off the 0 before regional code when dial the international call.

Calling from other country for ShangHai service: +86 21 114

+ country code phone number Send

### 3.1.4 Calling from call history

Every number you dial or receive will be saved in Call history record. The newest record is on top of the list. They are segregated by Dialed number, Received number and Miss Call. The mobile phone provides the options to search for all record. When the memory status is full, the oldest record will be deleted. To search for record please:

- To see the Dialed number press Send Key
- Select the number you want to dial in the call history record, and press Send Key to make a call directly.

Once in the call history record, press OK to show the detail. After selecting the number press Save to transmit the number into phonebook directly.

## 3.2 Emergency call

If you are in the area covered by network service, you would be able to make Emergency call. If the cellular network service does not cover that area, ONLY EMERGENCY shows on the screen. That means you are not in the service area of the network only the EMERGENCY call can be connected. If you are in area covered by network service, the Emergency call can be made without inserting SIM card.

## 3.3 Answering a call

If any key to answer is switched on, you can press any key to receive a call. Otherwise press Number key or Left soft key to answer a call. If the ear phone is connected, you can answer a call though ear phone.

## 3.4 Call time

To store the duration of last call and the accumulated call time.

## 3.5 Options during a call

Press Options Key to get into option menu during taking a call. The option menu is similar with Function menu. It is only possible to get into option menu during a call. The functions such as on hold, forward or making a multiparty call need network support. Please contact your network service provider for detail.

In option menu you can select among:

- **Hold:** Put the call on hold or recover it
- **End:** End the call
- **New Call:** Making a new call
- **Phone Book:** Get into phone book to search
- **SMS:** Edit and send a message
- **Sound Recorder:** Record the conversation
- **Mute:** Mute or send
- **DTMF:** Press Left soft key to switch on /off
- **H-Free:** To switch on the speaker to enlarge the volume
- **Multiparty call**
  - Switch: Keep switching between different parties
  - Meeting: To have a conference phone call
  - Transferring: Transfer current call to other phone

---

- End A Call: To end the current call
- End All Calls: To end all active calls
- Phone Book: To get into Phone book Menu
- SMS: To get into Message Menu
- Sound Recorder: To record the conversation
- Mute: To Mute or send the voice
- DTMF: To switch on/ off

**Attention:**

Some options are available under certain condition. Such as Switch only can be used when there are more than one call are connected at the same time.

## 4 Function Menu

### 4.1 Using the function Menu

#### 4.1.1 Accessing function menu by scrolling

- In Idle screen, press OK to get into main menu.

#### 4.1.2 Using Shortcuts

This mobile phone has 11 sets for shortcuts. In Main Menu select shortcuts to set up. Detail as follow: select a short cut function in Short cut Menu, press left soft key to edit, select a menu, press Left soft key to confirm.

#### 4.1.3 Exit Menu

In Function Menu, in general, you can press Right soft key to exit from current menu. Press End to get back to idle screen.

## 4.2 Menu function

The structure of the menus:

### 1 Phone book

### 2 Messages

SMS  
Voice Mail

### 3 Call History

Missed calls  
Dialed calls  
Received calls  
Delete call log  
Call time  
Call cost  
SMS counter

### 4 Settings

Pen Calibration  
Phone Setup  
Time and Date

---

- Schedule Power
- Language
- Display Setup
- Speed dial
- Custom Key
- Auto Update of Date and Time
- Call setup
  - Caller ID
  - Call waiting
  - Call divert
  - Call barring
  - Line switching
  - Call time reminder
  - Call time display
  - Auto redial
  - Closed user group
  - Black list
- Network Setup
  - Network selection
  - Preferred network
- Auto keypad lock
- Restore Factory Settings

## 5 **Multimedia**

- Audio player
- Camera
- Photo library
- Video camera
- Video library
- Sound recorder

## 6 **Organizer**

- Calendar
- To Do List
- World Clock

## 7 **User Profiles**

- General
- Meeting
- Outdoor
- Indoor
- Headset
- Bluetooth
- Flight mode

## 8 **Bluetooth**

## 9 **Utility**

- STK
- File Manager
- Stopwatch
- Games
- Call Background Sound

## 4.3 Phone book

You can save names, mobile phone number, fixed line number, work place phone number and other information by Phone book function. From Main Menu, select Phone Book to get into Phone book directly

- Send SMS: You can send message to this number.
- View: View the record's details.
- Add New Entry: to add a new record into phone book. You can select to save in SIM card and to save in phone. The saving form is slightly different.
- Edit: You can edit the record.
- Delete: to delete the record.
- Copy : to copy the record in phone or in SIM card.
- Settings: phonebook's setting has 3 sub menus: Memory Status, Preferred Storage, Fields.
  - Memory Status: the memory status of SIM card and Mobile Phone
  - Preferred Storage: to select the prioritized place to save, SIM card or mobile phone.
  - Fields: to set the content of name card in phone book.

## 4.4 Messages

### 4.4.1 SMS

#### 4.4.1.1 Inbox

- Go into Inbox to read the received messages.
- In Inbox, the date of receiving and the sender's name, number are also showing
- Use scrolling key to choose previous or next message.
- In Inbox menu, press Send to read the message or select options to :
  - Reply: reply the message to sender
  - Delete: to delete the current message
  - Edit: to edit the content of the message
  - Forward: to forward the message
  - Copy to Phone/ SIM card: to copy the message to Phone/SIM card
  - Move to Phone/SIM card: to move the message to Phone/ SIM card
  - Delete All: to delete all messages in Inbox
  - Copy All: to copy all from SIM card to phone or from phone to SIM card
  - Move All: to move all from SIM card to phone or from Phone to SIM card
  - Use Number: to edit the sender's number, to dial or to save to phonebook

#### 4.4.1.2 Outbox

- Go into outbox to read the saved messages.
- In Outbox, the date of receiving and the sender's name, number are also showing
- Use scrolling key to choose previous or next message.
- In Outbox menu, press Send to read the message or select options to :
  - Send: to send the message. You can choose send or send to groups
  - Edit: Edit the message content
  - Delete: to delete the message
  - Copy to Phone: to copy the message to phone
  - Move to Phone: to move the message to phone
  - Delete All: to delete all messages in Outbox
  - Copy All: to copy all from SIM card to phone or from Phone to SIM card
  - Move All: to move all from SIM card to phone or from Phone to SIM card
  - Use Number: to edit the sender's number, to dial or to save to phonebook
  - Save Objects: extract objects from the EMS and save it

#### 4.4.1.3 Write Message

- Message service centre allow you to send or receive message through mobile phone. Please confirm that the service center's number is set before use.
- Go to sub menu Write New to write new message (detail see chapter 5). Press Options
  - Send: finished writing message, choose to sent;
  - Save: finished writing message ,choose to save it;
  - Send to many: finished writing message ,choose to send many people;
  - Use Template: to insert Idiom that saved before
  - Insert Object: inset picture, sounds, animations into the message
  - Format Text: define the format of the message text
  - Insert PHB Number
  - Insert PHB Name
- After finishing, press Yes, press Scrolling key to select send/save and send/ save/ send in group to send the message

---

- Send Only: to send the message, select this option to get into receiver screen, press Number key to key in the number or search in phone book to find the number. Press yes to send
- Save and Send: sending the message to receiver meanwhile save it in outbox.
- Save: do not send but save the message in outbox
- Send to Many: send the message to more than one receiver at the same time
- Send by Group: select a call group and send the same message to all members of the group

**Attention:** some cities and regions do not support the message that is longer than 160 English letters.

#### **4.4.1.4 Template**

- Save some frequent used terms to avoid typing in the same terms many times. It can be edited or deleted.

### **4.4.2 Voice Mail Server**

The voice mail messages are saved in the cellular network. To listen to the voice mail message, please dial the voice mail box number.

- Edit: to add/edit the voice mail box number to speed up when using the function
- Connect to Voice: to connect with the voice mail box to listen to the messages

## **4.5 Call History**

Your mobile phone can save each 20 records for missed calls, received calls and dialed calls. Through this menu you can search for all history records

### **4.5.1 Missed Calls**

press OK to go into Miss calls menu

Under Call History Menu, press OK to see all detail information including: date, time, number, dialed times.

Under detail information menu, press Option to carry on the following functions:

- Delete: to delete the current record
- Save to phonebook: to save the number to SIM1 card, SIM2 card or phone
- Call: to dial the current number by SIM1 card or SIM2 card
- Edit: to edit the current number and save it into phone book
- Send SMS: send SMS to the current number from SIM1 card or SIM2 card.
- Send MMS: send SMS to the current number by SIM1 card

### **4.5.2 Dialed Calls**

press OK to go into Dialed calls menu

### **4.5.3 Received Calls**

press OK to go into Received calls menu

### **4.5.4 Delete Call Logs**

select to empty the selected call history folder

### **4.5.5 Call Time**

In call time menu, there are four sub menus: last call time, total sent, total received, reset all time.

- Last Call Time: to show the duration of last call
- Total Sent: to show the total duration of dialed call
- Total Received: to show the total duration of received calls
- Reset All Time: to restart time counting

---

## 4.5.6 Call Cost

to calculate the cost of calls

- Last Call Cost: Go into Last call Menu to see the cost of last call
- Total Cost: Go into total cost Menu to see the total call cost
- Reset Cost: In put PIN2 code ( with network support) to zero take the cost and restart cost counting
- Max Cost: Go into Cost Limited to search, edit, or cancel the function. Among those, Edit and Cancel function need PIN2 code.
- Price Per Unit: Go into Price and cost menu to search, edit or cancel the function. Among those, Edit and Cancel function need PIN2 code.

**Attention:** some functions need PIN2 code. Please contact the service provider to get the Pin code.

## 4.5.7 SMS Counter

- Sent: to count the messages those have been sent
- Received: to count the messages those have been received

You can press Left Soft key to empty it

## 4.6 Settings

This menu includes many personal setting to the phone.

### 4.6.1 Pen Calibration

Use this function to calibration touch screen.

### 4.6.2 Phone Setup

- Time and Date: to set the date and time in mobile phone
  - Set Home City: to select a city for the time setting
  - Set Time/Date: to set current time and date
  - Set Format: to select a format to show the time, 12 hours or 24 hours
- Schedule Power On/Off: to set the time that the mobile phone will be switch on/off automatically
- Language: to select the language that will be used
- Display Characteristic
  - Clocks: to select a screen saver for idle screen and the default time setting.
  - Power On Display: to select 3D to display at switch on. It could be default setting or downloaded
  - Power Off Display: to select 3D to display at switch off. It could be default setting or downloaded
  - Screen off Time: to set the LED time.
- Speed Dial : You can set 2-9 quick numbers, press the number key dail the number.
- Custom key : to set the up and down shortcut keys.
- Auto Update Date and Time: to select switch on/off the auto update function

### 4.6.3 Call setup

- Caller ID:
  - Set by Network: use default setting
  - Hide ID: to hind own number during calling (under service provider's support)
  - Send ID: to show own number
- Call waiting
  - switch on/off call waiting function. Select it to show current waiting status.
- Call divert:
  - Divert All Voice Calls: when Divert all voice is on, all calls will be diverted to the number you set for.
  - Divert If Unreachable: when Divert if unreachable is on, calls that made when you are out of touch will be diverted to the number you set for.
  - Divert If No Answer: When Divert if no answer is on, calls that can not be connected will be diverted to the number you set for.
  - Divert If Busy: when Divert if busy is on, calls that are made when your phone was occupied will be diverted to the number you set for
  - Divert All Data Call: to divert all data call
  - Cancel All Divert: to cancel all divert
- Call Barring: to bar certain numbers from dialing

---

- Outgoing Calls: to bar the outgoing calls
- Incoming Calls: to bar the incoming calls
- Cancel All: to cancel all setting for barring
- Change Barring PW: to change barring password
- Line Switching: to switch between line 1 and line 2
- Call Time Reminder: to set whether to have minute reminder at end of each minute during calling
- Call Time Display: to set whether to have call time display
- Auto redial: when Auto redial is on, every failed call will be auto redialed.
- Black List: Set on/off Black List, and edit the blacklist list

#### **4.6.4 Network Setup**

- Network Selection
  - Automatic: auto search the network which the SIM card belongs to
  - Manual: manual search all current available network and do manual registration
- Preferred Networks: pre save the preferred networks

#### **4.6.5 Auto Keypad Lock**

Setting the waiting time to lock the keypad. After setting is done, the keypad will be auto locked after the setting waiting time

- Press right soft key then hash key to lock keypad manually on the idle screen ( only the sim card is actived).

#### **4.6.6 Restore Factory settings**

To restore factory settings, please input the initial password: 1122.

### **4.7 Multimedia**

This function includes: Audio player , Camera , Photo library, Video Camera and Sound recorder.

#### **4.7.1 Audio Player**

In Song list screen, press Left soft key to do setting for songs.

- Play: play the selected songs
- Detail: to see detail information for selected song
- Add To Rings: to add this song to rings tone in Mode setting
- Refresh List: to refresh the play lists.
- Settings: to do setting for multi media player.
  - Play List: memory status for mobile phone or SIM card
  - List Auto Generation: generation music list automatically or not
  - Repeat: Select to replay the song
  - Shuffle: select to play randomly
  - BT Stereo Output: select to play music Bluetooth stereo output
  - BT Stereo Headset: select to use BT stereo headset
  - Equalizer: select to play music model

#### **4.7.2 Camera**

Select Camera to go into menu. Press the OK key to take a photo.

Press Option to go into:

- album : go to view photos
- Camera Setting: to set related parameters for photo taking
- Image Setting: to set photo's size and quality.
- White Balance: choose a light mode for photo taking.
- Scene mode: choose scene mode Auto or Night.
- Effect Setting: to choose screen style.
- Add Frame: to choose frame.

---

- Cont Shot : to choose continuous shot, after selecting, press OK key to make continuous shot.
- Delay Timer: to select whether to delay photo shot.
- Storage: to select saving pass. To mobile or Memory card.
- Restore default: to restore default setting.

#### **4.7.3 Photo Library**

Go to Album.

#### **4.7.4 Video Camera**

If your mobile phone supports video recorder function, select Video Recorder to get into menu, press the OK Key to record video.

- To Player: select to going to video player to play recorded video
- Camcorder Setting: to set related parameters for camcorder
- Video Setting: to set video parameters
- Effect Setting: to set video effects
- Storage: to select saving pass to mobile phone or Memory card
- Restore Default: to restore default setting

#### **4.7.5 Video Library**

Select Video Library menu to go in video player

- Play: go into play screen
- Forward: forward the file to phonebook, screen saver, power on/off display
- Rename: to rename the files
- Delete: to delete the selected files
- Delete All Files: to delete all saved files
- Sort: to set the logic for sorting
- Storage: to select the pass to store or to read, either from mobile phone or from Memory card
- Select Play to start after get into play screen. Press \* key to play in full screen, press \* again to exit from full screen.

#### **4.7.6 Sound Recorder**

Select to record sound. Press Left song key to select

- Record: to record a new sound
- Play: to play the selected file
- Append: to add new extended part to the selected file
- Rename: to rename the selected file
- Delete: delete current file
- Delete All: select all files
- Settings: to set the parameters for sound record
- Forward: forward current file to Mode

### **4.8 Organizer**

The functions include calendar, to do list and world clock.

#### **4.8.1 Calendar**

Going to Calendar menu, press OK to show date. Use up, down, left and right key to select Date and Month. Press Option to go into sub menu

- View task: set a new task and add an alarm clock as reminder. You can choose Once, Everyday, Day, Weekly and Monthly.
  - Once: only remind once for this task
  - Every day: remind everyday at set time
  - Day: to set the time for alarm to ring during a week
  - Weekly: remind once a week at set time
  - Monthly: remind once a month at set time
- Jump to date: jump to selected date from current date.

---

- Alarm: 5alarm clocks can be set: select an alarm clock to edit and set.

#### 4.8.2 To Do List

Support many to do list items. You can View, Add, Edit Task, Delete Task, Delete All , Send vCalendar on an selected item.

#### 4.8.3 World Clock

Select World Clock in sub Menu, press left/right navigate key to switch between cities and time zones.

### 4.9 User Profiles

User can select different mode, and can define your own modes. This set of mobile provides 7 modes: general, meeting, outdoor, indoor, headset, Bluetooth and flight mode.

- General
- Activate: select to apply General mode
- Customize: Select Customize to set the General mode. Available options are: tone set up, volume, alert type, ring type, extra tone, answer mode and LCF back light.
- Tone Setup: to set tone for incoming call, alarm, switch on, switch off, open cover, close cover, message tone and key pad tone.
- Volume: to adjust the volume for ring tone and key pad
- Alert Type: to select alert type. There are ring, vibration only, vibra and ring, vibra then ring.
- Ring type: select to single, repeat or ascending
- Extra tone: to set reminding sound for special case: warning, error, camp on or connect.
- Answer mode: to set Answer by any key is on/off
- LCD backlight: to set time for LDC backlight
- Meeting: Operating as General Mode
- Outdoor: Operating as General Mode
- Indoor: Operating as General Mode
- Headset: Plug in headset to active this mode. Personal setting is as General Mode
- Bluetooth: When connected to the bluetooth, the mode open automatically. Personal setting is as General Mode
- Flight mode: to choose normal mode or flight mode.

### 4.10 Bluetooth

There are many bluetooth arrounding us, such as mobile phone, computer, bluetooth headset and so on.

The menus are as follows:

- Power: open or close the bluetooth of the mobile phone.
- Search BT Device: search for bluetooth audio headset, that is the openning bluetooth headset.

**Attention:** Bluetooth headset can open on this menu, and other device should open from "Active Device".

- BT list: search for Bluetooth device, phone or computer.
- Active Device: There are the name of the connected devices in My device when connected to bluetooth device. Or else you can choose" Option -> Inquiry New Device" to search bluetooth device. There are these menus as follows after connecting to bluetooth device:
- Setting: set the bluetooth functions of this mobile phone.
  - Visibility: open or close.
  - Change Device Name.
  - Authentication: After switch on, it needs to authentication when other device connecting to.
  - Audio Path: choose the sound source when bluetooth connected.
  - FTP: set the path and popedom of the bluetooth working folder.
  - About: display the bluetooth info.

### 4.11 Utility

The functions include STK, File Manager, Stopwatch, Games, Call Background Sound and Calculator.

#### 4.11.1 STK

This function is provided by network service provider. If SIM card and network service provider do not support this function, this function does not work.

---

#### 4.11.2 File manager

Explore the saved files. Support different functions depending on file format

#### 4.11.3 Stopwatch

Include Typical stopwatch and nWay stopwatch.

#### 4.11.4 Games

this mobile phone has many classic games

#### 4.11.5 Calculator

This calculator has four basic functions. Select Calculator menu, press Select to go in

- Press touch screen icon to input +, -, x, ÷.
- Press Right soft key to clear off the input or result. Press Right soft key to return. Press Left soft key to make calculation

**Attention:** the calculator's accuracy is unprecise, it may has deviation especially in dividing.

### FCC Section 15.105 (b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Section 15.21 Information to the user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Section 15.19 Labelling requirements

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.