



DIME[®] 3

User Guide

 


Scan to get started.
Balayez pour commencer.

Warranty information at: skullcandy.com/warranty
Renseignements sur la garantie à: skullcandy.com/warranty

Auto Power - On/Off

*Auto On - Remove buds from Case
*Auto Off - Place buds into Case



Power - On/Off	Power - On/Off
On/Off	On/Off
Encendido/Apagado	Encendido
Accessione/Spegnimento	Accessione
Ligar/Dezligar	Ligar
Ein/Aus	Ein
Aan/Uitzetting	Aan-
Tændi/Sluk For Strøm	Tændi
Virta Päälle/Pois	Virta Päälle
Strøm Av/På	Strøm Av
Ström Av/På	Ström Av
Включить/Выключить	Включить
Onomark Güç Açık	Güç Açık
开机/关机	关机
電源 - On/Off	電源 - On
전원 켜기/끄기	전원 켜기
المفتاح / قالة	تشغيل

Manual Power - On

*Off Mode
Either bud



Power - Off	Power - On
Off	On/off
Apagado	Encendido
Spegnimento	Accessione
Dezligar	Ligar
Aus	Ein
Uitzetting	Aan-
Sluk For Strøm	Tændi
Pois	Virta Päälle
På	Strøm Av
På	Ström Av
Выключить	Включить
Güç Kapalı	Güç Açık
关机	关机
電源 - Off	電源 - On
전원 끄기	전원 켜기
المفتاح	تشغيل

Manual Pairing Mode
 "On Mode
 Either bud

Pairing Mode
 Mode Couplage
 Modo De Vinculaci3n
 Modalit3 Di Accoppiamento
 Modo Emparelhamento
 Koppelmodus
 Paarmodus
 Parandamisvestistand
 Laittepari-Modustila
 Sammenkoblingsmodus
 Parinningsl3ge
 Рeжим Соединения
 Egelseirtime Mode
 配对模式
 ペアリングモード
 페어링 모드
 وضع الاقتران

Pair New Device
 Voice Prompt - "Ready to Pair"
 Available Device - "Dime 3"

LED Flashes Red/Blue

Pair New Device
 Coudneur Nouvel Appareil
 Coudneur Nouvel Dispositif
 Accoppiabile Nuovo Dispositivo
 Emparelhavel Novo Dispositivo
 Mit neuem Ger3t koppeln
 Nieuw Apparaat Pairen
 Pardan Ný Enhet
 Muudosta Uusi Laitesari
 Sammenkoble Ny Enhet
 Para Ny Enhet
 Соединение Новое Устройство
 Yeni Cihaz Ekletri
 配对新设备
 新しいデバイスとペアリング
 새 기기 추가하기
 وضع الجهاز

Play/Pause Answer Call
 "While On
 Either bud

 
 
Play/Pause-Answer/End
 Lecture/Pause-R3pondre/Fin
 Reprodur/pausa-Responder/fin
 Riproduci/pausa-Risposta/fin
 Reprodur/colocar /Em/Pausa-
 Atender/deslgar
 Wiedergabe/Pause/Annehmen/Auflegen
 Afspelen/pauzeren/
 Beantwoorden/Be3indigen
 Atspil/pause-Berastul
 Toisto/tauko-/vastaus/Kopetus
 Spill/pause-Svar/avskutt
 Spela Upp/pausa-Svara/l3gg P3
 Воспроизведение/пауза/
 Ответить/закончить
 Oynat/Duraklat
 播放/暂停-接听/结束
 再生 / 一時停止-応答 / 終了
 재생 / 일시 중지-전화 받기/듣기
 تشغيل / إيقاف مؤقت الإجابة /

Volume Up
 Either Earbud

Volume Up
 Volume Up
 Subar Volumen
 Aumentar Volume
 Aumentar O Volume
 Lautstärke erh3hen
 Volume Omhoog
 Sku Up For Lydstyrken
 3inen/volymakauden Lis3ys
 Volum Opp
 3k3 Volumeni
 Увеличение Громкости
 音量增大
 音量を上げる
 볼륨 높이기
 صوت را بزرگتر

Volume Down
 Either Earbud

Volume Down
 Volume -
 Bajar Volumen
 Reduzire Volume
 Diminuir O Volume
 Lautstärke senken
 Volume Omhoog
 Sku Ned For Lydstyrken
 3inen/volymakauden V3henny
 Volum Ned
 3ik3 Volumeni
 Уменьшение Громкости
 音量减小
 音量を下げる
 볼륨 낮추기
 صوت را بزرگتر

Stays-Aware Mode On/Off	Activate Voice Assistant	EQ Switch	Re-Sync Earbuds	Reset Paired Device List
Stays-aware mode on/off Mode veille activé/désactivé Activar/desactivar el modo Stay-aware Attivazione/disattivazione della modalità Rimani consapevole Modo de alerta ligado/desligado Stay-aware-Modus ein/aus Blijf bewust-modus aan/uit Hold dig oppmærksom tilstand til/frå Pyyt tietoisena -tilä päällä/pois päältä Hold oeg oppmerksom modus på/av Håll dig medveten läge på/av Режим «Оставайтесь в курсе» включ./выкл. Förändra modus acq/kapal 保持感知模式开关 常に意識モードのオン/オフ 인식 모드 켜기/끄기 البقاء على علم في وضع التنبؤ /إيقاف التنبيه  1x + [icon] 00:01  1x + [icon] 00:01	Activate Voice Assistant Activer l'assistat vocal Activar el asistente de voz Stay-aware Attivare assistente vocale Aktivar assistente de voz Sprachassistenten aktivieren Sternumho aktivieren Aktivir talestøtte Aktiviti talasistontan Aktiver taleassistent Aktivira röstassistent Активировать голосовой помощник 激活语音助理 ボイスアシスタントをアクティベートする 음성 인식 가동화 تفعيل مساعد الصوتي  [icon] 00:01  [icon] 00:01	EQ Switch *On Mode *Connected Change Equalizer Modes Changer les modes d'égaliseur Cambiar modos de equalizador Cambia modalit� equalizzatore Ändra om modus för equalizatorer Ändern Sie den Equalizer-Modus Wipig de equalizermodi Svlt udglingstilstande Nahka tasakaalustilannetta Endre utjevningmodus Ändra ujljningsläget Изменить режим эквалайзера 更改均衡器模式 イコライザーモードの変更 이퀄라이저 모드 변경 للتبديل عن طريق اللمس  4x  4x	Re-Sync Earbuds Both Earbuds *While On *Bluetooth Disconnected Re-synch earbuds Resynchroniser les écouteurs Volver a sincronizar los auriculares Ripsincronizza gli auricolari Sincronizar desconectados Sincronizzare le cuffie se disconnetti Neu-synchronisierung der Ohrhörer Synkroniser otetofoner igen Synchroniseer de oordopjes opnieuw Synchron korvastati uudelleen Synchronisera öronsallarna igen Synchroniser otoppelygnen på nytt Повторно синхронизируйте наушники Kobla op Kulelaldan Yeniden Sincronize Et 重新同步耳塞 イヤホンを再同期する 아이 머드 재 동기화 ارتباط دوباره دستگاه  4x  4x	Reset Paired Device List Both earbuds *While ON *Bluetooth Disconnected Reset Device Réinitialiser l'appairé Reiniciar el Dispositivo Ripristina il Dispositivo Reinicie o Dispositivo Koppeling zurücksetzen Reset het Apparaat Nulstelt Enhet Nollaa Laite Nulst�r Enhet Återställ Enhet Сброс сопряжения Eduktirlding Ayrat Listesini Sefda 重置设备 デバイスリストリセット اپاریت لیست را ریست کنید اعداد دستگاه را باطل کنید  [icon] 00:06  [icon] 00:06

Charge Earbuds  AirPod LED's turn RED to indicate charging.	Charge Earbuds Recharge Les Écouteurs Audífonos De Carga Carica Gli Auricolari Cargear Auriculares Ohrhörer aufladen Opładować Oryginalne Ładować Horyzontalne Lataas Nappakulaikkoot Lada Originaliger Ladda Öronhörlurarna Назарувати С Акумулятором Кідати Кіслюдики Зарядити 耳塞充電盒 イヤホン充電 이어버드를 충전하십시오 شارژی سماعت آبلان	Charge Case Case  Charge Case Recharger L'étui Étuiser De Carga Carica La Custodia Estajo De Carregamento Ladenschale aufladen Opładować Etui Ładować Kuferek Lataas Kuusiokotelo Lada Originaliger Laddningsfodral Koffert Naauwkeurig Kutoni Sarji Etui 充電箱 充電ケース 케이스를 충전하십시오 حالة الشحن	Questions Visit : www.skuilcandy.com Si vous avez des questions, allez sur : www.skuilcandy.com Si tienes dudas, visita www.skuilcandy.com Domande Visitare www.skuilcandy.com Fazer perguntas: www.skuilcandy.com Bei Fragen: www.skuilcandy.com Voor vragen bezoek: www.skuilcandy.com For spørsmål se: www.skuilcandy.com Vastakeks löyry: www.skuilcandy.com For spørsmål, besøk: www.skuilcandy.com Für fragen, besuch: www.skuilcandy.com Etwas y ask kosovanyt apoonoo, nocente: www.skuilcandy.com Sondaz Ziyaret edin: www.skuilcandy.com 如有問題請訪問： www.skuilcandy.com 質問がある場合はこちらをご覧ください。 www.skuilcandy.com 문의 하세요. www.skuilcandy.com www.skuilcandy.com بە پرسیار بۆ ئامێرەکەش، وێنە بکەر: www.skuilcandy.com	EN Speaker Driver: 6mm, Impedance: 16 Ohms, THD <3%@50Hz-10kHz, Voltage Regulation: 3.7v, Bluetooth® S.3, Frequency Band: 2.402GHz ~ 2.480GHz, Maximum Power: 12.39dbm, Weight: 34g, FR Driver Président: 6mm, Impedance: 16 Ohm, THD <3%@50Hz-10kHz, Tension: 3.7v, Bluetooth® S.3, Bande de fréquence: 2.402GHz ~ 2.480GHz, Puissance Max: 12.39 dbm, Poids: 34g, JP スピーカードライバー: 6mm, Impedance: 16 Ohms, THD <3%@50Hz-10kHz, Voltage: 3.7v, Bluetooth® S.3, バンド フレQUENCY: 2.402GHz ~ 2.480GHz, Pwer Maximo: 12.39dbm, Peso: 32.5g, DE Lautsprecher-Treiber: 6mm, Impedanz: 16 Ohm, THD <3% @ 50 Hz - 10 kHz, Spannungsregelung: 3.7 V, Bluetooth® S.3, Frequenzband: 2.402 GHz ~ 2.480 GHz, Maximale Performance: 12.39 dbm, Gewicht: 34 g, JP スピーカードライバー: 6mm, インピーダンス: 16 オーム, THD <3% @ 50 Hz - 10 kHz, 電圧レギュレーション: 3.7 V, ブルートゥース® S.3, 周波数帯域: 2.402 GHz ~ 2.480 GHz, 最大パワー: 12.39 dbm, 重量: 34g, KR 스피커 드라이버: 6mm, 임피던스: 16 옴, THD <3%@50Hz-10kHz, 전압 조절: 3.7V, 블루투스® S.3, 주파수 대역폭: 2.402GHz ~ 2.480GHz, 최대 출력: 12.39dbm, 무게: 34g. EN Skullcandy®, and other marks are registered trademarks of Skullcandy, Inc. All rights reserved. Skullcandy®, got les autres marques sont des marques déposées de Skullcandy, Inc. Tous droits réservés. Skullcandy® e las demás marcas son marcas registradas de Skullcandy, Inc. Todos los derechos reservados. Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of the device or its compliance with safety and regulatory standards. Please note that the use of the accessory with an Apple product may affect wireless performance. iPhone and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. *Android is a trademark of Google Inc. Any use of such mark by Skullcandy, Inc. is under license.
	LED Pulsing RED = 0%-25% case charge LED Pulsing Yellow = 26%-75% case charge LED Solid Green = 76%-100% case charge		EN Maximum operating temperature: 45°C; FR Température maximale de fonctionnement: 45°C; ES Temperatura máxima de funcionamiento: 45°C; DE Maximale Betriebstemperatur: 45°C; JP 最高使用温度は45℃です。 ZH 最高工作溫度: 45℃。	

[illegible]