

DOOR READER USER MANUAL

The SecureALL door reader is installed in an electronic lock, typically one that is locally controlled and where a customer requires single point, central control capability throughout a facility. Once the reader unit is installed, the only user requirement is to replace four AA batteries when their voltage falls below a predetermined level. This is accomplished by removing a single screw on the back of the unit, removing a screw that holds the inside handle in place, lifting the back cover off, removing the battery compartment cover, replacing the batteries and then reversing the process to put it back together again. As with the U-Key, there are no buttons to press and no settings to be changed. This is all accomplished at the factory.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.