


READYNET SOLUTIONS

WR1200

WIRELESS ROUTER



- Introduction.....3**
 - Wireless connection4
 - Cable connection4
- Internet Connection5**
 - Introduction5
 - Static Internet connection.....5
 - PPPoE.....6
- Home Network7**
 - Introduction7
 - 2.4Ghz Wireless settings7
 - 5Ghz Wireless settings8
- Management9**
 - Introduction9
 - Firmware Upgrades9
 - Passwords9

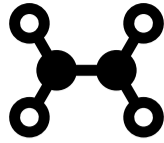

INTRODUCTION

This manual is directed towards owners of the ReadyNet WR1200 wireless router.

Please visit <http://www.readynetsolutions.com> to confirm you are using the latest version of firmware for the WR1200.

The WR1200 router is pre-configured to work for common ISP settings. Refer to the instructions in this manual if you need to change the default setting to match your ISP's network or if you would like customize the settings.

To change the settings of the WR1200 you will first need to access the web interface of the router. The label on the bottom of the router has the username and password for the web interface of the router and also the IP. Follow the instruction in the next section to access the web interface of the WR1200.

WIRELESS CONNECTION

The default wireless networks of the WR1200 are printed on the label at the bottom of the router. With your PC, wireless-capable mobile phone or tablet search for either of the two wireless networks and connect to one.

In your browser enter

<http://192.168.1.1>

and hit enter.

Enter the username and password printed on the label on the bottom of the router.

CABLE CONNECTION

Connect an Ethernet cable to one of the LAN (yellow colored) ports of the WR1200 and connect the other end of the cable to your PC.

In your browser enter

<http://192.168.1.1>

and hit enter.

Enter the username and password printed on the label on the bottom of the router.

INTERNET CONNECTION

INTRODUCTION

Use the included Ethernet cable to connect the WAN (blue colored) Ethernet port at the back of your router to your ISP's modem or router.


The default internet connection setting for the WR1200 is Dynamic Host Configuration Protocol (DHCP). This is the most widely used protocol used by ISPs and needs no configuration as the WR1200 will automatically connect to your ISP. If your ISP requires you to use either Static or PPPoE as the internet connection method, follow the instructions below.

STATIC INTERNET CONNECTION


If your ISP requires you to use Static mode to connect to the internet, you will need the static IP address, netmask, gateway and DNS server addresses from your ISP.

To configure static mode on the WR1200 for

- Click Network > Interfaces and in the WAN section, click "Edit".

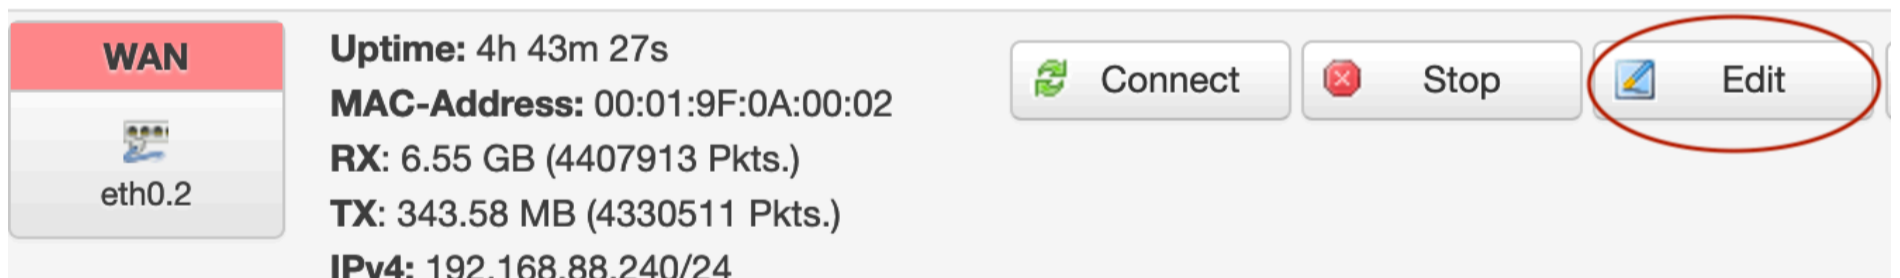

- Change Protocol to "Static address" and click 'Switch protocol'

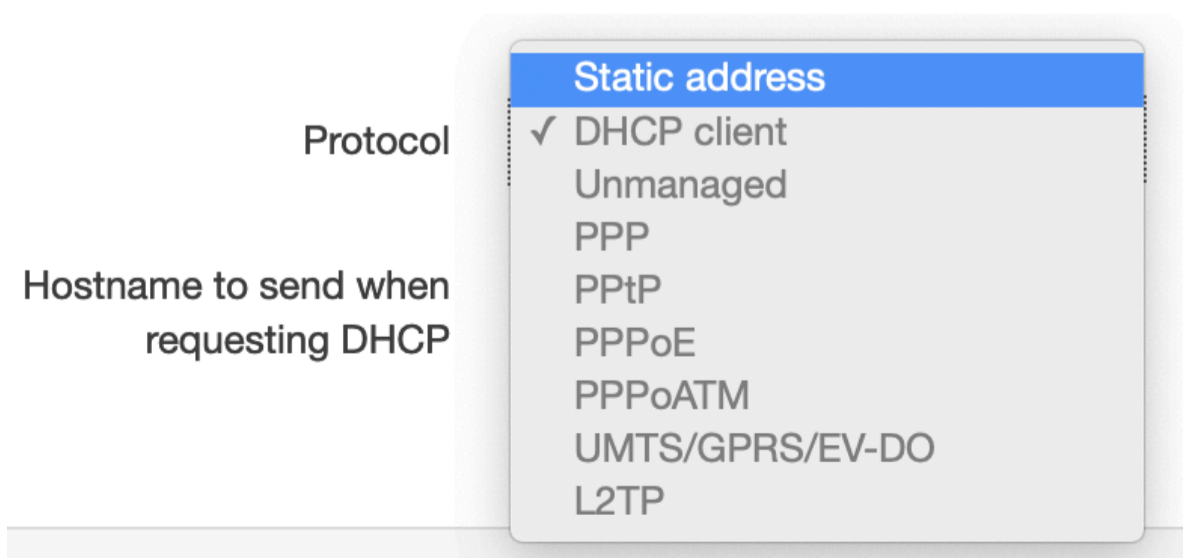


- Enter the information provided by your ISP on this page.
- Click “Save & Apply”

PPPOE

If your ISP uses PPPoE as the internet connection mode, first change the internet mode to PPPoE and then enter the PPPoE username and password provided by your ISP.

- Click Network > Interfaces and in the WAN section, click “Edit”.
- Change the Protocol to “PPPoE” and click ‘Switch protocol’

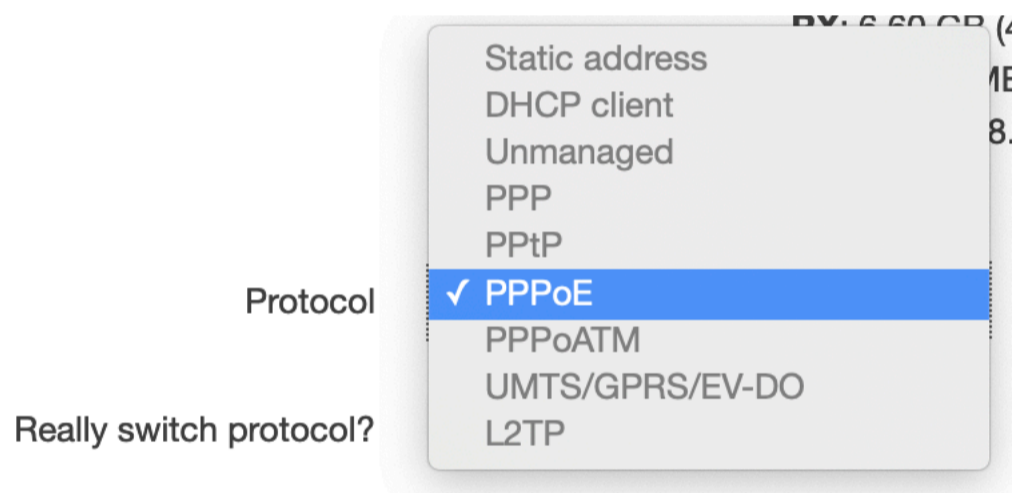

- Enter the username and password provided by your ISP.
- Click “Save & Apply”

HOME NETWORK


INTRODUCTION

This chapter provides information on how to change the settings for your internal network. You can change the wireless network name and also the Wi-Fi passphrase

2.4GHZ WIRELESS SETTINGS

This section describes the steps to change the wireless network and passphrase for the 2.4 GHz radio.

- Click Network > Wifi and for the 2.4Ghz radio click 'Edit'



Generic WEXT 802.11 (mt7603e)
Channel: 1 (? GHz) | Bitrate: 300 Mbit/s

SSID: mt7603e-0000 | Mode: Client
0% BSSID: 00:01:9F:0A:00:02 | Encryption: -

Disable Edit

- In the 'Interface Configuration' section, change the value of ESSID field to your 2.4GHz wireless network name.

Interface Configuration

General Setup **Wireless Security**

ESSID

Mode


- Click the 'Wireless Security' tab and edit the value of the 'Key' field to your new passphrase.

Interface Configuration

General Setup


Wireless Security

Encryption

 WPA-Encryption requires wpa_supplica

Cipher

Key Renewal Interval(seconds)


Key 


- Click 'Save & Apply'



5 GHz WIRELESS SETTINGS

This section describes the steps to change the wireless network and passphrase for the 5 GHz radio.

- Click Network > Wifi and for the 5GHz radio click 'Edit'

 **Generic WEXT 802.11 (mt7612e)**
Channel: 52 (? GHz) | Bitrate: 400 Mbit/s

 **SSID:** mt7612e-0000 | **Mode:** Client
0% **BSSID:** 00:01:9F:0A:00:03 | **Encryption:** -

 Disable  Edit

- In the 'Interface Configuration' section, change the value of ESSID field to your 5GHz wireless network name.
- Click the 'Wireless Security' tab and edit the value of the 'Key' field to your new passphrase.
- Click 'Save & Apply'

MANAGEMENT

INTRODUCTION

This chapter describes steps to perform common management tasks on the WR1200.

FIRMWARE UPGRADES

In the web interface click Status > Overview to determine the current firmware version on the WR1200. Visit <https://readynetsolutions.com> to check if there is a more recent firmware. Download the latest firmware version file from <https://readynetsolutions.com> to your PC.

- Click System > Backup/Flash Firmware and in the 'Flash new firmware image' section click the 'Browse' button.

Flash new firmware image

Upload a sysupgrade-compatible image here to replace the running firmware. Check "Keep settings" compatible firmware image).

Keep settings:

Image: No file selected.

- Select the firmware file that you downloaded
- Click "Flash image" and on the next page click "Proceed"
- Do not power off your router for the next 5 minutes.

PASSWORDS

To change the password to the web interface of your router;

- Click System > Administration and in the “Router Password” section enter your new password twice.

Router Password

Changes the administrator password for accessing the device

Password	<input type="password"/>	
Confirmation	<input type="password"/>	

- Click “Save & Apply”

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

The use of the 5150 – 5350 MHz band is restricted to indoor use only. This restriction will be applied in all member states.