

User Manual

Smart Phone

Model name: Galapad 6

Trade name: Galapad

FCC ID:Y3GGALAPAD6

Users' Manual

This device provides high quality mobile communication and entertainment using Galapad 6

high standards and technological expertise. This user manual is specially designed to detail the device's functions and features.

- Please read this manual before using the device to ensure safe and proper use.
- Descriptions are based on the device's default settings.
- Images and screenshots may differ in appearance from the actual product.
- Content may differ from the final product, or from software provided by service providers or carriers, and is subject to change without prior notice.
- Available features and additional services may vary by device, software, or service provider.
- Applications and their functions may vary by country, region, or hardware specifications.

Samsung is not liable for performance issues caused by applications from any provider other than Samsung.

- Samsung is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customise the operating system may cause the device or applications to work improperly.
- Software, sound sources, wallpapers, images, and other media provided with this device are licensed for limited use. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Users are entirely responsible for illegal use of media.
- You may incur additional charges for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select an appropriate data tariff plan. For details, contact your service provider.
- Default applications that come with the device are subject to updates and may no longer be supported without prior notice. If you have questions about an application provided with the device, contact a Samsung Service Centre. For user-installed applications, contact service providers.
- Modifying the device's operating system or installing softwares from unofficial sources may result in device malfunctions and data corruption or loss. These actions are violations of your Galaxy licence agreement and will void your warranty.

Basics

[Indicator icons](#)

The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are most common.

	No signal
	Signal strength
	Roaming (outside of normal service area)
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSDPA network connected
	Wi-Fi connected
	Bluetooth feature activated
	GPS activated
	Call in progress
	Missed call
	Synced with the web
	Connected to computer
	No SIM or USIM card
	New text or multimedia message
	Alarm activated
	Silent mode activated
	Vibration mode activated
	Flight mode activated
	Error occurred or caution required
	Battery power level

Using the touch screen

Use only fingers to use the touch screen.

- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to contact water. The touch screen may malfunction in humid conditions or when exposed to water.
- To avoid damaging the touch screen, do not tap it with anything sharp or do not apply excessive pressure to it with your fingertips.
- Leaving the touch screen idle for extended periods may result in afterimages (screen burn-in) or ghosting. Turn off the touch screen when you do not use the device.

Finger gestures

Tapping

To open an application, to select a menu item, to press an on-screen button, or to enter a character using the on-screen keyboard, tap it with a finger.

Tapping and holding

Tap and hold an item for more than 2 seconds to access available options.

Dragging

To move an icon, thumbnail, or preview to a new location, tap and hold it and drag it to the target position.

Double-tapping

Double-tap on a webpage, map, or image to zoom in a part. Double-tap again to return.

Pinching

Spread two fingers apart on a webpage, map, or image to zoom in a part. Pinch to zoom out.

Notifications

Notification icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status, and more. Drag down from the status bar to open the notifications panel. Scroll the list to see additional alerts. To close the notifications panel, drag up the bar that is on the bottom of the screen. From the notifications panel, you can view your device's current status and use the following

options:

- Wi-Fi**: Activate or deactivate the Wi-Fi feature.
- GPS**: Activate or deactivate the GPS feature. Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, GPS, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.
- Sound**: Activate or deactivate silent mode. You can vibrate or mute your device in silent mode.
- Screen rotation**: Allow or prevent the interface from rotating when you rotate the device.
- Bluetooth**: Activate or deactivate the Bluetooth feature.
- Mobile data**: Activate or deactivate the data connection.
- Blocking mode**: Activate or deactivate blocking mode. In blocking mode, your device will block all notifications.
- Power saving**: Activate or deactivate power-saving mode.
- All Share Cast**: Activate or deactivate the All Share Cast feature.
- Sync**: Activate or deactivate auto sync of applications.

The available options may vary depending on the region or service provider.

Entering text

Use the keyboard or the voice input feature to enter text.

Text entry is not supported in some languages. To enter text, you must change the input language to one of the supported languages.

Changing the keyboard type

Tap any text field, open the notifications panel, tap **Choose input method**, and then select the type of keyboard to use.

Entering text by voice

Activate the voice input feature and then speak into the microphone. The device displays what you speak.

If the device does not recognise your words correctly, tap the underlined text and select an alternative word or phrase from the dropdown list.

To change the language or add languages for the voice recognition, tap the current language at the bottom of the screen.

Turning Wi-Fi on and off

Open the notifications panel, and then tap **Wi-Fi** to turn it on or off.

- This device uses a non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors.
- Turn off Wi-Fi to save the battery when not in use.

Joining Wi-Fi networks

On the Applications screen, tap **Settings** **Wi-Fi**, and then drag the **Wi-Fi** switch to the right. Select a network from the list of detected Wi-Fi networks, enter a password if necessary, and then tap **Connect**. Networks that require a password appear with a lock icon. After the device connects to a Wi-Fi network, the device will automatically connect to it any time it is available.

Adding Wi-Fi networks

If the desired network does not appear in the networks list, tap **Add Wi-Fi network** at the bottom of the networks list. Enter the network name in **Network SSID**, select the security type and enter the password if it is not an open network, and then tap

Save.

Transferring files

Move audio, video, image, or other types of files from the device to the computer, or vice versa.

The following file formats are supported by some applications. Some file formats are

not supported depending on the version of the device's software.

- Music**: mp3, m4a, mp4, 3gp, 3ga, wma, ogg, oga, aac, and flac
- Image**: bmp, gif, jpg, and png.
- Video**: 3gp, mp4, avi, wmv, flv, and mkv
- Document**: doc, docx, xls, xlsx, ppt, pptx, pdf, and txt

Communication

Phone

Use this application to make or answer a call.

Tap **Phone** on the Applications screen.

Making calls

Making a call

Use one of the following methods:

- Keypad**: Enter the number using the keypad, and then tap .
- Logs**: Make a call from the history of incoming and outgoing calls and messages.
- Favourites** : Make a call from the list of favourite contacts.
- Contacts**: Make a call from the contacts list.

Speed dial numbers

For speed dial numbers, tap and hold the corresponding digit.

Number prediction

When entering numbers on the keypad, automatic predictions appear. Select one of these to make a call.

Receiving calls

Answering a call

When a call comes in, drag  outside the circle, or press the headset button.

If the call waiting service is active, another call can be made. When the second call is answered, the first call is put on hold.

Rejecting a call

When a call comes in, drag  outside the circle, or press and hold the headset button. To send a message when rejecting an incoming call, tap **Reject call with message**. To create the rejection message, tap  **Call settings** → **Set reject messages**.

Ending a call

Tap **End call** to end a call. Or press the headset button.

Messaging

Use this application to send text messages (SMS) or multimedia messages (MMS).

Tap **Messaging** on the Applications screen.

You may incur additional charges for sending or receiving messages while you are outside your home service area. For details, contact your service provider.

Email

Use this application to send or view email messages.

Tap **Email** on the Applications screen.

Bluetooth

Bluetooth creates a direct wireless connection between two devices over short distances. Use Bluetooth to exchange data or media files with other devices.

Media

Music Player

Use this application to listen to music.

Tap **Music Player** on the Applications screen.

- Some file formats are not supported depending on the device's software version.
- Some files may not play properly depending on the encoding used.

Playing music

Select a music category, and then select a song to play.

Camera

Use this application to take photos or videos.

Tap **Camera** on the Applications screen.

The camera automatically shuts off when unused.

Camera etiquette

- Do not take photos or videos of other people without their permission.
- Do not take photos or videos where legally prohibited.
- Do not take photos or videos in places where you may violate other people's privacy.

Video Player

Use this application to play video files.

Tap **Video Player** on the Applications screen.

- Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts is lost.
- Some file formats are not supported depending on the device's software.
- Some files may not play properly depending on how they are encoded.

FM Radio

Listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna.

Tap **FM Radio** on the Applications screen.

Listening to the FM radio

Plug a headset into the device before launching the FM radio.

The FM radio scans and saves available stations automatically when running for the first time.

Calculator

Use this application for simple or complex calculations.

Tap **Calculator** on the Applications screen.

Voice Recorder

Use this application to record or play voice memos.

Tap **Voice Recorder** on the Applications screen.

Travel & local

Maps

Use this application to pinpoint the location of the device, search for places, or get directions.

Tap **Maps** on the Applications screen.

This application may not be available depending on the region or service provider.

Local

Use this application to search for nearby restaurants, banks, bus stops, and more.

Tap **Local** on the Applications screen.

This application may not be available depending on the region or service provider.

Navigation

Use this application to search for a route to a destination.

Tap **Navigation** on the Applications screen.

Navigation maps, your current location, and other navigational data may differ from actual location information. You should always pay attention to road conditions, traffic, and any other factors that may affect your driving. Follow all safety warnings and regulations while driving.

This application may not be available depending on the region or service provider.

Specify the destination by using one of the following methods:

- Speak the destination address.
- Enter the destination address.
- Select the destination address from the contacts list.
- Select the destination from the list of starred places.

Once a route is found, follow on-screen instructions to navigate to the destination.

Settings

About Settings

Use this application to configure the device, set application options, and add accounts.

Tap **Settings** on the Applications screen.

Wi-Fi

Activate the Wi-Fi feature to connect to a Wi-Fi network and access the Internet or other network devices.

Bluetooth

Activate the Bluetooth feature to exchange information over short distances.

More settings

Customise settings to control connections with other devices or networks.

Sound

Change settings for various sounds on the device.

Display

Change the settings for the display.

Wallpaper:

Home screen: Select a background image for the Home screen.

Lock screen: Select a background image for the locked screen.

Home and lock screens: Select a background image for the Home screen and the locked screen.

LED indicator: Change the settings for the notification light.

Charging: Set to turn on the notification light while you are charging the battery.

Low battery: Set to turn on the notification light when the battery is low.

Notifications: Set to turn on the notification light when you have missed calls, messages, or notifications.

Voice recording: Set to turn on the notification light when you record voice memos.

Storage

View memory information for your device and memory card, or format a memory card.

Power saving

Activate power-saving mode and change the settings for power-saving mode.

- CPU power saving**: Set the device to limit some system resource usage.
- Screen power saving**: Set the device to decrease the brightness of the display.
- Background colour**: Set the device to decrease the brightness of the background colour of email and Internet.
- Turn off haptic feedback**: Set the device to turn off the vibration when touching keys.
- Learn about power saving**: Discover how to reduce battery consumption.

Battery

View the amount of battery power consumed by your device.

Applications manager

View and manage the applications on your device.

Lock screen

Change settings for securing the device.

Screen lock: Activate the screen lock feature.

Lock screen options: Change the settings for the locked screen. These settings are applied only when you set the swipe lock option.

Shortcuts: Set to show and edit application shortcuts on the locked screen.

Information ticker: Set to show news or stock information on the locked screen.

Clock: Set to show the clock on the locked screen.

Security

Change settings for securing the device and the SIM or USIM card.

Encrypt device: Set a password to encrypt data saved on the device. You must enter the

password each time you turn on the device.

Charge the battery before enabling this setting because it may take more than an hour to encrypt your data.

Encrypt external SD card:

Encrypt: Set to encrypt files when you save them to a memory card.

Full encryption: Set to encrypt all files on a memory card.

Exclude multimedia files: Set to encrypt all files on a memory card, except for media

files. If you reset your device to the factory defaults with this setting enabled, the device will not be able to read your encrypted files. Disable this setting before resetting the device.

Troubleshooting

When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

- Password**: When the device lock feature is enabled, you must enter the password you set for the device.
- PIN**: When using the device for the first time or when the PIN requirement is enabled,

you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the Lock SIM card menu.

- PUK:** Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
- PIN2:** When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

Your device displays network or service error messages

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and

receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 0.5cm is 0.697W/kg; next to the head is 0.933W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.