INTERNAL VIEW OF EUT - 1



INTERNAL VIEW OF EUT - 2



Picture to show the antenna connector—1



Picture to show the antenna connector—2



Picture to show the circuit board placement in the EUT—1



Picture to show the circuit board placement in the EUT—2

