

Shenzhen Wisky Technology Co. LTD



.Room 1810, Block B,Zhongshen Garden,Caitian South Road,Shenzhen.

Tel: 0755-8251 4205

Fax: 0755-8251 4206

Website: <http://www.wisky.com.cn>

<http://www.wisky.hk>

M801 Series instruction manual

Thank you for purchasing MID products. This manual brief the basic features of this product, help you to enjoy this product. Please read this manual carefully before you start use this product. The manual version number is Ver1.0

Notes

1. Note the new battery is only taken two or three complete charge and discharge cycles then can achieve the best performance.
2. New battery charging during the first three should reach 8-10 hours, the Fourth began only about 4 hours to full charge
This allows the best performance lithium batteries.
3. To prevent data loss, we recommend users to back up important data, in particular, special attention backup important data before each firmware upgrade. The Company not be responsible for any loss due to data loss..
4. MID is a high precision electronic products, please do not disassemble.
5. Do not strong crash and collision the units
5. Please avoid use this product in following environments: heat, cold, humidity, dust, magnetic fields and long-term exposure to strong sunlight.
6. Can be wrung wet cloth to gently clean the shell of the product, is strictly prohibited to use other cleaning chemical.
7. The product should avoid to splashing of water, and the product should not be placed near the glass, such as a class of objects filled with liquids,
8. Please choose a suitable volume to avoid hearing damage.
9. Please do not change any part of the machine.
10. Please use batteries, charges and other accessories only allow by manufacture, use any other accessories not allow by manufacture will broken the product warranty and may cause dangerous.
11. Follow the relevant local environmental regulations to dispose of obsolete machines and accessories.
12. If you have any questions of this product, please contact your local dealer or directly with our customer service center
13. Products are subject to change without notice, apologize for any inconvenience caused,


Content:

1. Product specifications
2. Appearance and buttons
3. Operation buttons description
4. Features:
 - 4.1 Open the player
 - 4.2 Data transfer
 - 4.3 Function
 - 4.3.1. W I F I
 - 4.3.2. Music
 - 4.3.3. Video
 - 4.3.4. Photo
 - 4.3.5. HDMI
 - 4.3.6. OTG
 - 4.3.7. Voice Recording
 - 4.3.8. G-SENSOR
 - 4.3.9. The application download and install
 - 4.4 charging
 - 4.4.1 With DC charger
 - 4.5 Exception to restart
5. Frequently Asked Questions

1. Product specifications:

- Model: M801
- Storage: Built-in 1GB/2GB/4GB fast flash memory (option)
- Interface: USB2.0 High Speed
- Bit rate: 8Kbps-384Kbps (MP3), 5Kbps-192Kbps (WMA)
- Display: 7.0 inch (???); 800 × 480 (display pixels)
- Power supply: lithium battery
- Size: 199mm (L) × 123mm (W) × 15.5mm (H)

2. Elements of the Main Unit

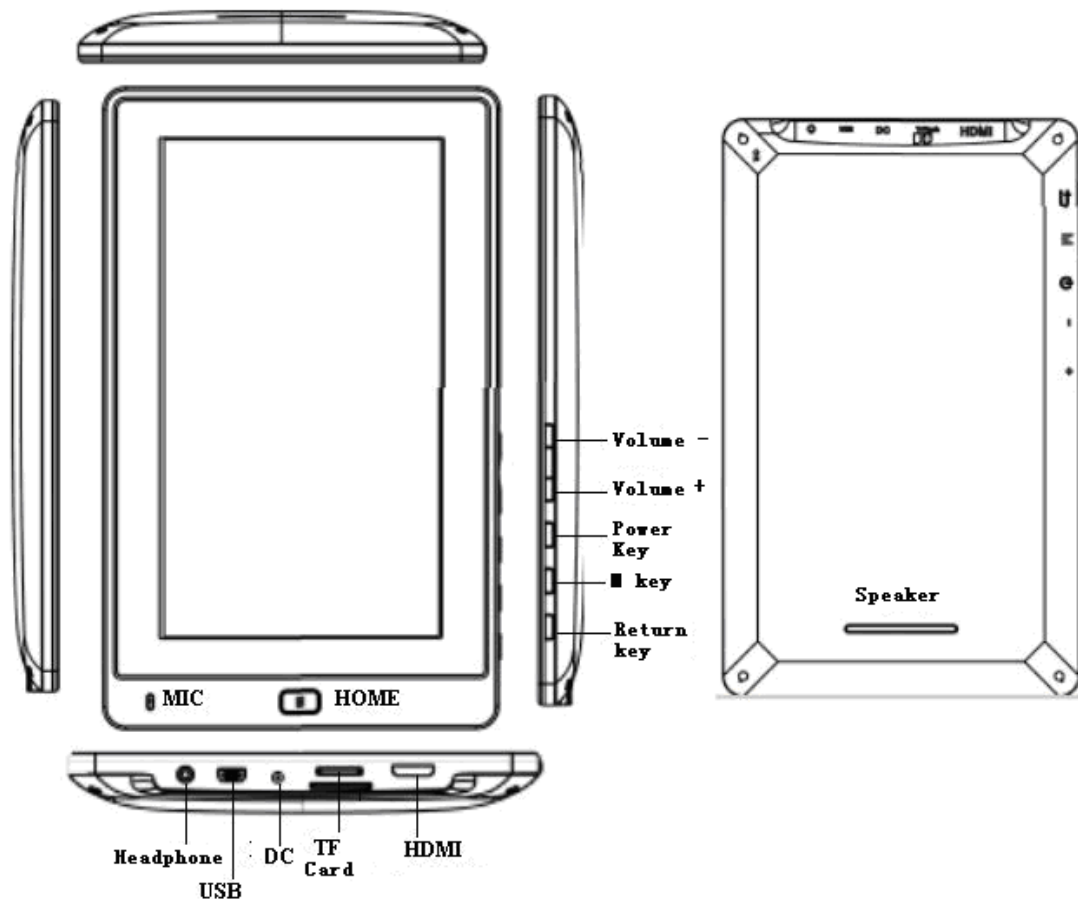

3. Operation buttons description

- 3.1 HOME key: Short press to return to the main interface
- 3.2. Return key: Short press to return to the parent directory
- 3.3. M key: Short press to bring up the online menu
- 3.4. Power key: Long press to open the device, Short press can wake up the device, Long press to turn off the device.
- 3.5. Volume / - button: Press to adjust the volume.

1.

4. Feature

4.1 Start the device

Illustration based on Elements of the Main Unit in the "Power Start" button, long press to open the device.

4.2 data transfer

- 2. Use the USB cable in the package connect with PC (under the product active model), copy music / video / file and other related information from PC and paste to product disk to achieve data transfer.

4.3 Function

4.3.1. WIFI

select "Wireless and Internet" In the "Settings" menu, open WIFI and search for network signal, select the available network, enter the correct password to connect to the network.

4.3.2. Music

Click on "music player tools" into the music player interface, can be downloaded from the Internet according to preferences of different styles Music player.

4.3.3. Video

Click on "video player tools" for video playback, can be downloaded from the Internet according to preferences of different styles
The video player, this product can support 720P format video,

4.3.4. Picture

Click on "picture view" for picture browsing, you can set a picture as your desktop background.

4.3.5. HDMI

Only can be used under the video player, use HDMI cable connect television, set TV to HDMI Model. select the "Video Player", click on the screen bring up the Actions menu, select the HDMI output (720P), then through the HDMI output.

4.3.6.OTG

The peripherals through the USB cable to the device's USB port, and then you can use the peripheral resources.

4.3.7. Recording

Click "Record" menu to access audio recording interface.

4.3.8. G-SENSOR

In the "Settings" menu in the "sound and display" menu, select "direction" menu, you can open or close the G-SENSOR.

4.3.9. The application download and use

4.3.9.1: Use "A p k Installer" in unit application list.

Copy ". A p k" the application from your computer to the SD card or machine

Open APK installer in the unit , there will be "installed", "management" and "out" three options,

Click "Install", the installation path, according to where the application in unit, select the Internal Memory or SD Card; the right side will have all of the suffix ". A p k" application, click on the program to be installed, will appear " Installation " or " Cancel ", click on" install ", after the show"

application has been installed ", click" Finish "to continue installing other programs, or click" Open "to directly open the Currently installed programs

Click on the "management", have list of all the installed application, click on any of the installed programs will pop up an "action" menu,

3. "Start" --- open into the application
"Export" --- If you need to save this program, you can click "Export" to transfer the program to SD card.
"Uninstall" to uninstall this program ---
"Cancel" to exit this menu ---
Click "Exit" to exit the installer APK
4. 4.3.9.2.: The web-based application installation method
By "APK Installer" to install to download ". A p k" market applications, for example: eoeMarket / Google Market, etc.

User must be registered before open eoeMarket application, user can login after registration successful (WIFI network must be connected properly)

After login the web has lot's of segmented application, click on any program, there will be "install" option, click "Install"
Prompt "Downloading ----> downloaded ----> download is complete, is being installed ----> installation successful; then user can open the application, also user can click the" Uninstall "to uninstall this program

5. Directly open any web page can also download the application
Note: The site to download the application download from website, can only export to the SD card

Many web sites provide a p k application download, user can easily search on the web, here are a few sites for reference:

<http://www.eoemarket.com>

<http://www.apkok.com>

<http://www.ggdown.com/>

<http://www.mtxt800.com/>

4.4 Charging steps

1. With charger

Note: The charge must meet following standard, any damage and accident cause by us not conformity charge, our company are considered man-made damage.

MODEL: DC Adapter

INPUT:100-240V -50/60Hz 0.8A MAX

OUTPUT:DC 5V 2.0A

4.5 Exception to restart:

Illegal operation encountered anomalies occur, such as the setting screen,

can not operate and so, through the fuselage side of the "RESET" reset hole, user can reboot the unit to factory setting.

6.

7. **5. Troubleshooting**

① Unit can not turn on

- Check the battery is without electricity
- Connect the power adapter check again
- If the unit still not turn on after charge, please contact our customer service.

② headphones not out put

- Check the volume setting, make sure not set in 0.
- Check that the headphones connect properly

8.

③ button does not work

- Make sure the electronic lock is locked, if so please pull up action to unlock / power button to open the electronic lock try again.

④ serious noise

- Check that the headset plug is clean, dirt plug can cause noise
- Check the music file is damaged. Try to determine the other music player. Damaged file, may lead to serious noise.

⑤ FM reception is poor

- Adjust the position of the player headset
- Turn off nearby electrical installations
- Headset can be used as antenna

⑥ garbled screen

- Check whether the option to set the correct language, language selection in the "Settings" - "System Settings> -" Language selection> in the set.

⑦ can not download files

- Make sure the correctly connected between the unit and computer
- Make sure the memory storage have available space.
- Make sure the USB cable not damaged.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

RF Exposure warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IMPORTANT: CE in which countries where the product may be used freely: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland. France: except the channel 10 through 13, law prohibits use of other channels.

C €2200ⓘ