

External EUT Photographs

Front of EUT:



This is the Host system


Bottom of EUT



This is the Host system



This shows the external antenna

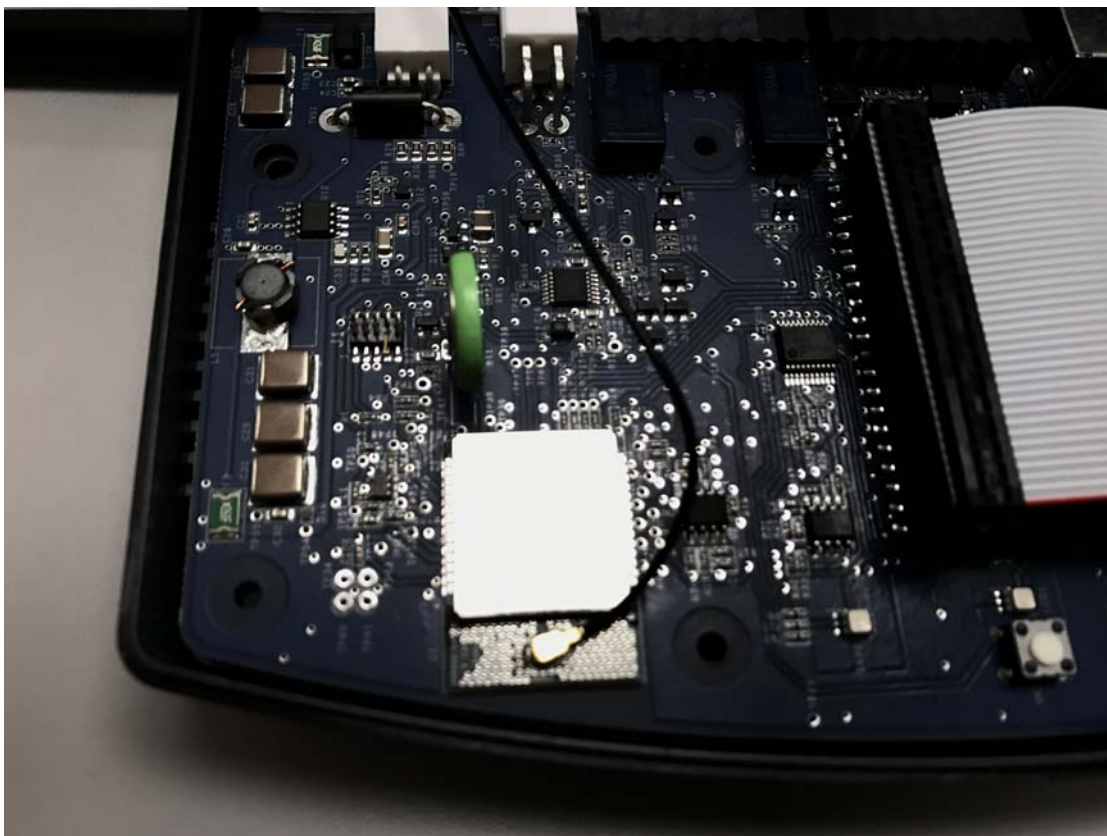

This shows the module installed in the host with the external antenna.