

TABLE OF CONTENTS

Introduction	1
Products & Accessories	2
Owner's Manual	3-11
General Tips	12
Breakfast	13-15
Scrambled Eggs	14
Fried Eggs	14
Omelette	14
Homemade Pancakes	15
Breakfast Potatoes	15
Homemade Yogurt	15
Appetizers & Fondues	16-21
Chicken Satay	17
Saucy Spicy Shrimp	17
Doubly Hot Cheese Dip	18
Shrimp & Citrus Cocktail	18
Brie & Sun-dried Tomato Fondue	19
Cheddar Cheese Fondue	19
Cheddar Chipotle Fondue	19
Beef Fondue	20
Chicken Fondue	20
Shabu-Shabu Fondue	21
Chocolate Fondue	21
S'Mores Fondue	21
Vegetables	22-25
Vegetable Cooking Chart	24
Artichokes with Butter Sauce	24
Broccoli & Carrot Stir-Fry	24
Green Beans Almandine	25
Green Beans Almandine	25
Grilled Japanese Eggplant with Sundried Tomatoes & Feta	25
Beef	26-28
Grilled Sirloin with Mushrooms & Red Peppers	27
Spiced Beef with Dumplings	27
Hometown Chili	28
Bistro Beef & Mushrooms	28
Poultry & Pork	29-32
Chicken & Mushrooms	30
Chicken Provencal	30
Fried Chicken	31
Pan-fried Pork Chops	31
Pork Marsala	32
Sweet & Sour Pork &	32
Stocks, Soups & Sauces	33-40
Beef Stock	34
Chicken Stock	34
Vegetable Stock	35
Creamy Cheddar Soup	35
White Bean Tomato Soup	36
French Onion Soup	36
Hot & Sour Soup with Shrimp	37
Vegetable Beef Soup	37
Roux	38
Basic White Sauce	38
Quick Brown Sauce	38
Mustard Marinade	38
Mushroom Duxelle	39
Cheese Sauce	39
Marinara Sauce	40
Hollandaise Sauce	40
Seafood	41-44
Battered Fried Shrimp	42
Ginger Shrimp	42
Jumbo Louisiana Shrimp with Andouille & Grits	43
Seafood Paella	43
Steamed Mussels in Tomato and Wine	44
Fried Catfish	44
Pasta, Grains & Rice	45-50
Basic Pasta Dough	46
Fettuccine Alfredo	46
Mushroom Stroganoff	47
Roasted Red Pepper Sauce over Tortellini	47
Stir-Fried Tofu & Vegetables	48
Beans with Pesto Bulgar	48
Vegetable Fried Rice	49
Popcorn Rice with Pecans	49
Rice Pilaf	49
Spanish Rice	50
Black Eyes Peas with Andouille	50
Desserts	51-54
Simple Fudge	51
Classic Cherries Jubilee	52
Old Fashion Hard Candy	52
Pears in White Wine Caramel Sauce	53
Candy Suckers	53
Chocolate Caramel Turtles	53
Easy Peanut Brittle	54
Panna Cotta with Amber Crystals	54

CONTENIDO

Manual Del Usuario	56-65
Introducción	57
Recetas	67-72
Huevos Revueltos	67
Papas Para el Desayuno	67
Caldo de Res	68
Caldo de Pollo	68
Chili Tradicional	69
Cerdo Agridulce con Piña	69
Camarones Cepeados	70
Paella de Mariscos	70
Masa Básica Para Pasta	71
Fetuchini Alfredo	71
Arroz Frito con Verduras	72
Arroz Español	72

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed.

READ ALL INSTRUCTIONS BEFORE USING

DANGER – To reduce the risk of electrocution:

1. Read all instructions, safeguards, and warnings before using the appliance.
2. Do not place appliance where it can fall or be pulled into water or other liquids.
3. Do not reach for an appliance that has fallen into water. Unplug immediately!
4. Do not immerse cord, plug, or unit in water or other liquids.

WARNING – To reduce the risk of burns, electrocution, fire, or injury:

- Never touch the induction cooktop and the power plug with wet hands.
- Be sure to operate the unit on a flat, level, non-metallic surface.
- Do not connect the induction cooktop to the same outlet with other household appliances such as microwaves, etc. as it could overload the outlet and trip a circuit breaker.
- If using an extension cord to connect the cooktop, please note that a damaged extension cord can cause the unit to malfunction. Always check your extension cord for damage and be sure it is compliant with the required voltage. Be sure not to place cord where people can trip over it.
- Never attempt to unplug the induction cooktop by pulling on the power cable.

IMPORTANT SAFEGUARDS (Continued)

WARNING – To reduce the risk of burns, electrocution, fire, or injury (continued):

- Do not move the induction cooktop during cooking or with hot cookware on top of it.
- Do not place any empty cookware on the induction cooktop while it is functioning. An empty piece of cookware will heat up very rapidly and can cause material damage or personal injury.
- Do not place any metal objects on the induction cooktop (other than the cookware you intend to cook in).
- Check the power cable for damage from time to time. Never operate the induction cooktop when the cable is damaged. If the power cable shows any signs of defect, contact IBC-Hearthware, Inc. customer service.
- Do not heat up any unopened cans of food on the induction cooktop. A heated can of food could explode. Only cook or heat food in induction compatible cookware.
- Although the surface of the induction cooktop remains cool to the touch because heat is transferred directly to the pot, please note that the residual heat from the cookware will eventually warm up the cooking surface, especially the area directly underneath the pot. Be careful when handling the cooktop after use and let it cool down before storing or cleaning.
- Scientific tests have proven that induction cooktops do not pose a risk to health. However, persons with a pacemaker should keep a minimum distance of two feet from the induction cooktop while it is operating.
- In order to avoid overheating, do not place any aluminum foil or metal plates on the cooking surface. Foil may bond to the Cooktop surface.
- Do not place any magnetized objects like credit cards, cell phones etc. on the glass surface while the induction cooktop is in operation. The magnetic properties of the unit can damage these items.
- Do not insert any objects like wires or tools into the ventilation slots.

Attention: this may cause electric shock.

- Never use the induction cooktop when it is not functioning properly, shows signs of damage or if it has been dropped.
- Do not leave the induction cooktop unsupervised during operation. Keep children away from the induction cooktop.
- Do not submerge the induction cooktop in water or other liquids and do not wash it in the dishwasher.
- Do not operate the induction cooktop on any metal table or surface.
- Only qualified experts may perform repair and maintenance work on the induction cooktop using authentic Hearthware replacement and accessory parts. Never attempt to disassemble and repair the induction cooktop yourself!
- This product is not intended for commercial use; it is for household use only.
- Be sure to always use proper judgment and caution while using this cooktop in outdoor situations and public areas. Always make sure the unit is not set up in a place where there are unattended children or people who are unaware of its presence. Make sure to set up on a flat, stable surface in an area where there is no nearby water source that could pose an imminent danger like pools, spas, sprinklers, hoses, etc.

IMPORTANT – FCC Information:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a consumer ISM equipment, pursuant to Part 18 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

The device complies with part 18 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

SAVE THESE INSTRUCTIONS

ELECTRICAL INFORMATION:

The cord length of this appliance was selected to reduce safety hazards that may occur with a long cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it does not drape over the counter or table top where it could be accidentally pulled off the counter or table or tripped over.

Certain models of the appliance may have a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit properly, contact a qualified electrician. Do not attempt to modify the plug in any way.

	WARNING
	<p>Electric shock hazard. Use with adequate electrical system. Do not use if cord or plug is damaged.</p> <p>WARNING: All items on the cooktop can get very hot during cooking. Please be careful when removing these items from the cooktop. Always wear oven mitts or use pot holders. Allow everything to cool completely before cleaning.</p>