

Polka

Brand Name: plum

Model Name: D110

FCC ID: Y7WPLUMD110

Contents

| | |
|---|-----------|
| Basic Information..... | 3 |
| <i>Brief Introduction</i> | <i>3</i> |
| <i>Safety Notice</i> | <i>3</i> |
| <i>Cleaning and Maintaining</i> | <i>3</i> |
| Before Using..... | 3 |
| <i>SIM</i> | <i>4</i> |
| <i>Phone Unlock</i> | <i>4</i> |
| <i>SIM Unlock.....</i> | <i>4</i> |
| Function menu Introduction | 4 |
| <i>Messages.....</i> | <i>4</i> |
| Write message | 4 |
| Inbox..... | 5 |
| Drafts | 6 |
| Outbox | 6 |
| Sent messages..... | 6 |
| Message settings..... | 6 |
| <i>Phonebook</i> | <i>7</i> |
| <i>Call center</i> | <i>7</i> |
| Call history | 8 |
| Call settings | 8 |
| <i>Settings</i> | <i>10</i> |
| Dual SIM settings | 10 |
| Phone settings..... | 10 |
| Network settings..... | 12 |
| Security settings | 12 |
| Connectivity | 13 |
| Restore settings..... | 13 |
| <i>Multimedia.....</i> | <i>14</i> |
| Camera | 14 |
| Image viewer | 14 |
| Video recorder | 14 |

| | |
|---------------------------|----|
| Video player | 15 |
| Audio palyer | 15 |
| Sound recorder | 15 |
| FM radio | 16 |
| <i>File manager</i> | 16 |
| <i>Organizer</i> | 16 |
| BT | 16 |
| Calendar | 17 |
| Alarm..... | 17 |
| World clock | 17 |
| <i>Fun</i> | 18 |
| Twitter | 18 |
| Yahoo | 18 |
| Facebook | 18 |
| Games..... | 18 |
| <i>Profiles</i> | 18 |
| <i>Extras</i> | 19 |
| Calculator | 19 |
| <i>Services</i> | 19 |
| Internet service | 19 |
| STK | 20 |
| <i>Shortcuts</i> | 20 |

Basic Information

Brief Introduction

Thank you for choosing **D107** mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation.

D107 supports two SIM cards function. In addition to basic call functions, but also to provide you with phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card), calculator, calendar etc. A variety of practical features to facilitate your work and leisure activities, in addition, **D107** interface with personalized mobile phone design, its perfect functionality to meet your needs.

Our Company reserves without any prior notice the contents of this manual under the right to make changes.

Safety Notice

If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to disable the SIM. This will allow you to take phone calls from other economic loss arising. To make you more secure use of mobile phones, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Cleaning and Maintaining

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain. Use a soft, dry cloth to clean the phone, battery and charger. Dirt outlet will lead to poor contact, power-down, which does not charge, regular cleaning.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provide by the network provider.

Warning: Be sure to remove the SIM phone off before. There is absolutely prohibited in the case of an external power supply connected to insert or remove the SIM, or SIM card and mobile phone may be damaged.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protected. Use this function,you must enter the phone lock password so that you can unlock the phone into the normal use state.

Enter the phone lock password, press the LSK to confirm. For example, if the phone lock password is set to 1122, then the following input: 1122.

SIM Unlock

In order to prevent illegal use of your SIM with PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234.If there consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

Messages

Make sure that the information in writing before the message center number is set correctly. Access to an information menu, you can edit the SMS and Multimedia message.

Write message

Text message

Send to After editing the information, select the operation, enter the number manually, or add records from the phonebook, you can do **send**,

Edit recipient, Remove recipient, Remove all recipients, Save operations. Sent SMS to one or more persons, and storage to Drafts.

Insert symbol Offer many kinds of symbol to choose.

Input method Offer many kinds of input methods to choose from method.

Advanced:

Insert number Insert number into SMS from phonebook.

Insert name Insert the name of the record into SMS from phonebook.

Save save to drafts.

Multimedia message

Send to After add number into Multimedia message from address or phonebook, select the operation, you can send this multimedia message.

Insert symbol Offer many kinds of symbol to choose.

Input method Offer many kinds of input methods to choose from method.

Add picture Add picture into Multimedia message from my pictures.

Add sound Add sound into Multimedia message from my sounds.

Add video Add video into Multimedia message from my videos.

Add subject Add MMS subject.

Preview MMS Preview MMS content has been edited.

Advanced:

Insert attachment Insert attachment into MMS from phone.

Save save to drafts.

Inbox

In list of inbox, you can press the OK key to read the message details, In the inbox interface, press LSK "Options" to enter the menu:

Check way Enter the message reading interface to view the message's details.

Reply by SMS Send SMS to the sender.

Reply by MMS Send MMS to the sender.

Call sender Make a call to the sender.

Forward Send the message to other people.

Delete Delete the message.

Delete all Delete all messages.

Delete several Delete several or all messages.

Drafts

Edit the SMS and MMS not sended but stored in the draft, the detail features, please refer to "Inbox".

Outbox

Go to the Outbox list view your SMS and MMS are not sent successfully. the detail features, please refer to "Inbox".

Sent messages

Open the message set in the "Save sent message", send the information after the success of information stored in the Sent, detail features, please refer to "Inbox".

Message settings

Text message

SIM1\SIM2 This menu can set SMSC address、 delivery report、 reply path and voicemail server function.

Memory status View the SIM and Phone capacity information.

Save sent message Open the "Save sent message", messages sent after a successful save the sent message, if you turn off this feature, you will not be saved.

Preferred storage: Can set preferred storage as SIM or phone.

Note: This function needs the network operator support.

Multimedia message

Data accounts

It sets the parameter that according to network service, such as GPRS, MMS, WAP, Different country ,different network parameter.

Common settings

It includes following items to users to set:Request read report,Retrieval settings,Anonyous,Advertisement,Send delivery report,Send read report,Send and save,Preferred storage,Memory status etc operations.Users

can set the personal details by themselves.

Service message

It includes following items to users to set: Enable push, Service loading.

Phonebook

You can use the phonebook to store records, can store the following: name and phone number.

In the phonebook list, select a record, to make a call when you press the dial keys. Select a record in the phonebook, you can do the following:

- Check way** View the contact details or edit record.
- Send text message** Send text message to this number.
- Send multimedia message** Send multimedia message to this number.
- Call** Make a call to the number.
- IP dial** Make an IP call to the number.
- Edit** Can edit and save record.
- Delete** Delete the record.
- Copy** Copy the current record to Phone/SIM.
- Mark several** Mark several or all records can send text message or delete.

-Phonbook settings:

-Preferred storage can be in the SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, the phonebook list will only show SIM1 records .

-Extre numbers can be set SIM owner numbers and fixed dialing numbers.

-Memory status View the usag and free Phonebook capacity information.

-Copy contacts If select SIM to phone, the SIM card records of all telephone numbers copied to the phone

-Move contacts You can select the SIM records of all mobile phone numbers move to the phone, also you can switch the option to operate.

-Delete all contacts You can delete all contacts in SIM card or phone and all records are deleted.

Call center

Call history

Missed calls

Enter the missed call menu, will display the missed calls list. Select missed call records, press the OK key to enter "Options":

- **Check way** View the details.
- **Call** Call the record number.
- **Send SMS message** Send SMS to record number.
- **Send MMS message** Send MMS to record number.
- **Save to Phonebook** Save the number to the phone or SIM card.
- **Delete** Delete the number.

Dialled calls

Enter the dialed calls menu to display the current record of outgoing phone list of phone numbers. Please refer to Missed calls for details.

Received calls

Enter the received calls menu to display the current record has been received mobile phone number list. Please refer to Missed calls for details.

Delete call logs

Delete all calls from dialled calls、 missed calls、 receive calls and all calls.

Call settings

Enter the call set up sub-menu, you can make the following settings:

Call waiting

Open this feature, during the call if the new call, the network will notify you. Specific use with your network provider.

- **Avtivate** launch the function.
- **Deactivate** Close the function.
- **Query status** Query the function's status.

Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify.

The features include: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls. Enter the corresponding Transfer menu, you can do the following:

- **Acitvate** Transfer the current call forwarding setting number.
- **Deactivate** Call transfer prohibited.
- **Query status** Check the satus of this function.

After setup is complete, when, when you do not need call forwarding, you can cancel all diverts to prohibit the use of the above functions.

Call barring

Into the "Call barring" sub-menu, you can set the following call barring any combination to improve security. Some network providers may not provide this service call restrictions, specific use, please contact your network provider. Network provider will provide a four-ban password so that you can enable call restrictions.

Change the password to enter the old call barring password, set new restrictions on the password.

Line switching

Switch between line1 and line2. line 1 can be a normal call, send text messages and so on. select line2, you can answer the phone but not ring up.

Advanced settings

Auto redial:

Through on / off settings, to activate or disable the feature. Turned on and when your phone call after another failed attempt to connect up to redial 10 times. This feature can save you the trouble of repeated calls.

IP dail:

Mobile phone support IP dialing, editing set up to three IP numbers. When you are in the phone book, the selected number and press the OK key to select "Options", select the IP dial-up when the mobile phone before the number that will be activated automatically with the current IP number, and exhaled. IP number is recorded in the selection of a state.

Call time reminder:

In this menu can prompt a certain length of time to set up the call, according to the menu function mode in order to select the following tips:

Off Close the function.

Single Enter any numbers between 1-3000 (sec) , which arrived at the selected time (seconds) of talk time when prompted.

Periodic Enter any number between 30-60 (sec) , from the input time (in seconds), the intervals of 1 minute for talk time tips.

Answer mode:

Any key and Anto answer when headset mode two choices for selecting. When you select any key, press any key outside power key and RSK can answer the call.

Settings

Dual SIM settings

Select to open or close SIM cards' function. If there are no SIM cards in the card ports, then you can not do operations with the card. The SIM cards' function will active when you open the SIM card.

Phone settings

Into the phone settings sub-menu, you can make the following settings:

Time and Date

In this menu, you can move the phone time and date settings. The menu consists of three sub-menu:

Set home city: Set the mobile phone home city.

Set time/data You can set time and date. Phone allows you to set a calendar from 2000 to 2030 between the dates.

Set format: You can set time and date's format.

Update with time zone: On /off update with time zone.

Schedule power on/off

There are two powered on and two powered off time for you to edit. every time item includes: enable , disable, content and ect. Finish the setting , you must open this item. when time is up, the phone will execute relevance operation.

Notice: if you set the time of powered on and the time of powered off are same, it isn't active at the same time!

Language

Phone supports many kinds of language for you to select. Set the current language type, then menu and interface refresh for the corresponding language.

Pref. input method

The phone supports many kinds of methods, to choose an input method as the default when the initial input.

Display

Wallpaper: Wallpaper set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Screen Auto lock: Set the screen auto unlocked time.

Power on display: Power on display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Power off display: Power off display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Show date and time: Display date and time to do On / Off settings, to determine whether the date and time displayed on the idle screen.

Dedicated key

Set up,down,left and right key for any functions of you want.

Flight mode

Turn On/Off the Normal or Flight mode. If you select Flight mode, SIM cards' function will not active.

UART. settings

It sets the sim card can communicate with computer.

Misc. settings

Set the LCD brightness.

Network settings

Network selection

Press the left soft key to select automatic or manual mode. Automatic, mobile phone SIM card information is automatically selected according to service provider; manually, choose manually select the network services, mobile phone search to get the current list of service providers for users to select the service provider SIM card type.

GPRS transfer pref.

Press the left soft key to select data prefer or call prefer.

Security settings

Into the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

SIM security

PIN lock

SIM card PIN password to lock the completion of your SIM card to prevent unauthorized use.

If the current SIM card lock is closed, select Open to open the SIM card, enter the PIN lock password, the next boot requires that you enter the correct PIN password to enter; If the current SIM card lock is On, select Off to close the PIN lock protection.

Change PIN: If the current PIN password lock has been activated, you can re-set on the PIN password

Change PIN2: PIN2 old to enter the correct password, you can set on the PIN2 password.

Phone security

Phone lock:

Phone lock password can prevent your mobile phone stolen by others. Select On to open phone lock password to enter the correct password-protected phone lock open, the next boot requires that you enter the correct password to enter the phone lock.

Change password:

Change the phone password, enter the old password and then enter a new password. Phone default password is 1122.

Connectivity

Data connection SIM

Data connection choose SIM 1 or SIM2.

Data accounts

Into the connectivity menu, it display the data account, press the ok option into the data account list and press option, include edit, add ps account, delete and set as default.

Notification settings

Notification service:

Select to open or off notification service's function.

Messages:

Select to popup or none notification style's function of messages,

Select to open or off messages sound's function.

Downloads:

Select to popup or none notification style's function of downloads,

Select to open or off downloads sound function.

Restore settings

In this menu, enter the password, once determined, the phone automatically reboot the phone after the relevant parameters can be set to return to the case of mobile phone factory. The default password is 1122.

Multimedia

Camera

The phone includes high-definition camera, you can take pictures anytime, anywhere, and to save the photos to your phone or memory card.

State in the preview, press the LSK to enter "Options" you can do this to conduct a more detailed set of parameters.

Photos: Photo album shows the current list of files.

Camera settings: Including LED highlight, Shutter sound, EV, Contrast, Anti-flicker and Delay timer, setting operation contents of the regulation. Been adjusted, press the LSK "OK" to save the current settings.

Image settings: Include the Image size and image quality regulation.

White balance: Set the white balance state.

Scene mode: Including Auto and Night scene mode.

Effect settings: To set the photo shoot special efficiency.

Storage: storage location can be set as Phone, Memory card, the captured image will be saved to the specified location.

Restore default: Set all parameters to default settings.

Image viewer

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the pictures to do the View, Send, Use as, Rename, Delete, change Storage and check Image information operations. View pictures, by pressing on the left and right navigation buttons to switch pictures.

Video recorder

Video switch: Switch the video between Before and after.

Camcorder settings: Recorder settings including Anti-flicker setting.

Video settings: Include video quality.

White balance: Setting white balance state.

Effect settings: setting video effect.

Storage: storage location can be set Phone and Memory card, shooting the video will be saved to the specified location.

Restore default: Set all parameters to default settings.

Video player

Choose video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter "Options" to select the video files to do the play, send(send the video via Bluetooth or multimedia message if you want) ,rename, delete etc operations.

Audio palyer

In the Audio player interface, you can press left and right keys to switch the music; press * and # keys to adjust the play volume.

In the Audio player interface, press the left soft key to enter "list" menu and enter the current playlist to play in the option list can be any of a music file to play.

Select a music file to enter the settings options, you can top of the screen prompts the items content specific settings of each item:

Pre.playlist: Can select the preferred list, Phone or Memory card. If you choose a memory card, then show the all music files in memory.

List auto gen.: To switch to this setting. When this feature is set on, you can perform the "Refresh Playlist" operation.

Repeat: Can be set as off (no repeat), one, all.

Shuffle: Random order of play set, respectively, can be set to on and off.

Background play: Set the background play on, you can make mobile phone in other user interface and also play music. Set as off, the music will not play when out of the Audio player.

Sound recorder

In the sound recorder interface press "option", it shows the items of record.

New record Start a new record. If you press stop, it will pop up a dialog box to prompt you save it or not. If you press pause, it will suspend recording, and then press continue, it can record again.

List it displays the sound that you recorded and saved in the memory card.

Settings you can set the file format and audio quality of the record.

FM radio

FM interface, press the OK key to turn on / off FM play, press the right navigation key to automatic search, press *and # keys to adjust the FM playing volume.

Press the left soft key "Options" can show FM options menu, the content were:

Channel list: Shows FM channel list.

Manual input: Can be their own editors to manually enter the channel frequency, the effective value of 87.5 ~ 108.0.

Auto search: Auto search FM channels in the channel list.

Settings: Can on/off the background and loudspeaker play. Also can set FM record audio quality and storage operations.

Record: Record your favorite FM audio sound.

File list: You get recorded audio.

File manager

Into the File manager menu, the menu display **Phone** and **Memory card**. Root directory, select "**Phone**", press the **LSK** to enter "**Options**" can be as follows:

- **Open** Open the root directory lists the directories and files.

- **Format** Format the memory card, this action will remove all current flash memory data.

Root directory, select "**Memory Card**", press the **LSK** to enter "**Options**" can be as follows:

-**Open** Open the root directory lists the directories and files.

-**Format** Format the memory card, this action will remove all current flash memory data.

-**Details** more information you can view, such as Name, Total size, free size.

You can play the music or video files, view Photo, copy/move/delete files, rename files and so on. You can send the file through Bluetooth.

Organizer

BT

Power: Activate Bluetooth on or off the Bluetooth function.

Visibility: If set as On, other devices can search this Bluetooth device; if set as Off, other devices can not search this Bluetooth device.

My device: Can search for nearby Bluetooth devices.

Search audio device: Free devices to search for near-free decoration, such as Bluetooth headsets.

My name: The Bluetooth device name can be modified.

Advanced:

Audio path Set the sound path can be set to stay in the sound and go hands-free cell phone devices. If set to go hands-free device, connected to the phone, the sound will be automatically transferred to the handsfree device.

Storage To receive the file will be automatically transferred to the specified path, the path can be set as phone or memory card.

My address Display device Bluetooth physical address.

Calendar

Enter calendar sub-menu, the screen will show a calendar month, and other background box with the current date marked. Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly.

Press the left soft key "Options" option to display the calendar menu, and content as follows:

Jump to date: quickly jump to a specified date.

Go to today: switch the current date that system setted.

Start of week: select start of week by Sunday or Monday.

Alarm

Five alarm can be set up (turned off the alarm is still valid). Select and edit an alarm clock: Can edit the setting of alarm on / off, Time, Snooze, Repeat, Alarm tone and Alert type. You can choose to set to repeat: Once, Everyday, Custom.

World clock

In the world clock interface, users press right or left button can change region and time. Press "option", you can set on or off daylight saving time for foreign city or not. If select on, the present time increased one hour.

Otherwise, it displays local time.

Fun

Twitter

Press enter key connecting into the main interface, Please insert the SIM card before use.

Yahoo

Press enter key connecting into the main interface, Please insert the SIM card before use.

Facebook

Press enter key connecting into the main interface, Please insert the SIM card before use.

Games

Into this menu display snake,puzzle and game setting.

Profiles

Profile including General、 Silent、 Meeting、 Outdoor. First, based on the current scene, select a different profile, then you only need a personal profile can be set and activated.

General: General environment.

Silent: For Silent environment.

Meeting: For meeting the environment, to be pre-set (for example: ring mode can be set to vibration).

Outdoor: For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

Press the left soft key "Options":

Activate: Enable the selected profile.

Customize

Alert type: Can choose to Ring only, Vib. Only, Vib.and ring, Vib. Then ring as the current method.

Ring type: You can choose repeat and beep once two type.

Ringtone According to their own preferences set ringtones 1-5, can

also be set from the memory card custom ringtones

Ringtone volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Message According to their own preferences set ringtones 1-5.

Message volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Keypad you can set keypad as silent, press and tone

Keypad volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Power on/off According to their own preferences set ringtones 1-5.

System alert can on/off system alert.

Extras

Calculator

Your phone provides you with the basic arithmetic operations can be a function of the calculator, easy simple operation. Press the left soft key "Clear", Press the right softkey "Back" to exit the calculator.

Note: This calculator has limited accuracy and rounding errors will be generated, especially in addition to endless time. When the calculation of range, the display area will use the letter "E" to represent.

Services

Internet service

In the internet service interface, it has includes the following items:

Homepage Log on homepage, you will find it is a WAP website that you setted.user can set it by themselves.

Bookmarks It doesn't have default bookmarks. Users can add bookmarks by themselves. You can go to relevant website conveniently.

Search or input URL You can search or edit any website you want, but it is effective.

Recent pages It records the website that you browsed.

Settings it includes following items to users to set: homepage,data account , browser options,preferences and security settings.

STK

Enter STK menu, display Operators's information.

Shortcuts

Shortcuts interface, Press LSK key into option, it display add、edit、delete、delete all and change order.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 15mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 15mm must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 15mm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refer to FCC website search for FCC ID: Y7WPLUMD110 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.