

User Manual

FCC ID: Y7WPLUMZ350

Contents

1 Basic Knowledge.....	1
1.1 Brief Introduction.....	1
1.2 General Considerations.....	1
1.3 Battery Precautions.....	2
1.4 Charge Mobile Phone.....	3
1.5 Charger Precautions.....	3
1.6 Cleaning and Maintenance.....	4
2 Introduction.....	4
2.1 Icons.....	4
2.2 Phone Layout.....	6
2.3 Boot Using.....	8
2.3.1 Insert and Remove SIM Card.....	8
2.3.2 Power On/Off.....	8
2.3.3 Unlock SIM Card.....	8
2.3.4 Unlock Screen.....	9
3 Basic Functions.....	10
3.1 Dial.....	10
3.2 Contacts.....	12

3.3 Messages.....	14
3.4 File Management.....	16
3.5 Camera.....	17
3.6 Images.....	18
3.7 Video Player.....	19
3.8 Music Player.....	20
3.9 FM Radio.....	21
3.10 Recorder.....	21
3.11 Clock.....	22
3.12 Calendar.....	23
3.13 Calculator.....	24
3.14 Notepad.....	25
3.15 Flashlight.....	25
3.16 E-mail.....	26
3.17 Browser.....	27
3.18 Searching.....	29
3.19 Download.....	31
3.20 ToDo.....	31
3.21 Compass.....	32

3.22 Play Store.....	33
3.23 Intercom.....	36
3.24 Wan Chen Remote Control.....	47
3.25 Software Update.....	55
4 Settings.....	55
4.1 SIM Card Management.....	56
4.2 WIFI.....	56
4.3 Bluetooth.....	58
4.4 Mobile Network.....	59
4.5 Flight Mode.....	59
4.6 Scense Mode.....	59
4.7 Display.....	60
4.8 Storage.....	60
4.9 Battery.....	61
4.10 Application.....	61
4.11 Security.....	62
4.12 SOS Setting.....	63
4.13 Language and Input Methods.....	63
4.14 Backup and Reset.....	64

4.15 Date and Time.....	64
4.16 Schedule Power On/Off.....	65
4.17 Auxiliary Functions.....	65
4.18 About the Mobile Phone.....	65
5 Common Problems & Solutions.....	66

1 Basic Knowledge

1.1 Brief Introduction

Thank you for purchasing this digital mobile phone. This instruction manual special used to guide you to understand the functions and features.

In addition to common call functions and records, this phone also provides you a variety of useful features and services. It will bring you more convenience and pleasure for your work and life.

Some of the services and functions described in this manual depend on the network and reservation service. Therefore, the menu items in the phone may not be available, various menus and functions of the phone may have different shortcut number.

Our company reserves the right to modify the contents of this manual without prior notice.

1.2 General Considerations

Your phone can only use our designated batteries and chargers. Using other products may cause battery leakage, overheating, explosion and fire.

Do not put the battery, mobile phone and charger in a microwave oven or high-pressure equipment, or may cause circuit damage and fire and other accidents.

Keep the phone away from children's reach to avoid they lest it as a toy, causing personal injury.

On airplanes, in hospitals and other places prohibit the use of mobile phones, please turn off the phone.

Do not use the mobile phone near the weak signal or high-precision electronic equipments. Radio wave interference may cause incorrect operation of the electronic equipment and other problems.

Do not disassemble or modify the phone, otherwise it will cause damage, leakage and circuit faults to the phone. Avoid mobile phone too close to magnetic objects such as magnetic cards, mobile phone radiation wave may clear floppy disk, saving card, credit card information stored on.

1.3 Battery Precautions

The use of mobile phone battery life is limited. In frequent charging battery time gradually shortened. The multiple charging is invalid, the battery life has been, you should replace the specified type of new battery.

Do not throw old batteries in the general household waste. There is a clear local regulations for battery disposal, please follow the instructions required to do.

Do not throw the battery into fire, otherwise it will cause the battery to ignite and explode. Installing batteries, do not apply pressure to force, otherwise it will cause the battery to leak, overheat, explosion and fire.

If the battery fluid into the eye may cause blindness, then do not rub your eyes, rinse with fresh water, and then immediately to the hospital.


Do not disassemble or modify the battery, otherwise it will lead to battery leakage, overheating, explosion and fire.

Do not use or leave the battery beside the fire or heater hot place, otherwise it will lead to battery leakage, overheating, explosion and fire.

Do not wet the battery, otherwise it will cause the battery to overheat, smoke and corrosion. Do not use or leave the battery in direct sunlight or near hot car, otherwise it will result in fluid leakage and overheating may degrade performance and shorten the service life.

Do not more than 24 hour continue charge.

1.4 Charge Mobile Phone

The joint is connected to the mobile phone charger, mobile phone battery indicator  on the screen will flash cycle; charging if it is turned off, charging indicator will appear on the screen of the screen, the battery charging. If the phone is still excessive use when battery is low, probably over a period of time after charging indicates a symbol will appear on the screen charge. When the on-screen battery indicator shows full, and no longer flashing, indicating that charging has been completed. After charging is complete, disconnect the AC power outlet which connect the phone and charger.

1.5 Charger Precautions

Please use 120V AC. Using other voltage can cause leakage, fire or damage to the phone and charger. Prohibit short-circuit charger, otherwise it will cause electric shock, smoke and damage to the charger. Please do not use the charger in the case of the power cord damage, otherwise

it will lead to a fire and electric shock.

Please clean the dust on the power socket.

Please do not put water container near the charger, to avoid overheating, leakage and malfunction caused by water spills. If the charger come into contact with water or other liquids, immediately unplug the power from the outlet down to prevent overheating, fire, electric shock and malfunction of the charger.

Do not disassemble or modify the charger, otherwise it will lead to personal injury, electric shock, fire and damage to the charger.

Please do not use the charger in the bathroom where high humidity, otherwise it will cause electric shock, fire and damage of the charger.






 








1.6 Cleaning and Maintenance

Mobile phone, battery and charger without waterproof performance, do not use in the bathroom where high humidity, also avoid being wet. With a soft, dry cloth to clean the phone, battery and charger. Do not use alcohol, thinner or benzene solution to wipe the phone.

2 Introduction

2.1 Icons

In the standby interface, may appear small ICONS, details are as follows:

Icons	Instructions
	Time Display
	Alarm clock has been set and activated
	Show battery level
	Vertical bars indicate the signal strength of the GSM network signal
	Connect to the wireless network
	Activate Bluetooth
	Indicates music playing
	Receives new message
	Missed Call
	Meeting Mode
	Flight Mode
	Mute Mode
	Activate USB
	Access Restricted

2.2 Phone Layout



Keys	Instructions
1. Volume Key +	Press this key to increase volume.
2. Volume Key -	Press this key to decrease volume.
3. PTT Key	Enter the intercom
4. Message Key	Enter the intercom
5. FM Key	The FM radio shortcut
6. USB/ Earphone	The charger/USB/Earphone jack
7. Power Key	Long press this key to turn off/on. Short press this key to lock the phone. Light the screen.
8. Call Records	Call Records shortcut
9. SOS Key	Long press to dial emergency number and send a message for help.
10. Camera Key	Press this button to enter the camera viewfinder interface, then to take photos.
11. Camera	Camera
12. Flashlight	Camera flashlight, open the flashlight program can be used as a flashlight lighting.

2.3 Boot Using

2.3.1 Insert and Remove SIM Card

 
Turn off the phone, remove battery and other external power supply. According to the mobile phone label inserted SIM card. When you need to take out the SIM card, please turn it off, take out the battery, then remove SIM card from SIM card holder.

2.3.2 Power On/Off

To turn on the phone, please long press the power key on the phone up side.

Turn off the phone, long press the power key. The following message box pops up, select "Off".

Press the power key to switch phone in addition, you can also choose to reboot the phone, select the flight mode, mute mode, vibration mode and standard mode.

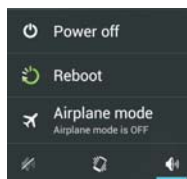

2.3.3 Unlock SIM Card

In order to prevent illegal use, SIM card using PIN1 (Personal Identification Number) code encrypt protection.

Use the function, every time you must enter PIN1 code when the phone is switched on, so that you can unlock the SIM card, and then send or receive the call.



Press the ON / OFF key to boot the phone; enter PIN1 code, press [CLEAR] to clear the error input, press [CONFIRM] to confirm.

If you enter the wrong PIN1 code in several times, SIM card will be locked, then please contact your SIM card network operator.




2.3.4 Unlock Screen

 
In order to prevent unauthorized use, you can set your phone screen lock. Elected to use this function, every time you light up the screen, you must draw your unlock pattern, so that you can unlock the phone, and then send or receive calls.


 

Users can clear the unlock pattern (see "Security Settings").

 
3 Basic Functions

3.1 Dial

In standby interface to click  into the dial-up interface, click the digital on the screen to dial the number. If you need to change the phone number, please click  back to delete characters, then press  to dial the number. Press the Menu key to pop-up menu options, as shown, you can choose to send SMS, added to the "Contacts" or the Settings, etc.

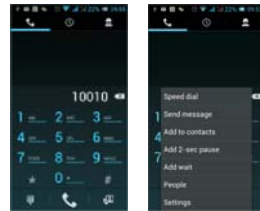


You can also touch  at the top of screen, enter to the call records interface to dial out. Or click  at the top of the screen, enter the contact interface to dial out. Click  directly in the standby interface, can also into the contact interface to dial out.

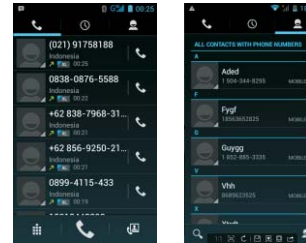









 
After the call is connected as shown:




 
Click  to open the dial pad, according to the call prompted to input the corresponding number, such as 10086 when playing prompts.

Click  to open the speaker, amplified voice calls.

 
Click  to mute, do not send local voice.
 Click  to keep current on the phone or restore is held.
 Click  to use the keyboard to enter a contact or from call logs, contacts, select the relevant contact, to make a new call.
 Click  to end the current call.
 Interface as shown when a call comes in, tap  and drag  to answer the phone, drag  to reject a call, drag  to send SMS.

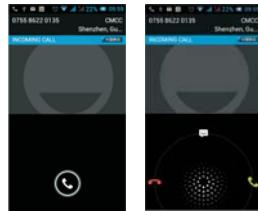 



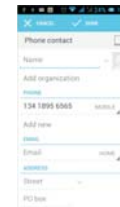 
3.2 Contacts

You can directly open the "Contacts" on the main screen, or open it in "Dial" app. Enter the contact interface as shown, click on a contact to view the contact information stored, click on  to call the contact, click on  to send SMS to the

 
contact. Press the Menu key to modify, share and delete the contact.

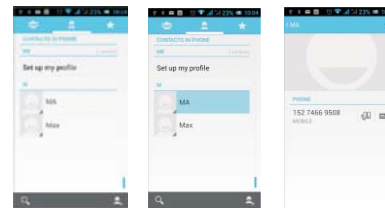


 

In the contact interface, click on  to quickly search contacts, click on  to add a new contact. You can choose to save the newly added contacts to the phone or the SIM card and save the contact name, phone, email, address and other information, as shown:



 
In the contact interface click menu button will pop up the following menu options, you can according to your need to delete, import, export and share contacts and other operations.

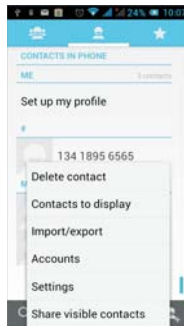


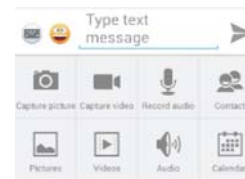 
3.3 Messages

Click  on the home screen, enter the message interface. Click  to enter the written message interface. In the "input names and numbers" area, input the number, or click on the contact icon, select a number from your contacts. Edit message content in the "input the text message" area. Touch  to send a message after

completion.

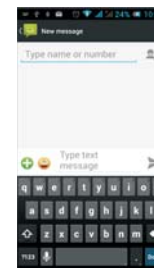 


Click  on the screen, can insert images, video, audio and other files, SMS will be automatically converted into MMS. In Message interface, click on the menu, you can choose to delete, set up and send message, such as the menu.

 


3.4 File Management

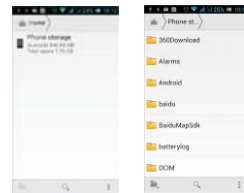

You can view and management the files which be stored locally on the phone or SD card. You can copy the files, paste, rename, delete, share and other operations.

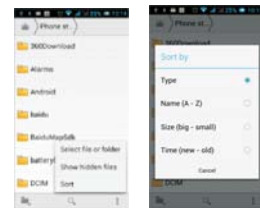


Long press file or click on menu key , you can select one or more files or folders to share, copy, delete, cut, rename and other operations. You can also reordered folder by name, size or date.

 


3.5 Camera

 
On the main screen, tap  into the application, and then click  to enter the camera viewfinder screen. You can choose various camera mode at the top of the icon, at the bottom right corner, you can choose the flashlight mode, and switch camera mode. Touch the preview area can be adjusted to focus. As shown in figure:



Click  to enter the camera setting mode, you can according to your needs for camera exposure, effects, shooting and other settings. As shown:



 
Click to take a picture, click to convert video interface, as shown:

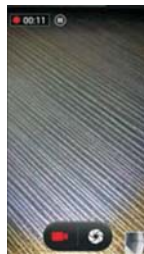

3.6 Images

 
Tap on the main screen to enter the application, and then click , you can view all the pictures and video files that saved in the mobile phone and SD card, press menu key to browse images, delete and grouping operation, etc. When you view any image, click , you can operate the image by information, Bluetooth and so on.

18

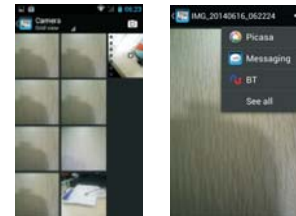



3.7 Video Player

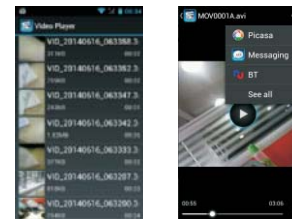 
On the main screen, tap into the application, and then click to enter the video list. Click on the menu key you can delete, sort, and other operations. Select a video to play, click to full-screen playback. Click time progress bar to forward and reverse operation. Click to send video to message, Bluetooth, E-mail to share.







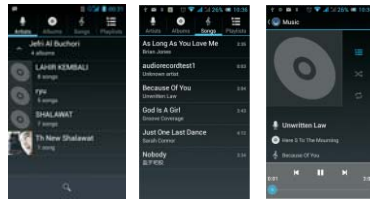


19

3.8 Music Player


On the main screen, tap  into the application, and then click  to enter the music player.








At the top of the screen, the artist, album, songs and playlists four ICONS respectively all the audio files are classified in the mobile phone. You can choose your favorite arrangement to find the songs that you want to listen. Choose to play a song:

 
-  indicates pause/play song.
-  indicates continue playing.
-  indicates switch to last song, long press to rewind.
-  indicates switch to next song, long press to forward.
-  indicates the progress of the song playback (time display), sliding around the scroll bar to jump to any position in the song.
-  indicates on/off the shuffle.
-  indicates on/off repeat all songs.

 indicates repeat current song.



 indicates back to song list.

 
3.9 FM Radio

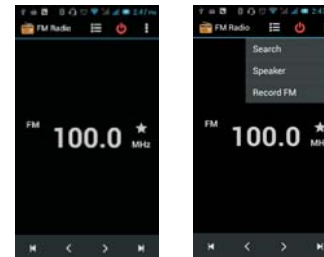On the main screen, tap  into the application, and then click  to enter the radio. Into the radio, you need to plug in the headset cable, you can search channel. If this function is not prompted to not insert the headset, please pay a little attention when you using. Click  to enter the channel list; clicking  Stop / Play Radio; clicking , you can search for it, FM recording and other operations, as shown:



3.10 Recorder

On the main screen, tap  into the application, and then click  to enter the radio. You can record audio files.

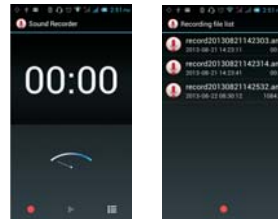 


- Start recording: Tap
- Play recording: Tap
- End recording: Tap
- Pause recording: Tap
- List of recording: Tap

Recorded audio files successfully saved automatically generated file list, click to view the recording or playback recording, and automatically save to your phone.

 
3.11 Clock

On the main screen, tap into the application, and then click to enter the clock. You can see the setting date and time, week and alarm in the clock interface. Click to view and set the alarm; click to open the stopwatch function; click to select night mode, set menu and set the alarm, etc.

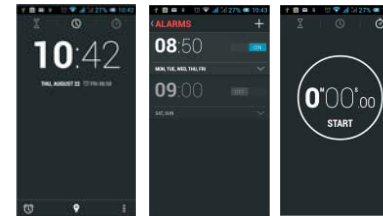

 
3.12 Calendar

Tap on the main screen to into the application, and then click to access the calendar.

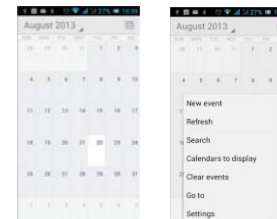



Into the calendar interface, slide up and down, you can view the previous month and next month's calendar, click the menu key to select the new activity, refresh, search,

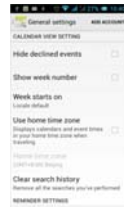set, and other related operations. Settings can be set calendar view and reminder. Figure:



 


 
3.13 Calculator

On the main screen, tap  into the application, and then click  to access the calculator. Your phone provides you a calculator with the four basic functions, allowing you to perform simple arithmetic. Press the "Clear" to clear the recent input or the result.





3.14 Notepad

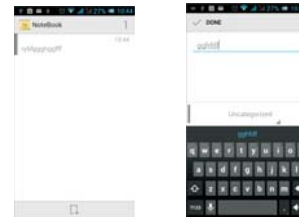On the main screen, tap  into the application, and then click  into Notepad. Click on  to add a new Notepad. Click the "Unclassified" area to classify the new added Notepad, mainly divided into work items, personal matters, family matters and learning issues.





3.15 Flashlight

On the main screen, tap  into the application, and then click on  to enter the flashlight. Click the "off" to open flashlight, click "on" to close flashlight.

Note: Exit this interface will turn off the flashlight.





3.16 E-mail

On the main screen, tap  into the application, and then click  to enter the e-mail. You can send email messages to anyone with an email address.

 
Enter the program and set up my account, then you can click on your email account has been built into the account, to start, edit, create account, delete operations, can be sent or received email like computers. The program requires network support.



 
3.17 Browser



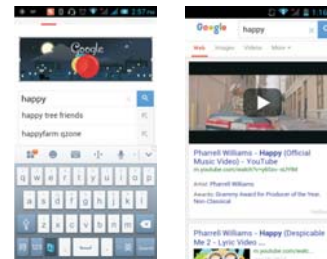

On the main screen, tap  into the application, and then click  to enter the browser. The support of the network (WI-FI or GPRS) into Web browser lets you surf the Web on your phone, and view Web pages, like in a computer. You can create a bookmark on your phone and sync bookmarks with your computer. Directly from the main screen to quickly access your favorite sites.

In the search box, enter the content you want to find, click the Search icon, enter the relevant pages:

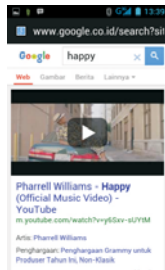

 
Touch the screen, the screen display URL above, display the menu below:



Click  to go to the previous page; Click  to enter next page; Click  to view the pages you have open, you can slide up and down, and select a page to enter; clicking , you can view your bookmarks, history, and saved web page:



Click on the menu key on the main page, you can refresh, close, save to bookmark, share web pages, settings, etc.

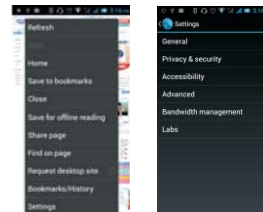


3.18 Searching

 
On the main screen, tap  into the application, and then click  to enter the search interface:



 
Enter the content you want to search, click the Searching key, select the type of search you want, such as web pages, contacts, etc.:



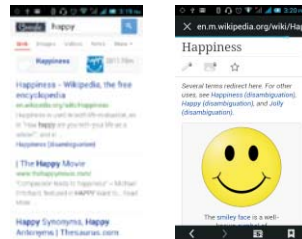

Click , enter the search results:



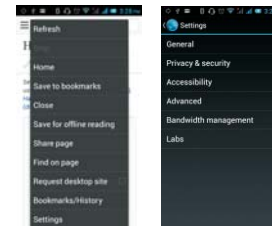


Click on the menu key on the main page, you can refresh, close, save to bookmark, share web pages, settings, etc.

 


3.19 Download




On the main screen, tap  into the application, and then click  to enter the download interface. You can view the content which have been downloaded or being download. On download content interface, press the Menu key can be sorted by size or time of operation.

3.20 ToDo

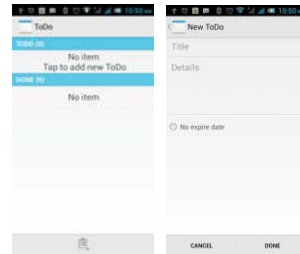On the main screen, tap  into the application, and then click  to enter the ToDo interface. You can view the ToDo list and completed item on the interface. Or you can click  icon on the screen bottom to add item. On the Add Item interface, you can enter title, description. You can also set the deadline according to your need.





 
3.21 Compass

On the main screen, tap  into the application, and then click  to enter the compass interface. The compass icon on middle of the screen will change the orientation of the phone, an icon appears above the corresponding angle, such as: , as shown:

 


3.22 Play Store

 
On the main screen, tap  into the application, and then click  to enter the Play Store. Play store when you first enter, you need to create a new account, you can follow the prompts to complete the creation process. When you use the account to enter Play store home page, you can see a variety of mobile phone software, you can choose according to your needs and install it to your phone. You can slide the screen to the category, Top Free, Top Free new products, fastest rising to find the popular software.

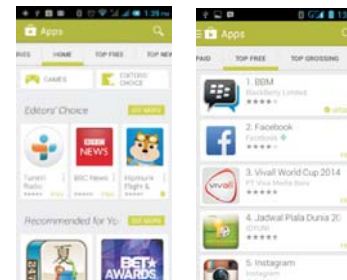

In the Play Store screen, click an icon on your favorite software, enter the installation interface:

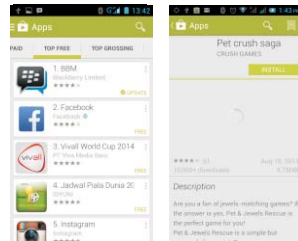 


Click **INSTALL** to install the selected software, application permissions in the popup choose to accept, the phone automatically starts to download the software, if you want to cancel the download, click **X** next to the download progress bar.

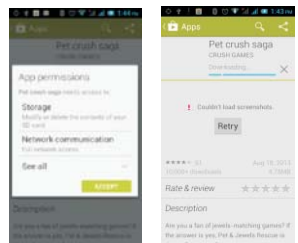 


34

After the download is complete, click Open, you can start to apply your newly downloaded this software:

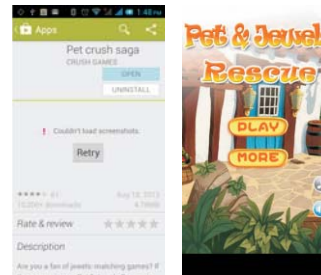

In the Play Store homepage, click the menu key to bring up the following menu:

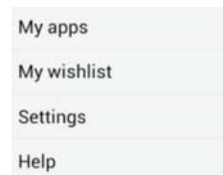

35

Select "My Application", you can view your "Installed application" and "All Applications", you can also reset accounts, notifications, auto-updating applications, password, etc.

Other Google services, such as: Gmail, Google set, Google Talk, will need to apply for Google account, after landing Google services in order to properly use Google related services.

3.23 Walkie-talkie

1. Walkie-talkie Log in Walkie-talkie

First, make sure your phone is already connected to the network (GPRS or WIFI), then find Walkie-talkie in the phone and click "open" to go into landing page.

Walkie-talkie landing page shown in Figure 1.1, the user only needs to enter the landing page through three simple steps to complete the landing. Specific steps are as follows:

1. Click the position shown in Figure ①, enter the phone number; click to activate (digital ② location) to enter the page shown in Figure 1.2.

2. Enter the verification code received by phone,

click "Submit enter" to landing Walkie-talkie. If not yet received verification code, can choose to resend the verification code after 60 seconds (figure 1.3).



figure 1.1

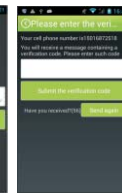 


figure 1.2

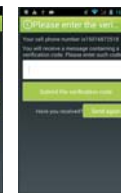 


figure 1.3

2. Homepage

After the success of landing, the default page as shown in figure 2.1. Walkie-talkie will be divided into three main page: dial-up (recently), contacts, and more, as shown in figure 2.1, 2.2 and 2.3 respectively. It can be by clicking on the figure of 2.1 (1), (2), (3) position to switch between three pages. Below is the detailed introduction of the three pages:

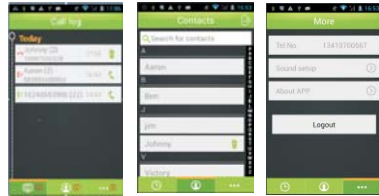 


figure 2.1

figure 2.2

figure 2.3

1. Dial-up (recently) Page

Dial (recently) page contains two main functions: display recently intercom records and achieve direct dialing.

Intercom recently recorded by talkback date, each of the intercom record covers the intercom' s name, phone number, start time, intercom state is incoming (📞), dialing (📞) or missed (📞), at the same time also provides a speaker icon on the right side, by clicking on the mark to record the object by the intercom.

Direct dialing function can be shown in figure 2.1 (1), by clicking on the position of evocation dial to dial out and to talk to each other.

1. "Contact" Page

Contact page as the name suggests the main display of the interphone contacts, for the first time login, it will automatically access to mobile phone contact' s book as intercom contacts by default. This page provides to add contacts, modify contacts, search contacts, and delete contacts functions. Contact list in alphabetical order of the names, can be viewed through the front and back contacts slide the screen up and down. You can also click the rightmost letter list to jump directly to the clicked name beginning with the letter's position for viewing.

2. "More" Page

More page provides three functions: phone number, sound settings, and about the APP

My numbers only for view cannot be changed

Sound Settings function can according to their own needs to be set to the sound of the APP, can adjust the voice, select whether to enable the amplifier, whether to the handset to play the voice (default speaker).

3 . Common Application Instruction

1. Intercom

1) Launch Intercom

General intercom can through the following three ways:

In "dial-up (recent)" page by clicking on the intercom icon to launch the intercom (as shown in figure 3.1.1.1)

In the contact list of "contact" page, click on the speaker icon on the right side to launch the intercom (as shown in figure 3.1.1.2)

Click on the "contact" page contact entry, enter "contact details" page, click on the intercom icon to launch the intercom (as shown in figure 3.1.1.3)



figure 3.1.1.1

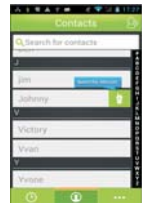 


figure 3.1.1.2



figure 3.1.1.3

Intercom

After launching an intercom enter the page shown in figure 3.1.2.1, waiting for the answer. If the other

answers, entering figure 3.1.2.2 page, click on the page in the center of the microphone to speak. If the other refuse to answer, then enter the page shown in figure 3.1.2.4, after 3 seconds automatically return to the page before the intercom.

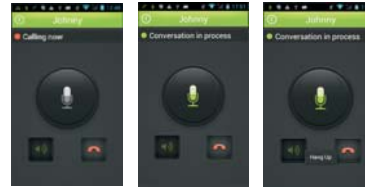 


figure 3.1.2.1

figure 3.1.2.2

figure 3.1.2.3

2) Answering Intercom and Refuse to answer

Receives a call, through slide to the right answer, slide left refuse to answer (as shown in figure 3.1.3.1). After answering the page shown in Figure 3.1.2.2 entering call, after refusing to enter Figure 3.1.2.3 page, automatically receive a call before the page after 3 seconds.



figure 3.1.3.1

2.Add Contact

In contact page, click on the add contact icon in the top right corner. Enter the contact name and phone number, click add button to finish adding. Specific as shown in the figure below:

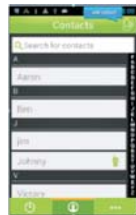 


figure 3.2.1



figure 3.2.2

3.Modify Contact

In contact page, click on the contact entry, into the contact details page. In the top right corner of the edit button, click on the contact details page to enter to modify the contact page. Click "save" to complete the modification after modification completion. Specific as shown in the figure below:



figure 3.3.1



figure 3.3.2



figure 3.3.3

4.Delete Contact

In contact page, a contact entry by long press, can pop-up delete contacts prompt dialog box, click the confirm button in the prompt dialog box to delete contacts, click the cancel button to cancel the deletion. Specific as shown in the figure below:

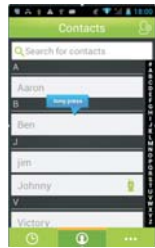 


figure 3.4.1

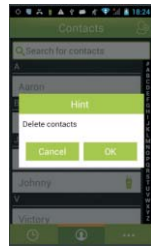 


figure 3.4.2

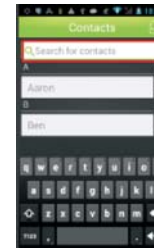 


figure 3.5.1

5. Search Contact

In the Contacts page, click the search box, enter the contact name or phone number you want to find, the system automatically displays qualified contacts. Specific as shown below:

6. View Intercom Record

Enter dial-up (recently) page, you can see intercom records by date classification. By sliding the screen, you can look at the front or the back of the intercom record. Specifically, as shown below:

7. Direct Dialing

Click on "Dial (recently)," on the right bottom page, "dial-up" can bring up the dial, dial directly. Specific as shown below:

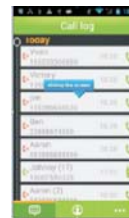 


figure 3.6.1



figure 3.7.1

8.Sound Settings

In more page, click on the "Sound Settings" into the sound Settings and adjust the sound, select whether to enable sound amplifier, whether to enable the handset can play the voice and then click the return to previous page. Specific as shown in the figure below:

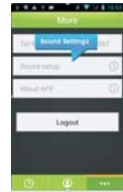 


figure 3.8.1



figure 3.8.2

9.APP Update APP

Click on "about the app" in more page, enter the page of "about app". Click the update button to check if there is a new version app. If there is no new version will be prompted to current is the latest version, if there is a new version, will update pop-up prompt dialog box, select "update". Specific as shown in the figure below:



figure 3.8.1



figure 3.8.2

3.24 Wan Chen Remote Control

Click on the application APP icon [icon], into the remote control page. If the first entry, it will default into TV page; If not, then enter the default page when the first exit.

1.TV/Set-Top Box/Home Theater Instructions
 a)When the first time entry, directly into the TV page. Since did not add any equipment, the buttons on the page were grey, as shown in figure 1.



Figure 1. TV Page

b)Users can click the TV icon button on the page below to add the device, into the adding device page, shown in Figure 2. Click the Adding Device, enter the page shown in Figure 3.



Figure 2. Adding Device



Figure 3. Adding Methods

c)Adding devices are divided into "searching for specified manufacturers", "searching all manufacturers" and "Copy unknown manufacturers (i.e. learning)" in three ways. Click on the "Searching specified manufacturers" will appear all brand manufacturers alphabetical order. Changhong, for example, shown in Figure 4



Figure 4. Adding Chang Hong TV

d)After entering Chang Hong page, there are a total of 38 group code, the phone will automatically start from the first group code down search (You can also click the Up / Down buttons for manual and automatic two combinatorial searching). When the TV switch reaction occurs, click the stop key, Then click the test button to test whether all buttons can match the current users' TV, as shown in figure 5. Figure 5, if all or most of the buttons can correct remote control the current TV, please save and name the device name (such as living room TV), otherwise click

Cancel to continue searching other data codes. Figure 5, some keys are grayed, which means that there is no data, it can study alone, and it can also be used for incorrect individual data buttons for individual learning, **TV** key to re-learning, as shown in figure 6.



Figure 5. Remote Control Sending Code



Figure 6. Some button to modify learning

e)Click on "Searching All manufacturers", the phone will start to search down from the first set of code, regardless of brand sequential, the operation mode with the "Searching for specified manufacturers" .

f)Another way to add for the learning, users are free to define their needs by way of learning the device key, as shown in figure 7.



Figure 7. Learning Page

2. Air Conditioning Instructions

Air conditioning does not support learning function, it can access to the database for brand searching.

When searching for a matching code group, the air conditioning will issue a "Di" sound, the other using methods similar to TV, shown in Figure 8.



Figure 8. Air Conditioning Remote Control Sending Code

3. "Other Page" Instructions

"Other Page" is left to the user to learn how to use unique device. Each key can be customized learning and named, as shown in Figure 9.



Figure 9. "Other Page" key learning


4.Key Vibration Setting

Users can according to the need for vibration control of the page button independent or not, press the select button to access the set items, set method as shown in figure 10.

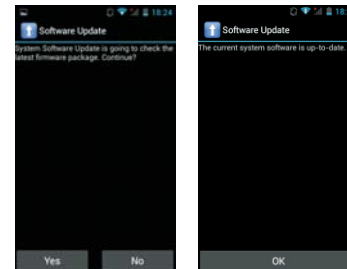 


Figure 10. Key Vibration Setting

3.25 Software Update

On the main screen, click the icon  to enter the application, the interface prompt "Yes" "No" update, select "Yes" to continue to update, "no" to exit. If your software is the latest software, it will prompt current software is the latest, select confirm to exit.


If your software is the old version, according to the prompt update software, after restart the phone, your phone is updated with the latest version.



Note: You must open the network to update the software.

4 Settings

On the main screen, tap  into the application, and

then click  to enter the settings, according to your need to personalize your phone settings.

 
4.1 SIM Management

 
Set the SIM card for voice calls, video calls, messages, data connections and other settings.


4.2 WIFI

Click WIFI, enter WIFI interface, click "Open" icon on the top right of the screen, your phone will automatically search for wireless networks within range. Hotspot mode is supported.



Click  to refresh the network list, if you get a license, you can click on your wireless network license has been made, enter the password in the input area, and then click "Connect", the connection is completed show "Connected", then your phone it can be connected.

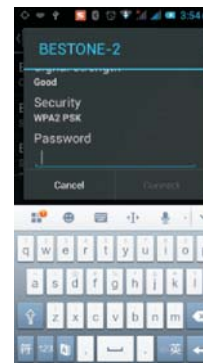 


You can also click  on the screen in the lower right corner, add a network:



 
4.3 BT

Activate Bluetooth, the phone automatically searches for Bluetooth devices seen around, you can click on any device with which to pair the device to pair, with the search after connection for file transfer and other operations.

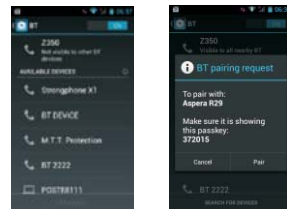

4.4 Mobile Network

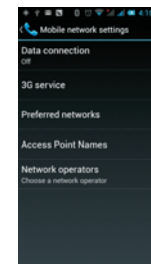

In this menu you can turn on or off the data connection, enabling 3G services, network operators and other options:



 
4.5 Flight Mode

When clicked the flight mode, it will disable all wireless connections, calls and messages are not available.

4.6 Scenes Mode

The following modes can be set up on the phone: Standard, Mute, Meeting, Outdoor; You can also click  on the left corner to add a new mode, click  on

the lower right corner to return to the default settings.

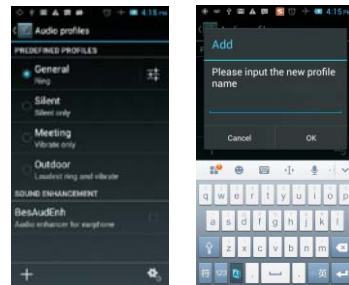

4.7 Display

Open to personalize set the phone brightness, scene, wallpaper, themes and automatically rotate the screen, etc.

4.8 Storage

You can view the phone and SD card total capacity, free space, you can choose the preferred installation location and format the phone memory.



4.9 Battery

You can set the phone percentage of battery display and see remaining battery power and time.

 
4.10 Application

You can view the phone has downloaded applications, phone storage applications, running applications and all applications. You can click on the menu key to reorder these programs by size:



4.11 Security


Set the screen security, SIM card lock, password, device management, credential storage and other settings:

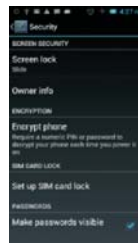 


4.12 SOS Setting

You can set up an emergency number and edit emergency text messages in this, but when you press the emergency call button, the phone will automatically dial the number, and send text messages.

4.13 Language and Input Method

You can choose your preferred language and input method, you can also click  for the input method for the relevant settings:

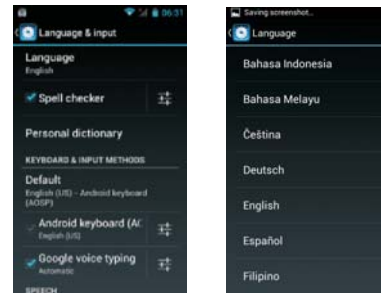 


4.14 Backup and Reset

You can backup my data, automatically restore, restore the factory settings and operations, restore factory settings will delete all personal data on your phone.

4.15 Date and Time

You can choose to automatically determine the date and time, and automatically determines the time zone, use the 24-hour format, and select the date format and other operations:

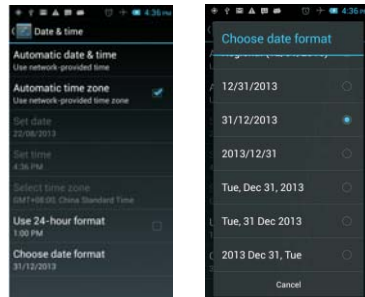 


4.16 Schedule Power On/Off

Set the time to automatically turn on or off the phone.

4.17 Auxiliary Function

To set fast boot, auto-rotate screen, large font, press the "Power" key to end the call and other functions:

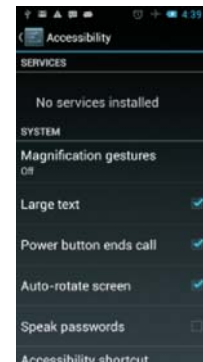

4.18 About Phone

View phone's current signal, power, service status, the phone's software and hardware information.

5 Common Problems & Solutions

If an exception occurs while using your phone, please refer to the following table to troubleshoot

Common problems	The causes	The solutions
Poor signal	Using the mobile phone in poor reception area, such as nearby buildings or basement, the radio waves cannot effectively communicate;	Try to avoid
	Using the mobile phone in the call dense period, such as commute time, line congestion caused by the inability of the calls.	Try to avoid
	Associated with the launch of the base station network built near and far	Can ask Internet service providers provides service area map

Echo or noise	Due to poor network trunk, is a regional problem	Hang up and redial, trunk lines may replace good one.
	Some regional bad line	
Standby time shorter	Standby time is related to the network system setting	Turn off the mobile phone in the poor reception area.
	The battery need to replaced, please replace new battery.	Please replace new battery.
	The phone will continue to search base station, it will use a lot of battery power, causing the standby time become shorter.	Please move to strong signal place or turn off the phone.
Unable to boot	The battery power is exhausted.	Check the battery power or charge it.
SIM card error	SIM card not installed	Make sure SIM Card has been installed.
	SIM card metal surface have dirt	Use clean cloth to brush the SIM card metal

		contact point
unable to connect the network	SIM card is invalid Beyond the GSM or 3G network service area.	Contact your network service supplier. Ask your network service supplier the service area.
	The signal is weak	Please move to the strong signal place to retry
Calls unable to call	set up the call barring function	cancel the call barring function
	set up the fixed dial function	cancel the fixed dial function.
PIN error	input incorrect PIN Code in three times	contact your network service supplier.
Unable to charge	Battery or charger damaged	need to replace new battery or charger
	Charge in lower than -10°C or higher than 50°C environment	change the charging environment

	Bad contact	check whether the plug connection well
Unable to add phonebook record	Phonebook memory is full	delete some part of phonebook record.
unable to set up some function	Network provider does not support this feature, or you did not apply for this function	contact your network provider.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 15mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 15mm must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 15mm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance with FCC RF Exposure requirements and refer to FCC website search for FCC ID: Y7WPLUMZ350 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.