

## **Warnings**

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

### **TURN ON SAFELY**

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

### **ROAD SAFETY**

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

### **INTERFERENCE**

All wireless phones may be sensitive to interference, which may affect performance.

### **TURN OFF IN HOSPITALS**

Follow all restrictions. Turn off the phone near medical equipment.

### **TURN OFF ON AIRCRAFTS**

Follow all restrictions. Wireless devices can cause interference on aircrafts.

**TURN OFF WHEN REFUELING**

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

**USE SENSIBLY**

Only qualified personnel may install or repair this product.

**ENHANCEMENTS AND BATTERIES**

Use only appropriate enhancements and batteries. Do not connect incompatible products.

**WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

**BACKUP COPIES**

Remember to make back-up copies or keep a written record of all important information stored in your phone.

**CONNECTING TO OTHER DEVICES**

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.


## Content

Your Phone.....	5
Keypad Descriptions .....	5
Start to Use.....	6
Charge the Battery.....	7
Use Touch Screen.....	7
Make a Call .....	8
Answer a Call.....	8
Emergency Service.....	8
Input Method.....	9
1. People.....	9
2. Phone.....	10
3. Messaging .....	10
4. Clock .....	10
5. Google Service.....	10
6. File Manager .....	11
7. Music.....	11
8. Camera .....	11
9. Browser .....	11
10. Social Networking Function .....	11
11. Calculator .....	12
12. WhatsApp.....	12
13. Calendar .....	12
14. Gallery.....	12
15. Downloads .....	12
16. Email .....	12
17. Flashlight.....	13

18. FM Radio .....	13
19. Movie Studio .....	13
20. Search .....	13
21. Settings .....	13
22. Sound Recorder .....	15
23. ToDo .....	15
24. Videos .....	15
25. Widgets .....	15
26. Accessories .....	15
27. Care and Maintenance .....	16
28. Warning: .....	18

## Your Phone

The phone appearance is shown as below. The picture is for reference only; your phone may be different. Please take your actual phone as the standard.

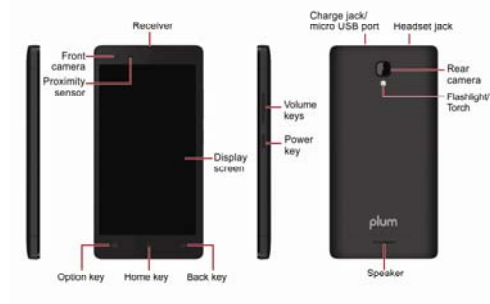

## Keypad Descriptions


Key	Description
<b>Power Key</b>	In the power off status, long press the key to turn on the phone. In the power on status, press the key to lock keypad and screen; long press the key to show phone options.
<b>Option Key</b>	Press the key to enter option menu.

Key	Description
<b>Home Key</b>	Press the key to return to standby mode. Long press the key to show the recent list.
<b>Back Key</b>	In the menu mode, press the key to go back to upper menu.
<b>Volume Keys</b>	To mute incoming call ringtone. During a call, playing music, video, or listening to radio, press the keys to adjust volume.

## Start to Use

### Install Memory Card, SIM Card and Battery

When you apply for a network, you will get a plug-in SIM card. SIM (Subscriber Identity Module) card contains phone number, service projects and can be used to store phone numbers and personal information.

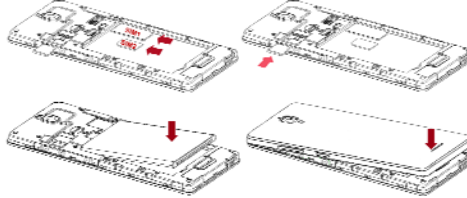

Attention: Do not bend or scratch the SIM card, do not let it contact with static electricity, dust or water.

Note:

- Keep all SIM cards where children cannot reach or touch.
- Keep the SIM card chip contact face downward. Make the SIM card fit the card slot.

### Remove Memory Card, SIM Card and Battery

Note: If the phone is turned on, long press Power Key about 3 seconds until it tips phone options and select **Power off** and then press **OK** to turn off the phone. After the phone vibrates, remove the battery, SIM card and memory card.

Do not plug or remove memory card in boot state, otherwise it will cause damage to the file system.

### Charge the Battery

1. Before charging, check the battery slot to ensure the battery has been installed correctly.
2. Plug one end of the charger into the phone.
3. Connect another end of the charger to the socket.
4. Start charging. It can be charged whether power on or power off.
  - In power on state, when the battery icon at the notification bar with a lightning symbol means it is being charged. When the icon is full means charge is completed.
  - In power off state, when the battery icon on screen dose not show 100% means it is being charged. When the icon is full and stop rolling means charge is completed.
5. Unplug the charger from the socket.
6. Disconnect the charger and phone.

### Use Touch Screen

- Press: Use the finger to press the desired option to confirm selection or start an application.
- Long press: Long press the screen in current operation interface, icon, or input area; you can open the option menu in current interface.
- Slide: Slide the finger on screen horizontally or vertically. For example, slide the screen in standby mode or main menu horizontally to change menu page.

- Drag: Use the finger to long press desired item, drag it to anywhere on screen. For example, you can drag the icons in main menu to standby screen.

### Make a Call

1. In standby mode or in main menu, press the dial icon to enter dial panel, press numbers on screen to enter phone number.
2. Press the dial icon at bottom and select SIM card to dial the number.
3. Press end icon to cancel the call.



- You need to unlock the phone if the keypad and screen is locked.
- You can make calls through call logs, contacts, and messages.
- During a call, press Volume Keys to adjust the volume.
- Your phone supports intelligent dial. When inputting numbers or Initials, the phone will search the corresponding contacts in phonebook or call logs.

### Answer a Call

When there is an incoming call, you can:

- Drag the icon toward right to answer the call.
- Drag the icon toward left to decline the call.
- Drag the icon upward to reject the call with SMS.

### Emergency Service

You can call emergency service number directly without SIM card. Different networks use different emergency numbers, please query your network operator.



## **Input Method**

Your phone has the built-in input method. In edit mode, long press “...” to show Input options and set input languages and Android keyboard settings.

### **Input English**

Press the on-screen keypad to enter corresponding letters.

### **Input Number**

Press “?123”, you can input numbers directly by pressing the number icons. Long press the letter icons with number, or after long press, slide finger to the numbers to input.

### **Input Symbol**

Press “?123” to enter symbol list. Press the desired symbol to input.

Long press “...” to show symbol list, slide finger to the desired symbol to input.

## **1. People**

In the **People**, press Search icon to search contact, press Add Contact icon to add new contact. Press Option Key to enter:

### **Delete Contact**

Select one or more contacts, then press OK to delete all selected contacts.

### **Contacts to Display**

Select All contacts, contacts on SIM cards, Phone, or Customize the contacts to display.

### **Import/Export**

Copy the contacts from SIM cards, phone, phone storage or SD card, and then select location to copy.

### **Accounts**

Select whether to Auto-sync app data.

### **Settings**

Set the way to sort list by and view contact names.

### **Share Visible Contacts**

Select one or more contacts, press OK and then share the selected contacts via BT, Email, etc.

#### **Memory Query**

To check the memory of phone and SIM cards.

#### **Join Contacts**

To joint the same contact.

## **2. Phone**

Press the icons on screen to input numbers in sequence. After inputting numbers, press Dial icon and select SIM card to dial. Press the icons at the tottom screen, you can enter call log or contact.

## **3. Messaging**

Select **Messaging** in the main menu or standby mode to enter. Select new message icon at left down corner to create new SMS or MMS and send.

1. Enter receiver's number or add number from contacts.
2. Press "**Type text message**" to input message content.
3. If you want to send picture or video file, press + to add pictures, videos, audio, contact, calendar, or slideshow. The message will shift to multimedia message automatically.
4. Press Send icon and select SIM card to send the message.

## **4. Clock**

In the clock interface, you can check time and date. Press the alarm icon, you can add new alarm clock or turn on/off existed alarm clocks.

In the clock interface, you can also press the icons to enter timer function, stopwatch, cities settings, night mode, and settings.

## **5. Google Service**

Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on your mobile phone for the first time, touch a Google services such as **Play Store, Gmail, Chrome, Drive, Google**

**Settings, Google+ Hangouts, Maps, Photos, or YouTube**, and you may be prompted to sign in to your Google account. Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

## **6. File Manager**

In this menu, you can check folders and files stored on SD card and phone storage.

## **7. Music**

Select **Music** in main menu. Press **Artists, Albums, Songs,** and **Playlists** at the top of screen to change category. Select one audio file to play the music. Press the icons on screen to operate the audio player.

## **8. Camera**

By using the camera application, you can take photos or records for around people or events anytime. Press the **Camera** icon in main menu to enter. Press the shoot icon or record icon to take photos or records.

Press the icons on screen or Option Key to set parameters of the camera or recorder.

## **9. Browser**

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

Select the website list on screen or input URL in address bar to visit.

## **10. Social Networking Function**

Your phone has several built-in social networking applications, such as Facebook, Twitter, and Skype.

## 11. Calculator

The calculator can execute simple calculations. Slide the screen toward left or right, you can change the calculator in **Basic panel** and **Advanced panel**.

## 12. WhatsApp

WhatsApp Messenger is a cross-platform application facilitates you to send SMS messages but without paying fees. WhatsApp can be run on iPhone, BlackBerry, Windows Phone, Android, Nokia and other platforms.

In addition to traditional message functions, WhatsApp users can create groups, send each other unlimited photos, video and voice messages and other multimedia files.

## 13. Calendar

In the calendar, you can check schedules for current month. It has alarm for the date with schedule. Select one date to check all schedules for that day, or you can edit, delete, share or hotknot the schedules.

## 14. Gallery

You can use Gallery to view or manage images and videos.

## 15. Downloads

To check all downloaded applications and to manage.

## 16. Email

You can use **Email** to send and receive emails.

### Setup Email Account

According to the tips on screen to input email address and password, and press **Next**. You can press **Manual setup** to setup server information manually.

### Check Emails

In the **Inbox**, select the email you want to check to enter. Press the icons on screen to delete, reply, add to favorite.

### **Compose and Send Email**

In the **Inbox**, press new mail icon to create new email. Input receiver email address, subject, and content, and then press Send icon to send the email.

### **Delete Accounts**

In the **Inbox**, press Option Key to select **Settings**. Select the account you want to delete and then select **Remove account** in the option list. Press **OK** to confirm and delete the account.

### **17. Flashlight**

Your phone has flashlight function. In the flashlight interface, press power icon to turn on/off the flashlight.

### **18. FM Radio**

Select **FM Radio** in the main menu and plug earphone to enter. Press Power icon to turn off the radio. Press Option Key and select **Search**, the phone will search available channels and save in the list. Press the icons on screen to operate the FM radio.

### **19. Movie Studio**

You can use this application to edit video clips.

### **20. Search**

Inputting keyword in search bar, the phone will match applications or contacts first. If there is no result, press the arrow icon on right to link to network and search.

### **21. Settings**

#### **Wireless & Networks**

In this menu, you can select and set **SIM management**, **WLAN**, **BT**, **HotKnot**, **Data usage**, under **More...** - **Airplane mode**, **Default SMS app**, **Tethering & portable hotspot**, **VPN**, **Mobile networks**, and **USB Internet**.

- **WLAN**

You can connect to a WLAN, use it to access and download with high speed.

Slide the icon beside **WLAN** toward right to turn on WLAN. Press **WLAN** to check available WLAN networks. Select one open network, you can access to the network directly. If the network you selected is encrypted, you need to input password.

- **BT**

The phone supports BT. It can exchange information between devices including mobile phones wirelessly. Through BT, you can sync phone and computer, exchange data with other BT devices, and can connect to BT earphone.

Slide the icon beside **BT** toward right to turn on BT and set. Before transmitting data, you may need to match with other BT devices.

### **Device**

In this menu, you can set audio profiles and display, check storage and battery, and manage apps.

### **Personal**

- **Location**

Enter this menu, you can select whether to turn on Location function, check recent location requests and location services.

- **Security**

You can select **SCREEN SECURITY, ENCRYPTION, SIM CARD LOCK, PASSWORDS, DEVICE ADMINISTRATION,** and **CREDENTIAL STORAGE** in this menu.

- **Language & Input**

Select and set Language, keyboard & input methods, speech, and mouse/trackpad.

- **Backup & Reset**

In this menu, select **Factory data reset** and then select **Reset phone** to clear all data in the phone memory. Select **DRM reset** to delete all DRM licenses. Select **Back up my data** to back up app data, WLAN passwords, and other settings to Google servers.

### **Accounts**

- **Add Account**  
To add new account of Corporate, Google, IMAP, etc.

## **System**

- **Date & Time**  
Set time and date for the phone.
- **Scheduled Power On & Off**  
Set time to power on/off the phone automatically.
- **Accessibility**  
To set accessibility functions for the phone.
- **About Phone**  
To check status, legal information, etc.

## **22. Sound Recorder**

The phone supports sound recording function, recorded files will be saved with different quality.

## **23. ToDo**

Using this function, you can record the information you need anytime, anywhere. Press **ToDo** in the main menu, press **Tap to add new ToDo** to add new content. Press the existing content for viewing and editing.

## **24. Videos**

You can use **Videos** to view or manage videos.

## **25. Widgets**

In the widgets list, you can select desired widget to add to idle screen.

## **26. Accessories**

You can use accessories approved by our company, the other accessories can be provided by the seller.

- Battery

We provide several kinds of lithium batteries with different capacity.

- Traveler charger

Useful charger can charge the mobile phone very quickly. Plug the charger into the electrical plugs and the other side connect to the phone.

You can check the charging progress in the screen of the phone, it will not power on automatically when charging.

## **27. Care and Maintenance**

- Battery Care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.



- Battery performance is particularly limited in temperatures below freezing.
  - Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.
  - Mobile phone maintenance
    - Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
    - Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
    - Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
    - Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
    - Do not attempt to open the device other than as instructed in this guide.
    - Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
    - Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
    - Do not paint the device. Paint can clog the moving parts and prevent proper operation.
    - Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

**Caution: The manufacturer assumes no responsibility for the consequences of the users does not comply with the above suggestions or misuse of the phone.**

**Note: If the version of user manual upgrades, we will not notice. The company has the final interpretation of the user manual.**

## **28. Warning:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new mobile phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.0 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.