

STARTING UP

Before using your Z700 for the first time, completely charge the battery!

Charging the Battery

1. Connect the supplied power cable to the Z700 and to a wall outlet.
2. The Z700 device will turn on and start charging.

FCC ID: Y7WPLUMZ700

Installation Wizard

The first time you start up your Z700, the installation wizard will bring you through a few screens to help you set up the principal settings: language, country, time, etc.

DESCRIPTION OF THE TABLET

1. **Power Button:** press and hold to switch on.
 - To switch off, when you press and hold on the Power button, “Power Off” > “Ok” to fully shut down your 3G
 - To put your device in standby, press the Power button once.
2. **Volume Buttons**
3. **Micro-USB port:** to connect your 3-G to your computer, using the included USB cable (to transfer files) .
4. **SIM card slot:** Any standard SIM card can be inserted.
5. **Micro-SD card slot:** a Micro-SD card should be inserted in the device. It allows the device to be identified as a *removable storage* when connected to a PC.
6. **Loudspeakers**
7. **Headphone Jack**



CONNECTING TO A 3G NETWORK



Your Z700 is equipped with a SIM card slot. Any standard SIM card can be inserted. There is no provider restriction. Note that the Z700 will only have signal if you are in an area covered by your 3G provider's or EDGE network.

Inserting your SIM card

IMPORTANT: Before inserting a SIM card, you must turn off the device.

1. Switch off the device.
2. Insert the SIM card in the SIM card slot.
3. Turn on the device.

A Pin number may be requested. Enter the SIM card pin number.
Your device will attempt to connect to the 3G network of your provider.

NOTE: If your device does not connect to your 3G provider's network

1. Contact your 3G provider to obtain the connection parameters.
2. On your device, tap the Menu icon, then settings.
3. Select Wireless & networks > Mobile networks.

In Network operators, select your operator.

In Access Point Names, select the correct access point name and enter the exact connection parameters.



CONNECTING TO THE WIFI NETWORK



For this procedure to work, you need to be in a WiFi zone that will allow you to connect to it. Every time the Z700 is in range of a network that you have already configured once, it will attempt to make a connection.

How to configure a WiFi network

From the status bar, at the bottom right hand of the screen, you can access the WiFi settings quickly.

1. Touch the time in the status bar. The status dashboard is displayed.
2. Touch the time in the status dashboard. The setting dashboard is displayed below.
3. Touch WiFi to open the WiFi settings.
4. If the WiFi is off, slide the WiFi switch to the On position.

Once the WiFi is on, the Z700 will scan for available WiFi networks.



Secured networks are indicated with a Lock icon. If the device finds a network that you connected to previously, it connects to it.

5. Touch the network you want to connect to.
6. Enter the required network information* and touch Connect.

We recommend that you select Show password in order to be able to see the characters you are typing.


Your Z700 will attempt to establish a connection to that WiFi access point.

* For free access WiFi points, there is no need to enter any special information. For secured networks, you will need a key (a series of numbers and/or letters) of the type WEP, WPA, or WPA2. To obtain the exact connection parameters required, contact the Internet service provider.

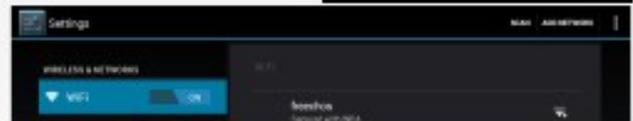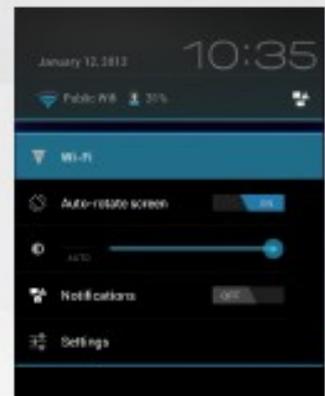

Web surfing


Using the quick search bar from desktop to open the website, you can use soft keyboard to enter the URL. Before browse the webpage, you must make sure you can connect to the Internet. Also you can use the browser from main menu to do this work.

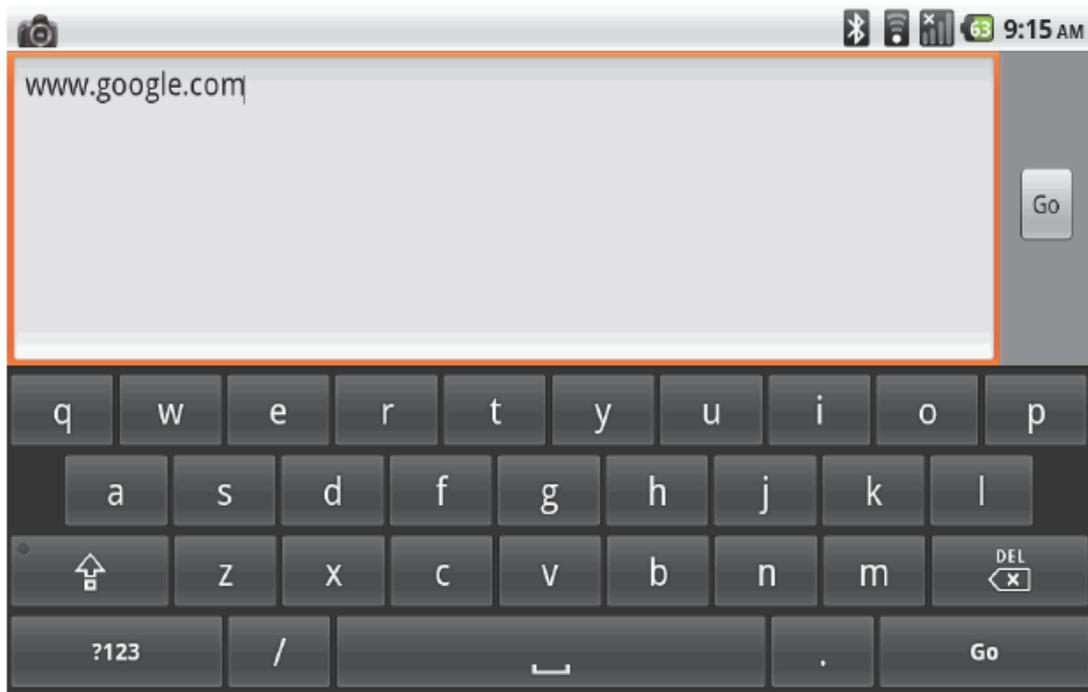

Using Bluetooth

Touch to enter main menu > Settings > Wireless controls. Then touch on Bluetooth to start scanning for available Bluetooth device; Select a device that you wanted and connect it.

(For secure ,you may need to type the secured code.)

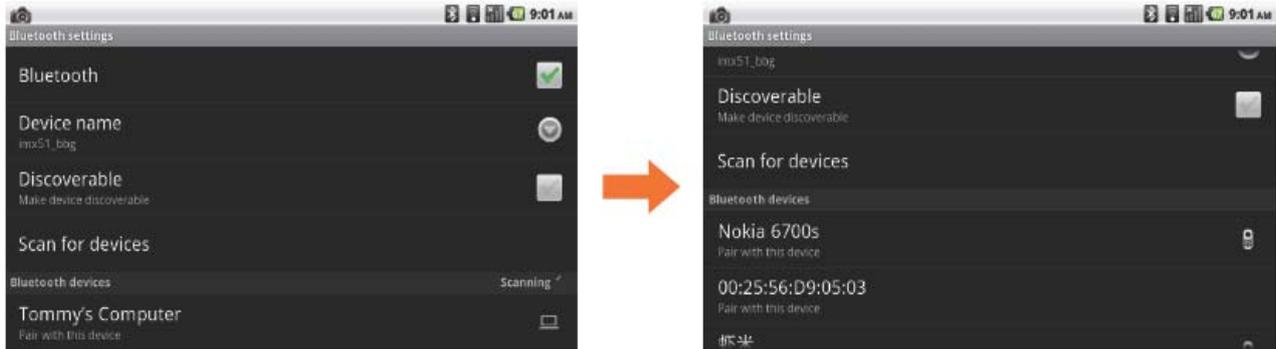



THE ANDROID INTERFACE

Touch for text search

Your Z700 device is equipped with a capacitive touch screen. Use your Fingertip to navigate.

These are default Android™ applications (Web Browser, EMail, etc.). Tap on an icon to open the corresponding application. You can customize the Home screen by adding/removing shortcuts and widgets, changing the wallpaper etc. See next page.



All apps button
Tap on this icon to reveal all the Android™ applications and widgets installed on your Z700 (games, various tools, etc.). You can copy them onto the Home screen. You can get more Android™ applications from AppsLib

The navigation bar displays the Back, Home and Recent Apps buttons.

The status bar displays notifications and system icons.

Main Touch screen buttons



The Back button - to go back to your previous screen.



The Search button - to type terms to search your tablet and the web.



The Home button - to return to the main screen.



The All apps button - to find all your apps and widgets.



The Recent Apps button - to navigate among your apps.
- to remove a thumbnail from the list, swipe it left or right.

Play video



Touch the video icon from main menu to see all your videos displayed as thumbnails. Touch and scroll left or right to view more video thumbnails and touch to select the thumbnail you would like to watch. The screen will start playing the video on your device.

(.mp4, .3gp, .avi, .wmv/.asf, .mkv/mka, .flv support)



Play music

Touch the "Music" icon from the main menu, after enter the Music applicator. You may search music by Artists, Albums, Playlists, or by All songs to play the song you like to listen.

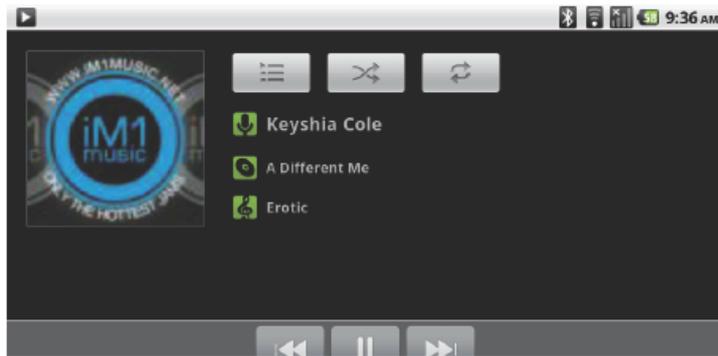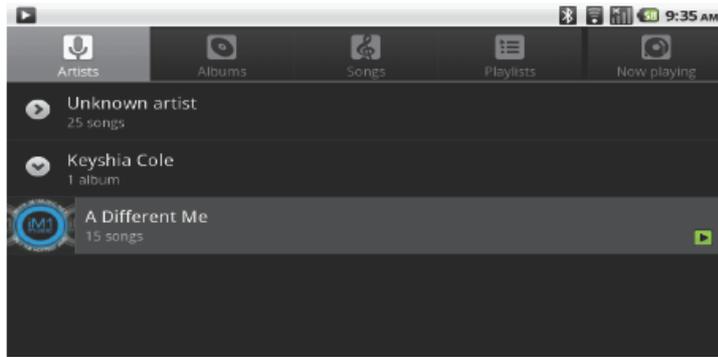

CUSTOMIZING YOUR TABLET

The extended Home screen
Navigate between different home screen panels by swiping left and right.



Customizing the Home screen panels

- To change your wallpaper, hold your finger on the screen at an empty location, then choose from the list.

Arranging & working with apps

- To move a Home screen item, touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.
- To remove a Home screen item, touch and hold it, slide your finger towards the top of the screen and drop it over the Remove icon. Removing an item from the All apps screens will uninstall the item.

Zoom: In some apps (such as Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).



Creating application folders: you can combine several application icons in a folder. Drop one app icon over another on a Home screen and the two icons will be combined.



Changing the Settings

Tap on Settings and choose a menu among these categories: Wireless & networks, Device, Personal, System.



Adding more applications with APPSLIB : with the Z700 connected to the Internet, tap on the AppsLib icon. This online library has thousands of applications to download and use.





CUSTOMIZING YOUR TABLET

Add widgets

Widgets are like windows into your apps. They're available from All Apps tab for you to move onto your Home screens.

To see your widgets:

1. Touch any apps on your menu screen.
2. Touch Widgets at the top of the screen.
3. From the main Widgets screen, you can:
 - move between screens: Swipe left or right.
 - drag a widget to a Home screen. Touch and hold the widget's icon, slide your finger where you want to place it and lift your finger.

You may be asked to make further choices before the widget activates. If there isn't room where you have dropped it, the widget won't be added to the Home screen.

Use the lock screen

To protect personal information, you can adjust your tablet's lock settings:

1. From the Home or All Apps screen, touch the Settings icon .
2. Scroll down and touch Security.
3. Touch Screen lock.
4. Touch the type of lock you'd like to use.

After you set a lock here, a lock screen is displayed whenever your screen wakes up, requesting the pattern, PIN or other specified key.

Extend the life of your battery

- If you aren't using WiFi, select the Settings app to turn it off.
- Turn down screen brightness and set a shorter Sleep timeout: Settings > Device > Display.
- If you don't need it, turn off automatic syncing for all apps: Settings > Personal > Accounts & sync. Note that this means you need to sync manually to collect messages, email, and other recent information, and won't receive notifications when updates occur.

THE END

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is 0.935W/kg, next to the head is 0.757W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Ad Hoc function is supported but not able to operate on non-US frequencies.---WIFI

Do not use the device with the environment which below minimum -10°C or maximum over 50, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.