

#### 5 - “Edit”

Use this button to enter the editing function. Pressing it the first time will allow you to edit the main (master) gas sign. Pressing the button again will move the editing to the next sign, and pressing the button again will move the editing to the next sign.

#### 6 - “Confirm”

Use this button to save the changes you have made to the Gas Price signs and exit the editing function.



#### 1 - “Up”

Use this button to change the number on the blinking cursor. Numbers will ascend towards 9, and then repeat from 0.

#### 2 - “Down”

Use this button to change the number on the blinking cursor. Numbers will descend towards 0, and then repeat from 9.

**3 - “Left”** Use this button to move the blinking cursor left.

**4 - “Right”** Use this button to move the blinking cursor right.

FCC NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.