



**Figure 11**  
Inside Configuration of the EUT




**Figure 12**  
Inside Configuration of the EUT

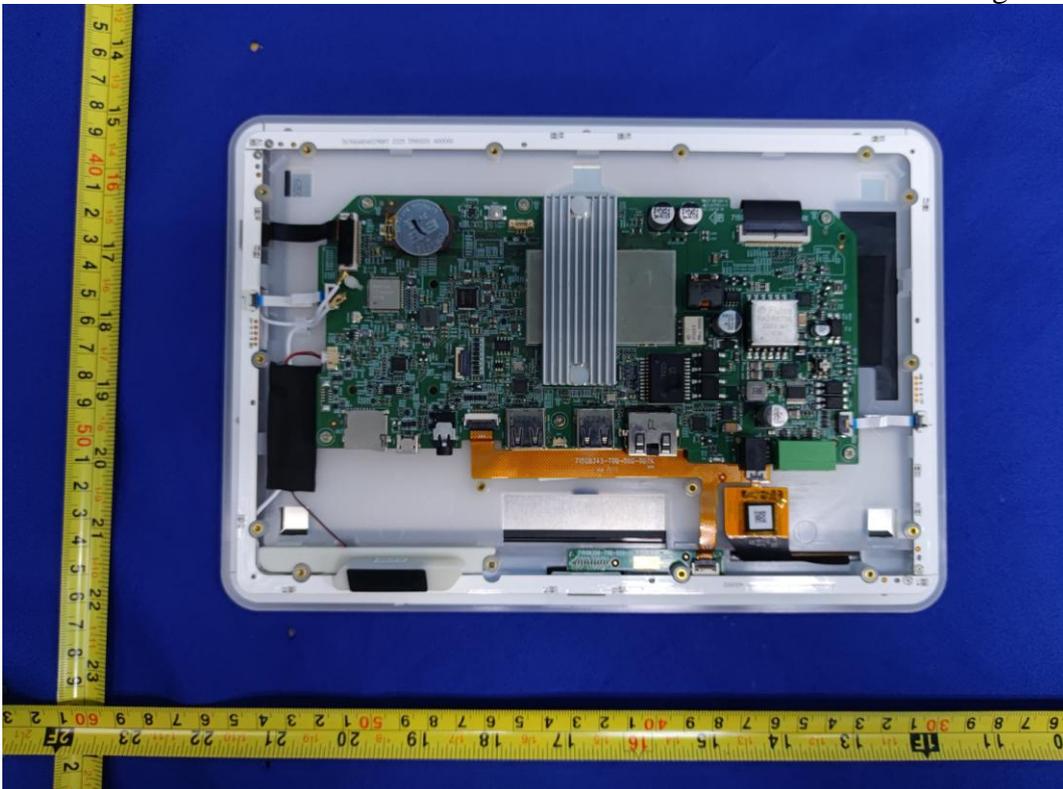


**Figure 13**  
Inside Configuration of the EUT

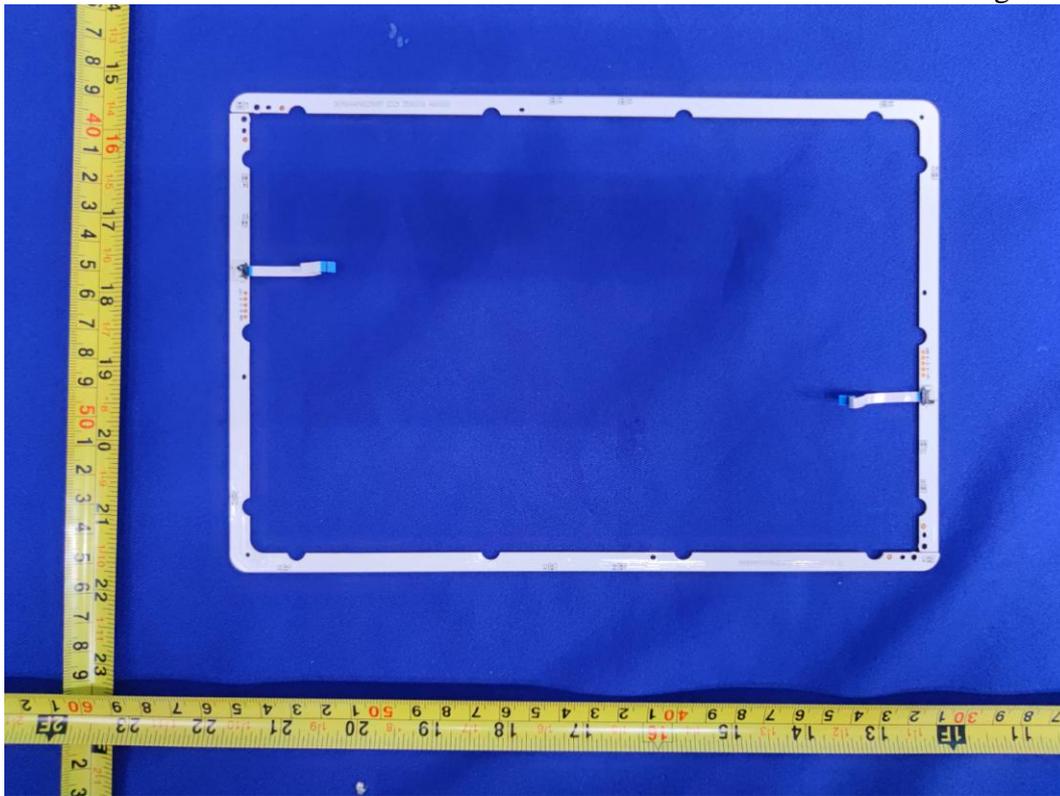

**Figure 14**  
Inside Configuration of the EUT

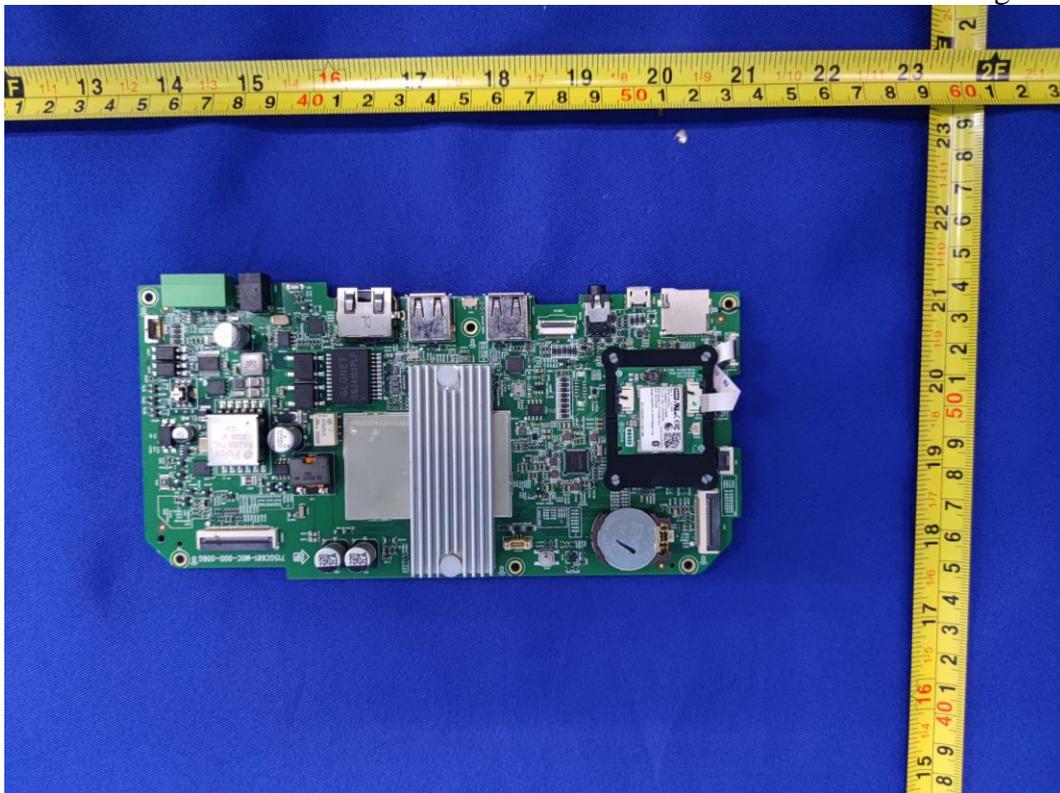


**Figure 15**  
Inside Configuration of the EUT

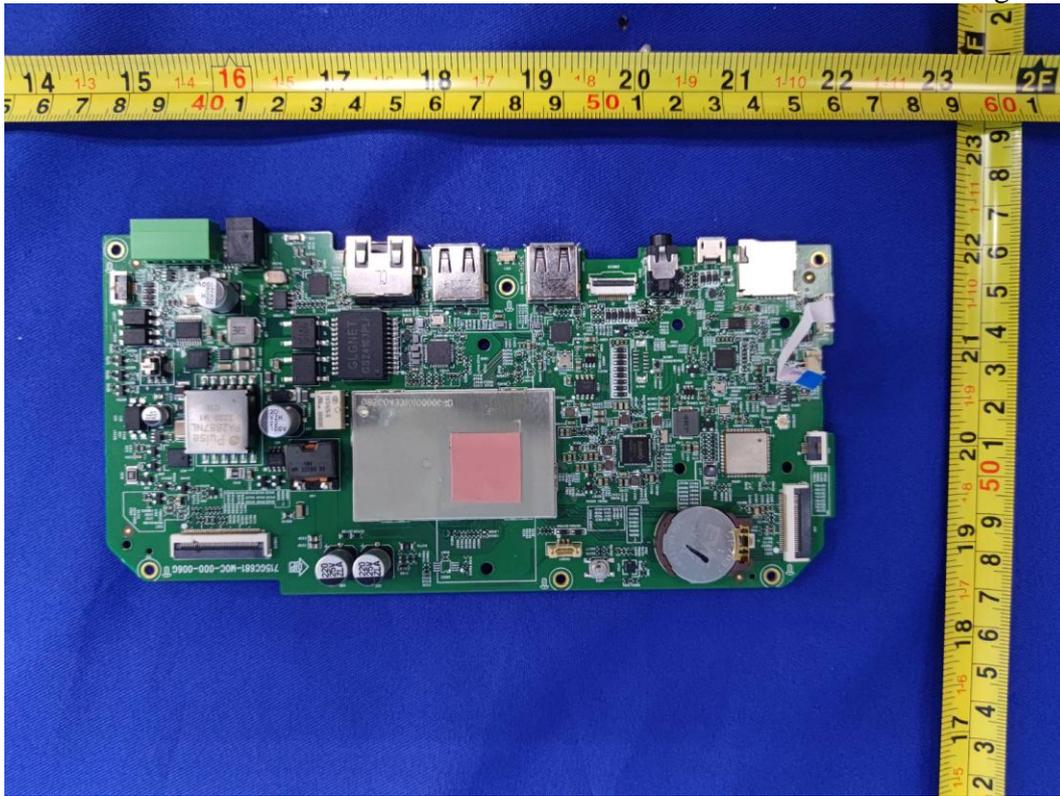


**Figure 16**  
Inside Configuration of the EUT




**Figure 17**  
Inside Configuration of the EUT

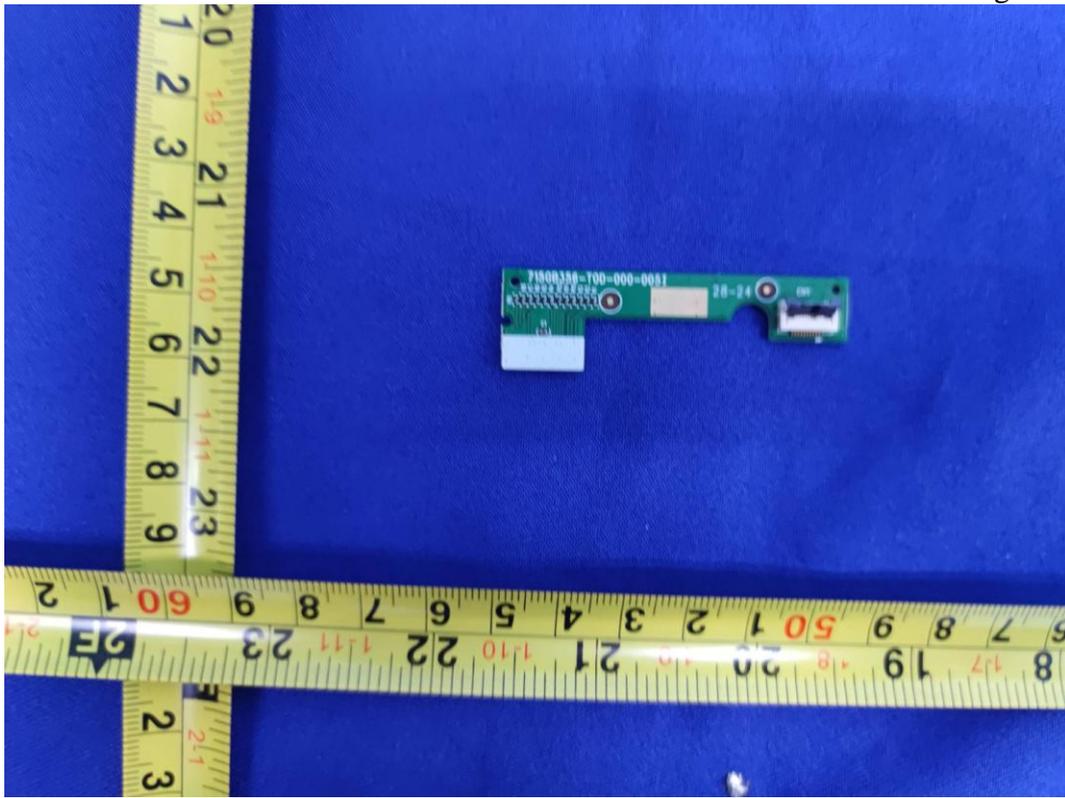


**Figure 18**  
Inside Configuration of the EUT

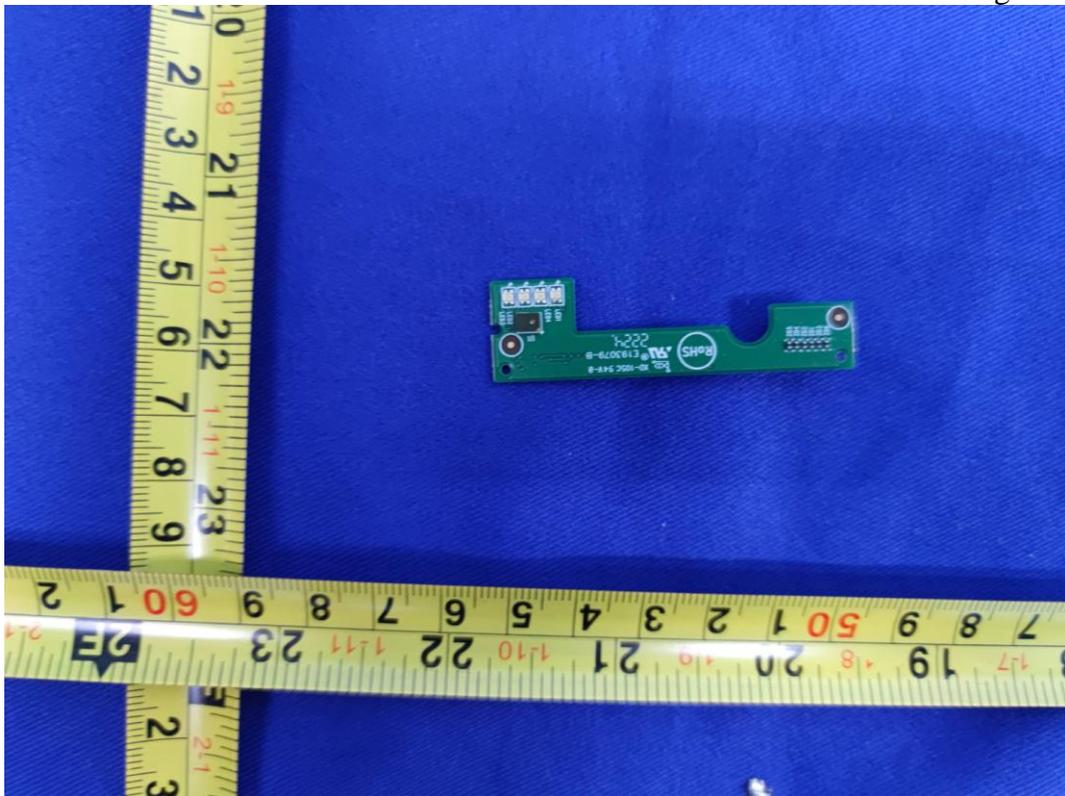

**Figure 19**  
Inside Configuration of the EUT

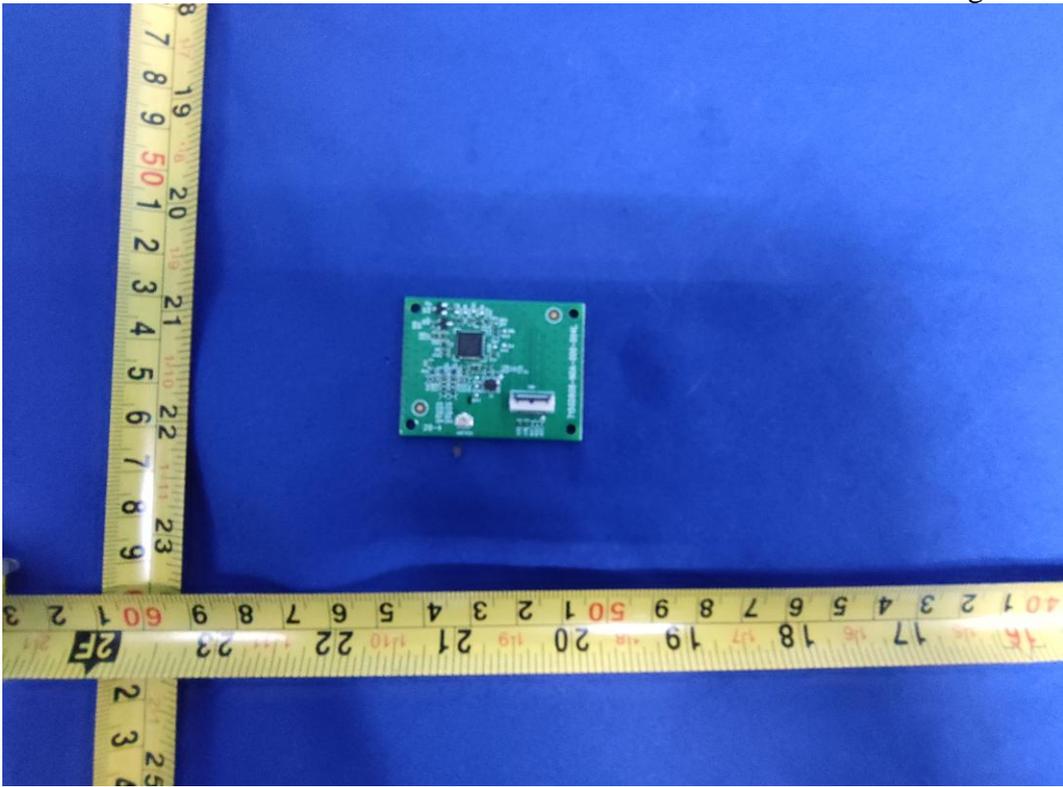


**Figure 20**  
Inside Configuration of the EUT

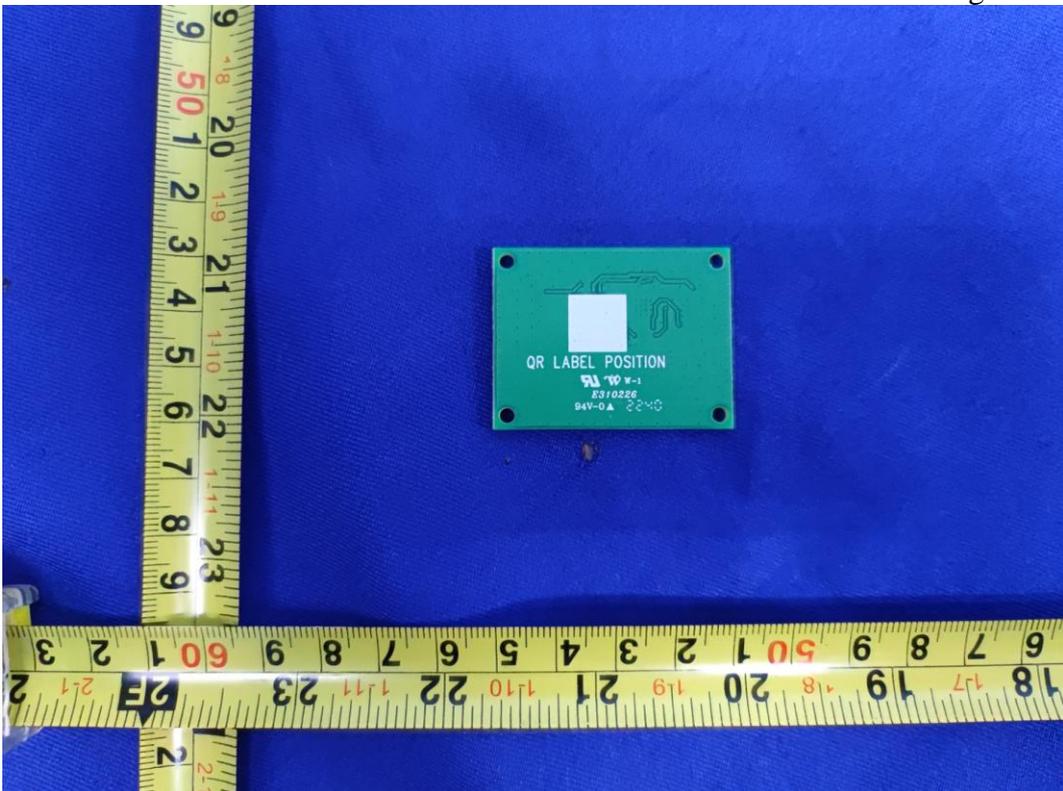





**Figure 23**  
Inside Configuration of the EUT

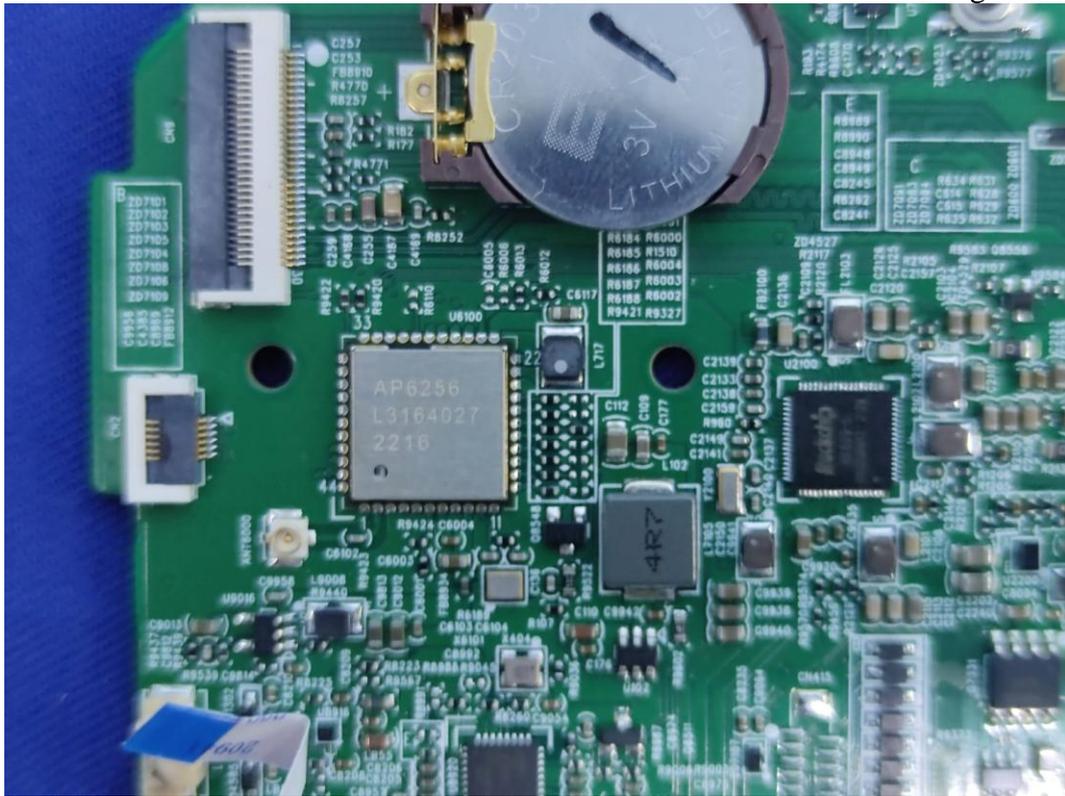


**Figure 24**  
Inside Configuration of the EUT

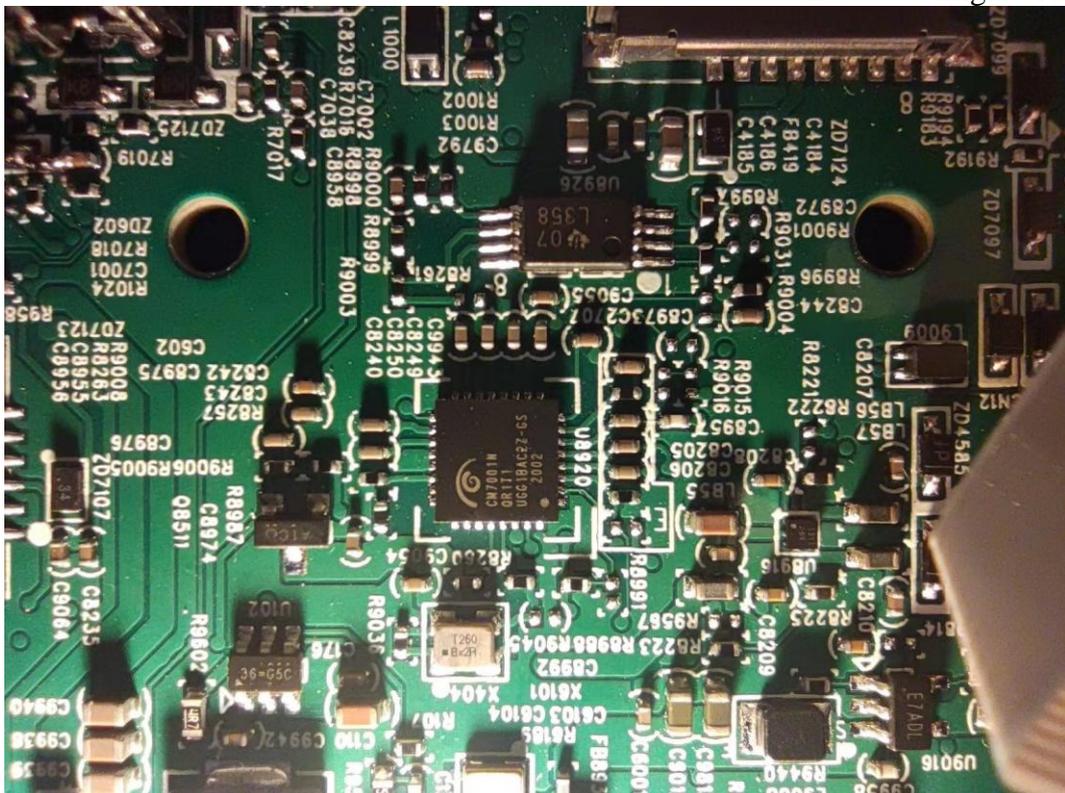


**Figure 25**  
Inside Configuration of the EUT

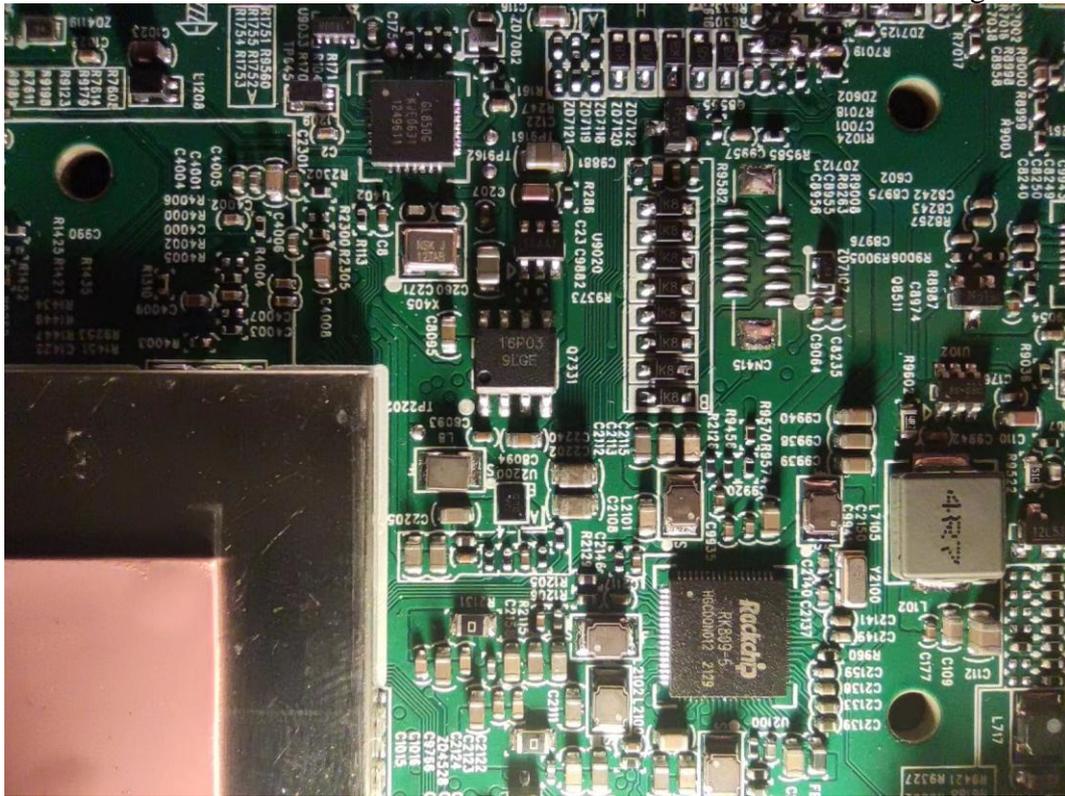


**Figure 26**  
Inside Configuration of the EUT

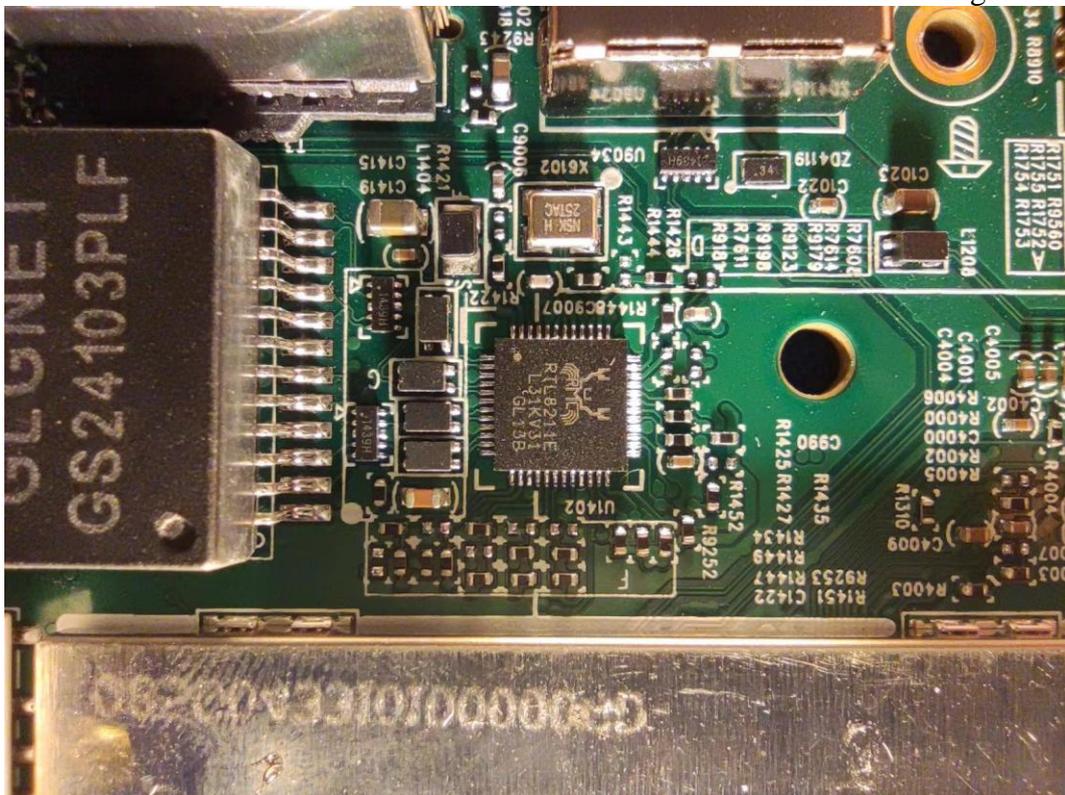

**Figure 27**  
Inside Configuration of the EUT

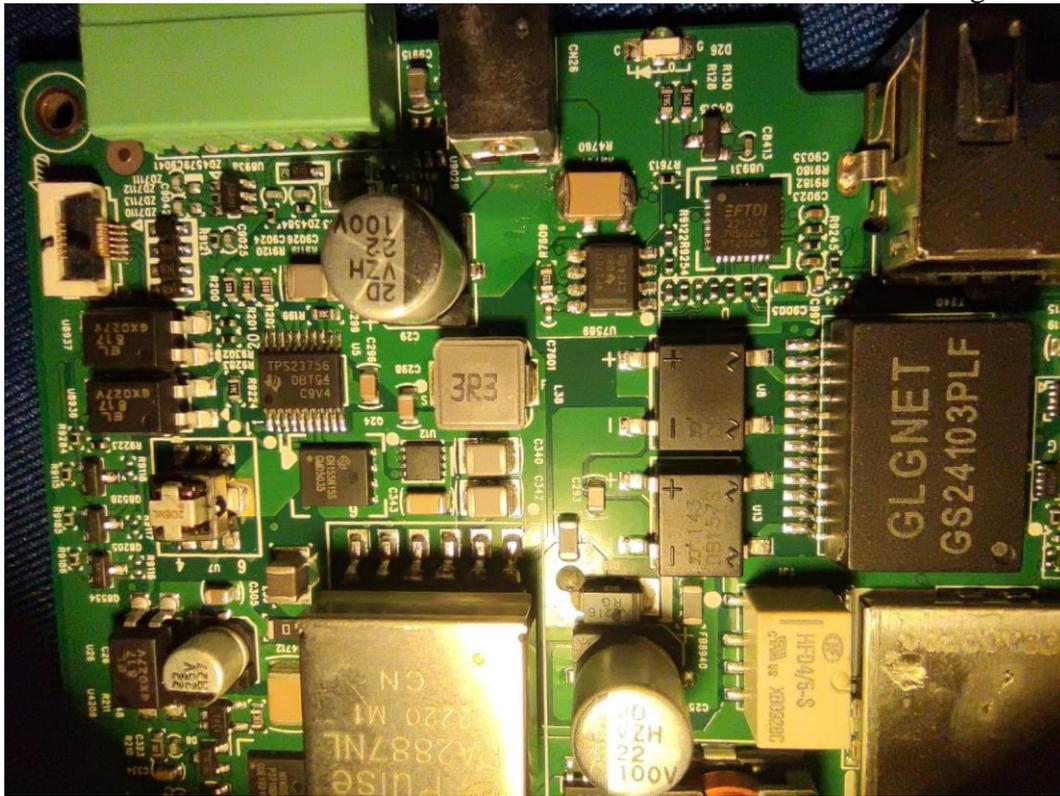


**Figure 28**  
Inside Configuration of the EUT

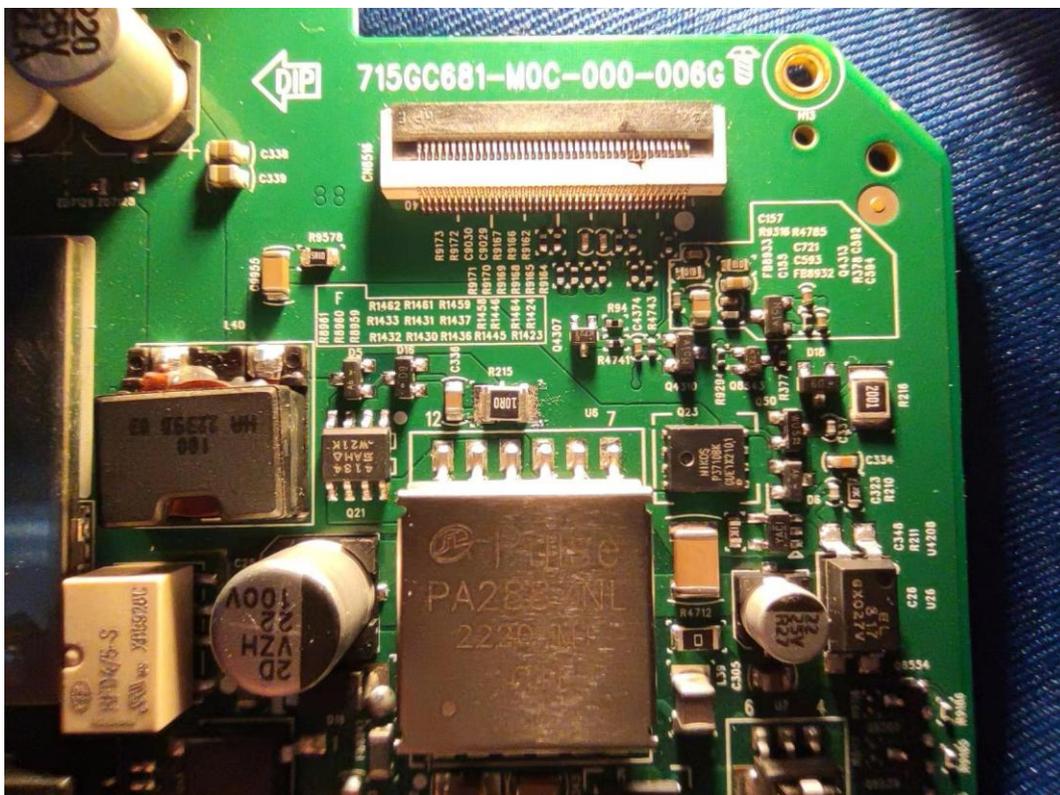





**Figure 31**  
Inside Configuration of the EUT

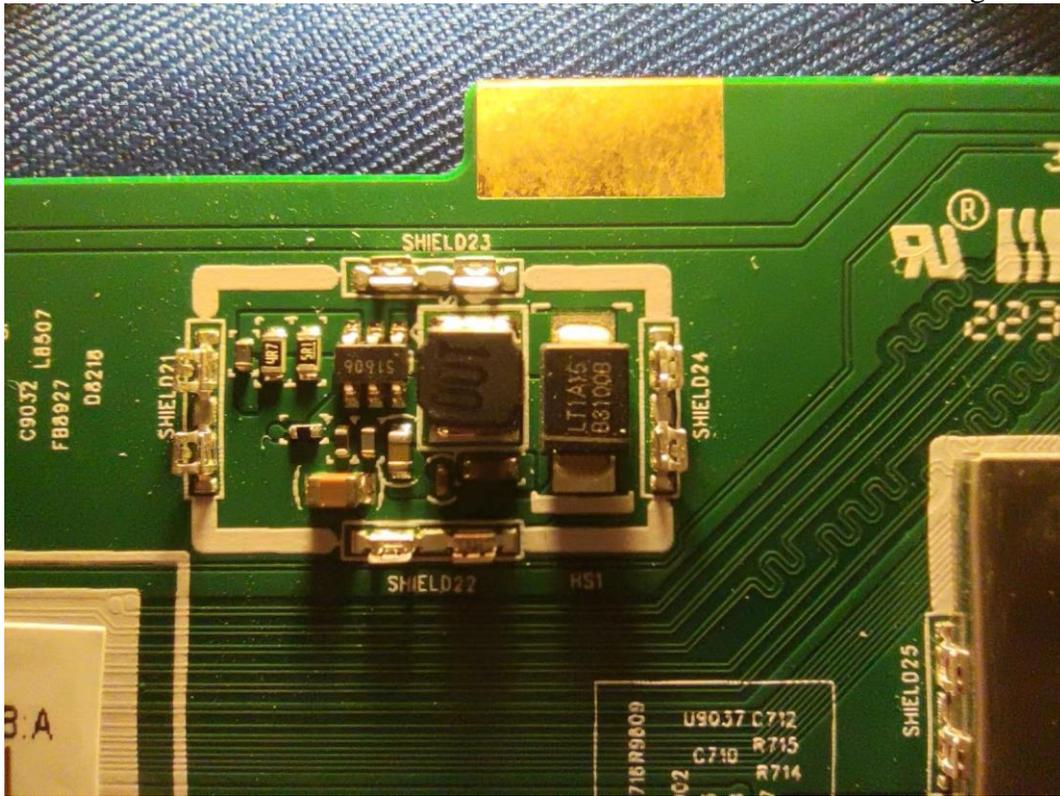

**Figure 32**  
Inside Configuration of the EUT

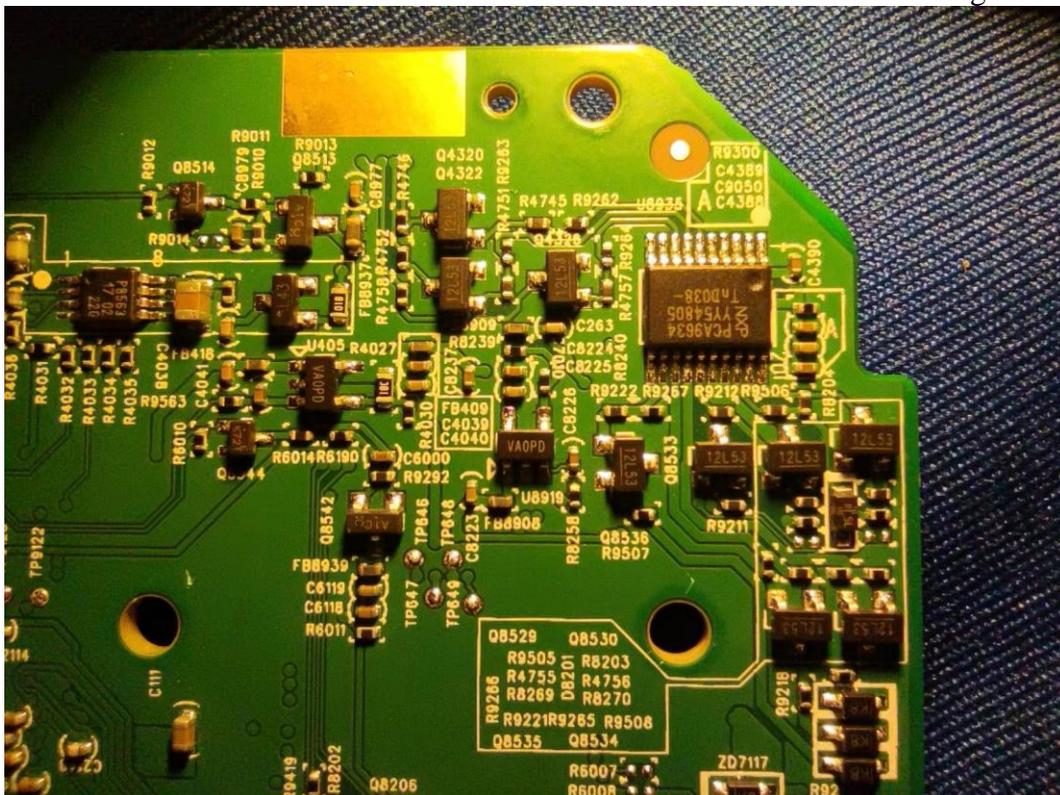

**Figure 33**  
Inside Configuration of the EUT

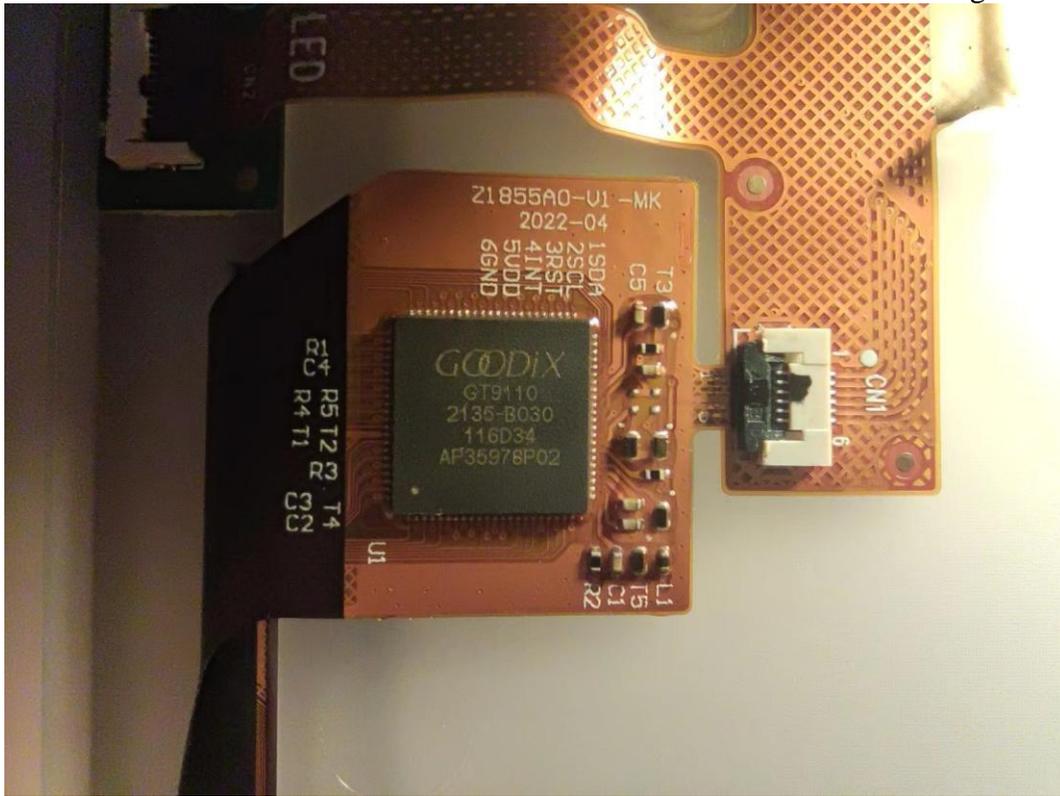

..... **THE END** .....