


Figure 3
I/O Port of the EUT



Figure 4
Inside Configuration of the EUT



Figure 5
Inside Configuration of the EUT

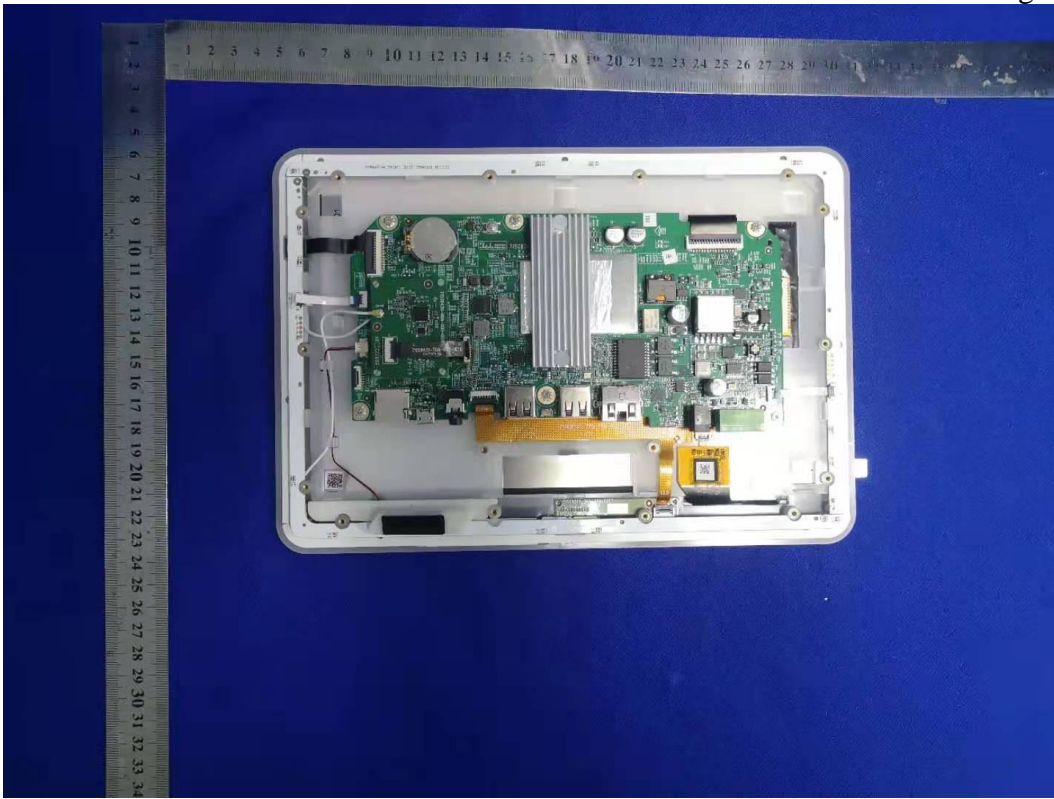

Model No.: IAD-18010L

Figure 6
General Appearance of the EUT



Figure 7
General Appearance of the EUT



Figure 8
I/O Port of the EUT



Figure 9
Inside Configuration of the EUT



Figure 10
Inside Configuration of the EUT



Figure 11
Inside Configuration of the EUT

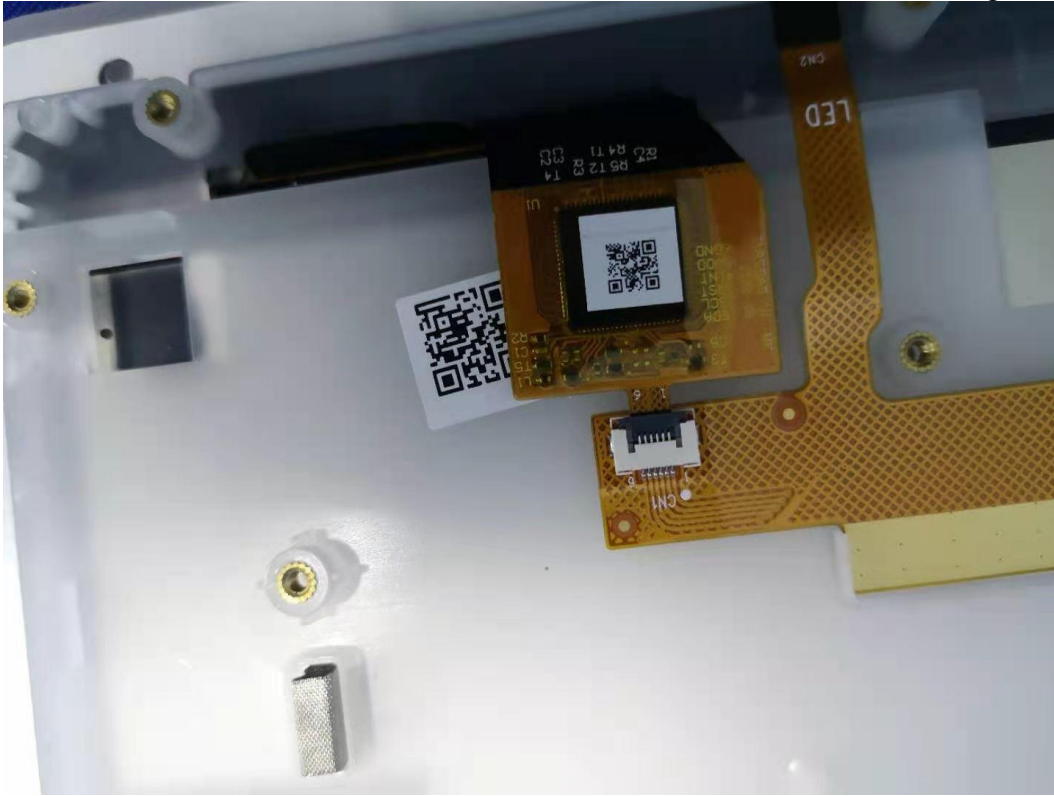


Figure 12
Inside Configuration of the EUT



Figure 13
Inside Configuration of the EUT



Figure 14
Inside Configuration of the EUT

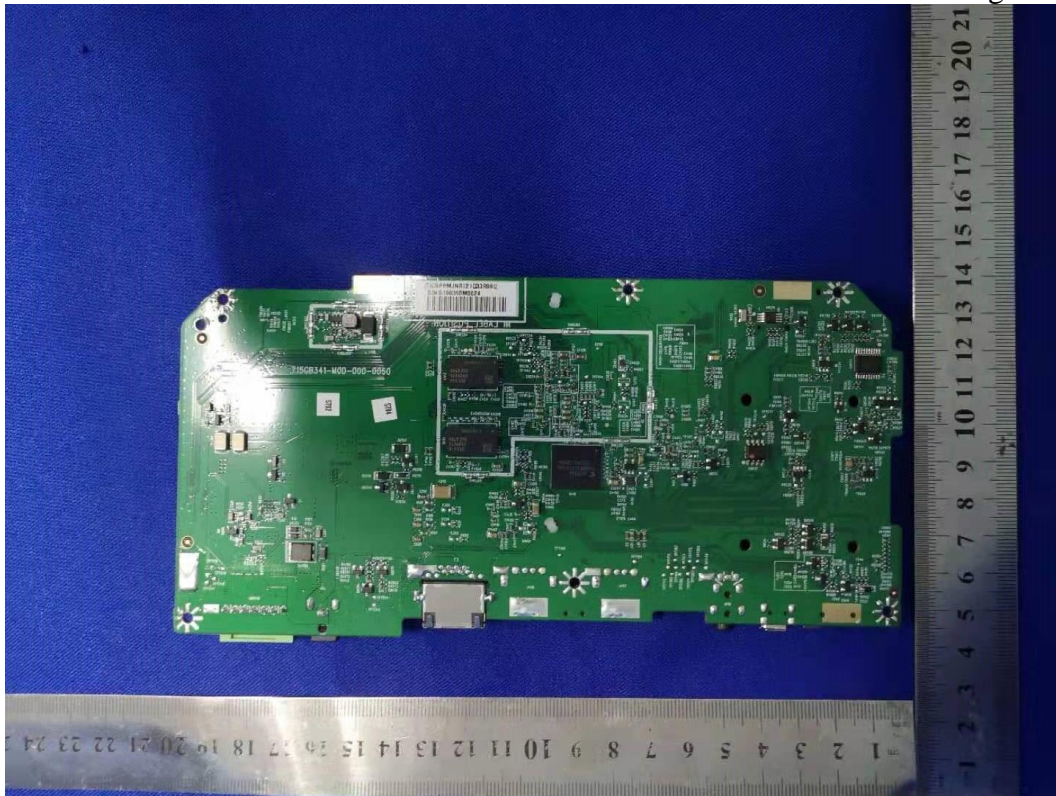


Figure 15
Inside Configuration of the EUT

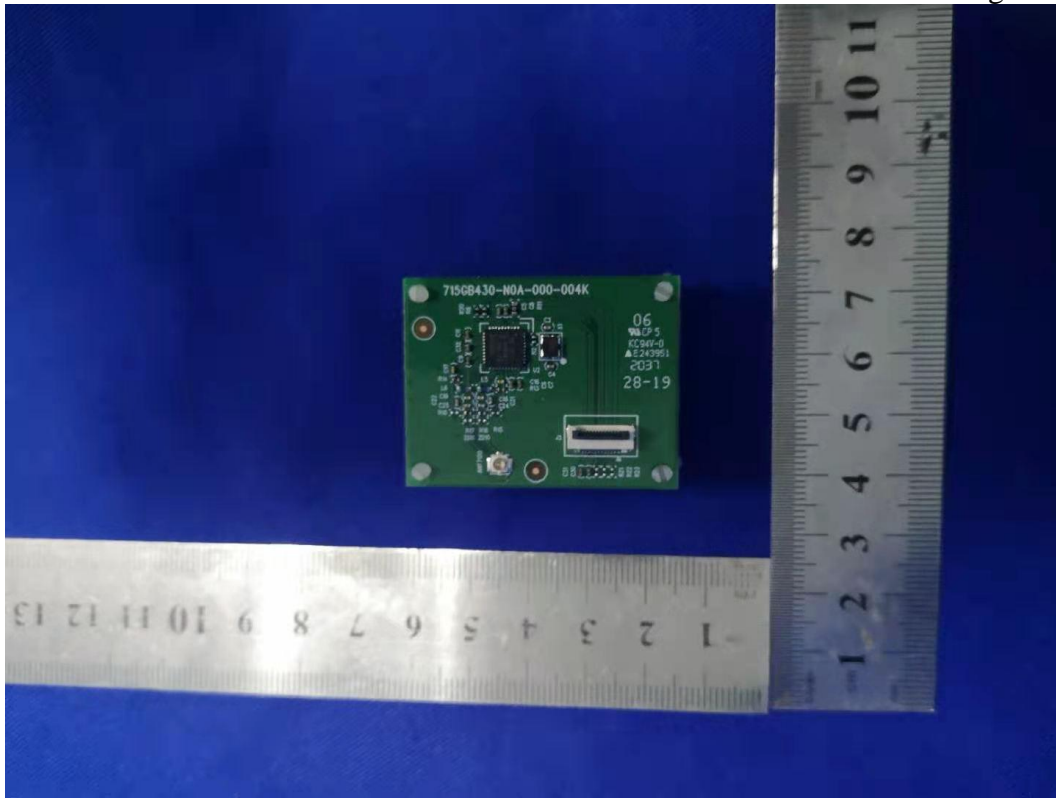


Figure 16
Inside Configuration of the EUT

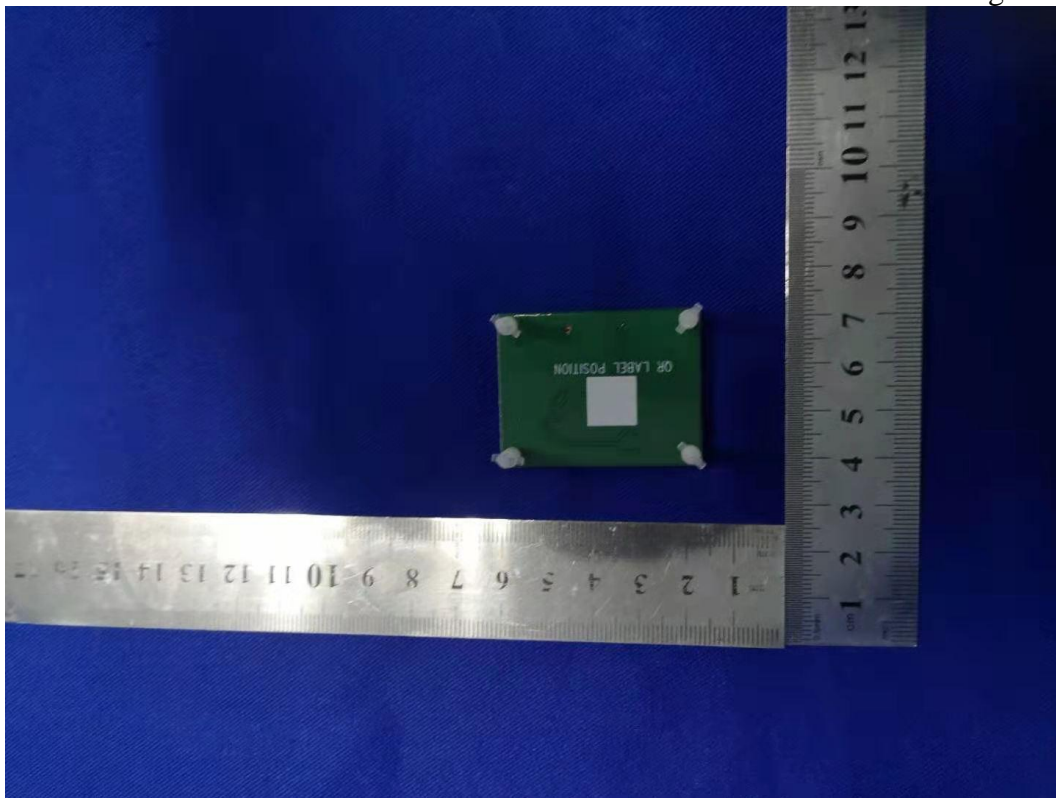


Figure 17
Inside Configuration of the EUT

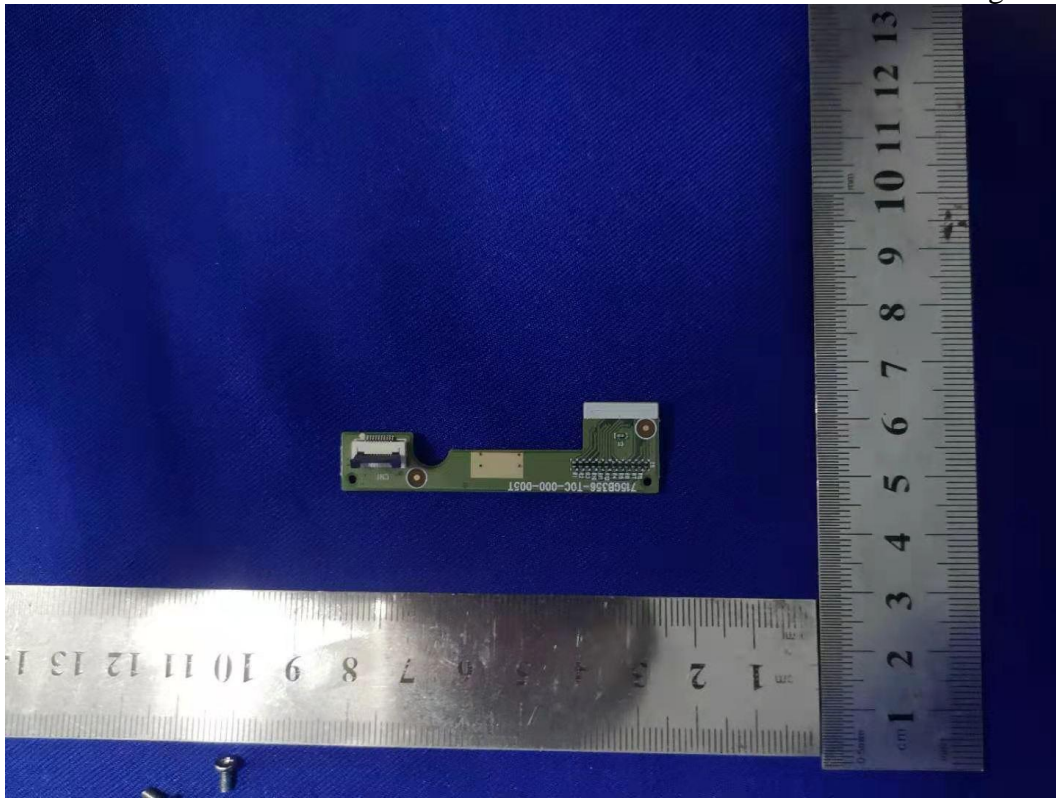


Figure 18
Inside Configuration of the EUT

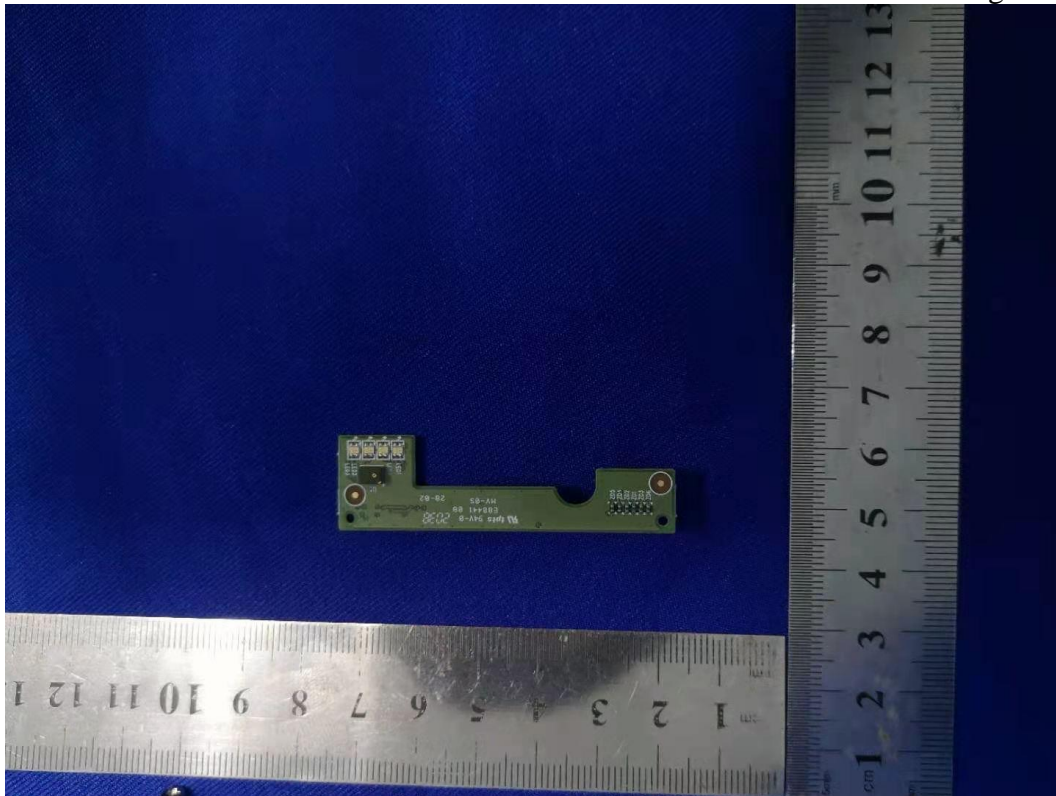


Figure 19
Inside Configuration of the EUT

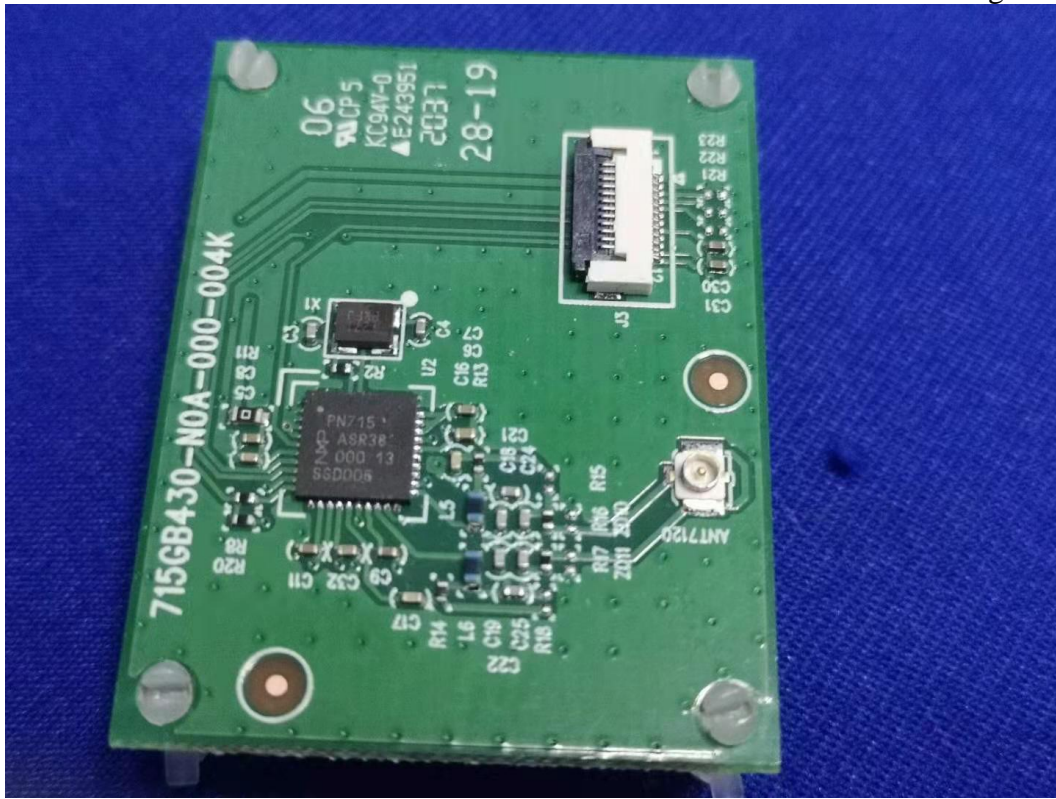


Figure 20
Inside Configuration of the EUT

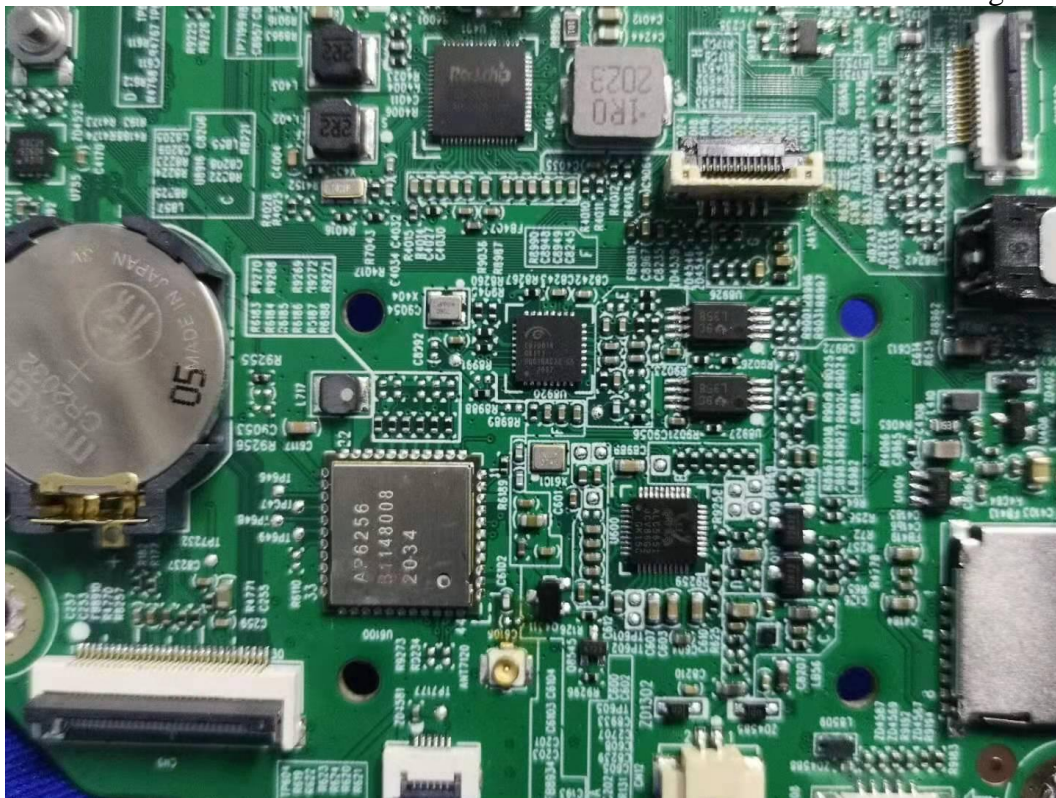


Figure 21
Inside Configuration of the EUT

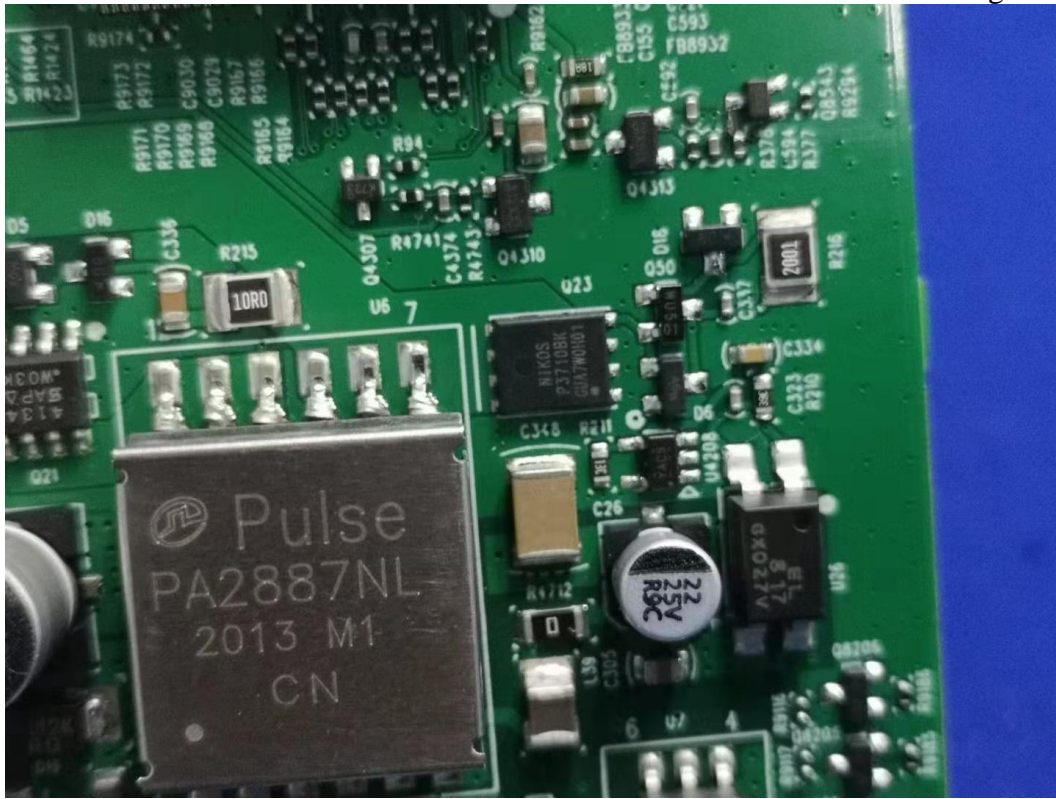


Figure 22
Inside Configuration of the EUT

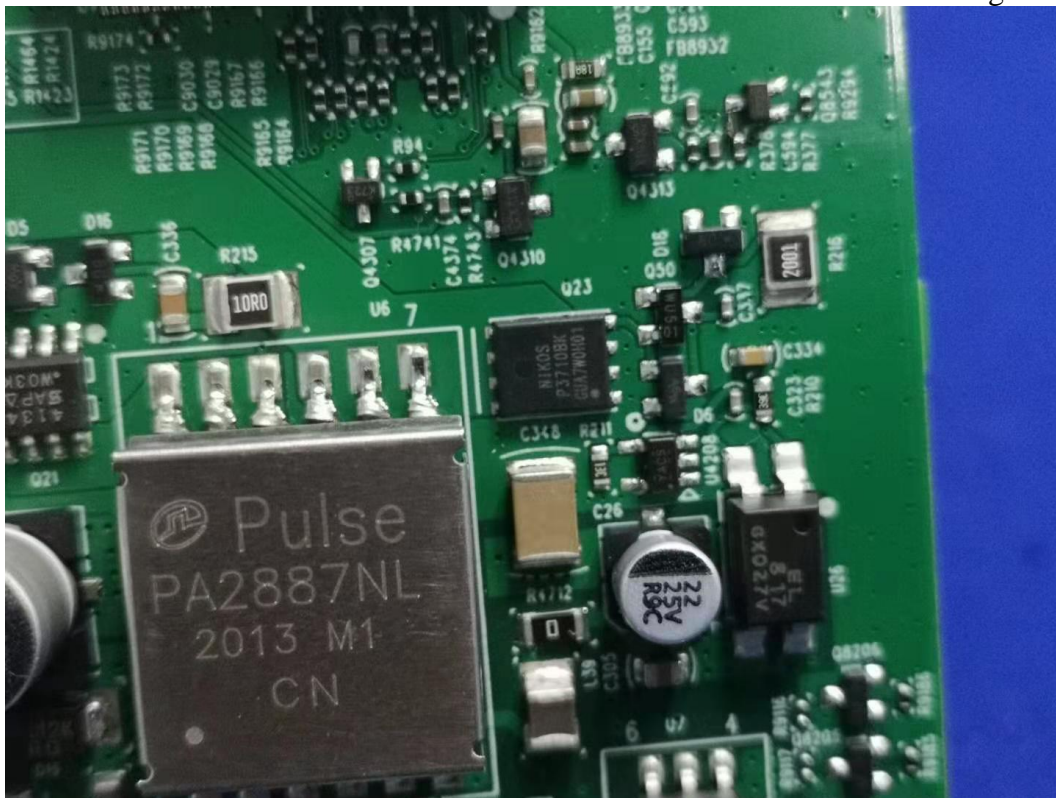


Figure 25
Inside Configuration of the EUT

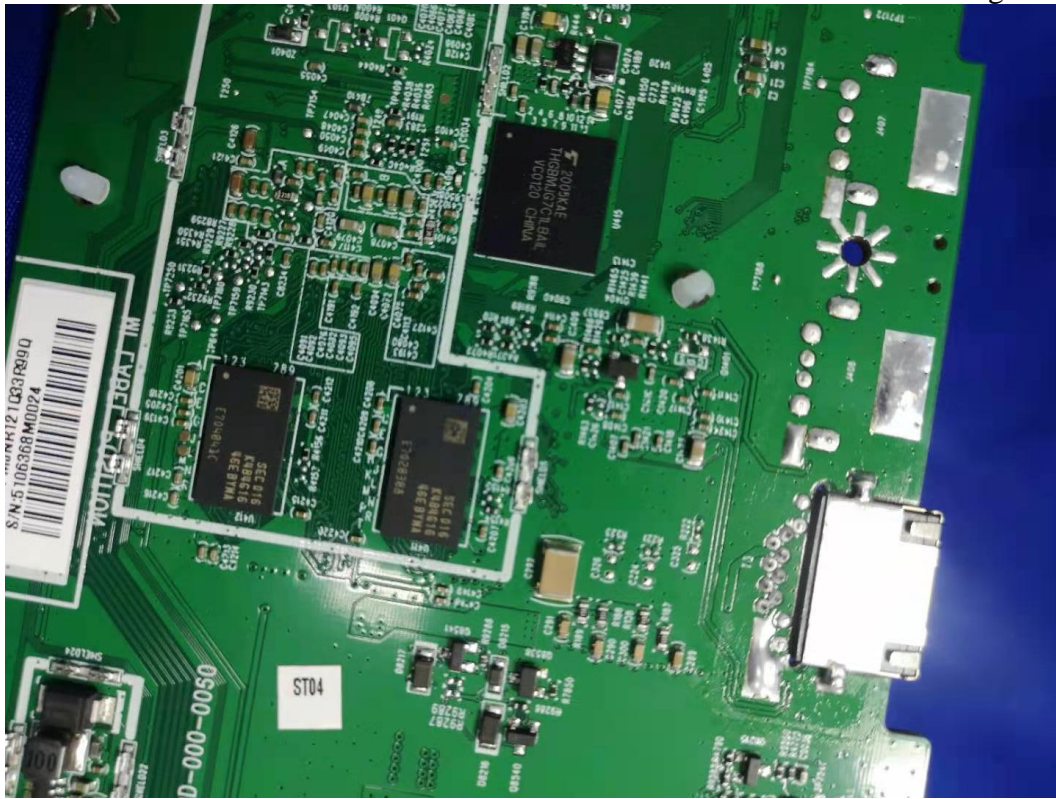


Figure 26
Inside Configuration of the EUT

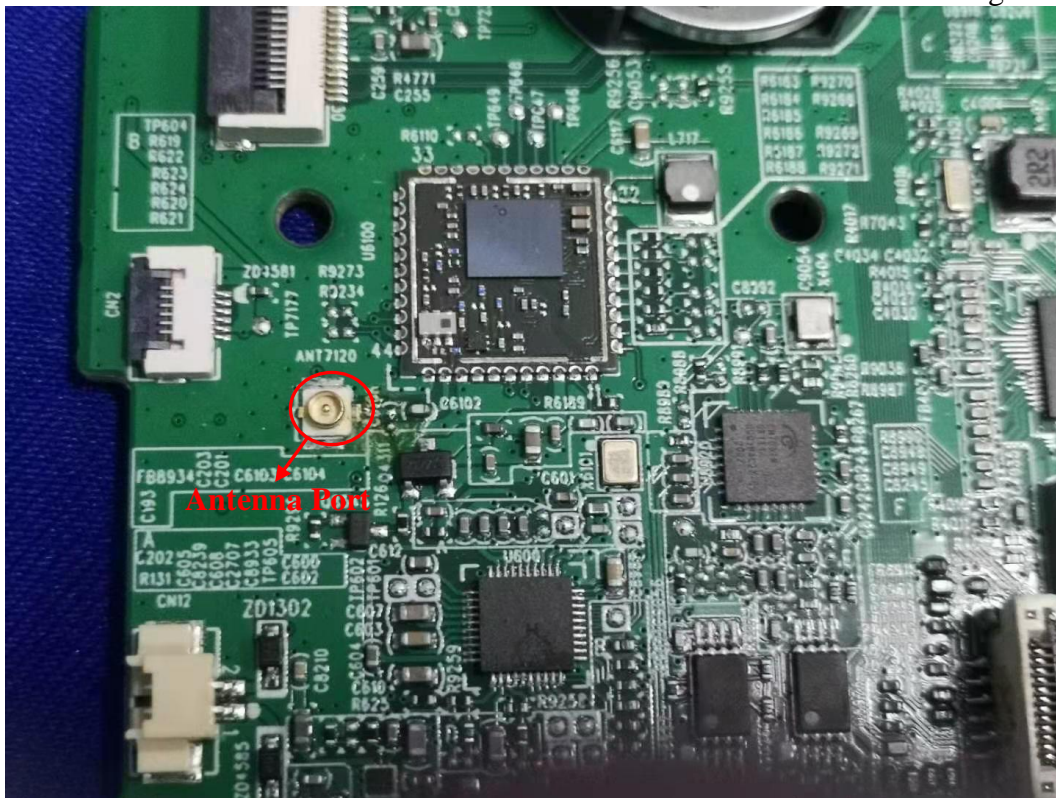


Figure 27
Adapter



Figure 28
Adapter



Figure 29
Adapter



Figure 30
Adapter

