

**Figure 9**  
Inside Configuration of the EUT




**Figure 10**  
Inside Configuration of the EUT







**Figure 13**  
Inside Configuration of the EUT

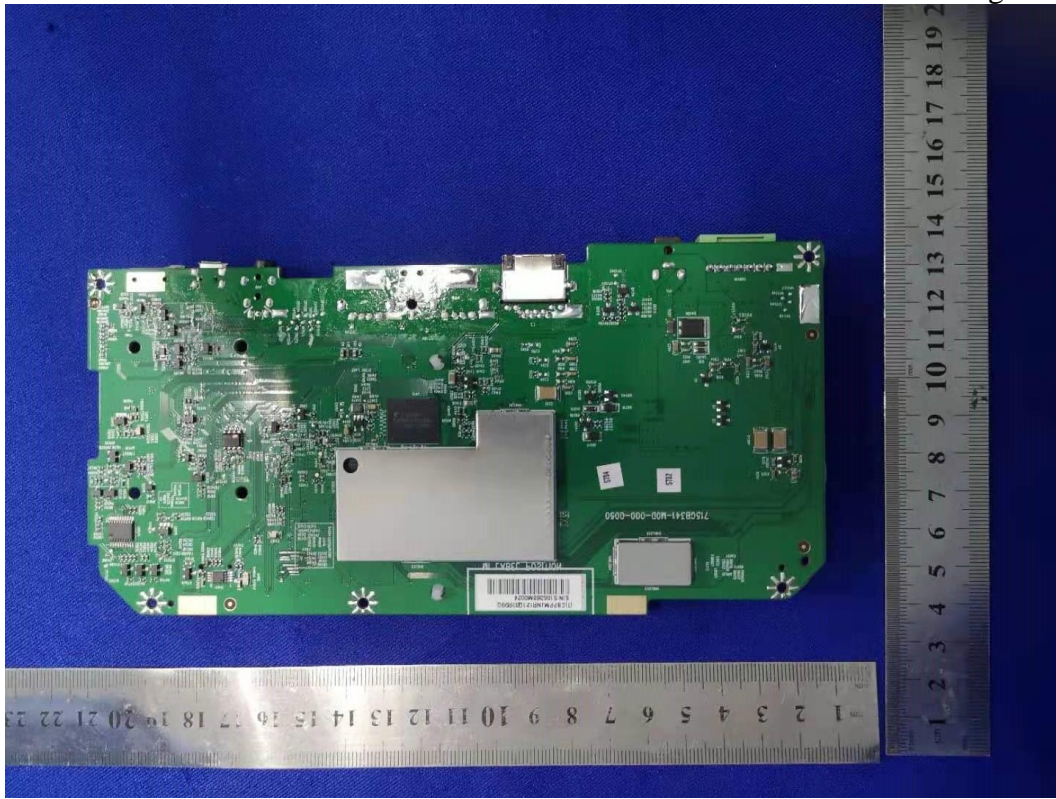


**Figure 14**  
Inside Configuration of the EUT

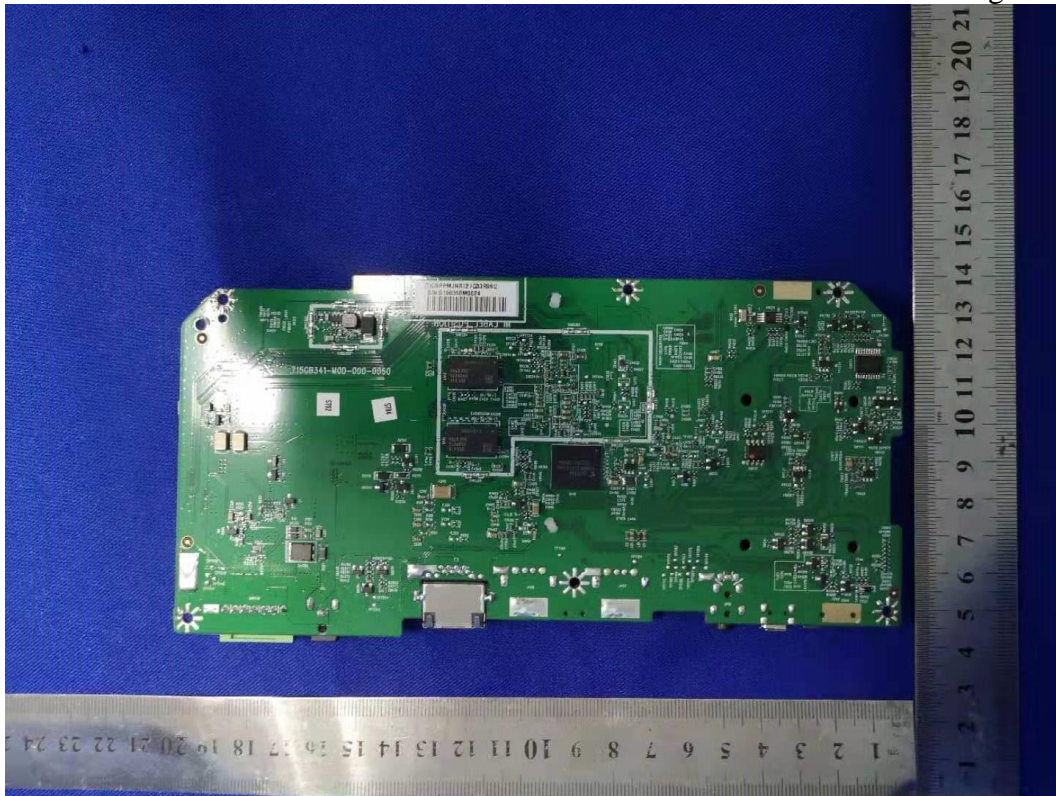


**Figure 15**  
Inside Configuration of the EUT

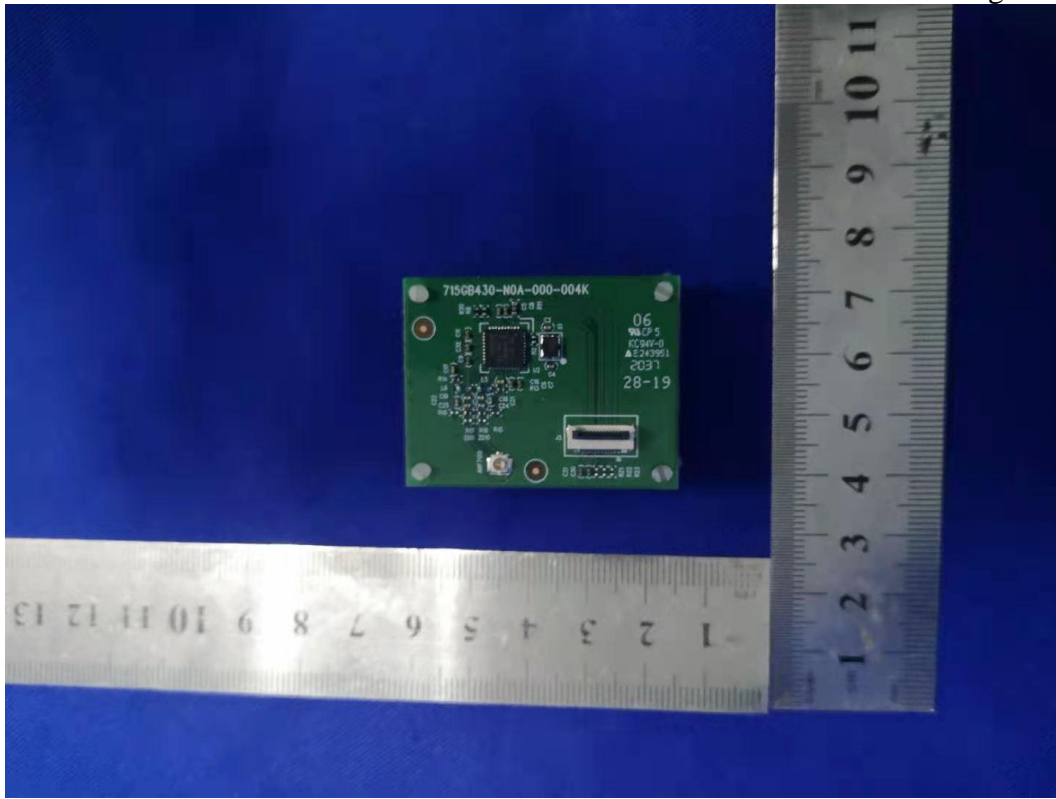


**Figure 16**  
Inside Configuration of the EUT

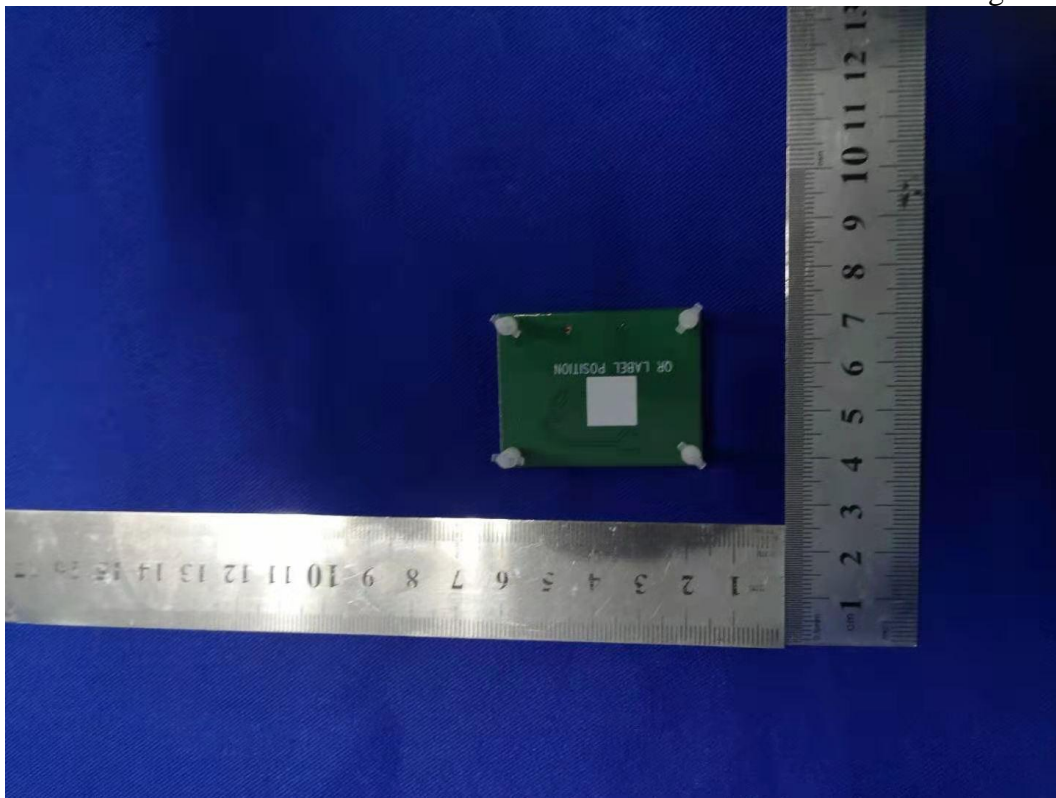


**Figure 17**  
Inside Configuration of the EUT

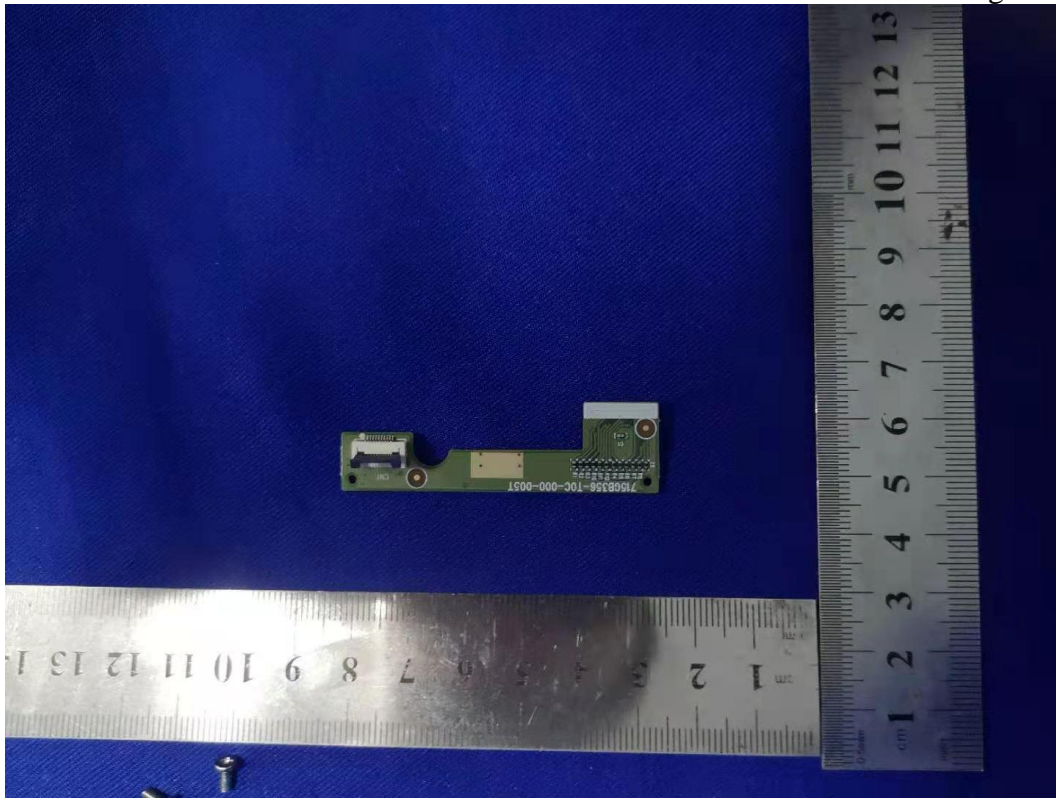


**Figure 18**  
Inside Configuration of the EUT

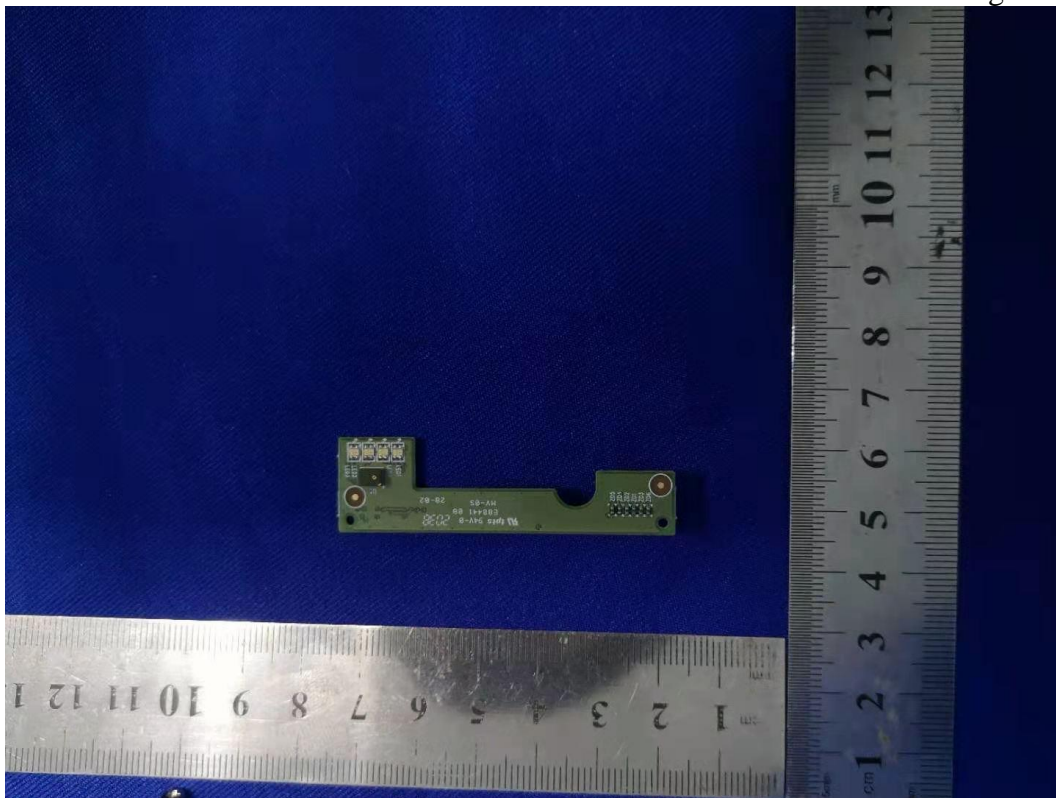


**Figure 19**  
Inside Configuration of the EUT

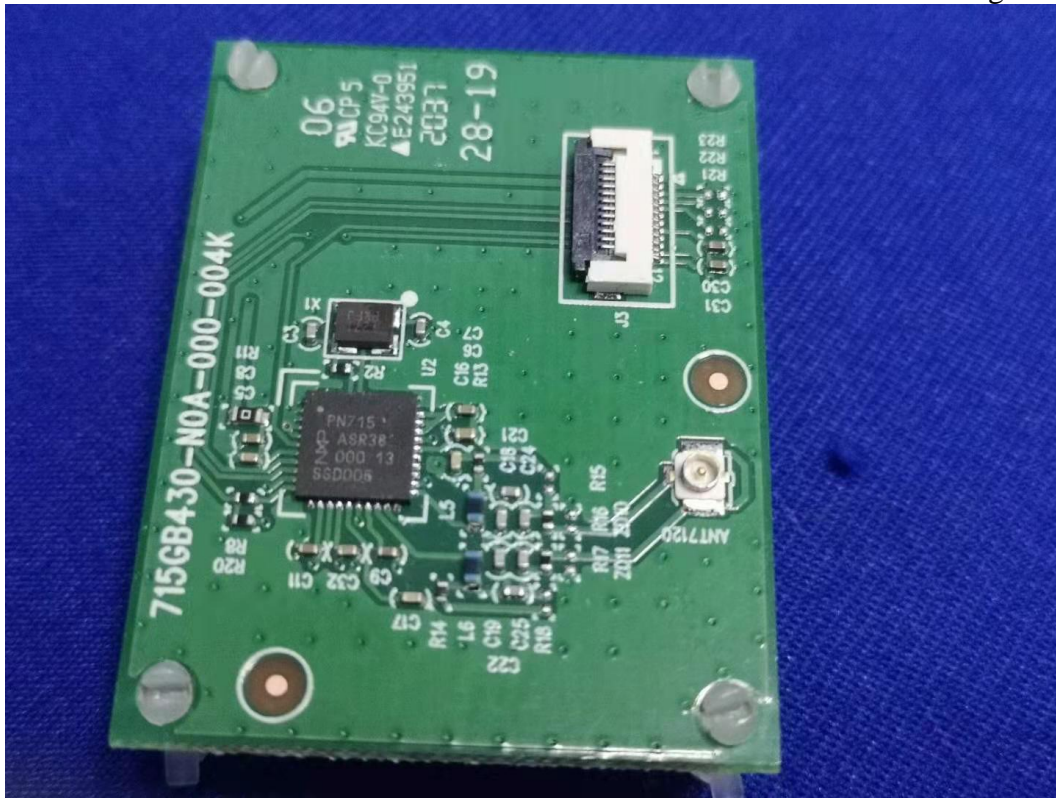


**Figure 20**  
Inside Configuration of the EUT

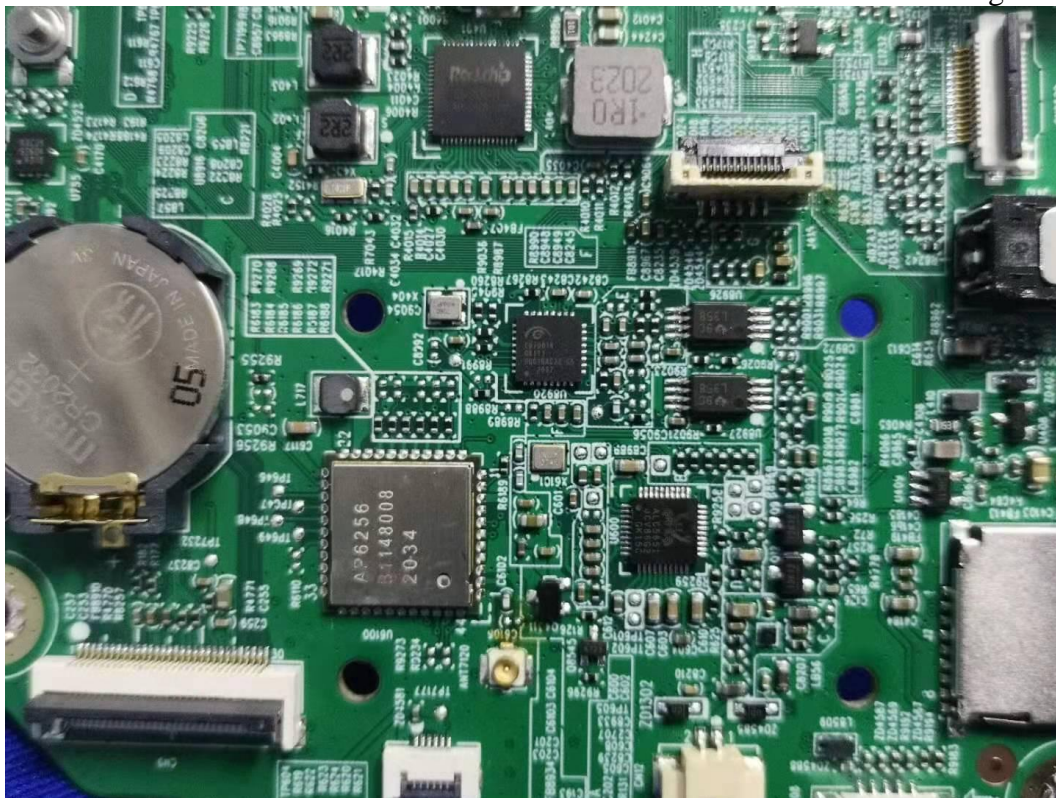

**Figure 21**  
Inside Configuration of the EUT

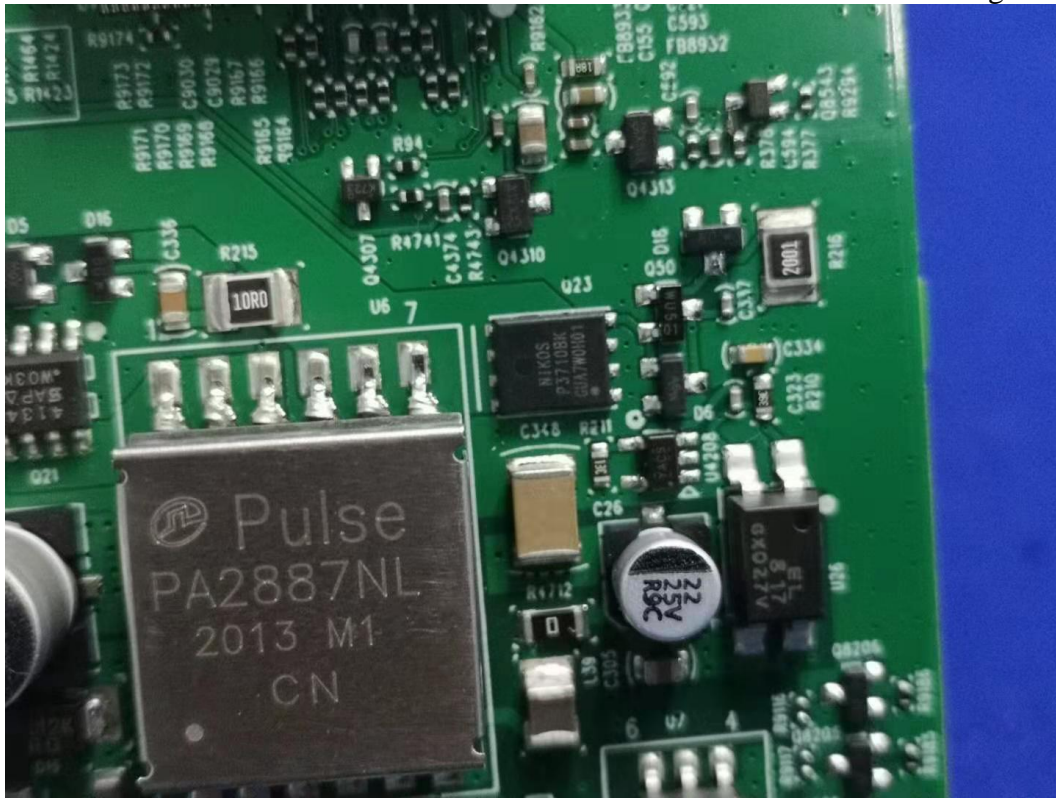


**Figure 22**  
Inside Configuration of the EUT

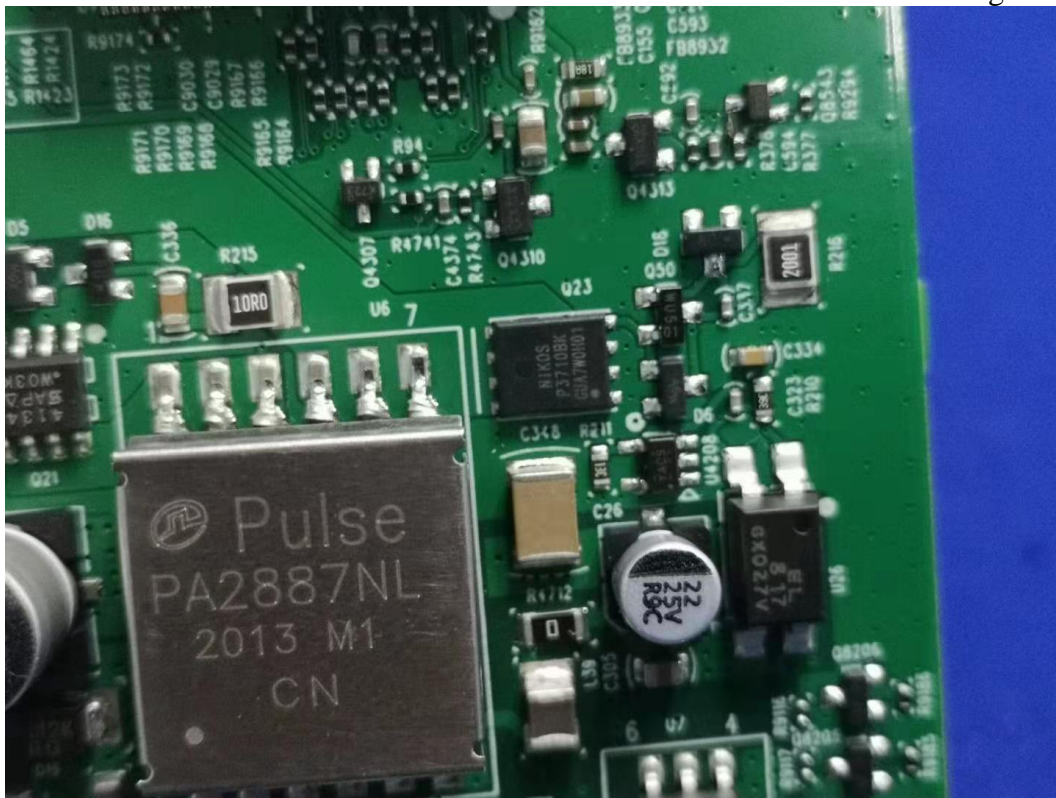






**Figure 25**  
Inside Configuration of the EUT

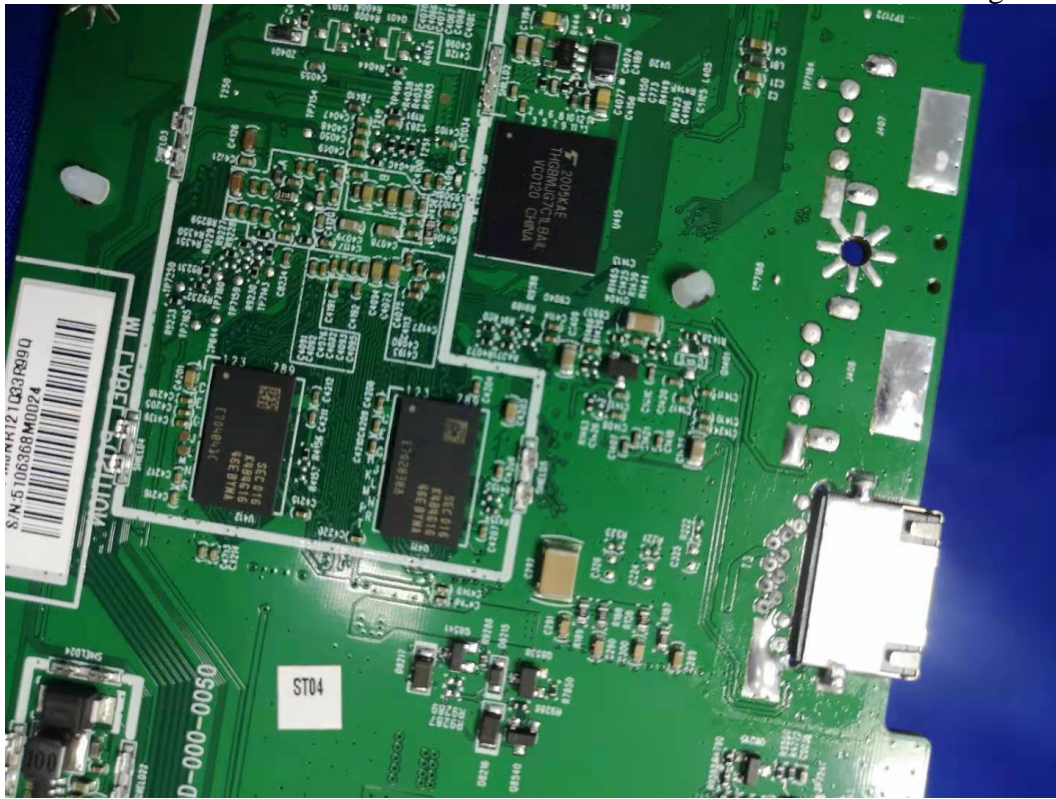

**Figure 26**  
Inside Configuration of the EUT

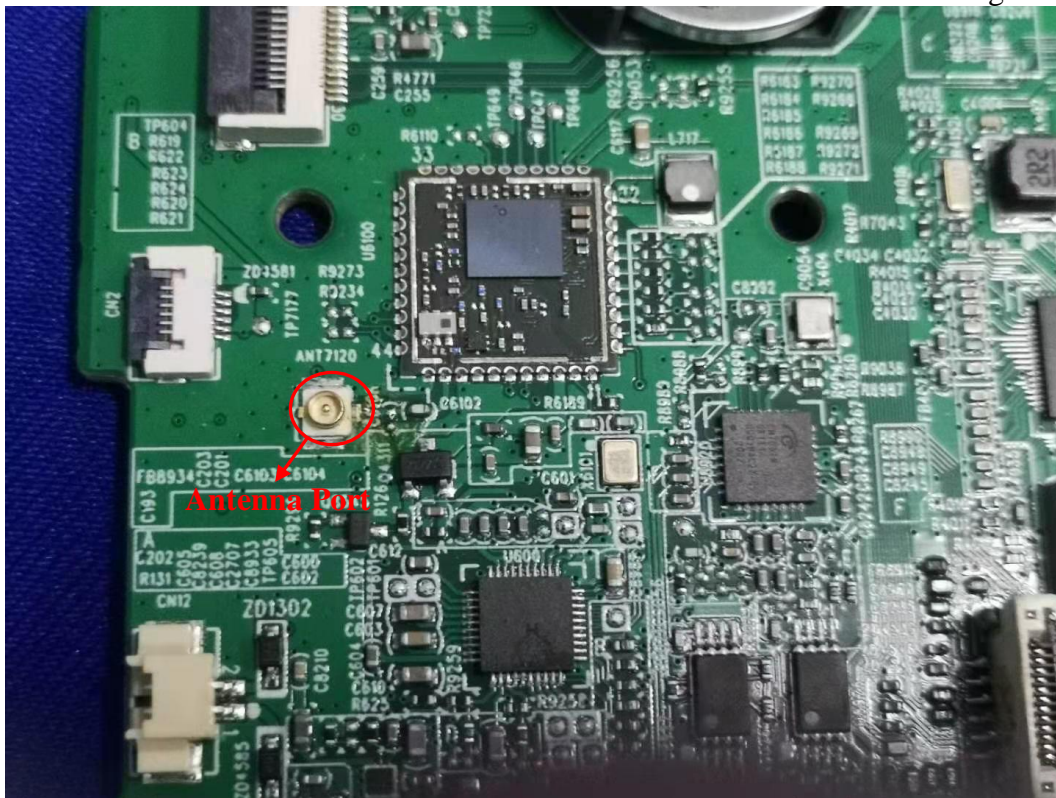

**Figure 27**  
Adapter



**Figure 28**  
Adapter



**Figure 29**  
Adapter



**Figure 30**  
Adapter

