

RF Energy Exposure Compliance

Your radio is designed and tested to comply with a number of national and international standards and guidelines (listed below) regarding human exposure to radio frequency electromagnetic energy. This radio complies with the IEEE and ICNIRP exposure limits for occupational/controlled RF exposure environment at operating duty factors of up to 50% transmitting and is authorized by the FCC for occupational use only. In terms of measuring RF energy for compliance with the FCC exposure guidelines, your radio radiates measurable RF energy only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode.

Your radio complies with the following of RF energy exposure standards and guidelines

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998

Safety Information

The following safety precautions shall always be observed during operation, service and repair of this equipment.

- This equipment shall be serviced by qualified technicians only.
- Do not modify the radio for any reason.
- Use only HYT supplied or approved antenna.
- Gain of antenna must not exceed 3.5dBi for VHF or 5.5dBi for UHF.
- Mobile antenna Installation: Install the mobile antenna at least 100cm (34 inches) away from your body, in accordance with the requirements of the antenna manufacturer/supplier.
- Transmit only when people inside and outside the vehicle are at least the minimum distance away from a properly installed, externally mounted antenna.
- Mobile antenna substitution: Don't substitute HYT supplied or approved antenna, or excessive radio frequency radiation will result. Please contact your dealer or the manufacturer for further instructions.
- Please make sure there's no stress on the antenna joint during transportation or installation.

- To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any area where posted notices instruct you to do so. Hospital or health facilities may be using equipment that is sensitive to external RF energy.
- For vehicles with an air bag, do not place a radio in the area over an air bag or in the air bag deployment area.
- Turn off your radio prior to entering any area with explosive and flammable materials.
- Do not expose the radio to direct sunlight over a long time, nor place it close to heating source.

■ Operation Guidelines

For vehicles equipped with electronic anti-skid braking systems, electronic ignition systems or electronic fuel injection systems, interferences may occur during radio transmission. If the foregoing electronic equipments are installed on your vehicle, please contact your dealer for further assistance to make sure that radio transmission will not interfere with these equipments.

For radio installation in vehicles fueled by LP gas with LP gas container within interior of the vehicles, the following precautions are recommended for personal safety.

1. Any space containing radio equipment shall be isolated by a seal from the space in which the LP gas container and its fittings are located.
2. Remote (outside) fitting connections shall be used.
3. Good ventilation is required for the container space.

■ Installation Guidelines

- Vehicle installation: The antenna can be mounted at the center of a vehicle metal roof or trunk lid if the minimum safe distance is observed.
- Do not mount the mobile radio overhead or on a sidewall unless you take special precautions.
- If the mobile radio is not properly installed, road shock could bump the radio loose, and the falling radio could, in some circumstances, cause serious injury to the driver or a passenger. In case of vehicle accidents, even when properly installed, the radio could break loose and become a dangerous projectile.

Preface

Thank you for purchasing HYT TM-628H Mobile Radio. This easy-to-use radio will deliver you secure, instant and reliable communication at peak efficiency.

To derive optimum performance from your radio, please read this manual and the supplied Safety Information Booklet carefully before use.

Icon Information

The following icons are available through this manual:



Caution: indicates situations that could cause damage to your radio.



Note: indicates tips that can help you make better use of your radio.

Copyright Information

HYT and Hytera are trademarks or registered trademarks of HYT in the PRC and other countries and/or areas. HYT retains the ownership of its trademarks and product names. All other trademarks and/or product names that may be used in this manual are properties of their respective owners.

The HYT product described in this manual may include HYT computer programs stored in memory or other media. Laws in the PRC and/or other countries or areas preserve for HYT exclusive rights for HYT computer programs. The purchase of this product shall not be deemed to grant, either directly or by implication, any rights to the purchaser with respect to HYT computer programs. Any HYT computer programs may not be copied, modified, distributed, decompiled, or reverse-engineered in any manner without the prior written consent of HYT.

Disclaimer

HYT endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without prior notice due to continuous technology development. No part of this manual may be copied, modified, translated, or distributed in any manner without the express written permission of HYT.

If you have any suggestions or would like to learn more details, please visit us at: <http://www.hyt.cn>.

Contents

Checking Items in the Package	5
Radio Overview	6
Front Panel.....	6
Rear Panel	7
Programmable Function Keys	7
Installation	9
Instructions.....	9
Installation Tools	9
Installation Steps.....	9
Status Indicators	11
LCD Icons	11
LED Indicator	12
Basic Operations	13
Turning the Radio On/Off	13
Adjusting the Volume	13
Selecting a Channel	13
Selecting a Zone	13
Receiving a Call	13
Transmitting a Call	14
Selecting the Power Level.....	14
BOT ID and EOT ID	14
Functions and Operations	15
Monitor	15
Scan	15
Busy Channel Lockout (BCL)	17
BCL Override	17
DTMF Call.....	17
Code Squelch.....	19
Off Hook Decode.....	20
Time-out Timer (TOT)	20
Emergency Call.....	21
Frequency Reverse.....	21
Talk Around.....	21
Selectable Squelch Level (SQL)	22
User Selectable CTCSS/CDCSS (UST).....	22
Public Address (PA)	22
Home Channel	23
Rental.....	23
Lone Worker.....	24
2-Tone Encode Select (TTS).....	24
Display Frequency.....	24
Display Mode	24
Voice Compandor.....	25
Scrambler	25

HDC1200	25
HDC2400™	26
Short Message	26
Troubleshooting	31
Care and Cleaning	31
Optional Accessories.....	32

Checking Items in the Package

Please unpack carefully and check that all items listed below are received. If any item is missing or damaged, please contact your dealer.



Palm Microphone



Microphone Hanger



Microphone Hanger Screws



Mounting Bracket Kit



Fuse



Vehicle Power Cord


Owner's Manual

Safety Information Booklet

Radio Unit


Radio Overview

Front Panel

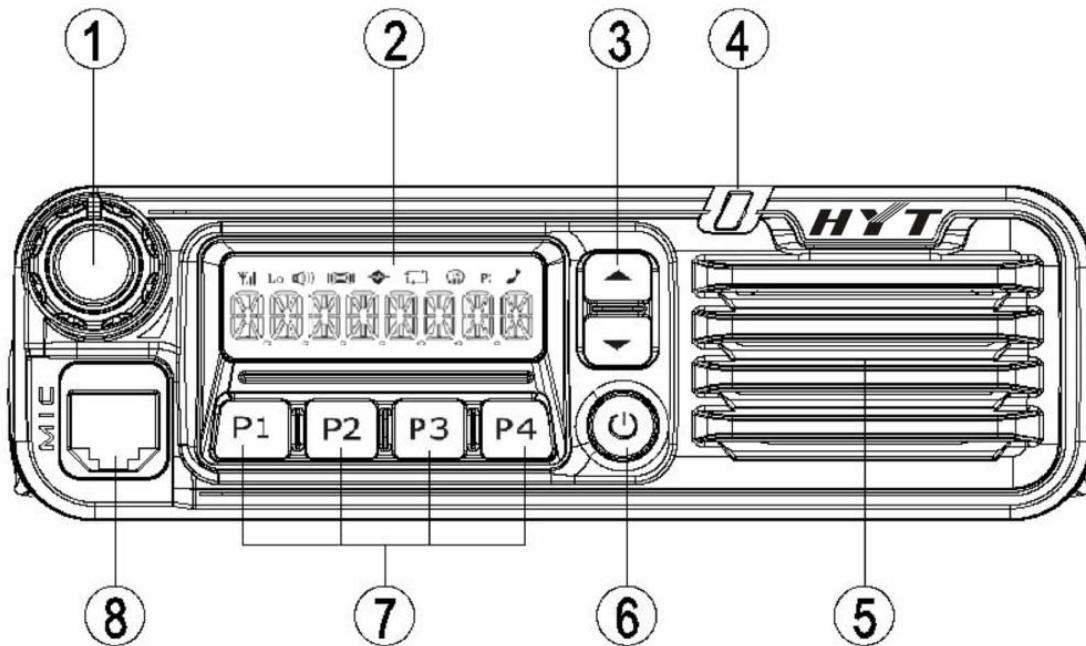

No.	Part Name	No.	Part Name
①	Volume Control Knob	②	LCD Display
③	Programmable Keys ▲/▼	④	LED Indicator
⑤	Speaker	⑥	Power On/Off Key
⑦	Programmable Keys P1-P4	⑧	Microphone Jack

Rear Panel

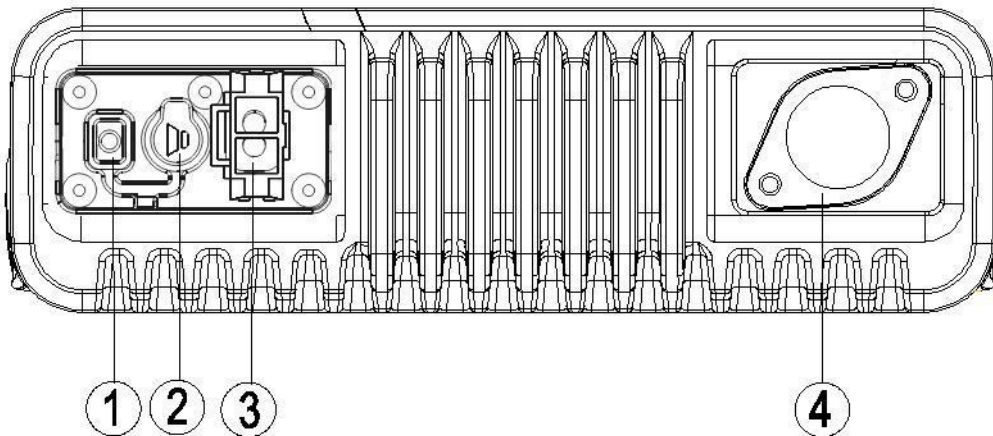

No.	Part Name	No.	Part Name
①	Audio Connector	②	External Speaker Jack
③	Power Inlet	④	Antenna Connector

Programmable Function Keys

For enhanced convenience, you may request your dealer to program the keys **P1**, **P2**, **P3**, **P4**, **▲** and **▼** as shortcuts to the functions listed below:

No.	Shortcut Keys	Description
1	CH Up (▲ by default)	To select a channel quickly
2	CH Down (▼ by default)	
3	Zone Up (P3 by default)	To select a zone quickly
4	Zone Down (P4 by default)	
5	MONI A	To adjust the condition for incoming signal match.
6	MONI B	
7	MONI C (P1 by default)	
8	MONI D	
9	Display Frequency	To display current frequency quickly
10	Display Mode	To switch display mode quickly
11	User Selectable Tone (UST)	To change the CTCSS frequency of current channel temporarily
12	2-Tone Select	To select 2-Tone code quickly
13	TX Power Select	To adjust power level through one button press
14	Scan (P2 by default)	To monitor the signals on the predefined channel

15	Add/Delete	To add or delete the scan channel in non-scan status
		To delete the nuisance channel temporarily in scan status
16	Frequency Reverse	To reverse the TX and RX frequencies, and the CTCSS/CDCSS encoding and decoding frequencies
17	Talk Around	To transmit with the RX frequency and CTCSS/CDCSS frequency
18	SEL SQL	To select the squelch level quickly
19	Home Channel	To switch to the home channel quickly
20	Public Address	To output the amplified audio signals
21	Scrambler	To safeguard the privacy of your talk through voice encryption
22	Compondor	To bring clearer voice under noisy environment
23	Emergency Call	To summon help in emergent situations
24	HDC	To select HDC call quickly
25	Lone Worker	To ensure the safety of lone workers
26	Whisper	To hear clearly even if the transmitting party speaks in low voice
27	Short Message	To quickly access the short message operation
28	Rental	To time the rental service
29	Aux A	To control the output from the port AUX A
30	Aux B	To control the output from the port AUX B
31	Transparent Transmit Mode	To enter the Transparent Transmit Mode quickly

Installation

Before you install the radio in a vehicle, be sure to read the following instructions carefully:

Instructions


- The radio operates with negative grounded power supply of **13.6 ± 15%V** only. Please check polarity and voltage of the power supply on vehicle before you install the radio.
- Please check how long the screws will extend from the bottom surface of radio, before you install the radio. Be sure to drill mounting hole with caution, to avoid damage of the vehicle wiring and parts.
- Please connect the supplied antenna and power cord to the radio, before you install the radio in the bracket.
- Install the radio with HYT supplied mounting bracket, to avoid radio loose in case of accidents. The loose radio may cause bodily injury.
- Install the radio in a location where it's easy to reach the front panel controls.
- Please determine the location of mounting hole before drilling.
- Please make sure there's sufficient space at back of the radio for wiring.
- When the fuse for DC power cord needs replacement, it must be replaced by a fuse with the same specification.

Installation Tools

- Electric drill: $\phi 6\text{mm}$ or above
- Cross head screwdriver
- Hex socket sleeve (used for mounting 4.8 × 20 mm self-tapping screw)

Installation Steps

1. Install the bracket in a location where it's easy to operate the radio.
2. Connect accessories such as antenna and power cord to the radio.
3. Slide the radio into the mounting bracket and secure it using the locking knobs.
4. Install the microphone hanger in a location where it's easy to reach the microphone.
5. Plug the palm microphone into the microphone jack on the front panel, and place it on the hanger when you do not use it.

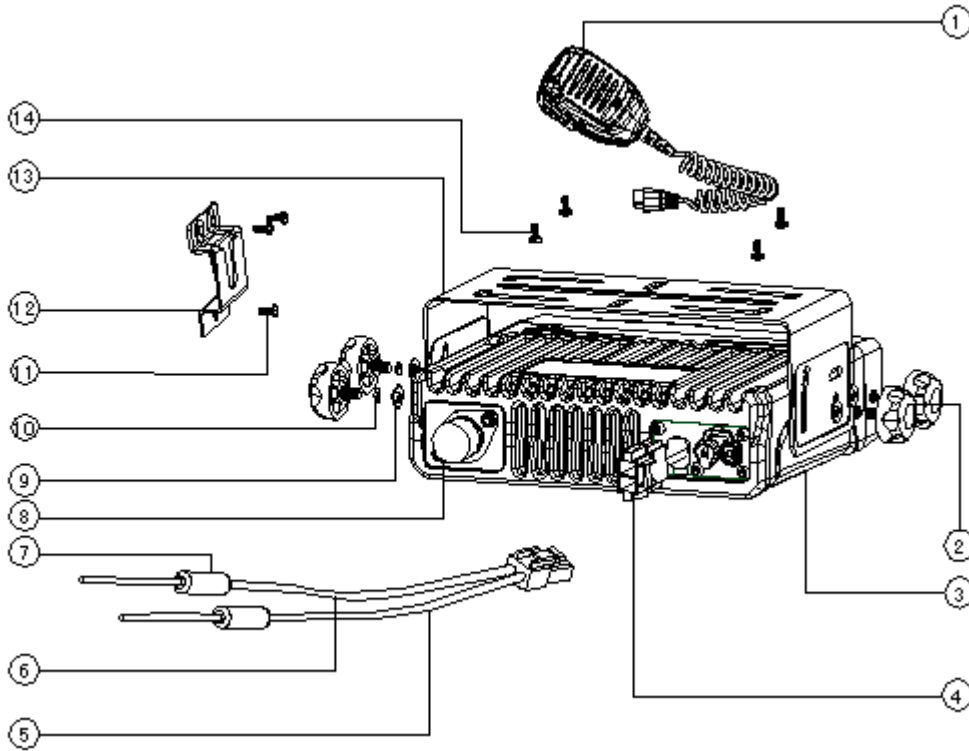


No.	Part Name	No.	Part Name
①	Palm Microphone	②	Adjust Knobs
③	Radio unit	④	Power Inlet
⑤	Black Power Cord	⑥	Red Power Cord
⑦	Fuses	⑧	Antenna Connector
⑨	Flat Washers	⑩	Spring Washers
⑪	4 x 16 mm Self-tapping Screws	⑫	Microphone Hanger
13	Mounting Bracket	14	4.8 x 20 mm Self-tapping Screws

Status Indicators


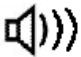

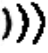




LCD Icons

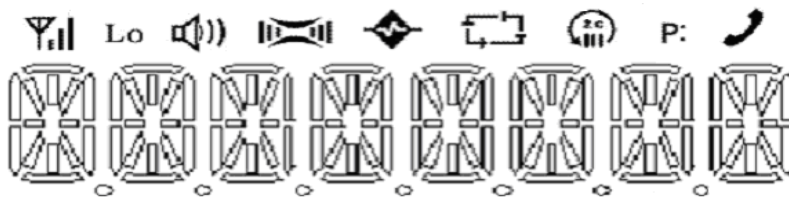


The LCD of your radio displays the radio status. The following are the icons that appear on the radio's display.

■ LCD panel



■ Status Icons

Indicator	Description
	Displays CH number/name, zone number/name, DTMF number, frequency, menu and options, etc.
Lo	Indicates low power output.
	Press the Monitor key: 1. The  icon is displayed when CTCSS/CDCSS and 2-Tone decoding is off. 2. The  icon is displayed when the speaker is unmuted.
	Appears when the radio begins to scan.
	Appears when the radio is transmitting a selected call.
	C indicates that the current channel is in the scan list. Z indicates multi zone scan.
	Appears when the Scrambler feature is enabled.

	Appears when the Compressor feature is enabled.
	Appears when the current channel is already in use.
	Indicates the current channel is the priority channel. P• indicates priority channel 1, P. indicates priority channel 2, P: indicates priority channels 1 and 2.

LED Indicator

The LED indicator will help you easily identify current radio status.

LED Indicator	Radio Status
LED glows red	Transmitting
LED glows green	Receiving
LED flashes orange	After the 2-Tone, HDC1200 or HDC2400™ or DTMF signaling is decoded, and during the auto reset time.
	After the 2-Tone, HDC1200, HDC2400™ or DTMF signaling is transmitted, and during the auto reset time.

Basic Operations

Turning the Radio On/Off

Press the **Power On/Off** key to turn on the radio.

Press and hold down the **Power On/Off** key for about 1 second to turn off the radio.

Adjusting the Volume

Turn the **Volume Control** knob clockwise to increase the volume, or counter-clockwise to decrease the volume.



Note: During adjusting, if the radio is programmed with CTCSS/CDCSS or 2-Tone, HDC1200, HDC2400™ Signaling squelch, noise will not be heard from local speaker even though you turn the **Volume Control** knob fully clockwise.

Selecting a Channel

The **▲/▼** and **P1-P4** function keys are programmable by your dealer to select a channel. The RX/TX frequency on each channel is set by your dealer.

Press the programmed **CH Up** key to select a higher numbered channel; press the programmed **CH Down** key to select a lower numbered channel.

Selecting a Zone

The **▲/▼** and **P1-P4** function keys are programmable by your dealer to select a zone. The RX/TX frequency on each channel is set by your dealer.

Press the programmed **Zone Up** key to select a higher numbered zone; press the programmed **Zone Down** key to select a lower numbered zone.

Receiving a Call

If CTCSS/CDCSS, 2-Tone, HDC1200 or HDC2400™ is set on the current channel by your dealer, you can receive calls with matched signaling only. If CTCSS/CDCSS, 2-Tone, HDC1200 or HDC2400™ is not set, you can hear from all the users on the same channel.

Transmitting a Call

When transmitting a call, please follow steps below:

1. Hold down the **PTT** key on the microphone.
2. Speak into the microphone. The red LED lights during calling.
3. Release the **PTT** key to return to the RX mode.
4. When the transmission ends, put the microphone on hook.

Selecting the Power Level

If the current channel is programmed with high power by your dealer, the power output toggles between high and low upon each press of the programmed **Tx Power Select** key. The **LO** icon is displayed on LCD to indicate low power.

A lower power level saves battery and reduces the possibility of interference. Use the high power setting only when necessary.



Note:

- If the current channel is programmed with lower power, any **Tx Power Select** key press will prompt an error tone, and the power level will not change.
- If you switch to low power on a channel that was set with high power, this configuration will work on all other channels that were set with high power.

BOT ID and EOT ID

Your dealer may configure whether to transmit Connect ID (BOT ID) and Disconnect ID (EOT ID), when connecting or disconnecting a repeater or telephone system. The following modes are programmable:

1. Press the **PTT** key, and the BOT ID is transmitted.
Release the **PTT** key, and the EOT ID is transmitted. .
2. Press the * key while holding down the **PTT**, and the BOT ID is transmitted.
Press the # key while holding down the **PTT**, and the EOT ID is transmitted.

Functions and Operations

Monitor

If the Monitor function is set by your dealer, press the programmed **Monitor** key in Rx mode to get aware of the activities on the current channel.

The **Monitor** key is programmable with one of the following four operating modes by your dealer:

1. Carrier Squelch-Momentary

Hold down the **Monitor** key to open CTCSS/CDCSS/2-Tone Signaling squelch, and release the key to close the Signaling squelch.

2. Carrier Squelch-Toggle

Press the **Monitor** key to open CTCSS/CDCSS/2-Tone Signaling squelch. Press again to close the Signaling squelch.

3. Squelch Off-Momentary

Hold down the **Monitor** key to open carrier squelch, and release the key to close the carrier squelch.

4. Squelch Off-Toggle

Press the **Monitor** key to open carrier squelch. Press again to close the carrier squelch.

Scan

■ Scan Type

1. Single Zone Scan


The radio scans all the channels added into the scan list on the current zone.

2. Multi Zone Scan

Multiple zones added into a multi scan list can be scanned. All channels within the zones added into the scan list can be scanned.

■ Scan Start

1. Add one or more non-priority channels into the scan list.

2. Press the programmed **Channel Scan** key to initiate scan from the current channel (please scan the channels one by one in accordance with the list). The LCD displays SCAN (-SCAN- for multi zone scan) and the  icon.

■ Scan Cease

The scanning pauses or ceases upon the following:

1. Press the programmed **Channel Scan** key and cease the scanning, so that the radio may exit the scan mode.
2. Activate the Monitor function.
3. The radio receives the carriers which satisfy radio unmute condition

■ Scan Resume

If the scanning pauses on an active channel, it will resume according to the scan resume mode. The scan resume mode can be programmed by your dealer with Carrier operated scan or Time operated scan.

1. Time Operated Scan

Scanning remains on an active channel for a programmed time period (programmable by your dealer). Once the timer expires, the radio will begin scanning other channels even if the active channel is still busy.

2. Carrier operated scan

If carriers are detected during the scan sequence, scanning will remain on the active channel until there is no activity.

■ Dual Priority Scan

If dual priority channels are programmed by your dealer, the radio will check the dual priority channels for activity regularly on the non-priority channels. If carriers are detected on a priority channel, the radio will immediately switch to this active priority channel.

LCD displays the "P•" icon to indicate the Priority Channel 1, the "P." icon to indicate the Priority Channel 2, and the "P:" icon to indicate the channel is programmed with Priority Channel 1 and 2 simultaneously.

■ Scan Add/Delete

If the Scan Add/Delete feature is enabled by your dealer, the current channel can be added to/deleted from the scan list in the following procedures:

1. Select the channel to be added/deleted in the non-scan mode.
2. The current channel toggles between Add/Delete status upon each press of the programmed **Scan Add/Delete** key.



Note: Only channels added into the scan list can be scanned.

■ Nuisance Channel Delete

Channels in the scan list are allowed to be temporarily deleted

When the scan pauses on an unwanted channel, such as a nuisance channel, press the programmed **Add/Del Scan** key to temporarily delete the channel from the scan list, and then the scan reinitiates immediately.



Note: The temporarily deleted channel will recover its settings prior to the scan after the radio exits the scan mode.

■ Revert Channel

If you press the **PTT** key, the scan will be turned off and the radio will switch to the Revert Channel to transmit. This feature is programmable by your dealer.

■ Off-Hook Scan

If this feature is enabled by your dealer, the radio will be allowed to scan no matter whether the palm microphone is in an off hook position or not. Otherwise, the scan will be disabled with an off-hook palm microphone.

Busy Channel Lockout (BCL)

The feature helps prevent transmission on a channel that is already in use, and it can be enabled/disabled by your dealer. If you press the **PTT** key on a busy channel, transmission will be inhibited and an alert tone will sound. If the **PTT** key is released, the alert tone will cease and the radio will return to Rx mode. When the channel is free, press the **PTT** key again to transmit.

BCL Override

If this feature is enabled, you can override the BCL feature to transmit on a busy channel. If you press the **PTT** key, a BCL alarm will be heard; press the **PTT** key again within 0.5 seconds to override the BCL feature and transmit on the busy channel.

DTMF Call

■ Manual Dial

Hold down the **PTT** key, and then press any key on the DTMF keypad of the microphone to transmit the corresponding DTMF signal. Meanwhile, you may hear relevant tones.

Release the **PTT** key to remain transmission for 2 seconds (programmable by your dealer), and then press another numeric key within 2 seconds to continue the transmission.

■ Keypad Auto PTT

If this feature is enabled by your dealer, press any numeric key to transmit DTMF signal without **PTT** key press.

■ Store & Send

When this feature is enabled, enter a pre-stored DTMF number (up to 16 digits) in Rx mode, and then press the **PTT** key on the microphone to initiate a call; simultaneously, the dialed DTMF number scrolls across the LCD, and the corresponding DTMF tone can be heard.



Note:

- If you have dialed a wrong number or you want to cancel the dialing, you just simply press any key on the front panel other than the **Power On/Off** key to exit.
- “D” can be programmed by your dealer as a blank tone, that is, if you enter “D”, the tone will not be heard during transmission, but there will be a delay in time, which is programmable by your dealer.

■ DTMF Speed

The DTMF number is programmable by your dealer.

The feature is designed to reduce decoding errors by providing a fixed interval between digits. It is 10 DTMF numbers per second by default.

■ Store the DTMF Number

You are allowed to store a DTMF number (up to 16 digits) in 32 Speed Dial memories respectively as follows:

1. Press the **#** key on the microphone keypad, and the LCD displays D -----.
2. Enter the desired number (range from 0~9, A~F) via the microphone keypad. If you want to enter A, B, C, D, E and F, hold down the **PTT** key and then enter 2, 5, 8, 0, * and # respectively.
3. Press the **#** key, and “D” on the LCD is followed by a symbol “--”, which indicates the location to enter memory numbers.
4. Enter the desired memory number (01~32).
5. Press the **#** key again on the microphone, and then the entered number is stored into its corresponding memory.

If you have dialed a wrong number or you want to cancel the dialing, please press any key on the front panel other than the **Power On/Off** key to exit.

■ Confirm the Stored DTMF Numbers

1. Press the * key on the microphone keypad, and then the LCD displays A --.
2. Enter the memory number (01~32), and the LCD displays the stored number or its alias.
3. Press any key other than the **PTT**, and the LCD resumes its initial display.

■ Auto Dial

1. Press the * key on the microphone keypad, and then the LCD displays A --.
2. Enter the memory number (01~32), the LCD displays the stored number or its alias.
3. Press the **PTT** key, and then the number is transmitted.

■ Clear Stored DTMF Numbers

1. Press the # key on the microphone keypad, and then the LCD displays D -----.
2. Press the # key again on the microphone keypad, and then the LCD displays Clear --.
3. Enter the memory number to be cleared (01~32), and press any key other than **0~9** keys to cancel this operation.
4. Press the # key on the microphone keypad, and then the stored numbers are cleared.

■ Redial

1. Press the * key on the microphone keypad, and the LCD displays A --.
2. Press **0** twice, and the last dialed number (up to 16 digits) is dialed and displayed on LCD.
3. Press the **PTT** key, and the number is transmitted.




Note: The redial memory can be cleared by powering off the radio.

Code Squelch

This feature can be enabled/disabled by your dealer. If it is enabled, the preset 2-Tone will control the radio mute/unmute. The radio will not unmute until matched signaling is received.

■ Receive


1. Radio is unmuted when the matched 2-Tone signaling (programmed by your dealer) is received, and the user can hear from the transmitter without any other operation.
2. The  icon flashes on the LCD, and the LED flashes orange.
3. Radio is muted upon the programmed **Monitor** key press, or no signal is received within the preset time period.
4. If the alert tone is enabled, radio will emit alert tone when match signaling is received. If the Transpond feature is enabled, the radio will transpond a tone to the calling radio. However, radio will not

transpond if a zone call is received.

■ Transmit

1. Hold down the **PTT** key
2. During encoding, the LED lights red.

Please refer to the **TTS** key for 2-Tone encoding.

3. Upon release the **PTT** key, the signaling squelch is disabled; the  icon flashes on the LCD, and LED flashes orange. The LED lights green while signal is received, and flash orange if signal off.
4. If the programmed **Monitor** key is pressed, or no signal is received within the preset time period, the signaling squelch is enabled.

Off Hook Decode

If this feature is enabled by your dealer, CTCSS/CDCSS signaling is active no matter whether the palm microphone is in an off hook position or not. If the feature is disabled, CTCSS/CDCSS signaling is disabled with an off-hook palm microphone is in the off hook condition.

Time-out Timer (TOT)

■ Time-out Timer (TOT)

This feature is able to prevent any single user from using a channel for an extended period, and to protect the radio against damage caused by prolonged transmission.

If the preset time (off, 15~1200 seconds) expires, the radio will automatically terminate transmission and keep beeping. Beeps will not stop unless the **PTT** key is released.

The TOT default is 180 seconds, which can fully satisfy common users. Any change should be permitted by professional technicians.

■ TOT Pre-alert

With a TOT Pre-alert timer, the radio can generate pre-alert tone at the programmed time (1~10 seconds before the TOT timer expires).

■ TOT Re-key Time

The radio features a TOT Re-key timer. If the transmission is terminated due to expiration of the TOT timer, the TOT Re-key timer will be activated. The transmission will be inhibited if the **PTT** key is pressed before the expiration of TOT Re-key timer (programmable by your dealer as Off, 1~60 seconds).

■ TOT Reset Time

The TOT Reset timer is activated upon release of the **PTT** key. And the TOT timer will not be reset until the TOT Reset timer expires. Press the **PTT** key before the TOT Reset timer expires, and the TOT timer continues to countdown.

The TOT Reset Time (Off, 1~15 seconds) is programmable by your dealer.

Emergency Call


Hold down the **Emergency Call** key (the exact time to hold down the key can be programmable), and the radio will enter the Emergency Call mode and switch to the preset Emergency Zone/Channel. The radio will transmit within a preset time period and then receive within a preset time period circularly.

Press and hold down the **Emergency Call** key (the exact time to hold down the key can be programmable), and the radio will return to its original channel.

Frequency Reverse

If communications between radios are disrupted due to a long distance away from the repeater, the Frequency Reverse function can be applied to re-establish communications with other radios. When this function is activated, the Tx and Rx frequencies will be reversed. The preset CTCSS/CDCSS encoding and decoding processes will also be reversed.

Press the **Frequency Reverse** key (programmable function key) to toggle the Frequency Reverse function ON or OFF.

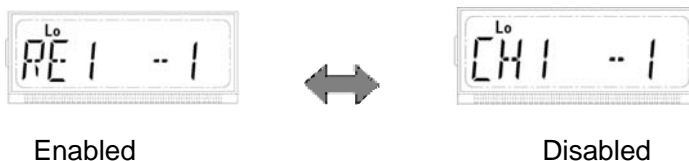

Talk Around

If the Talk Around feature is enabled, the radio will transmit at its Rx frequency, and the CTCSS/CDCSS signals will be encoded by decoding signals.

Press the **Talk Around** key (programmable function key) to toggle the Talk Around function ON or OFF.



Enabled

Disabled

Selectable Squelch Level (SQL)

1. Press the **SQL** key (programmable function key), and the LCD displays the current squelch level as shown below:



2. Select the desired squelch level via the programmable function key **▲/▼**.
3. Press any key of **P1-P4** to save the selected squelch level. The LCD resumes its initial display.



Note: High squelch level may cause the radio to ignore weak signals; while low squelch level may cause noise or other unwanted interference.

User Selectable CTCSS/CDCSS (UST)

If the UST feature is enabled by your dealer, the user can temporarily change the CTCSS/CDCSS codes preset on the current channel. Operations are as follows:

1. Select a desired channel.
2. Press the programmed **UST** key, and the radio enters the UST mode.
3. Use the **▲/▼** keys to make a selection from the preset UST codes (the newly selected CTCSS/CDCSS code is valid in the UST mode only), then the CTCSS/CDCSS code on the current channel is set as the selected UST code.
4. Press the **UST** key again to exit the UST mode, and then the LCD resumes its initial display.



Note: The UST code will be automatically memorized after channel switch or power-off if the UST BackUp function is enabled. Otherwise, no codes will be memorized.

Public Address (PA)

The PA feature amplifies audio inputted from the microphone, and the audio can be heard from the external speaker.

1. Press the programmed **PA** to activate the PA feature, and then the LCD displays PA. Press **PA** again to disable the PA feature, and then the radio returns to normal user mode.
2. In PA mode, the radio is unable to transmit and receive.

3. Speak into the microphone after **PTT** is held down, the PA process initiates, and the LCD displays PA ON. When the PA process initiates in PA mode, you can adjust the volume via the volume control knob.
4. Release the **PTT** key to end the PA process, then the radio returns to the PA mode, and the LCD displays PA.



Note: When the PA system is operating, the optional PA accessories and external speaker must be installed by your dealer.

Home Channel

Press the programmed **Home Channel** key, and the radio will promptly go to the programmed home channel.

When dual home channels are set, press the programmed **Home Channel** key to promptly go to Home Channel 1, press again to promptly go to Home Channel 2, and press for the third time to return to the original channel.

Rental

Display Format:

Press the **Rental** key (programmable function key), and the LCD will display the remaining rental time by 2 time units such as “13D 21H”. The LCD will display the hour and minute such as “14H 30M” if the remaining time is less than one day, or the minutes only such as “30MIN “ if less than an hour.

Auto Reminder:

1. Remind you of the remaining rental time every time the radio is powered on (last for 5 seconds).
2. Remind you every 20 minutes if the remaining rental time is less than one hour. (with displayed remaining rental time and beeps for 5 seconds)
3. Remain the Remind status during the last minute of the rental time (with displayed EXPIRING and beeps).
4. An alert tone will be heard during the last minute of the rental time. Once the time expires, the LCD displays EXPIRED, then the radio will be disabled to transmit or receive with an invalid keypad.

Lone Worker

When this function is enabled, an alert tone will sound if the preset time elapses. Then the user must press any key to indicate that he/she is safe, otherwise the emergency procedure will be activated. This feature provides an added security and safety feature for individuals who work remotely from their team.

Operations are detailed as follows:

1. Upon press of the **Lone Worker** function key, the LCD will display LONE ON, and the Lone Worker function will be activated.
2. If no key is pressed after the preset time, the radio will continuously sound the Lone Worker alert tone during the preset time, and then enter the emergency mode.
3. If there is any key press before the radio enters the emergency mode, the Lone Worker timer will be reset and the Lone Worker function will be re-activated.
4. If the **Lone Worker** key is pressed, the LCD will display LONE OFF, and the Lone Worker function will be disabled.

2-Tone Encode Select (TTS)

1. Press the programmed **TTS** key, the LCD displays its preset 2-Tone number or alias. The LCD scrolls the alias if it exceeds 8 digits.
2. Press ▲/ ▼ to select 2-Tone number (01~32) or alias.
3. Holding down **PTT** to transmit the selected code.
4. Upon release of **PTT**, the signaling squelch is disabled and the LED flashes orange. The LED lights green when the signal is received, and flashes orange if the signal disappears.
5. If the programmed **Monitor** key is pressed, or no signal is received within the preset time period, the signaling squelch will be enabled.

Display Frequency


Upon press of the programmed **Display Frequency** key, the LCD displays the frequency of the current channel.

Display Mode


Upon press of the programmed **Display Mode** key, the radio toggles among the following 5 display modes:

1. Channel alias.
2. Zone number followed by channel number, such as “1 –CH 1”.
3. Zone alias.
4. Channel frequency.
5. Channel number followed by zone number, such as “CH 1– 1”.

Voice Compandor

Press the programmed **Voice Compandor** key to toggle the voice Compandor feature ON or OFF. When the feature is enabled, the LCD displays the  icon.

Scrambler

Press the programmed **Scrambler** key to toggle the Scrambler feature ON or OFF. When the feature is enabled, the LCD displays the  icon.



Note: The emphasis/de-emphasis feature is disabled when the Scrambler is ON, and enabled when the Scrambler is OFF.

HDC1200

HDC call list select (HDC List)

1. Press the **HDC Call Select** key (Programmable function key) and the preset number or alias in the HDC list will be displayed on the LCD.
2. Press **▲/▼** to make an selection from the preset options in the HDC call menu, and then press **P4** to access the options.
3. Press **PTT** or **P4** to transmit the call.

The HDC signaling can achieve selective call (individual call, zone call, fleet call and broadcast), call alert and system functions (Stun, Revive and Safety Check), etc.

System call features the following functions:

Stun----permits an authorized radio to disable another radio from a remote place, making it capable of receive only.

Revive----permits an authorized radio to revive a stunned or killed radio from a remote place.

Safety Check----permits the dispatch center or an authorized radio to transmit the Safety Check

message. The receiver radio will reply with a message automatically upon receipt of the Safety Check message.

HDC2400™

HDC call list select (HDC List)

1. Press the **HDC Call Select** key (Programmable function key) and the preset number or alias in the HDC list will be displayed on the LCD.
2. Press **▲/▼** to make an selection from the preset options in the HDC call menu, and then press **P4** to access the options.
3. Press **PTT** or **P4** to transmit the call.

The HDC signaling can achieve selective call (individual call, zone call, fleet call and broadcast), call alert and system functions (Stun, Revive and Safety Check)), etc.

System call features the following functions:

Stun----permits an authorized radio to disable another radio from a remote place, making it capable of receive only.

Revive----permits an authorized radio to revive a stunned or killed radio from a remote place.

Safety Check----permits the dispatch center or an authorized radio to transmit the safety Check message. The receiver radio will reply with a message automatically upon receipt of the Safety Check message.

Short Message

The short message function is based on HDC2400™ technology platform. Thus the optional signaling must be set to HDC2400™ on the current channel for both the transmitting and receiving radios.


The short message function is operated through multi-level menu, which can realize the function of Edit, Save, Read, Send, Protect and Delete of short message. Press the **Message** key (programmable function key) in user mode to enter the short message menu.

The short message inbox can save up to 32 short messages, with each containing up to 48 alphanumeric characters.

The short message outbox can save up to 8 short messages, with each containing up to 48 alphanumeric characters.

The radio supports up to 32 fixed short messages, with each containing up to 31 alphanumeric characters.

The general operations of short message are shown in the following flowchart:

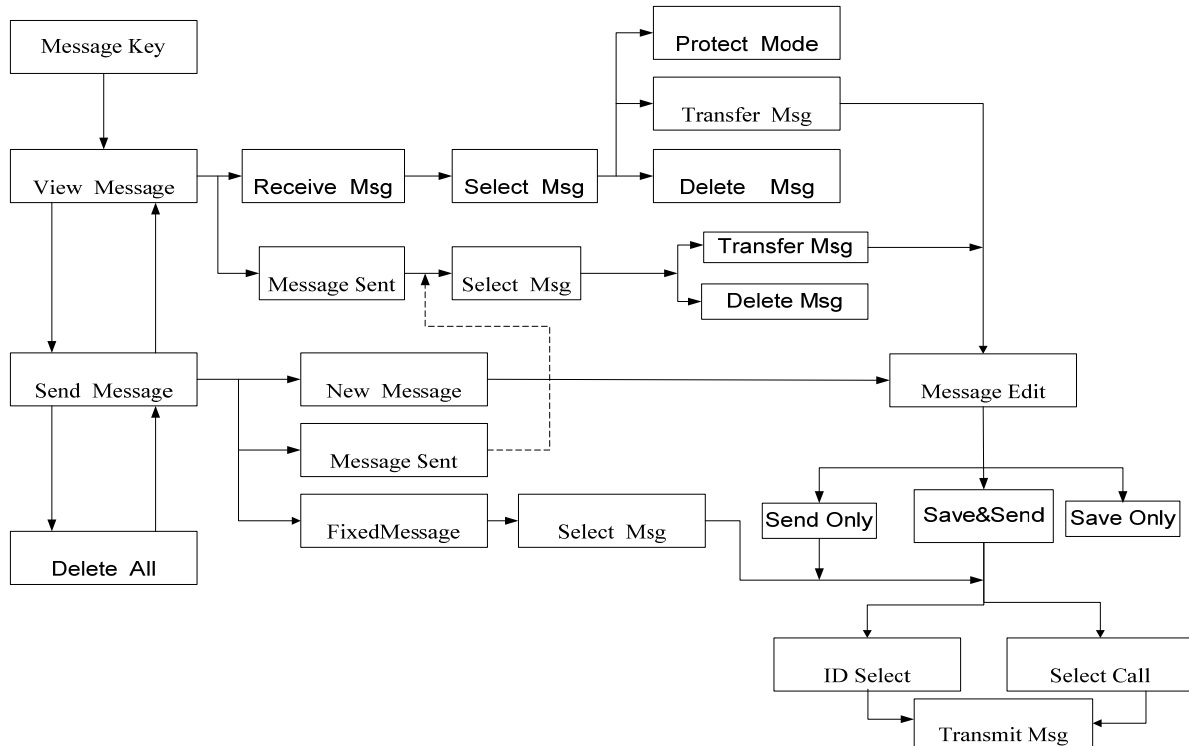

Menu operations are as follows:

- 1) Press **P4** to confirm;
- 2) Press **P1** to back to the previous menu;
- 3) Press **▲/▼** to perform menu selections.

Read A Short Message

If the alert tone or short message icon is set, the radio will give the preset alert when a short message is received. (At this time, press the **Message** key to read the received message.)

Send and Delete A Short Message

When SEND MSG is selected from the main menu, three options are available:

- 1) Create a message: the LCD will display NEW MSG.
- 2) Sent a message: the LCD will display MSG SEND.
- 3) Fixed message: the LCD will display FIXEDMSG.

1. Send A Newly Created Short Message

- 1) Select a zone and a channel.
- 2) Press the **Message** key (programmable function key) to access the short message menu, and then select the SEND MSG option.

- 3) Select the NEW MSG option.
- 4) Input the message you want to send. (See Note 1.)
- 5) Select SENDONLY, SENDSAVE and SAVEONLY.
If SENDONLY or SENDSAVE is selected, go with the following steps:
- 6) Choose to send to individual / group etc.
- 7) Use ▲/▼ to input the receiver's ID (Individual / Group, etc). (See Note 1.)
The user may also press **P4** to access the ID menu without inputting the ID.
- 8) Press **P4** or **PTT** to send the selected message.

2. Send and Delete A Sent Short Message

- 1) Select a zone and a channel.
- 2) Press the **Message** key (programmable function key) to access the short message menu, and then select the SEND MSG option.
- 3) Select the MSG SEND option.
- 4) Use ▲/▼ to select the message you want to send. (See Note 2.)
- 5) Select TRANSFER or DELETE.
Select DELETE to delete the selected short message;
Select TRANSFER to go with the following steps:
- 6) Choose to send to individual/group, etc.
- 7) Use ▲/▼ to input the receiver's ID (Individual / Group, etc). (See Note 1.)
The user may also press **P4** to access the ID menu without inputting ID.
- 8) Press **P4** or **PTT** to send the selected message.

3. Send A Fixed Short Message:

- 1) Select a zone and a channel.
- 2) Press the **Message** key (programmable function key) to access the short message menu, and then select the SEND MSG option.
- 3) Select the FIXEDMSG option.
- 4) Choose the fixed message you want to send. (See Note 2.)
- 5) Choose to send to individual/group, etc.
- 6) Use ▲/▼ to input the receiver's ID (Individual/Group, etc). (See Note 1.)

The user may also press **P4** to access the ID menu without inputting ID.

- 7) Press **P4** or **PTT** to send the message.

Read and Delete A Short Message

When VIEW MSG is selected from the menu, two options are available:

- 1) Read the received short message, the LCD will display RECEIVED.
- 2) Read the sent short message, the LCD will display MSG SEND.

1. Read and Delete A Short Message from the Inbox

- 1) Select a zone and a channel.
- 2) Press the **Message** key (programmable function key) to access the short message menu, and then select the VIEW MSG option.
- 3) Select the RECEIVED option.
- 4) Use ▲/▼ to select the ID of the short message you want to read.
- 5) Use ▲/▼ to select the desired short message. (See Note 1.)
- 6) Select PROTECT, TRANSFER and DELETE. (See Note 3).

Select DELETE to delete the selected message.

Select TRANSFER to go with the following steps:

- 7) Choose to send to individual / group, etc.
- 8) Use ▲/▼ to input the receiver's ID (Individual / Group, etc). (See Note 1.)
The user may also press **P4** to access the ID menu without inputting ID.
- 9) Press **P4** or **PTT** to send the message.

2. Read and Delete A Short Message from the Outbox:

- 1) Select a zone and a channel.
- 2) Press the **Message** key (programmable function key) to access the short message menu, and then select the VIEW MSG option.
- 3) Select the MSG SEND message.
- 4) Use ▲/▼ to select the short message you want to read. (See Note 2.)
- 5) Select TRANSFER or DELETE option.

Select DELETE to delete the selected message.

Select TRANSFER to go with steps 7)~9) described in *Read and Delete A Short Message from*

the Inbox.

Delete All the Received Messages

When DEL ALL is selected from the menu, all the received messages except protected ones will be deleted upon press of **P4**.

- 1) Press the **Message** key (programmable function key) to access the short message menu, and then select the DEL ALL option.
- 2) Press **P4** to delete all the received messages.



Note:

1. Input content and ID of the short message through the following keys: **P1**: to delete all, **P2**: to switch between entry methods, **P3**: to move the cursor leftward, **P4**: to move the cursor rightward with the first press, and confirm the entry with a second press.
2. If there is no saved message, the LCD will display EMPTY, and all further operations are inhibited.
3. If the selected message is set to Protected, the LCD will display the “P” icon. Press **P4** to switch between the Protected and Unprotected modes. Messages set to Protected can not be deleted.

Troubleshooting

Phenomena	Analysis	Solution
The equipment can not be powered on.	The power cord may be unconnected.	Connect the power cord correctly.
You can not log on to the system.	The antenna is not connected.	Connect the antenna properly.
You can not use the keys.	The crystal connector is inserted improperly or not inserted.	Insert the crystal connector correctly.
	The keys may fail to function temporarily.	Restart the radio.
The radio can not lock out.	This feature may malfunction temporarily.	Restart the radio.
There is no display.	The LCD may fail to function temporarily.	Restart the radio.

Care and Cleaning

To guarantee optimal performance as well as a long service life of your mobile radio, please follow the tips below.

Radio Care

- Keep the mobile radio at a place with good ventilation and heat dissipation to facilitate normal work.
- Do not place irrelevant articles on top of the mobile radio to ensure optimal heat dissipation.
- Do not place the mobile radio in corrosive agents, solutions or water.

Radio Cleaning

- Clean up the dust and fine particles on the radio parts with a clean and dry lint-free cloth or a brush regularly.
- Use a non-woven fabric with neutral cleanser to clean the keys, control knobs, LCD and jacks after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations. Make sure the mobile radio is completely dry before use.



Caution: Power off the mobile radio before cleaning.

Optional Accessories

The following items are the main optional accessories for the radio, and please consult your local dealer for more other accessories.

		
<p>Keypad Microphone SM07R1</p>	<p>Palm Microphone SM07R2</p>	<p>External Speaker SM09S2</p>
		
<p>Desktop Microphone SM10R2</p>	<p>Programing Cable (COM Port) PC21</p>	<p>Cloning Cable CP06</p>



Note: Use the accessories specified by HYT only. If not, HYT shall not be liable for any losses or damages arising out of use of unauthorized accessories.