

英文232*232mm双面单色印刷70g模造纸,按红色虚线左右再上下折叠



4. Use the hook to attach the speaker to different things. You can hook onto bags, purses, clothing or any place you can hang the speaker. Use the speaker for handsfree calling as well.

Charging the Speaker

Bluetooth Version	Bluetooth 3.0
Size	68 x 57 x 42mm
Battery	600 mA, Li-ion
Voltage	DC 3.7V
Power	8W

Speaker Sound Indicator

4 Beeps......Power On Single Beep......Paired with Device Continuous Beep.....Low Power Single Beep will occur for each volume level change.

Maximum and Minimum Volume will have their own sound indicator.

LED Indicator

The speaker has two LEDs, one RED and one BLUE.

BLUE LED

No Light......Power Off
Slow Flash....Pairing with Device
Very Slow Flash...Paired

Paired

RED LED
Solid Light......Charging
No Light.....Fully Charged

Troubleshooting

- No Sound -
- Check if the speaker is on
- Check if the speaker has power
- Turn the volume of the speaker or device higher
- Check if the speaker is paired with the device
 - - Can't Pair Device -
- Check if the speaker is on
- Check if device is on
- Make sure the device is at least 3 feet from the speaker
- Check if the speaker is paired with another device.

Safety Warnings



nt then risk of electric shock, do not remove cove). Refer servicing to a qualified service personnel

- For the purpose of correct installation, trouble-free operation of this
 product as well as avoiding injuries to user or other persons as well a
 damages to properties, the safety cautions are described as follows.
- Please apprehend each symbol and read instructions carefully and then stick to them stringently. Dangers or damages resulted from operation mistakes are classified into the following 2 categories according to their severity and description is attached to each category symbol.



To reduce the risk of electric shock or damage to

- Plug the USB cable into a device that only has the correct USB port.
- Disconnect power from the speaker by unplugging the USB cable from the USB port, not from the Micro-USB port on the speaker.
- While the speaker has a water resistance rating of IPX5 (with IPX8 being the best) and is able to have contact with water directly, we recommend avoid submerging the speaker in water completely.

- Avoid inserting items into the openings of the speaker
- Do not disassemble your speaker. Only a certified service technician should perform repairs on your speaker. Otherwise, DIGIX is not responsible for any damages that may result in the disassembly.
- CAUTION: Batteries should not be exposed to excessive heat such as fire, sunlight, or other concentrated heat sources. There is a risk of explosion if the battery is replaced with an incorrect battery type.

FCC Disclaimer:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty Statement

DIGIX provides a warranty to the original purchaser of your new speaker against defects in material and workmanship for a period of one-year of non-commercial usage. Please see your warranty card for more information or visit our website at http://www.contelusa.net

To contact us for warranty service or general inquiry:

E-mail: support@digixmedia.com Toll-Free Number: 1-866-770-3688 Website: http://www.contelusa.net Skype Chat: digix_tech_support

Hours of Operation: Monday to Friday 9AM – 5PM PST

The information contained herein is subject to change without notice.

How to Recycle the Lithium-Ion Battery

To locate a center near you, you can call 1-800-8-BATTERY or 1-877-2-RECYCLE. You can also contact Digix and send the battery to us for recycling.

FCC Statement

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.